

> PRINT > COPY > SCAN > FAX

TASKalfa 7002i TASKalfa 8002i







### **Preface**

Thank you for purchasing this machine.

This Operation Guide is intended to help you operate the machine correctly, perform routine maintenance, and take simple troubleshooting measures as needed so that the machine can always be used in the optimum condition.


Please read this Operation Guide before using the machine.

# We recommend the use of our genuine toner containers, which have passed rigorous quality control testing, to maintain quality.

The use of non-genuine toner containers may cause failure.


We will not be liable for any damages caused by the use of third party supplies in this machine.

A label is affixed to our genuine supplies, as shown below.

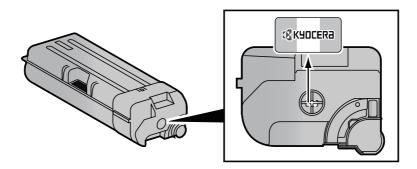

#### **Checking the Equipment's Serial Number**

The equipment's serial number is printed in the location shown in the figure.

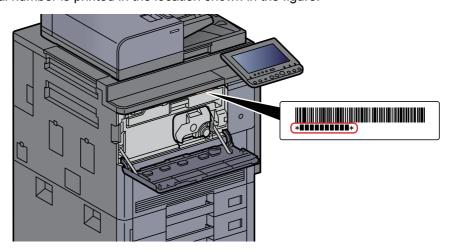

You'll need the equipment's serial number when contacting your Service Representative. Please check the number before contacting your Service Representative.

# **Contents**

	Preface	i
	Contents	
	Overview	x
	Machine Features	xi
	Color and Image Quality Functions	xvi
	Basic Color Modes	xvi
	Adjusting Image Quality and Color	xvii
	Guides Provided with the Machine	xix
	About the Operation Guide (this Guide)	
	Structure of the guide	
	Conventions Used in This Guide	
	Menu Map	
1	Legal and Safety Information	1-1
•		
	Notice	
	Safety Conventions in This Guide	
	Environment	
	Precautions for Use	
	Laser Safety (Europe)	
	SAFETY OF LASER BEAM (USA)	
	Safety Instructions Regarding the Disconnection of Power	
	Compliance and Conformity	1-7
	Radio Tag Technology	1-7
	Other precautions (for users in California, the United States)	1-7
	Warranty (the United States and Canada)	1-8
	Legal Restriction on Copying/Scanning	
	EN ISO 7779	
	EK1-ITB 2000	
	Wireless Connection (Mexico only)	
	Security Precautions when Using Wireless LAN (If equipped)	
	Limited Use of This Product (If equipped)	
	Legal Information	
	Energy Saving Control Function	
	Automatic 2-Sided Print Function	
	Resource Saving - Paper	
	Environmental benefits of "Power Management"	
	Energy Star (ENERGY STAR®) Program	1-17
2	Installing and Setting up the Machine	2-1
	Part Names (Machine Exterior)	
	Part Names (Connectors/Interior)	
	Part Names (With Optional Equipments Attached)	
	Connecting the Machine and Other Devices	
	Connecting Cables	
	Connecting Cables	
	Connecting USB Cable	
	Connecting the Power Cable	
	Power On/Off	
	Power On	
	Power Off	
	Using the Operation Panel	
	Operation Panel Keys	
	Adjusting the Operation Panel Angle	
	Assigning Functions to Function Keys	
	Touch Panel	2-16
	Home Screen	2-16

	Display for Device Information	2-20
	Display Setting Screen	
	Functions Key	
	Using the Screen	
	Display of Keys That Cannot Be Set	
	Original Preview	
	Entering Numbers	
	Using the Enter Key	
	Using the Quick No. Search Key	
	Help Screen	
	Accessibility Functions (Magnifying the View)	
	Login/Logout	
	Login	2-29
	Logout	2-30
	Default Settings of the Machine	
	Setting Date and Time	
	Network Setup	
	Configuring the Wired Network	
	Configuring the Wireless Network	
	Setting Wi-Fi Direct	
	Configuring NFC	
	Energy Saver Function	
	Low Power Mode	
	Sleep	
	Auto Sleep	2-42
	Sleep Rules (models for Europe)	2-42
	Sleep Level (Energy Saver) (models except for Europe)	2-42
	Energy Saver Recovery Level	2-42
	Weekly Timer Settings	
	Power Off Timer (models for Europe)	
	Quick Setup Wizard	
	Installing Software	
	Software on DVD (Windows)	
	· · · · · · · · · · · · · · · · · · ·	
	Installing Software in Windows	
	Uninstalling the Software	
	Installing Software in Mac Computer	
	Setting TWAIN Driver	
	Setting WIA Driver	2-59
	Checking the Counter	
	Additional Preparations for the Administrator	2-61
	Sending Documents to a PC	2-61
	Strengthening the Security	
	Command Center RX	
	Accessing Command Center RX	
	Changing Security Settings	
	Changing Device Information	
	E-mail Settings	
	Registering Destinations	
	Creating a New Custom Box	
	Printing a document stored in a Custom Box	
	Transferring Data from Our Other Products	
	Migrating the Address Book	2-75
3	Preparation before Use	3-1
-	•	
	Loading Paper	
	Precaution for Loading Paper	
	Selecting the Paper Feeder Units	
	Loading in the Cassettes	
	Loading in the Large Capacity Feeder	3-8

	Loading in the Side Feeder (3,000-sheet)	3-12
	Precautions for Outputting Paper	3-14
	Right Tray	3-14
	Side Feeder Top Tray	
	Preparation for Sending a Document to a Shared Folder in a PC	
	Making a Note of the Computer Name and Full Computer Name	
	Making a Note of the User Name and Domain Name	
	Creating a Shared Folder, Making a Note of a Shared Folder	
	Configuring Windows Firewall	
	Registering Destinations in the Address Book	
	Adding a Destination (Address Book)	
	Adding a Destination on One Touch Key (One Touch Key)	3-32
4	Printing from PC	4-1
	Printer Driver Properties Screen	4-2
	Displaying the Printer Driver Help	
	Changing the Default Printer Driver Settings (Windows 8.1)	
	Printing from PC	
	Printing on Standard Sized Paper	
	Printing on Non-standard Sized Paper	
	Banner Printing	
	Canceling Printing from a Computer	
	Printing from the Handheld Device	
	Printing by AirPrint	
	Printing by Google Cloud Print	4-16
	Printing by Mopria	4-16
	Printing with Wi-Fi Direct	4-16
	Printing with NFC	
	Printing Data Saved in the Printer	
	Specifying the Job Box from a Computer and Storing the Job	
	Printing Documents from Private Print Box	
	Deleting the Documents Stored in the Private Print Box	
	· · · · · · · · · · · · · · · · · · ·	
	Printing Document from Stored Job Box	
	Deleting the Documents Stored in the Stored Job Box	
	Printing Document from Quick Copy Box	
	Deleting the Documents Stored in the Quick Copy Box	
	Printing Document from Proof and Hold Box	4-22
	Deleting the Documents Stored in the Proof and Hold Box	4-22
	Monitoring the Printer Status (Status Monitor)	4-23
	Accessing the Status Monitor	
	Exiting the Status Monitor	
	Quick View State	
	Printing Progress Tab	
	Paper Tray Status Tab	
	· · ·	
	Toner Status Tab	
	Alert Tab	
	Status Monitor Context Menu	
	Status Monitor Notification Settings	4-26
5	Operation on the Machine	5-1
	Loading Originals	
	Placing Originals on the Platen	
	Loading Originals in the Document Processor	
	Loading Paper in the Multipurpose Tray	
	Program	
	Registering Programs	
	Recalling Programs	
	Editing Programs	5-11

Deleting Programs	5-11
Application	5-12
Installing Applications	
Activating Applications	
Deactivating Applications	
Uninstalling Applications	
	5-14
Registering Shortcuts	
(Copy, Send, and Document Box Settings)	
Adding Shortcuts	
Editing Shortcuts	
Deleting Shortcuts	5-16
Copying	5-17
Basic Operation	5-17
Proof Copy	
Interrupt Copy	
Canceling Jobs	
Frequently-Used Sending Method	
Sending Document via E-mail	
Configuring Settings before Sending	
Sending Scanned Document via E-mail	
Sending Document to Desired Shared Folder on a Computer (Scan to PC)	
Configuring Settings before Sending	5-23
Sending Document to Desired Shared Folder on a Computer	5-23
Sending Document to Folder on an FTP Server (Scan to FTP)	
Configuring Settings before Sending	
Sending Document to Folder on an FTP Server	
Scanning using TWAIN or WIA	
Configuring Settings before Sending	
Scanning Document Using Application	
Scanning Document stored in a Custom Box	
Configuring Settings before Sending	
Scanning Document Stored in a Box	5-29
Useful Sending Method	5-30
WSD Scan	
Installing the Driver	
Executing WSD scan	
DSM Scan	
Configuring Settings before Sending	
Executing DSM Scan	
Scanning with File Management Utility	
Configuring Settings before Sending	5-36
Using FMU Connection to Scan an Original	5-36
Sending to Different Types of Destinations (Multi Sending)	5-37
Send to Me (E-mail)	
Configuring Settings before Sending	
Sending a Document to the Mail Address of the Logged In User	
Canceling Sending Jobs	
Handling Destination	
Specifying Destination	
Choosing from the Address Book	
Choosing from the One Touch Key	
Choosing from the Speed Dial	
Checking and Editing Destinations	
Confirmation Screen of Destinations	5-44
Recall	
How to use the FAX Function	
Using Document Boxes	
What is Custom Box?	
What is Job Box?	
What is Removable Memory Box?	ე-48

	Fax Box	5-48
	Basic Operation for Document Box	
	Creating a New Custom Box	
	Editing Custom Box	
	Deleting Custom Box	
	Storing Documents to a Custom Box	
	Printing Documents in Custom Box	
	Saving Scanned Documents to a Custom Box	
	Sending Documents in Custom Box	
	Sending Documents in Custom Box to E-mail Address of Logged In User	
	Moving Documents in Custom Box	
	Copying Documents in Custom Box into Other Boxes	
	Copying Documents in Custom Box to Removable Memory	
	Joining Documents in Custom Box	
	Deleting Documents in Custom Box	
	Job Box	
	Outputting Repeat Copy Jobs	
	Form for Form Overlay	
	Operating using Removable USB Memory	
	Printing Documents Stored in Removable USB Memory	
	Saving Documents to USB Memory (Scan to USB)	
	Check the USB Memory Information	
	Removing USB Memory	
	Using the Internet Browser	
	Launching and Exiting the Browser	
	Using the Browser Screen	5-69
	Manual Staple	5-70
6 L	Ising Various Functions	
	Functions Available on the Machine	
	About Functions Available on the Machine	6-2
	About Functions Available on the Machine  How to Select Functions	6-2 6-2
	About Functions Available on the Machine  How to Select Functions  Copy	6-2 6-2 6-2
	About Functions Available on the Machine  How to Select Functions  Copy  Send	6-2 6-2 6-2
	About Functions Available on the Machine  How to Select Functions  Copy  Send  Custom Box (Store File, Printing, Send)	6-2 6-2 6-2 6-5 6-8
	About Functions Available on the Machine  How to Select Functions  Copy  Send  Custom Box (Store File, Printing, Send)  Removable Memory (Store File, Printing Documents)	6-2 6-2 6-2 6-5 6-8
	About Functions Available on the Machine  How to Select Functions  Copy  Send  Custom Box (Store File, Printing, Send)  Removable Memory (Store File, Printing Documents)  Functions	6-2 6-2 6-5 6-5 6-14 6-17
	About Functions Available on the Machine  How to Select Functions  Copy  Send  Custom Box (Store File, Printing, Send)  Removable Memory (Store File, Printing Documents)  Functions  Original Size	6-2 6-2 6-5 6-8 6-14 6-18
	About Functions Available on the Machine  How to Select Functions  Copy  Send  Custom Box (Store File, Printing, Send)  Removable Memory (Store File, Printing Documents)  Functions  Original Size  Paper Selection	6-2 6-2 6-5 6-8 6-14 6-18 6-19
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals	6-2 6-2 6-5 6-14 6-18 6-19 6-20
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation	6-2 6-2 6-5 6-14 6-18 6-19 6-20
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold	6-2 6-2 6-5 6-8 6-14 6-18 6-19 6-20 6-23
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset	6-2 6-2 6-5 6-14 6-18 6-19 6-23 6-24
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch	6-2 6-2 6-5 6-14 6-18 6-19 6-20 6-24 6-25
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output	6-2 6-2 6-5 6-14 6-18 6-19 6-23 6-25 6-26 6-30
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density	6-2 6-2 6-5 6-14 6-18 6-19 6-23 6-24 6-25 6-30 6-31
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image	6-2 6-2 6-14 6-18 6-19 6-23 6-24 6-25 6-31 6-31
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint	6-2 6-2 6-19 6-20 6-24 6-25 6-31 6-31 6-31
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint Color Selection	6-2 6-2 6-14 6-14 6-18 6-19 6-24 6-25 6-31 6-31 6-31 6-32
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint	6-2 6-2 6-5 6-17 6-18 6-19 6-20 6-25 6-31 6-31 6-32 6-32 6-33
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint Color Selection Sharpness	6-2 6-2 6-5 6-14 6-18 6-19 6-25 6-25 6-31 6-31 6-32 6-33 6-33 6-33
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint Color Selection Sharpness Contrast	6-2
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint Color Selection Sharpness Contrast Background Density Adj. (Background Density Adjustment)	6-2 6-5 6-6-7 6-18 6-19 6-20 6-20 6-23 6-24 6-25 6-30 6-31 6-31 6-31 6-32 6-33 6-34 6-34
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint Color Selection Sharpness Contrast Background Density Adj. (Background Density Adjustment) Prevent Bleed-thru	6-2 6-5 6-6-7 6-19 6-20 6-24 6-25 6-30 6-31 6-31 6-32 6-33 6-34 6-34 6-34 6-35
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint Color Selection Sharpness Contrast Background Density Adj. (Background Density Adjustment) Prevent Bleed-thru Zoom Combine Margin/Centering, Margin, Centering	6-2 6-5 6-8 6-14 6-19 6-20 6-23 6-24 6-25 6-31 6-31 6-31 6-32 6-33 6-34 6-34 6-35 6-38 6-38
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint Color Selection Sharpness Contrast Background Density Adj. (Background Density Adjustment) Prevent Bleed-thru Zoom Combine Margin/Centering, Margin, Centering Border Erase	6-2
	About Functions Available on the Machine How to Select Functions Copy Send Custom Box (Store File, Printing, Send) Removable Memory (Store File, Printing Documents)  Functions Original Size Paper Selection Mixed Size Originals Original Orientation Fold Collate/Offset Staple/Punch Paper Output Density Original Image EcoPrint Color Selection Sharpness Contrast Background Density Adj. (Background Density Adjustment) Prevent Bleed-thru Zoom Combine Margin/Centering, Margin, Centering	6-2


	Cover	6-49
	Form Overlay	
	Erase Shadowed Areas	
	Page #	
	Insert Sheets/Chapters	
	Memo Page	
	Image Repeat	
	Text Stamp	
	Bates Stamp	
	Continuous Scan	
	Auto Image Rotation	
	Negative Image	6-64
	Mirror Image	6-64
	Job Finish Notice	6-64
	File Name Entry	
	Priority Override	
	Repeat Copy	
	DP Read Action	
	Skip Blank Page	
	2-sided/Book Original	
	Sending Size	
	File Format	6-70
	File Separation	6-74
	Scan Resolution	6-74
	E-mail Subject/Body	6-75
	Send and Print	
	Send and Store	
	FTP Encrypted TX	
	File Size Confirmation	
	Delete after Printed	
	Delete after Transmitted	
	Storing Size	
	Long Original	
	Encrypted PDF Password	6-78
	JPEG/TIFF Print	6-78
	XPS Fit to Page	6-78
_		
7	Status/Job Cancel	/-1
	Checking Job Status	7-2
	Details of the Status Screens	
	Checking Detailed Information of Jobs	
	· · · · · · · · · · · · · · · · · · ·	
	Checking Job History	
	Checking the Detailed Information of Histories	
	Sending the Log History	
	Job Operation	
	Pause and Resumption of Jobs	7-11
	Canceling of Jobs	7-11
	Priority Override for Waiting Jobs	7-11
	Reordering Print Jobs	7-12
	Device/Communication	
	Checking the Remaining Amount of Toner and Paper (Paper/Supplies)	
	Thousand the Remaining Amount of Tonior and Lapor (Laporrouppines) minimining	
8	Setup and Registration (System Menu)	8-1
-		
	System Menu	
	Operation Method	
	System Menu Settings	
	Counter	
	Cassette/MP Tray Settings	8-7

	Common Settings	8-10
	Home	8-31
	Copy	8-32
	Send	
	Document Box/Removable Memory	
	FAX	
	Printer	
	Report	
	System/Network	
	Edit Destination	
	User Login/Job Accounting	8-68
	User Property	8-68
	Date/Timer/Energy Saver	
	Adjustment/Maintenance	
	Internet	
	Application	
	Application	0-73
9	User Authentication and Accounting (User Login, Job Accounting)	9-1
	Overview of User Login Administration	
	Managing the Job Account from PC	
	Managing the Users to Use TWAIN for Scanning	
	Managing the Users to Use WIA for Scanning	
	Managing the Users to Send Faxes from a PC	
	Enabling User Login Administration	
	Setting User Login Administration	
	Authentication Security	
	Adding a User (Local User List)	
	Changing User Properties	9-11
	User Login Administration for Printing	9-14
	Managing the Users to Scan Using TWAIN	
	Managing the Users to Scan Using WIA	
	Managing the Users that Send Faxes from a PC	
	Local Authorization	
	Group Authorization Settings	
	Guest Authorization Set.	
	Obtain NW User Property	9-25
	Simple Login Settings	9-27
	ID Card Settings	9-30
	PIN Code Authorization	
	Using User Login Administration	
	Login/Logout	
	Overview of Job Accounting	
	To Manage the Number of Sheets Used on Jobs Printed from a PC	
	Managing the Scan Job Account by Using TWAIN	
	Managing the Scan Job Account by Using WIA	
	Managing the FAX Job Transmitted from a PC	9-33
	Enabling Job Accounting	9-34
	Job Accounting Access	9-35
	Job Accounting (Local)	
	Adding an Account	
	Restricting the Use of the Machine	
	Editing an Account	
	Deleting an Account	
	Job Accounting for Printing	
	Job Accounting for Scan Using TWAIN	
	Job Accounting for Scan Using WIA	9-42
	Job Accounting for the FAX Transmitted from a Computer	
	Configuring Job Accounting	9-44
	Default Setting	

	Counting the Number of Pages Printed	
	Print Accounting Report	9-48
	Using Job Accounting	9-49
	Login/Logout	
	Apply Limit	
	Copy/Printer Count	
	Unknown User Settings	
	Unknown ID Job	
	Registering Information for a User whose ID is Unknown	
	3 3	
40	Troubleshooting	<b>Λ</b> 4
10	Troubleshooting 1	
	Regular Maintenance	
	Cleaning	
	Cleaning Glass Platen	
	Cleaning inside of the Document Processor	
	Cleaning Slit Glass	
	Toner Container Replacement	
	Replace the Waste Toner Box	
	Loading Paper	10-9
	Replacing Staples (4,000-Sheet Finisher)	0-10
	Replacing Staples (Folding Unit)	0-11
	Disposing of the Punch Waste	
	Troubleshooting 1	
	Solving Malfunctions1	
	Machine Operation Trouble1	
	Printed Image Trouble1	
	Responding to Messages 1	
	Adjustment/Maintenance 1	
	Overview of Adjustment/Maintenance	
	Tone Curve Adjustment	
	Drum Refresh 1	
	Drum Refresh 2	
	Calibration	
	Developer Refresh	
	Clearing Paper Jams	
	Jam Location Indicators	
	Remove any jammed paper in Cassette 1	
	Remove any jammed paper in Cassette 2	
	Remove any jammed paper in Cassette 3	
	Remove any jammed paper in Cassette 4	0-49
	Remove any jammed paper in Cassette 5 (Side Feeder (3,000-sheet)) 1	
	Remove any jammed paper in Cassette 5 (Side Feeder (500-sheet×3) / Large Capacity S	
	Feeder (500, 1,500-sheet×2))	
	Remove any jammed paper in Cassette 6, 7 (Side Feeder (500-sheet×3)) 1	0-57
	Remove any jammed paper in Cassette 6 (Large Capacity Side Feeder (500,	
	1,500-sheet×2)) 1	0-59
	Remove any jammed paper in Cassette 7 (Large Capacity Side Feeder (500,	
	1,500-sheet×2)) 1	
	Remove any jammed paper in the Multipurpose Tray 1	0-65
	Remove any jammed paper in Right Cover 1	0-66
	Remove any jammed paper in Right Cover 3 1	
	Remove any jammed paper in Right Cover 4	
	Remove any jammed paper in the Upper Left Tray / 4,000-sheet Finisher (Tray C) . 1	0-73
	Remove any jammed paper in the Lower Left Tray	
	Remove any jammed paper in the Right Tray 1	
	Remove any jammed paper in the Top Cover, Right Cover 1 (Side Feeder (500-sheet)	
	Large Capacity Side Feeder (500, 1,500-sheet×2))	
	Remove any jammed paper in Right Cover 2 (Side Feeder (500-sheet×3) / Large Capa	
	Side Feeder (500, 1 500-sheetx2))	•

	Remove any jammed paper in the Mailbox	10-80
	Remove any jammed paper in the Document Processor	10-81
	Remove any jammed paper in the 4,000-sheet Finisher (Inner)	10-82
	Remove any jammed paper in the 4,000-sheet Finisher (Tray A)	10-84
	Remove any jammed paper in the 4,000-sheet Finisher (Tray B)	10-87
	Remove any jammed paper in the Folding Unit	10-90
	Remove any jammed paper in the Folding Tray	10-95
	Clearing a Staple Jam	
	Clearing a Staple Jam of the 4,000-Sheet Finisher	10-100
	Clearing a Staple Jam of the Folding Unit	10-102
11	Appendix	11-1
	Optional Equipment	
	Overview of Optional Equipment	
	Optional Applications	
	Starting Application Use	
	Checking Details of Application	
	Character Entry Method	
	Entry Screens	
	Entering Characters	
	Paper	
	Basic Paper Specifications	
	Choosing the Appropriate Paper	
	Special Paper	
	Specifications	
	Machine	11-19
	Copy Functions	11-21
	Printer Functions	11-22
	Scanner Functions	11-23
	Document Processor	11-23
	Side Feeder (500-sheet×3)	11-24
	Large Capacity Side Feeder (500, 1,500-sheet×2)	11-24
	Side Feeder (3,000-sheet)	11-24
	4,000-Sheet Finisher	11-25
	Punch Unit (For 4,000-Sheet Finisher)	
	Mailbox (For 4,000-Sheet Finisher)	
	Folding Unit (For 4,000-Sheet Finisher)	
	Banner Tray	
	Glossary	
	Index	Index-1

### **Overview**

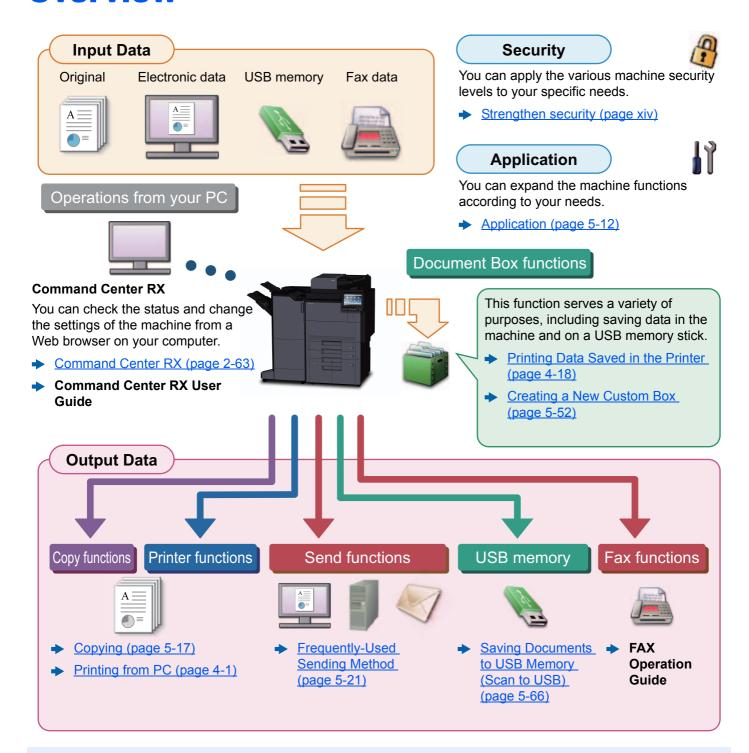

### NOTE

- Before using the machine, be sure to read the following:
  - ▶ Legal and Safety Information (page 1-1)
- To prepare the device for use, including setting up cable connections and installing software.
  - → Installing and Setting up the Machine (page 2-1)
- To learn how to load paper, set up shared folders, and add addresses to the address book, refer to the following:
  - → Preparation before Use (page 3-1)

### **Machine Features**


The machine is equipped with many useful functions.

→ Using Various Functions (page 6-1)

Here are some examples.

#### Optimize your office workflow

# Access to frequently used functions with just one touch (Favorites)

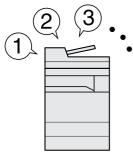


You can preset frequently used functions.

Once you register frequently used settings as favorite, you can call up the settings easily. Using this favorite brings the same results even if operated by another person.

→ Program (page 5-9)

# Interrupt other running jobs and execute your copy job immediately (Interrupt Copy)

 


You can interrupt other running jobs and execute your copy job immediately. When other users are copying a large number of sheets, this function allows you to interrupt those jobs and make your copies immediately.

When the interruption copy ends, the machine resumes the paused print jobs.

<u>Interrupt Copy (page 5-20)</u>

# Check the finishing before copying a large number of sheets (Proof Copy)

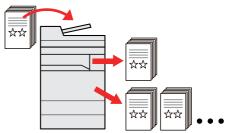


It is possible to copy one sheet before copying a large number of sheets. This enables you to check the contents and finishing and copy the desired number of sheets without scanning the original again if you are satisfied with the result. If you want to make changes, you can change the settings and copy only one sheet again.

→ Proof Copy (page 5-19)

#### Optimize your office workflow
 
### Scan originals of different sizes at a time (Mixed Size Originals)





It is useful when preparing conference materials.

You can set the different sized originals at one time so you don't need to reset the originals regardless of size.

→ Mixed Size Originals (page 6-20)

# Scan a large number of originals in separate batches and produce as one job (Continuous Scan)




It is useful when preparing manypage handouts.

When a large number of originals cannot be placed in the document processor at one time, the originals can be scanned in separate batches and then copied or sent as one job.

Continuous Scan (page 6-63)

### Send one time with multiple sending options (Multi Sending)

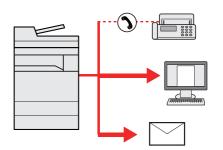

You can send a same document to the multiple destinations using a different method.

You can specify multiple destinations of different send methods such as Email. SMB. and Fax.

You can reduce your workflow by sending a job at once.

 Sending to Different Types of <u>Destinations (Multi Sending)</u> (page 5-37)

#### Optimize your office workflow

#### Save energy and cost

 
### Save frequently used documents in the machine (Custom Box)



You can save the frequently used document in the machine and print it when needed.

Creating a New Custom Box (page 5-52)

### Save energy as needed (Energy Saver function)




The machine is equipped with Energy Saver function that automatically switched into Low Power Mode or Sleep Mode. You can set appropriate Energy Saver Recovery Level depending on the operation.

In addition, set the machine to automatically turn OFF and recovered at a specified time for each day of the week.

 Energy Saver Function (page 2-41)

### Reduce paper use (Paper Saving Printing)

 


You can print originals on both sides of the paper. You can also print multiple originals onto one sheet.

→ Program (page 5-9)

#### Save energy and cost
 
#### Create attractive documents

### Skip blank pages when printing (Skip Blank Page)



When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.

→ Skip Blank Page (page 6-67)

### Prevent image bleed-through (Prevent Bleed-through)



You can prevent image bleed-through from the reverse side when scanning thin originals.

▶ Prevent Bleed-thru (page 6-34)

### Erase the extra shaded area (Erase Shadowed Areas)

 


When scanning with the document processor open, erase the extra shaded area.

★ Erase Shadowed Areas (page 6-51)

#### Create attractive documents

#### Create a booklet (Booklet)



It is useful when preparing handout. You can create a magazine, pamphlet, or other booklet from sheet originals.

Facing-page, two-sided copies of originals can be folded down the center to create a booklet.

The cover page can be printed onto colored paper or heavy paper.

→ Booklet (page 6-43)

#### Print a stamp on copies (Text Stamp / Bates Stamp)




It is useful when adding text or date that is not included in originals.

You can add desired text and date as a stamp.

- → Text Stamp (page 6-57)
- → Bates Stamp (page 6-60)

#### **Strengthen security**

## Password-protect a PDF file (PDF Encryption Functions)

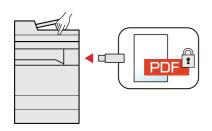

Use the PDF format's password security options to restrict document viewing, printing and editing.

 Encrypted PDF Password (page 6-78)

### Protect data on the hard disk/SSD (Encryption / Overwrite)



You can overwrite the unnecessary data that remains on the hard disk/ SSD automatically.

To prevent an external leakage, the machine is able to encrypt data before writing it to the hard disk/SSD.

Data Security (page 8-64)

### Prevent loss of finished documents (Private Print)



Temporarily saving print jobs in the main unit document box and outputting them when in front of the device can prevent documents from being taken by others.

Printing Data Saved in the Printer (page 4-18)

#### Strengthen security

### Log in by ID card (Card Authentication)



You can log in simply by touching an ID card. You don't need to enter your user name and password.

Card Authentication Kit(B) "Card Authentication Kit" (page 11-6)

## Strengthen security (Settings for Administrator)

 


Various functions are available for administrators to strengthen security.

Strengthening the Security (page 2-61)

#### Use functions more efficiently

## Expand functions as necessary (Application)



The functionality of the machine can be expanded by installing applications.

Applications that help you perform your daily more efficiently such as a scan feature and an authentication feature are available.

Application (page 5-12)

#### Use functions more efficiently

#### Display file size before sending / storing a job (File Size Confirmation)



You can check the file size before sending/storing the document.

If your server specifies an e-mail size limit, you can check and change the size in advance.

► File Size Confirmation (page 6-76)


# Install the machine without concerning the network cables (Wireless Network)



If there is a wireless LAN environment, it is possible to install the unit without worrying about the network wiring. In addition, Wi-Fi Direct, etc. are supported.

- Configuring the Wireless Network (page 2-34)
- ➤ Setting Wi-Fi Direct (page 2-38)
- → Configuring NFC (page 2-40)

## Use USB memory (USB Memory)

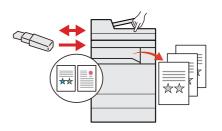

It is useful when you need to print documents outside your office or you cannot print documents from your PC.


You can print the document from the USB memory by plugging it directly into the machine.

Original scanned at the machine can be saved in the USB memory also.

- Printing Documents Stored in Removable USB Memory (page 5-64)
- Saving Documents to USB Memory (Scan to USB) (page 5-66)

#### Use functions more efficiently

 
### Specify image file format (File Format)



You can select the various file formats when sending/storing images.

→ File Format (page 6-70)


### Scan the long originals (Long Original)

 

You can scan the long originals such as Contract and Data log.

▶ Long Original (page 6-77)

### Skip the error job (Job Skip Functions)

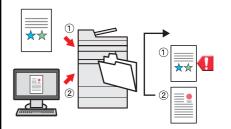

When paper empty error occurs at the cassette by specifying the special paper size or type, the machine skips the error job and perform the next job.

→ Error Job Skip (page 8-69)

#### Use functions more efficiently

### Perform remote operation (Command Center RX)



You can access to the machine remotely to print, send or download data.

Administrators can configure the machine behavior or management settings.

Command Center RX (page 2-63)

## **Color and Image Quality Functions**

The machine is equipped with various color and image quality functions. You can adjust the scanned image as desired.

### **Basic Color Modes**

The basic color modes are as follows.

Color mode	Description	Reference image		Reference
Color mode	Description	Before	After	page
Color/Gray Color/B & W	olor/B & W document being scanned is color or black & white.			page 6-32
Full Color				page 6-32
Grayscale Scans a document in grayscale.				page 6-32
Black & White Scans a document in black & white.			**	page 6-32

For details, refer to the following:

**▶** Color Selection (page 6-32)

### **Adjusting Image Quality and Color**

To adjust the image quality or color of an image, use the following functions.

Lucato	Sample image		Function	Down
I want to	Before	After	- Function	Page
Easily adjust the image quality to mate	ch your own image			
Remove dark background or bleed-through from the original such as a newspaper.	World News  • Interchans • Interchanse • Int	World News  • Index State  • Index S	Program [Newspaper Copy]	page 5-9
Clearly reproduce fine lines, faint lines, broken lines, and other fine details in a CAD or other drawings.	95 3 40. <sup>4</sup> 2 2 2 2 2 4 4 5 9 2 2 2 2 2 4 4 5 9 2 3 4 4 5 9 2 2 2 2 3 4 5 9 2 2 4 5 9 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	95.3 as y 2 27.4 as y 92.27.4 a	Program [Drawing Copy]	page 5-9
Adjust the image quality precisely				1
Adjust the density.	A <u> </u>	A <u></u>	Density	page 6-31
Emphasize or blur the image outline. Example: Emphasize the image outlines			Sharpness	page 6-33
Adjust the difference between dark and light parts of the image.			Contrast	page 6-33
Darken or lighten the background (the area with no texts or images) of a document.  Example: Lightening the background	A ====================================	A ====================================	Background Density	page 6-34
Prevent bleed-through in 2-sided originals.	— A <b>A B C</b> ■	АВС	Prevent Bleed- through	page 6-34
Adjust the scanned image				
Decrease the file size and produce the characters clearly.	Сору	Сору	File format [High Comp. PDF]	page 6-70
Convert a paper document to PDF with searchable text.	Glossary Accessibility The machine is designed featurisually impaired. Touch panel	Glossary  Accessibility  The machine is designed feat visually impaired. Touch cane.	File format [PDF] or [High Comp. PDF] with [OCR]	page 6-70

### **Guides Provided with the Machine**

The following guides are provided with the machine. Refer to each guide as needed.

The contents of the guides are subject to change without notice for the purpose of improvement of machine performance.

#### **Printed Guides**

## Start using the machine quickly

#### **Quick Guide**

Explains how to use basic functions of the machine, how to use convenient features, how to perform routine maintenance, and what to do when problems occur.

### For safe use of the

machine



### Safety Guide

Provides safety and cautionary information for installation environment and use of the machine. Be sure to read this guide before using the machine.

### Safety Guide (TASKalfa 7002i/TASKalfa 8002i)

Indicates the space required for machine installation, and describes the cautionary labels and other safety information. Be sure to read this guide before using the machine.

#### **Guides (PDF) on the DVD (Product Library)**

## Use the machine thoughtfully

#### **Operation Guide (This Guide)**

Explains how to load paper and perform copy, print and scan operations, and indicates default settings and other information.

#### Use the fax functions

### FAX Operation Guide

Explains how to use the fax function.

#### Use the ID card

### Card Authentication Kit (B) Operation Guide

Explains how to perform authentication using the ID card.

### Strengthen security

#### Data Security Kit (E) Operation Guide

Explains how to introduce and use the Data Security kit (E), and how to overwrite and encrypt data.

# Easily register machine information and configure settings

#### **Command Center RX User Guide**

Explains how to access the machine from a Web browser on your computer to check and change settings.

## Print data from a computer

#### **Printer Driver User Guide**

Explains how to install the printer driver and use the printer function.

### Directly print a PDF file

### **KYOCERA Net Direct Print Operation Guide**

Explains how to print PDF files without launching Adobe Acrobat or Reader.

# Monitor the machine and printers on the network

#### **KYOCERA Net Viewer User Guide**

Explains how to monitor your network printing system (the machine) with KYOCERA Net Viewer.

## Scan images and save with information

### File Management Utility User Guide

 Explains how to use File Management Utility to set various parameters and send and save scanned documents.

# Print without using the printer driver

#### **PRESCRIBE Commands Command Reference**

Describes the native printer language (PRESCRIBE commands).

### PRESCRIBE Commands Technical Reference

Describes the PRESCRIBE command functions and control for each type of emulation.

Install the following versions of Adobe Reader to view the manuals on the DVD.

Version 8.0 or later

# **About the Operation Guide (this Guide)**


### Structure of the guide

The Operation Guide contains the following chapters.

Chapter		Contents		
1	Legal and Safety Information	Provides precautions regarding use of the machine and trademark information.		
2	Installing and Setting up the Machine	Explains part names, cable connections, installation of the software, login, logout, and other matters related to administration of the machine.		
3	Preparation before Use	Explains preparations and settings that are required in order to use the machine, such as how to load paper and create an address book.		
4	Printing from PC	Explains functions that are available when the machine is used as a printer.		
5	Operation on the Machine	Explains the basic procedures for using the machine, such as placing originals, making copies, sending documents, and using document boxes.		
6	Using Various Functions	Explains convenient functions that are available on the machine.		
7	Status/Job Cancel	Explains how to check the status of a job and the job history, and how to cancel jobs being printed or waiting to print. Also explains how to check paper and toner levels, how to check the device status, and how to cancel fax transmission.		
8	Setup and Registration (System Menu)	Explains System Menu and how it relates to the operation of the machine.		
9	User Authentication and Accounting (User Login, Job Accounting)	Explains user login and job accounting.		
10	Troubleshooting	Explains what to do when toner runs out, an error is displayed, or a paper jam or other problem occurs.		
11	Appendix	Describes convenient options that are available for the machine. Provides information on media types and paper sizes, and gives a glossary of terms. Explains how to enter characters, and lists the specifications of the machine.		

### **Conventions Used in This Guide**

Adobe Reader XI is used as an example in the explanations below.

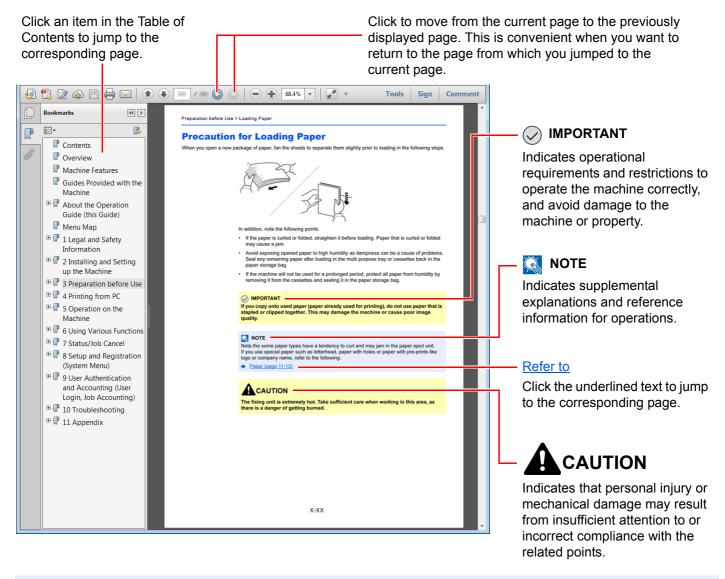

### NOTE


The items that appear in Adobe Reader vary depending on how it is used. If the Table of Contents or tools do not appear, refer to Adobe Reader Help.

Certain items are indicated in this guide by the conventions described below.

Convention	Description
[Bold]	Indicates keys and buttons.
"Regular"	Indicates a message or setting.

#### **Conventions Used in Procedures for Operating the Machine**

In this Operation Guide, continuous operation of the keys on the touch panel is as follows:

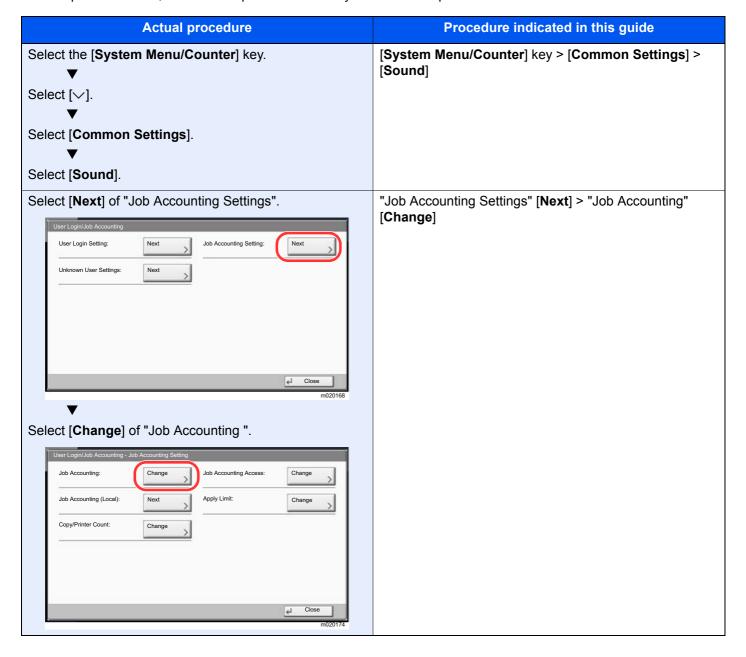

### Size and Orientation of Originals and Paper

Original sizes and paper sizes such as A4, B5, and Letter can be used in both the horizontal and vertical orientations. To distinguish the orientations when these sizes are used, "R" is added to sizes used in the horizontal orientation. In addition, the following icons are used to indicate original and paper placement orientations on the touch panel.

Orientation		Setting Position (X=Length, Y=Width)	Icons on the touch panel	Indicated size in this Guide*1
Vertical orientation	Original	Y	Original	A4, B5, Letter .etc
	Paper	Y	Paper	
Horizontal orientation (-R)	Original	Y	Original	A4-R, B5-R, Letter-R .etc
Paper		Paper		

<sup>\*1</sup> Original/paper sizes that can be used vary depending on the function and source tray. For details, refer to the following.

<sup>→</sup> Specifications (page 11-19)

## **Menu Map**

This is a list of menus displayed on the touch panel. Depending on the settings, some menus may not be displayed. Some menu names may differ from their reference titles.





Org./Paper/Finishing	Original Size (page 6-18)		
	Paper Selection (page 6-19)		
	Mixed Size Originals (page 6-2	0)	
	Original Orientation (page 6-23	2)	
	Fold (page 6-24)		
	Collate/Offset (page 6-25)		
	Staple/Punch	Staple (page 6-26)	
		Punch (page 6-28)	
	Paper Output (page 6-30)		
Image Quality	Density (page 6-31)		
	Original Image (page 6-31)		
	EcoPrint (page 6-32)		
	Sharpness (page 6-33)		
	Background Density Adj. (page 6-34)		
	Prevent Bleed-thru (page 6-34)		
	Contrast (page 6-33)		

Layout/Edit	Zoom (page 6-35)
	Combine (page 6-38)
	Margin/Centering (page 6-40)
	Border Erase (page 6-41)
	Booklet (page 6-43)
	Duplex (page 6-46)
	Form Overlay (page 6-50)
	Erase Shadowed Areas (page 6-51)
	Page # (page 6-51)
	Cover (page 6-49)
	Insert Sheets/Chapters (page 6-53)
	Image Repeat (page 6-56)
	Text Stamp (page 6-57)
	Bates Stamp (page 6-60)
	Memo Page (page 6-54)
Advanced Setup	Continuous Scan (page 6-63)
	Auto Image Rotation (page 6-63)
	Negative Image (page 6-64)
	Mirror Image (page 6-64)
	Job Finish Notice (page 6-64)
	File Name Entry (page 6-65)
	Priority Override (page 6-65)
	Repeat Copy (page 6-66)
	DP Read Action (page 6-67)
	Skip Blank Page (page 6-67)
Program (page 5-9)	





Destination	Address Book (page 5-40)		
	E-mail Addr Entry (page 5-22)		
	Folder Path Entry (page 5-23, page 5-26)		
	FAX No. Entry (refer to <b>FAX Operation Guide</b> )		
	i-FAX Address Entry (refer to <b>FAX Operation Guide</b> )		
	WSD Scan (page 5-31) / DSM Scan (page 5-34)		
Org./Sending Data Format	Original Size (page 6-18)		
	Mixed Size Originals (page 6-20)		
	2-sided/Book Original (page 6-68)		
	Original Orientation (page 6-23)		
	Sending Size (page 6-69)		
	File Format (page 6-70)		
	File Separation (page 6-74)		
	Long Original (page 6-77)		
Color/Image Quality	Density (page 6-31)		
	Original Image (page 6-31)		
	Scan Resolution (page 6-74)		
	FAX TX Resolution (refer to <b>FAX Operation Guide</b> )		
	Color Selection (page 6-32)		
	Sharpness (page 6-33)		
	Background Density Adj. (page 6-34)		
	Prevent Bleed-thru (page 6-34)		
	Contrast (page 6-33)		

Advanced Setup	Zoom (page 6-35)
	Centering (page 6-40)
	Border Erase (page 6-41)
	FAX Delayed Transmission (refer to FAX Operation Guide)
	Continuous Scan (page 6-63)
	Job Finish Notice (page 6-64)
	Erase Shadowed Areas (page 6-51)
	File Name Entry (page 6-65)
	i-FAX Subject/Body (refer to <b>FAX Operation Guide</b> )
	FAX Direct Transmission (refer to FAX Operation Guide)
	FAX Polling RX (refer to <b>FAX Operation Guide</b> )
	Send and Print (page 6-75)
	Send and Store (page 6-75)
	FTP Encrypted TX (page 6-76)
	Text Stamp (page 6-57)
	Bates Stamp (page 6-60)
	File Size Confirmation (page 6-76)
	FAX TX Report (refer to FAX Operation Guide)
	Skip Blank Page (page 6-67)
	E-mail Subject/Body (page 6-75)
Program (page 5-9)	





<b>Custom Box</b>	Store File	Functions	Original Size (page 6-18)
			Mixed Size Originals (page 6-20)
			2-sided/Book Original (page 6-68)
			Original Orientation (page 6-23)
			Storing Size (page 6-77)
			Prevent Bleed-thru (page 6-34)
			Density (page 6-31)
			Original Image (page 6-31)
			Scan Resolution (page 6-74)
			Color Selection (page 6-32)
			Sharpness (page 6-33)
			Background Density Adj. (page 6-34)
			Zoom (page 6-35)
			Centering (page 6-40)
			Border Erase (page 6-41)
			Continuous Scan (page 6-63)
			Job Finish Notice (page 6-64)
			File Name Entry (page 6-65)
			Erase Shadowed Areas (page 6-51)
			Skip Blank Page (page 6-67)
			Contrast (page 6-33)
		Program (pag	<u>e 5-9</u> )
	Detail (page 5-	48)	

Custom Box	Open	Print	Functions	Paper Selection (page 6	<u>-19</u> )
				Collate/Offset (page 6-2	5)
				Staple/Punch	Staple (page 6-26)
				( <u>page 6-26</u> )	Punch (page 6-28)
				Paper Output (page 6-30	<u>)</u> )
				Combine (page 6-38)	
				Margin/Centering (page	6-40)
				Booklet (page 6-43)	
				Duplex (page 6-46)	
				Cover (page 6-49)	
				Form Overlay (page 6-5)	<u>0</u> )
			Page # (page 6-51)		
			Job Finish Notice (page 6-64)		
			File Name Entry (page 6-65)		
			Delete after Printed (page	<u>le 6-76</u> )	
				Priority Override (page 6	5 <u>-65</u> )
				EcoPrint (page 6-32)	
				Zoom ( <u>page 6-35</u> )	
				Fold (page 6-24)	
				Text Stamp (page 6-57)	
				Bates Stamp (page 6-60	)
			Image Quality	Density (page 6-31)	
			Quanty	Original Image (page 6-31)	
				Sharpness (page 6-33)	
				Background Density Adj	
				Prevent Bleed-thru (page	<u>e 6-34</u> )
				Contrast (page 6-33)	
			Program (page	<u>e 5-9</u> )	

Custom Box	Open	Send	Destination (pa	age 5-40)
			Functions	Sending Size (page 6-69)
				File Format (page 6-70)
				FAX TX Resolution (refer to FAX Operation Guide)
				Centering (page 6-40)
				FAX Delayed Transmission (refer to FAX Operation Guide)
				Job Finish Notice (page 6-64)
				File Name Entry (page 6-65)
				E-mail Subject/Body (page 6-75)
				i-FAX Subject/Body (refer to <b>FAX Operation Guide</b> )
				FTP Encrypted TX (page 6-76)
			Delete after Transmitted (page 6-76)	
				Zoom ( <u>page 6-35</u> )
				File Separation (page 6-74)
				Text Stamp (page 6-57)
			Color/Image Quality	Bates Stamp (page 6-60)
				File Size Confirmation (page 6-76)
				FAX TX Report (refer to FAX Operation Guide)
				Density (page 6-31)
				Original Image (page 6-31)
				Resolution (page 6-74)
				Color Selection (page 6-32)
				Sharpness (page 6-33)
				Background Density Adj. (page 6-34)
				Prevent Bleed-thru (page 6-34)
				Contrast (page 6-33)
			Program (pag	<u>e 5-9</u> )

Custom Box	Open	Join (page 5-60)
		Move/Copy (page 5-58)
		Delete (page 5-61)
		Store File (page 5-54)
		Search (Name) (page 5-48)
		Page Selection (page 5-48)
		Detail (page 5-48)
		Preview (page 5-51)
	Search (Name	e) (page 5-48)
Search (No.)		page 5-48)
	Add/Edit Box (	page 5-52)





Job Box	Private Print/Stored Job (page 4-19, page 4-20)
	Quick Copy/Proof and Hold (page 4-21, page 4-22)
	Repeat Copy (page 6-66)
	Form for Form Overlay (page 5-62)





Removable Print		Functions	Paper Selection (page 6-19)		
Memory			Collate/Offset (page 6-25)		
			Staple/Punch (page 6-26)	Staple (page 6-26)	
				Punch (page 6-28)	
			Paper Output (page 6-30)		
			Margin (page 6-40)		
			Duplex (page 6-46)		
			Job Finish Notice (page 6-64)		
			Priority Override (page 6-65)		
			EcoPrint (page 6-32)		
			Fold (page 6-24)		
			Text Stamp (page 6-57)		
			Bates Stamp (page 6-60)		
			Encrypted PDF Password (page 6-7	<u>78</u> )	
			JPEG/TIFF Print (page 6-78)		
			XPS Fit to Page (page 6-78)		

Removable	Store File	Functions	Original Size (page 6-18)
Memory			Mixed Size Originals (page 6-20)
			2-sided/Book Original, Book Original (page 6-68)
			Original Orientation (page 6-23)
			Storing Size (page 6-77)
			Prevent Bleed-thru (page 6-34)
			Density (page 6-31)
			Original Image (page 6-31)
			Scan Resolution (page 6-74)
			Color Selection (page 6-32)
			Sharpness (page 6-33)
			Background Density Adj. (page 6-34)
			Zoom (page 6-35)
			Centering (page 6-40)
			Border Erase (page 6-41)
			Continuous Scan (page 6-63)
			Job Finish Notice (page 6-64)
			File Name Entry (page 6-65)
			Erase Shadowed Areas (page 6-51)
			Skip Blank Page (page 6-67)
			Contrast (page 6-33)
			Text Stamp (page 6-57)
			Bates Stamp (page 6-60)
			File Format (page 6-70)
			File Separation (page 6-74)
			Long Original ( <u>page 6-77</u> )
	Delete (page 5-49)		
	Detail (page 5-48)  Memory Information (page 5-67)		
Remove Memory (page 5-67)			
FAX Box (refer to FAX Operation Guide)			

Status/ Job Cancel



or





Printing Jobs (page 7-3)

Sending Jobs (page 7-5)

Storing Jobs (page 7-6)

Device/Communication (page 7-13)

Paper/Supplies (page 7-14)

System Menu / Counter





or



Quick Setup Wizard	FAX Setup (page 2-44)		
	Energy Saver Setup (pa	ge 2-44)	
	Network Setup (page 2-	<u>45</u> )	
Counter (page 2-60)			
Cassette/MP Tray Settings	Cassette 1 (page 8-7)		
	Cassette 2 (page 8-7)		
	Cassette 3 (page 8-7)		
	Cassette 4 (page 8-7)		
	Cassette 5 (page 8-7)		
	Cassette 6 (page 8-7)		
	Cassette 7 (page 8-7)		
	MP Tray Setting (page 8	3-8)	
Common Settings	Language (page 8-10)		
	Default Screen (page 8-	ge 8-10)	
	Sound	Buzzer (page 8-10)	
		FAX Speaker Volume (refer to FAX Operation Guide)	
		FAX Monitor Volume (refer to FAX Operation Guide)	
	Keyboard Layout (page 8-11)		
	Original/Paper	Custom Original Size (page 8-11)	
	Settings	Custom Paper Size (page 8-12)	
		Media Type Setting (page 8-12)	
		Default Paper Source (page 8-12)	
		Auto Detect Original Size (page 8-13)	
		Media for Auto (B&W) (page 8-13)	
		Paper Source for Cover (page 8-13)	
		Special Paper Action (page 8-14)	
		Separator Paper Source (page 8-14)	
		Show Paper Setup Message (page 8-14)	
	Measurement (page 8-1	<u>5</u> )	

Common Settings	Error Handling	Duplexing Error (page 8-16)
		Finishing Error (page 8-16)
		No Staple Error (page 8-16)
		Finished Pages Exceeded (page 8-16)
		Punch Waste Full Error (page 8-16)
		Paper Mismatch Error (page 8-16)
		Inserted Paper Mismatch (page 8-16)
		Paper Jam before Staple (page 8-17)
		Skewed or multi originals (page 8-17)
	Paper Output (page 8-17	<u>Z</u> )
	Orientation Confirmation	( <u>page 8-18</u> )
	Function Defaults	Orig. Orientation (Copy) (page 8-18)
		Orig. Orient.(Send/Store) (page 8-18)
		Original Image (Copy) (page 8-18)
		Org. Image (Send/Store) (page 8-18)
		FAX TX Resolution (refer to FAX Operation Guide)
		Scan Resolution (page 8-18)
		Color Selection (page 8-18)
		File Format (page 8-18)
		Backgrnd Density (Copy) (page 8-18)
		BackgrndDens.(Send/Store) (page 8-18)
		Prevent Bleed-thru (Copy) (page 8-18)
		Prevent Bleed (Send/Store) (page 8-18)
		Zoom (page 8-19)
		Border Erase Default (page 8-19)
		Border Erase to Back Page (page 8-19)
		Margin Default (page 8-19)
		Auto Image Rotation (Copy) (page 8-19)
		EcoPrint (page 8-19)
		Toner Save Level (EcoPrint) (page 8-19)
		High Comp. PDF Image (page 8-19)
		Color TIFF Compression (page 8-19)
		Image Quality (File Format) (page 8-19)

Common Settings	Function Defaults	Collate/Offset (page 8-19)
		JPEG/TIFF Print (page 8-19)
		XPS Fit to Page (page 8-19)
		PDF/A (page 8-20)
		File Name Entry (page 8-20)
		E-mail Subject/Body (page 8-20)
		i-FAX Subject/Body (page 8-20)
		DP Read Action (page 8-20)
		OCR Text Recognition (page 8-20)
		Primary OCR Language (page 8-20)
		Repeat Copy (page 8-20)
		Skip Blank Page (Copy) (page 8-20)
		Skip Blank Pg (Send/Store) (page 8-20)
		File Separation (page 8-20)
		Cont. Scan (Copy) (page 8-20)
		Continuous Scan (FAX) (refer to <b>FAX Operation Guide</b> )
		Cont. Scan (Send/Store) (page 8-21)
	Optional Keyboard Type	(page 8-21)
	System Stamp (page 8-2	<u>21</u> )
	Manual Staple (page 8-2	27)
	Offset Documents by Jo	b ( <u>page 8-27</u> )
	Low Toner Alert (page 8	<u>-28</u> )
	Offset One Page Docum	nents (page 8-28)
	Display Status/Log (page	e 8-28)
	Message Banner Print (	page 8-28)
	Customize Status Displa	y ( <u>page 8-29</u> )
	Message Board Settings	s (page 8-30)
	Remote Printing (page 8	<del>3-30</del> )
	Numeric Keypad Setting	s ( <u>page 8-31</u> )
	Prevent Light Reflection	
	Function Key Assignmen	
	Show Power Off Messag	ge ( <u>page 8-31</u> )

Home	Customize Desktop (pag	<u>le 2-17</u> )	
	Customize Taskbar (pag	e 2-17)	
	Wallpaper (page 2-17)		
Сору	Paper Selection (page 8	<u>-32</u> )	
	Auto Image Rotation Action (page 8-32)		
	Auto Paper Selection (pa	age 8-32)	
	Auto % Priority (page 8-3	32)	
	Paper Size for Small Ori	ginal ( <u>page 8-32</u> )	
	Preset Limit (page 8-32)		
	Reserve Next Priority (pa	age 8-32)	
	Quick Setup Registration	n ( <u>page 8-32</u> )	
Send	Quick Setup Registration	n ( <u>page 8-33</u> )	
	Dest. Check before Send	d (page 8-33)	
	Color Type (page 8-33)		
	Entry Check for New Dest. (page 8-33)		
	Default Screen (page 8-33)		
	Send and Forward (page 8-34)		
	New Destination Entry (g	page 8-34)	
	Recall Destination (page 8-34)		
	Broadcast (page 8-34)		
	HighCompressionPDF M	lode ( <u>page 8-34</u> )	
	OCR Text Recognition A	ct. (page 8-34)	
Document Box/Removable	Custom Box (page 5-47)		
Memory	FAX Box (refer to FAX C	peration Guide)	
	Job Box	Quick Copy Job Retention (page 8-38)	
		Repeat Copy Job Retention (page 8-38)	
		Deletion of Job Retention (page 8-38)	
	Polling Box (refer to FAX Operation Guide)		
	Quick Setup Registration (page 8-39)		
FAX (refer to FAX Operation	Guide)		

Printer	Emulation (page 8-39)			
	EcoPrint (page 8-40)			
	Toner Save Level (EcoPrint) (page 8-40)			
	Override A4/Letter (page 8-40)			
	Duplex (page 8-40)			
	Copies (page 8-40)			
	Orientation (page 8-40)			
	Form Feed Timeout (page	g <u>e 8-40</u> )		
	LF Action (page 8-40)			
	CR Action (page 8-40)			
	Job Name (page 8-40)			
	User Name (page 8-40)			
	Paper Feed Mode (page	Paper Feed Mode (page 8-40)		
	MP Tray Priority (page 8-41)			
	Auto Cassette Change (page 8-41)			
	Wide A4 (page 8-41)			
	Resolution (page 8-41)			
	KIR (page 8-41)			
Report	Print Report	Status Page (page 8-42)		
		Font List (page 8-42)		
		Network Status (page 8-42)		
		Service Status (page 8-43)		
		Optional Network Status (page 8-43)		
	Admin Report	Outgoing FAX Report (refer to FAX Operation Guide)		
	Settings	Incoming FAX Report (refer to FAX Operation Guide)		
	Result Report Setting	Send Result Report (page 8-43)		
		FAX RX Result Report (refer to FAX Operation Guide		
		Job Finish Notice Setting (refer to FAX Operation Guide)		
		RX Result Report Type (refer to FAX Operation Guide)		

Report	Sending Log History	Auto Sending (page 8-4-	<u>4</u> )
		Sending Log History (page 8-44)	
		Destination (page 8-44)	
		Job Log Subject (page 8	3-44)
		SSFC Log Subject (page	e 8-44)
		Personal Information (pa	age 8-44)
	Login History	Login History (page 8-44	1)
	Settings	Auto Sending (page 8-44)	
		Destination (page 8-44)	
		Subject (page 8-44)	
		Log Reset (page 8-44)	
	Device Log History Settings	Device Log History (pag	<u>e 8-45</u> )
	Settings	Auto Sending (page 8-4	<u>5</u> )
		Destination (page 8-45)	
		Subject (page 8-45)	
	Secure Comm. Error Log	Secure Comm. Error Log (page 8-46)	
		Auto Sending (page 8-46)	
		Destination (page 8-46)	
		Subject (page 8-46)	
System/Network	Network	Host Name (page 8-47)	
		Wired Network Settings	TCP/IP Setting (page 8-47)
			LAN Interface (page 8-49)
		Wi-Fi Direct Settings	Wi-Fi Direct (page 8-49)
			Device Name (page 8-49)
			IP Address (page 8-49)
			Auto Disconnect (page 8-49)
		Wi-Fi Settings	Wi-Fi (page 8-50)
			Setup (page 8-50)
		_	TCP/IP Setting (page 8-52)
		Bonjour (page 8-54)	
		IPSec ( <u>page 8-54</u> )	

System/Network	Network	Protocol Settings	SMTP (E-mail TX) (page 8-54)
			POP3 (E-mail RX) ( <u>page 8-54</u> )
			FTP Client (Transmission) (page 8-54)
			FTP Server (Reception) (page 8-54)
			SMB Client (Transmission) (page 8-54)
			NetBEUI (page 8-54)
			WSD Scan (page 8-55)
			WSD Print (page 8-55)
			i-FAX ( <u>page 8-55</u> )
			DSM Scan (page 8-55)
			ThinPrint (page 8-55)
			LPD ( <u>page 8-55</u> )
			Raw ( <u>page 8-56</u> )
			IPP (page 8-56)
			IPP over SSL (page 8-56)
			HTTP (page 8-56)
			HTTPS (page 8-56)
			LDAP (page 8-56)
			SNMPv1/v2c ( <u>page 8-57</u> )
			SNMPv3 ( <u>page 8-57</u> )
			Enhanced WSD (page 8-57)
			Enhanced WSD over SSL (page 8-57)
			eSCL ( <u>page 8-57</u> )
			eSCL over SSL (page 8-57)
		Security Settings (pag	<u>e 8-58</u> )
		Proxy (page 8-58)	
		Ping (page 8-58)	
		Restart Network (page	<u>e 8-58</u> )

System/Network	Optional Network	Basic ( <u>page 8-59</u> )	
		Wireless Network (page 8-60)	
	Primary Network (Client) (page 8-62)		
	Security Level (page 8-6	2)	
	Interface Block	USB Host (page 8-63)	
	Setting	USB Device (page 8-63)	
		USB Storage (page 8-63)	
		Optional Interface 1 (page 8-63)	
		Optional Interface 2 (page 8-63)	
	Data Security	Hard Disk/SSD Initialization (page 8-64)	
		Data Sanitization (page 8-65)	
		Software Verification (page 8-65)	
	Optional Function (page 8-66)		
	Bluetooth Settings (page 8-66)		
	Restart Entire Device (page 8-66)		
	NFC ( <u>page 8-66</u> )		
Edit Destination	Address Book (page 3-2	<u>5</u> )	
	One Touch Key (page 3-	32)	
	Print List (refer to FAX C	Print List (refer to <b>FAX Operation Guide</b> )	
	Address Book Defaults	Sort ( <u>page 8-67</u> )	
	Delaults	Narrow Down (page 8-67)	
		Address Book Type (page 8-67)	
	Edit Restriction	Address Book (page 8-67)	
		One-Touch Key (page 8-67)	

User Login/Job Accounting	User Login Setting	User Login (page 9-3)	
		Authentication Security	User Account Lockout Set. (page 9-5)
			Password Policy Settings (page 9-7)
		Local User List (page 9-	<u>8</u> )
		Local Authorization (page	<u>le 9-18</u> )
		Group Authorization	Group Authorization (page 9-19)
		Set.	Group List (page 9-20)
		Guest Authorization	Guest Authorization (page 9-22)
		Set.	Guest Property (page 9-23)
		Obtain NW User Proper	ty ( <u>page 9-25</u> )
		Simple Login	Simple Login (page 9-27)
		Settings	Simple Login Key (page 9-28)
		ID Card Settings	Keyboard Login (page 9-30)
			Additional Authentication (page 9-30)
		PIN Code Authorization (page 9-31)	
	Job Accounting Setting	Job Accounting (page 9-34)	
	Setting	Job Accounting Access (page 9-35)	
		Job Accounting (Local)	Print Accounting Report (page 9-48)
			Total Job Accounting (page 9-47)
			Each Job Accounting (page 9-47)
			Accounting List (page 9-36)
			Default Setting (page 9-44)
		Apply Limit (page 9-50)	
		Copy/Printer Count (page	<u>le 9-51</u> )
	Unknown User Settings	( <u>page 9-52</u> )	
User Property (page 9-11)			

Date/Timer/Energy Saver	Date/Time (page 8-68)
	Date Format (page 8-68)
	Time Zone (page 8-68)
	Auto Panel Reset (page 8-68)
	Auto Error Clear (page 8-68)
	Low Power Timer (page 8-69)
	Panel Reset Timer (page 8-69)
	Sleep Timer (page 8-69)
	Interrupt Clear Timer (page 8-69)
	Error Job Skip (page 8-69)
	Error Clear Timer (page 8-69)
	Unusable Time (refer to FAX Operation Guide)
	Sleep Rules (models for Europe) (page 8-70)
	Sleep Level (models except for Europe) (page 8-70)
	EnergySaver RecoveryLevel (page 8-70)
	Weekly Timer Settings (page 8-71)
	Power Off Rule (models for Europe) (page 8-71)
	Power Off Timer (models for Europe) (page 8-71)
	Ping Timeout (page 8-71)

Adjustment/Maintenance	Density Adjustment	Copy (page 8-72)
		Send/Box (page 8-72)
		FAX (refer to FAX Operation Guide)
	Background Density	Copy (Auto) (page 8-72)
	Adj.	Send/Box (Auto) (page 8-72)
	Sharpness	Copy (page 8-72)
	Adjustment	Send/Box (page 8-72)
	Correcting Black Lines (	page 8-72)
	System Initialization (pa	ge 8-72)
	Display Brightness (page	e 8-73)
	Silent Mode (page 8-73)	
	Auto Color Correction (page 8-73)	
	Tone Curve Adjustment (page 8-73)	
	Drum Refresh 1 (page 8-73)	
	Drum Refresh 2 (page 8-73)	
	Developer Refresh (page 8-73)	
	Calibration Cycle (page 8-73)	
	Calibration (page 8-74)	
	Memory Diagnostics (page 8-74)	
	Contrast	Copy (page 8-74)
		Send/Box (page 8-74)
	Correct Paper Curl (page 8-74)	
	Auto Drum Refresh (page 8-74)	
Internet (page 8-75)		
Application (page 8-75)		

# 1 Legal and Safety Information

Please read this information before using your machine. This chapter provides information on the following topics. Environment 1-3 SAFETY OF LASER BEAM (USA) ....... 1-6 Security Precautions when Using Wireless LAN (If equipped) ...... 1-9 

Energy Star (ENERGY STAR®) Program ...... 1-17

# **Notice**

# **Safety Conventions in This Guide**

The sections of this guide and parts of the machine marked with symbols are safety warnings meant to protect the user, other individuals and surrounding objects, and ensure correct and safe usage of the machine. The symbols and their meanings are indicated below.



WARNING: Indicates that serious injury or even death may result from insufficient attention to or incorrect compliance with the related points.



**CAUTION**: Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

#### **Symbols**

The  $\triangle$  symbol indicates that the related section includes safety warnings. Specific points of attention are indicated inside the symbol.



... [General warning]



The  $\bigcirc$  symbol indicates that the related section includes information on prohibited actions. Specifics of the prohibited action are indicated inside the symbol.



... [Warning of prohibited action]



... [Disassembly prohibited]

The ● symbol indicates that the related section includes information on actions which must be performed. Specifics of the required action are indicated inside the symbol.



... [Alert of required action]



... [Remove the power plug from the outlet]



... [Always connect the machine to an outlet with a ground connection]

Please contact your service representative to order a replacement if the safety warnings in this Operation Guide are illegible or if the guide itself is missing (fee required).



#### NOTE

An original which resembles a bank note closely may not be copied properly in some rare cases because this machine is equipped with a counterfeiting prevention function.

# **Environment**

The service environmental conditions are as follows:

Temperature	50 to 90.5 °F (10 to 32.5 °C)
Humidity	10 to 80%

Avoid the following locations when selecting a site for the machine.

- Avoid locations near a window or with exposure to direct sunlight.
- · Avoid locations with vibrations.
- Avoid locations with drastic temperature fluctuations.
- · Avoid locations with direct exposure to hot or cold air.
- · Avoid poorly ventilated locations.

If the floor is delicate against casters, when this machine is moved after installation, the floor material may be damaged.

During copying, some ozone is released, but the amount does not cause any ill effect to one's health. If, however, the machine is used over a long period of time in a poorly ventilated room or when making an extremely large number of copies, the smell may become unpleasant. To maintain the appropriate environment for copy work, it is suggested that the room be properly ventilated.

## **Precautions for Use**

#### Cautions when handling consumables



Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.

Keep parts which contain toner out of the reach of children.

If toner happens to spill from parts which contain toner, avoid inhalation and ingestion, as well as contact with your eyes and skin.

- If you do happen to inhale toner, move to a place with fresh air and gargle thoroughly with a large amount of water. If coughing develops, contact a physician.
- If you do happen to ingest toner, rinse your mouth with water and drink 1 or 2 cups of water to dilute the contents of your stomach. If necessary, contact a physician.
- If you do happen to get toner in your eyes, flush them thoroughly with water. If there is any remaining tenderness, contact a physician.
- · If toner does happen to get on your skin, wash with soap and water.

Do not attempt to force open or destroy parts which contain toner.

#### Other precautions

Return the exhausted toner container and waste toner box to your dealer or service representative. The collected toner container and waste toner box will be recycled or disposed in accordance with the relevant regulations.

Store the machine while avoiding exposure to direct sunlight.

Store the machine in a place where the temperature stays below 40 °C while avoiding sharp changes of temperature and humidity.

If the machine will not be used for an extended period of time, remove the paper from the cassette and the Multipurpose (MP) Tray, return it to its original package and reseal it.

# **Laser Safety (Europe)**

Laser radiation could be hazardous to the human body. For this reason, laser radiation emitted inside this machine is hermetically sealed within the protective housing and external cover. In the normal operation of the product by user, no radiation can leak from the machine.

This machine is classified as Class 1 laser product under IEC/EN 60825-1:2014.

Regarding CLASS 1 laser products, information is provided on the rating label.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT

# **SAFETY OF LASER BEAM (USA)**


#### 1. Safety of laser beam

This machine has been certified by the manufacturer to Class 1 level under the radiation performance standards established by the U.S.DHHS (Department of Health and Human Services) in 1968. This indicates that the product is safe to use during normal operation and maintenance. The laser optical system, enclosed in a protective housing and sealed within the external covers, never permits the laser beam to escape.

#### 2. The CDRH Act

A laser-product-related act was implemented on Aug. 2, 1976, by the Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration (FDA). This act prohibits the sale of laser products in the U.S. without certification, and applies to laser products manufactured after Aug. 1, 1976. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

The position of the rating label is show below.

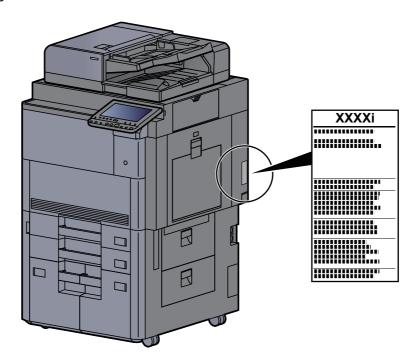

#### 3. Maintenance

For safety of the service personnel, follow the maintenance instructions in the other section of this manual.

#### 4. Safety switch

The power to the laser unit is cut off when the front cover is opened.

# **Safety Instructions Regarding the Disconnection of Power**

**Caution**: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

**Attention:** Le débranchement de la fiche secteur est le seul moyen de mettre l'appareil hors tension. Les interrupteurs sur l'appareil ne sont que des interrupteurs de fonctionnement: ils ne mettent pas l'appareil hors tension.

# **Compliance and Conformity**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 and Part 18 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- · The use of a non-shielded interface cable with the referenced device is prohibited.

CAUTION — The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter.

Industry Canada ICES-003 Compliance Label: CAN ICES-3B/NMB-3B

\* The above statements are valid only in the United States of America and Canada.

NOTE — Use shielded interface cables.

# Radio Tag Technology

In some countries the radio tag technology used in this equipment to identify the toner container may be subject to authorization and the use of this equipment may consequently be restricted.

# Other precautions (for users in California, the United States)

Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

# **Warranty (the United States and Canada)**

### 7002i/8002i MULTIFUNCTIONAL PRODUCT LIMITED WARRANTY

KYOCERA Document Solutions America, Inc. and KYOCERA Document Solutions Canada, Ltd. (both referred to as "KYOCERA") warrant the Customer's new Multifunctional Product (referred to as "MFP"), and the new accessories installed with the initial installation of the MFP, against any defects in material and workmanship for a period of one year, or 600,000 copies/prints from date of installation, whichever first occurs. In the event the MFP or an accessory is found to be defective within the warranty period, KYOCERA's only obligation and the Customer's exclusive remedy shall be replacement of any defective parts. KYOCERA shall have no obligation to furnish labor.

This warranty covers Maintenance Kits and the components of Maintenance Kits included with the original MFP for a period of one year or 600,000 copies/prints, whichever first occurs. Maintenance Kits consist of the developing unit, the drum unit, the transfer belt, and the fixing unit. Replacement Maintenance Kits have a 90 day Limited Warranty.

This warranty is valid only for the original retail purchaser (referred to as the "Customer") of a new KYOCERA MFP in the United States of America or Canada, based upon the country of purchase.

In order to obtain performance of this warranty, the Customer must immediately notify the Authorized KYOCERA Dealer from whom the product was purchased. If the KYOCERA Dealer is not able to provide service, write to KYOCERA at the address below for the name and address of the Authorized KYOCERA Dealer in your area, or check KYOCERA's website at <a href="https://www.kyoceradocumentsolutions.com">www.kyoceradocumentsolutions.com</a> for KYOCERA Document Solutions Canada, Ltd.

This warranty does not cover MFPs or accessories which: (a) have become damaged due to operator negligence, misuse, accidents, improper storage or unusual physical or electrical stress,

(b) have used parts or supplies which are not genuine KYOCERA brand parts or supplies, (c) have been installed or serviced by a technician not employed by KYOCERA or an Authorized KYOCERA Dealer, or (d) have had the serial number modified, altered, or removed.

This warranty gives the Customer specific legal rights. The Customer may also have other rights, which vary from state to state, or province to province. Neither the seller, nor any other person, is authorized to extend the time period or expand this warranty on behalf of KYOCERA.

THIS WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, AND KYOCERA SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY SHALL NOT EXTEND TO, AND KYOCERA SHALL NOT BE LIABLE FOR, ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHICH MAY ARISE OUT OF THE USE OF, OR INABILITY TO USE, THE MFP.

**KYOCERA Document Solutions America, Inc.** 

225 Sand Road, Fairfield, New Jersey 07004-0008, USA **KYOCERA Document Solutions Canada, Ltd.** 

6120 Kestrel Rd., Mississauga, ON L5T 1S8, Canada

# **Legal Restriction on Copying/Scanning**

It may be prohibited to copy/scan copyrighted material without permission of the copyright owner.

Copying/Scanning the following items is prohibited and may be penalized by low. It may not be limited to these items. Do not knowingly copy/scan the items that are not to be copied/scanned.

- · Paper money
- Bank note
- Securities
- Stamp
- Passport
- Certificate

Local laws and regulations may prohibit or restrict copying/scanning of other items not mentioned above.

## **EN ISO 7779**

Maschinenlärminformations-Verordnung 3. GPSGV, 06.01.2004: Der höchste Schalldruckpegel beträgt 70 dB (A) oder weniger gemäß EN ISO 7779.

#### **EK1-ITB 2000**

Das Gerät ist nicht für die Benutzung im unmittelbaren Gesichtsfeld am Bildschirmarbeitsplatz vorgesehen. Um störende Reflexionen am Bildschirmarbeitsplatz zu vermeiden, darf dieses Produkt nicht im unmittelbaren Gesichtsfeld platziert werden.

# **Wireless Connection (Mexico only)**

The operation of this equipment is subject to the following two conditions:

(1) it is possible that this equipment or device may not cause harmful interference, and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones:

(1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

# **Security Precautions when Using Wireless LAN** (If equipped)

Wireless LAN allows information to be exchanged between wireless access points instead of using a network cable, which offers the advantage that a WLAN connection can be established freely within an area in which radio waves can be transmitted.

On the other hand, the following problems may occur if security settings are not configured, because radio waves can pass through obstacles (including walls) and reach everywhere within a certain area.

#### **Secretly Viewing Communication Contents**

A third person with malicious objectives may intentionally monitor radio waves and gain unauthorized access to the following communication contents.

- Personal information including ID, passwords, and credit card numbers
- · Contents of email messages

#### **Illegal Intrusion**

A third party with malicious intent may gain unauthorized access to personal or company networks and conduct the following illegal actions.

- Extracting personal and confidential information (information leak)
- Entering into communication while impersonating a specific person and distributing unauthorized information (spoofing)
- Modifying and retransmitting intercepted communications (falsification)
- Transmitting computer viruses and destroying data and systems (destruction)

Wireless LAN cards and wireless access points contain built-in security mechanisms to address these problems and to reduce the possibility of these problems occurring by configuring the security settings of wireless LAN products when the product is used.

We recommend that customers take responsibility and use their judgment when configuring the security settings and that they ensure that they fully understand the problems that can occur when the product is used without configuring the security settings.

# **Limited Use of This Product (If equipped)**

 
- Radio waves transmitted from this product may affect medical equipment. When using this product in a medical
  institution or in the vicinity of medical instruments, either use this product according to the instructions and
  precautions provided by the administrator of the institution or those provided on the medical instruments.
- Radio waves transmitted from this product may affect automatic control equipment including automatic doors and fire
  alarms. When using this product in the vicinity of the automatic control equipment, use this product according to the
  instructions and precautions provided on the automatic control equipment.
- If this product is used in devices that are directly related to service including airplanes, trains, ships, and automobiles or this product is used in applications requiring high reliability and safety to function and in devices requiring accuracy including those used in disaster prevention and crime prevention and those used for various safety purposes, please use this product after considering the safety design of the entire system including adoption of a failsafe design and redundancy design for reliability and safety maintenance of the entire system. This product is not intended for use in applications requiring high reliability and safety including aerospace instruments, trunk communication equipment, nuclear power control equipment, and medical equipment; hence, the decision as to whether to use this product in these applications needs to be fully considered and determined.

# **Legal Information**

Copying or other reproduction of all or part of this guide without the prior written consent of KYOCERA Document Solutions Inc. is prohibited.

#### **Regarding Trade Names**

- PRESCRIBE is registered trademark of Kyocera Corporation.
- KPDL is a trademark of Kyocera Corporation.
- TASKalfa is registered trademarks or trademarks of KYOCERA Document Solutions Inc.
- Microsoft, Windows, Windows XP, Windows Server 2003, Windows Vista, Windows Server 2008, Windows 7, Windows Server 2012, Windows 8, Windows 8.1, Windows 10 and Internet Explorer are registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and/or other countries.
- PCL is a trademark of Hewlett-Packard Company.
- Adobe Acrobat, Adobe Reader and PostScript are trademarks of Adobe Systems Incorporated.
- Ethernet is a registered trademark of Xerox Corporation.
- IBM and IBM PC/AT are trademarks of International Business Machines Corporation.
- AppleTalk, Bonjour, Macintosh, and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- All European language fonts installed in this machine are used under licensing agreement with Monotype Imaging Inc.
- Helvetica, Palatino and Times are registered trademarks of Linotype GmbH.
- ITC Avant Garde Gothic, ITC Bookman, ITC ZapfChancery and ITC ZapfDingbats are registered trademarks of International Typeface Corporation.
- ThinPrint is a trademark of Cortado AG in Germany and other countries.
- UFST™ MicroType® fonts by Monotype Imaging Inc. are installed in this machine.
- This machine contains the software having modules developed by Independent JPEG Group.
- This product contains NetFront Browser of ACCESS CO., LTD.
- ACCESS, ACCESS logo and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in the United States, Japan and other countries.



Java is a registered trademark of Oracle and/or its affiliates.





- iPad, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- AirPrint and the AirPrint logo are trademarks of Apple Inc.
- iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license by Apple Inc.
- Google and Google Cloud Print™ are trademarks and/or registered trademarks of Google Inc.
- Mopria<sup>™</sup> is registered trademarks of Mopria<sup>™</sup> Alliance.
- Wi-Fi and Wi-Fi Direct are trademarks and/or registered trademarks of Wi-Fi Alliance.

All other brands and product names are registered trademarks or trademarks of their respective companies. The designations  $^{\text{TM}}$  and  $^{\text{R}}$  will not be used in this Operation Guide.

#### **GPL/LGPL**

This product contains GPL (http://www.gnu.org/licenses/gpl.html) and/or LGPL (http://www.gnu.org/licenses/lgpl.html) software as part of its firmware. You can get the source code, and you are permitted to copy, redistribute and modify it under the terms of GPL/LGPL. For further information including availability of the source code, visit http://www.kyoceradocumentsolutions.com/gpl/.

#### **OpenSSL License**

Copyright (c) 1998-2006 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
- 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission.

  For written permission, please contact openssl-core@openssl.org.
- 5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
- 6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org/)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### **Original SSLeay License**

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are adhered to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed.

If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used.

This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)"

  The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).
- 4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

#### **Monotype Imaging License Agreement**

- 1 *Software* shall mean the digitally encoded, machine readable, scalable outline data as encoded in a special format as well as the UFST Software.
- You agree to accept a non-exclusive license to use the Software to reproduce and display weights, styles and versions of letters, numerals, characters and symbols (*Typefaces*) solely for your own customary business or personal purposes at the address stated on the registration card you return to Monotype Imaging. Under the terms of this License Agreement, you have the right to use the Fonts on up to three printers. If you need to have access to the fonts on more than three printers, you need to acquire a multiuser license agreement which can be obtained from Monotype Imaging. Monotype Imaging retains all rights, title and interest to the Software and Typefaces and no rights are granted to you other than a License to use the Software on the terms expressly set forth in this Agreement.
- 3 To protect proprietary rights of Monotype Imaging, you agree to maintain the Software and other proprietary information concerning the Typefaces in strict confidence and to establish reasonable procedures regulating access to and use of the Software and Typefaces.
- 4 You agree not to duplicate or copy the Software or Typefaces, except that you may make one backup copy. You agree that any such copy shall contain the same proprietary notices as those appearing on the original.
- 5 This License shall continue until the last use of the Software and Typefaces, unless sooner terminated. This License may be terminated by Monotype Imaging if you fail to comply with the terms of this License and such failure is not remedied within thirty (30) days after notice from Monotype Imaging. When this License expires or is terminated, you shall either return to Monotype Imaging or destroy all copies of the Software and Typefaces and documentation as requested.
- 6 You agree that you will not modify, alter, disassemble, decrypt, reverse engineer or decompile the Software.
- 7 Monotype Imaging warrants that for ninety (90) days after delivery, the Software will perform in accordance with Monotype Imaging-published specifications, and the diskette will be free from defects in material and workmanship. Monotype Imaging does not warrant that the Software is free from all bugs, errors and omissions.
  - The parties agree that all other warranties, expressed or implied, including warranties of fitness for a particular purpose and merchantability, are excluded.
- 8 Your exclusive remedy and the sole liability of Monotype Imaging in connection with the Software and Typefaces is repair or replacement of defective parts, upon their return to Monotype Imaging.
  - In no event will Monotype Imaging be liable for lost profits, lost data, or any other incidental or consequential damages, or any damages caused by abuse or misapplication of the Software and Typefaces.
- 9 Massachusetts U.S.A. law governs this Agreement.

- 10 You shall not sublicense, sell, lease, or otherwise transfer the Software and/or Typefaces without the prior written consent of Monotype Imaging.
- 11 Use, duplication or disclosure by the Government is subject to restrictions as set forth in the Rights in Technical Data and Computer Software clause at FAR 252-227-7013, subdivision (b)(3)(ii) or subparagraph (c)(1)(ii), as appropriate. Further use, duplication or disclosure is subject to restrictions applicable to restricted rights software as set forth in FAR 52.227-19 (c)(2).
- 12 You acknowledge that you have read this Agreement, understand it, and agree to be bound by its terms and conditions. Neither party shall be bound by any statement or representation not contained in this Agreement. No change in this Agreement is effective unless written and signed by properly authorized representatives of each party. By opening this diskette package, you agree to accept the terms and conditions of this Agreement.

#### **Knopflerfish License**

This product includes software developed by the Knopflerfish Project. http://www.knopflerfish.org

Copyright 2003-2010 The Knopflerfish Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the KNOPFLERFISH project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### Apache License (Version 2.0)

Apache License Version 2.0, January 2004 http://www.apache.org/licenses/

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

- Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
- 3. Grant of Patent License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.
- 4. Redistribution. You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
  - (a) You must give any other recipients of the Work or Derivative Works a copy of this License; and
  - (b) You must cause any modified files to carry prominent notices stating that You changed the files; and
  - (c)You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works: and
  - (d)If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

- 5. Submission of Contributions. Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.
- 6. Trademarks. This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
- 7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.
- 8. Limitation of Liability. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.
- 9. Accepting Warranty or Additional Liability. While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

#### **END OF TERMS AND CONDITIONS**

APPENDIX: How to apply the Apache License to your work.

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets "[]" replaced with your own identifying information. (Don't include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same "printed page" as the copyright notice for easier identification within third-party archives.

Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at

http://www.apache.org/licenses/LICENSE-2.0

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

# **Energy Saving Control Function**

The device comes equipped with a Low Power Mode where energy consumption is reduced after a certain amount of time elapses since the device was last used, as well as a Sleep where printer and fax functions remain in a waiting state but power consumption is still reduced to a minimum when there is no activity with the device within a set amount of time.

- ▶ Low Power Mode (page 2-41)
- → Sleep (page 2-41)
- → Power Off Timer (models for Europe) (page 2-43)

## **Automatic 2-Sided Print Function**

This device includes 2-sided printing as a standard function. For example, by printing two 1-sided originals onto a single sheet of paper as a 2-sided print, it is possible to lower the amount of paper used.

→ Duplex (page 6-46)

Printing in duplex mode reduces paper consumption and contributes to the conservation of forest resources. Duplex mode also reduces the amount of paper that must be purchased, and thereby reduces cost. It is recommended that machines capable of duplex printing be set to use duplex mode by default.

# **Resource Saving - Paper**

For the preservation and sustainable use of forest resources, it is recommended that recycled as well as virgin paper certified under environmental stewardship initiatives or carrying recognised ecolabels, which meet EN 12281:2002\* or an equivalent quality standard, be used.

This machine also supports printing on  $64 \text{ g/m}^2$  paper. Using such paper containing less raw materials can lead to further saving of forest resources.

\*: EN12281:2002 "Printing and business paper - Requirements for copy paper for dry toner imaging processes"

Your sales or service representative can provide information about recommended paper types.

# **Environmental benefits of "Power Management"**

To reduce power consumption when idle, this machine is equipped with a power management function that automatically activates energy-saving mode when the machine is idle for a certain period of time. Although it takes the machine a slight amount of time to return to READY mode when in energy-saving mode, a significant reduction in energy consumption is possible. It is recommended that the machine be used with the activation time for energy-saving mode set to the default setting.

# Energy Star (ENERGY STAR®) Program



We have determined as a participating company in the International Energy Star Program that this product is compliant with the standards laid out in the International Energy Star Program. ENERGY STAR® is a voluntary energy efficiency program with the goal of developing and promoting the use of products with high energy efficiency in order to help prevent global warming. By purchasing ENERGY STAR® qualified products, customers can help reduce emissions of greenhouse gases during product use and cut energy-related costs.


# 2 Installing and Setting up the Machine


This chapter provides information for the administrator of this machine, such as part names, cable connection, and software installation.

Part Names (Machine Exterior)	2-2
Part Names (Connectors/Interior)	2-4
Part Names (With Optional Equipments	
Attached)	2-5
Connecting the Machine and Other Devices	2-6
Connecting Cables	2-7
Connecting LAN Cable	2-7
Connecting USB Cable	2-9
Connecting the Power Cable	2-10
Power On/Off	. 2-11
Power On	. 2-11
Power Off	. 2-11
Using the Operation Panel	2-12
Operation Panel Keys	2-12
Adjusting the Operation Panel Angle	2-13
Assigning Functions to Function	
Keys	2-14
Touch Panel	2-16
Home Screen	2-16
Display for Device Information	2-20
Display Setting Screen	2-20
Functions Key	2-21
Using the Screen	2-21
Display of Keys That Cannot Be	
Set	2-22
Original Preview	2-22
Entering Numbers	2-25
Using the Enter Key	2-26
Using the Quick No. Search Key	2-26
Help Screen	2-27
Accessibility Functions (Magnifying	
the View)	
Login/Logout	
Login	
Logout	
Default Settings of the Machine	
Setting Date and Time	
Network Setup	
Configuring the Wired Network	
Configuring the Wireless Network	
Setting Wi-Fi Direct	
Configuring NFC	
Energy Saver Function	2-41

Low Power Mode	
Sleep	. 2-41
Auto Sleep	. 2-42
Sleep Rules (models for Europe)	. 2-42
Sleep Level (Energy Saver) (models	
except for Europe)	. 2-42
Energy Saver Recovery Level	. 2-42
Weekly Timer Settings	. 2-42
Power Off Timer (models for Europe)	2-43
Quick Setup Wizard	. 2-44
Installing Software	. 2-47
Software on DVD (Windows)	
Installing Software in Windows	
Uninstalling the Software	
Installing Software in Mac	
Computer	. 2-55
Setting TWAIN Driver	
Setting WIA Driver	
Checking the Counter	
Additional Preparations for the	
Administrator	. 2-61
Sending Documents to a PC	
Strengthening the Security	
Command Center RX	
Accessing Command Center RX	
Changing Security Settings	
Changing Device Information	
E-mail Settings	
Registering Destinations	
Creating a New Custom Box	
Printing a document stored in a Cust	
Box	
Transferring Data from Our Other	
Products	. 2-75
Migrating the Address Book	
	0


# **Part Names (Machine Exterior)**

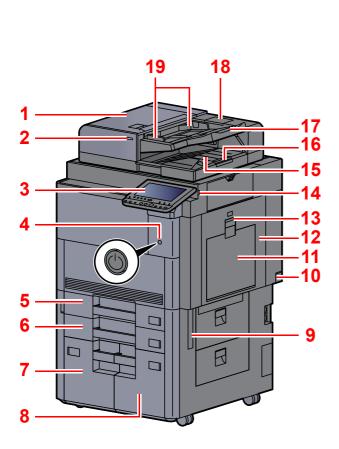

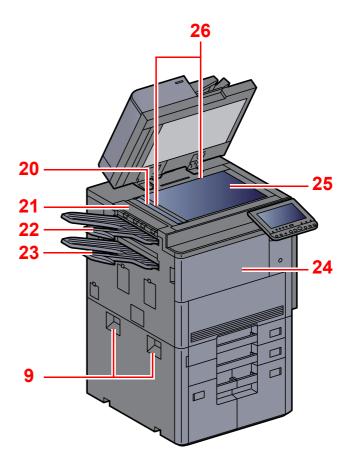

- 1 Document Processor
- 2 Original Loaded Indicator
- 3 Operation Panel
- 4 Power Switch
- 5 Cassette 1
- 6 Cassette 2
- 7 Cassette 4
- 8 Cassette 3
- 9 Handles
- 10 Main Power Switch
- 11 Multipurpose Tray
- 12 Right Cover 1
- 13 Right Cover 1 Lever


- 14 USB Memory Slot
- 15 Original Eject Table
- 16 Original Stopper
- 17 Original Table
- 18 Cleaning Cloth Compartment
- 19 Original Width Guides
- 20 Slit Glass
- 21 Upper Left Cover
- 22 Upper Left Tray
- 23 Lower Left Tray
- 24 Front Cover
- 25 Platen
- 26 Original Size Indicator Plates

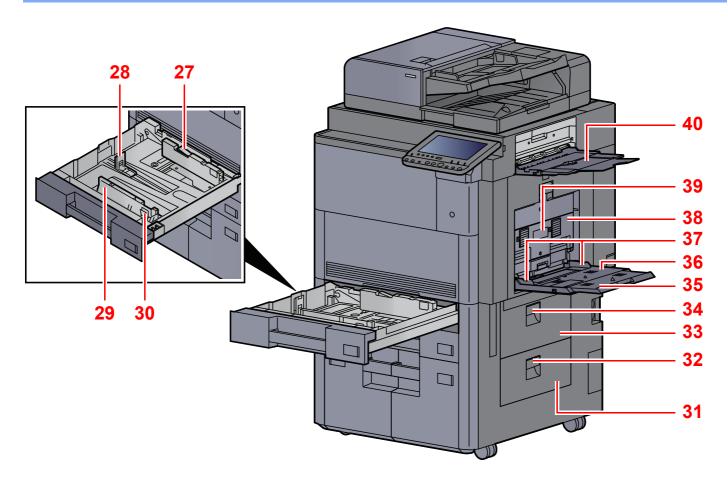

- 27 Paper Width Guide Lock
- 28 Paper Length Guide
- 29 Paper Width Guide
- 30 Paper Width Adjusting Tab
- 31 Right Cover 4
- 32 Right Cover 4 Lever
- 33 Right Cover 3

- 34 Right Cover 3 Lever
- 35 Support Tray Section of the Multipurpose Tray
- 36 Multipurpose Tray
- 37 Paper Width Guide
- 38 Right Cover 2
- 39 Right Cover 2 Handle
- 40 Right Tray


# **Part Names (Connectors/Interior)**

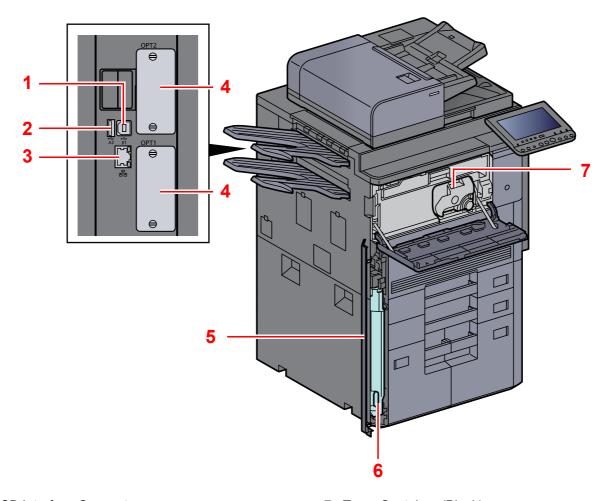

- 1 USB Interface Connector
- 2 USB Port
- 3 Network Interface Connector
- 4 Option Interface Slot
- 5 Waste Toner Box Cover
- 6 Waste Toner Box

7 Toner Container (Black)

# Part Names (With Optional Equipments Attached)

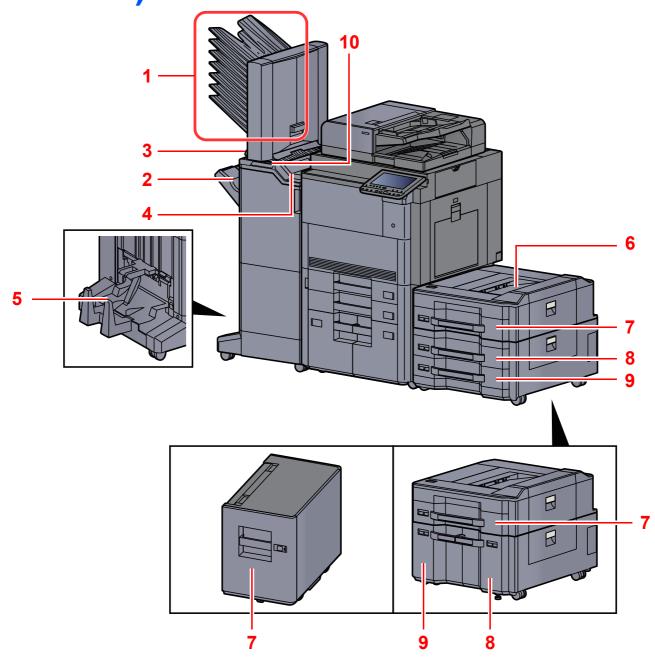


- 1 Tray 1 to 7 (tray 1 is the top tray)
- 2 Tray A
- 3 Tray B
- 4 Tray C
- 5 Folding Tray
- → Optional Equipment (page 11-2)

- 6 Side Feeder Top Tray
- 7 Cassette 5
- 8 Cassette 6
- 9 Cassette 7
- 10 Control Section of the Finisher
- → Manual Staple (page 5-70)


# **Connecting the Machine and Other Devices**

 Prepare the cables necessary to suit the environment and purpose of the machine use.

When Connecting the Machine to the PC via USB



When Connecting the Machine to the PC or Tablet by network cable, Wi-Fi, or Wi-Fi direct

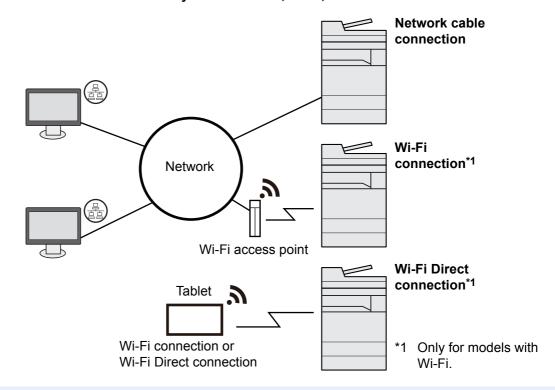




If you are using wireless LAN, refer to the following.

Configuring the Wireless Network (page 2-34)

#### **Cables that Can Be Used**

 Connection Environment	Function	Necessary Cable
Connect a LAN cable to the machine.	Printer/Scanner/Network FAX*1	LAN cable (10BASE-T, 100BASE-TX, 1000BASE-T)
Connect a USB cable to the machine.	Printer	USB 2.0 compatible cable (Hi-Speed USB compliant, max. 5.0 m, shielded)

<sup>\*1</sup> Function available when using optional FAX kit. For more information on using the Network FAX, refer to the **FAX Operation Guide**.



Using a cable other than a USB 2.0 compatible cable may cause failure.

# **Connecting Cables**

# **Connecting LAN Cable**


**⊘** IMPORTANT

Make sure that the power to the machine is turned off.


→ Power Off (page 2-11)

#### Connect the cable to the machine.


1 Remove the covers from the machine in order from the top.

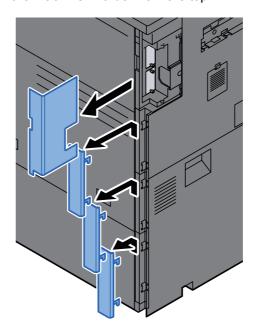


2 Connect the LAN cable to the network interface connector.

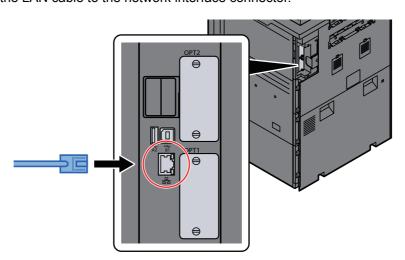

3 Insert the cord into the groove.

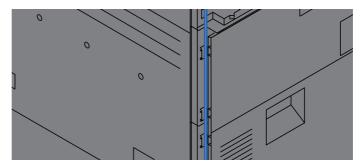

4 Attach the covers in order from the bottom, taking care not to pinch the cord.

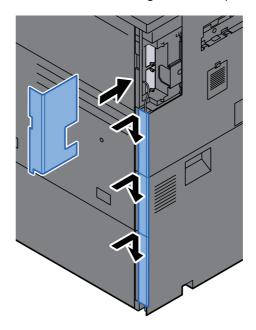

- **5** Connect the other end of the cable to the hub or the PC.
- Power on the machine and configure the network.
  - → Network Setup (page 2-32)

# **Connecting USB Cable**


**⊘** IMPORTANT

Make sure that the power to the machine is turned off.


→ Power Off (page 2-11)

#### Connect the cable to the machine.


1 Remove the covers from the machine in order from the top.

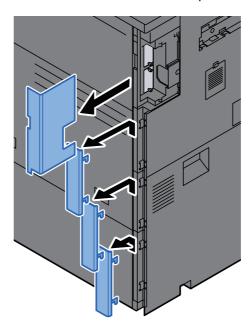


2 Connect the USB cable to the USB interface connector located on the left side of the body.

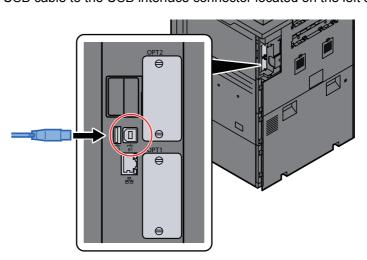

3 Insert the cord into the groove.

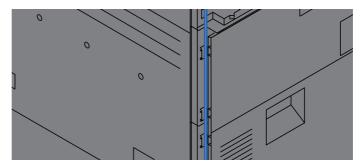

4 Attach the covers in order from the bottom, taking care not to pinch the cord.

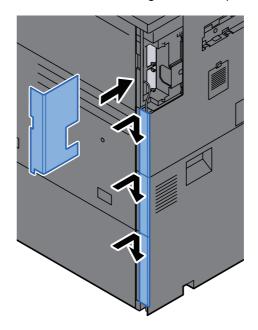

- 5 Connect the other end of the cable to the PC.
- Power on the machine.

# **Connecting the Power Cable**

#### Connect the cable to the machine.

Connect one end of the supplied power cable to the machine and the other end to a power outlet.




**IMPORTANT** 

Only use the power cable that comes with the machine.

# **Power On/Off**


## **Power On**

Turn the power switch on.

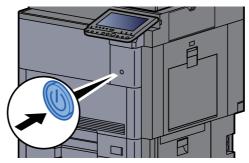

## **Power Off**


Turn the power switch off.

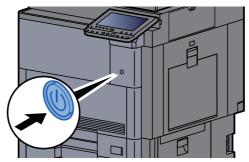

The confirmation message for power supply off is displayed.

→ Show Power Off Message (page 8-31)

 It takes about 3 minutes for power off.




If this machine will be left unused for an extended period (e.g. overnight), turn it off at the power switch. If the machine will not be used for an even longer period of time (e.g. vacation), remove the power plug from the outlet as a safety precaution.

# **⊘** IMPORTANT

If using the products equipped with the fax function, note that turning the machine off at the power switch disables fax transmission and reception. Remove paper from the cassettes and seal it in the paper storage bag to protect it from humidity.

# **Using the Operation Panel**


# **Operation Panel Keys**

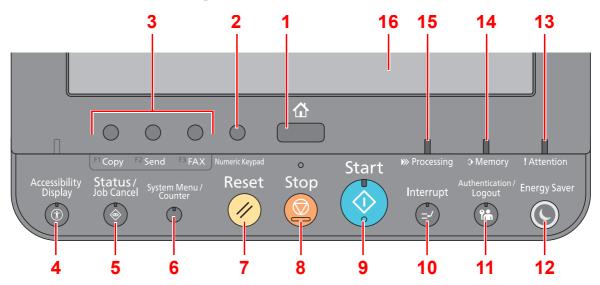

- 1 [Home] key: Displays the Home screen.
- 2 [Numeric Keypad] key: Displays numeric keys on the touch panel.
- 3 Function Key: These keys enable various functions and applications, including copy and scan, to be registered.
  - → Assigning Functions to Function Keys (page 2-14)
- 4 [Accessibility Display] key: Switches the touch panel display on the Copy screen and the Send screen to a magnified view.
- 5 [Status/Job Cancel] key: Displays the Status/Job Cancel screen.
- 6 [System Menu/Counter] key: Displays the System Menu screen.
- 7 [Reset] key: Returns settings to their default states.
- 8 [Stop] key: Cancels or pauses the job in progress.
- 9 [Start] key: Starts copying and scanning operations and processing for setting operations.
- 10 [Interrupt] key: Displays the Interrupt Copy screen.
- 11 [Authentication/Logout] key: Authenticates user switching, and exits the operation for the current user (i.e. log out).
- 12 [Energy Saver] key: Puts the machine into Sleep Mode. Recovers from Sleep if in Sleep Mode.
- 13 [Attention] indicator: Lights or blinks when an error occurs and a job is stopped.
- 14 [**Memory**] indicator: Blinks while the machine is accessing the hard disk, fax memory or USB memory (general purpose item).
- 15 [Processing] indicator: Blinks while printing or sending/receiving.
- 16 Touch Panel: Displays icons for configuring machine settings.

# **Adjusting the Operation Panel Angle**

The angle of the operation panel can be adjusted.

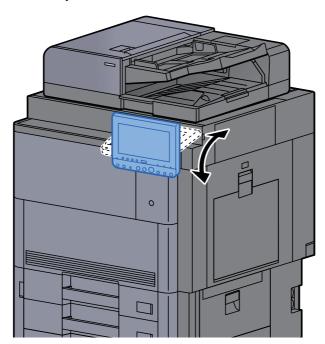

# **Assigning Functions to Function Keys**

Function keys are keys to which various functions and applications, including copy and scan, can be assigned. Frequently used functions and applications can be assigned and the screen can easily be displayed.

For this machine, the following functions are pre-assigned; however, alternative functions can be registered by re-assigning these functions.

- [F1] (Function key 1): Copy
- [F2] (Function key 2): Send
- [F3] (Function key 3): FAX (Option)

### Display the screen.

[System Menu/Counter] key > [Common Settings] > [Function Key Assignment]



#### **NOTE**

If user login administration is enabled, you can only change the settings by logging in with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

## Configure the settings.

- 1 Select [Change] to enable the function key to be set.
- 2 Select the function to be assigned.

Function	Description	Reference page
None	No function has been assigned.	_
Сору	Displays the Copy screen.	page 5-17
Send	Displays the Send screen.	page 5-21
FAX*1	Displays the FAX screen.	Refer to the FAX Operation Guide.
Custom Box	Displays the Custom Box screen.	page 5-52
Job Box	Displays the Job Box screen.	page 4-18
Removable Memory	Displays the Removable Memory screen.	page 5-64
FAX Box*1	Displays the FAX Box screen.	Refer to the FAX Operation Guide.
Send to Me (E-mail)*2	Displays the Send screen. The E-mail address of the logged-in user is set as the destination.	page 5-38
Send to Me from Box (E-mail)*2	Displays the Custom Box screen. The E-mail address of the logged-in user is set as the destination.	page 5-58

Function	Description	Reference page
Internet Browser	Displays the Internet Browser screen.	page 5-68
Program	Calls up the registered program. The icon will change according to the function of the program.	page 5-9
Application Name	Displays the selected applications.	page 5-12

<sup>\*1</sup> Displayed only on products with the fax function installed.\*2 Displayed when user login administration is enabled.


# **Touch Panel**

## **Home Screen**

This screen is displayed by selecting the [**Home**] key on the operation panel. Touching an icon will display the corresponding screen.

You can change the icons to display on the Home screen as well as its background.

→ Editing the Home Screen (page 2-17)

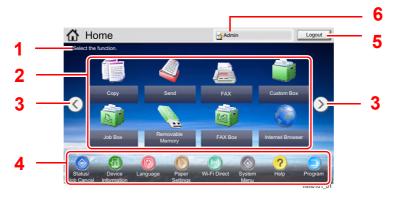

\* The appearance may differ from your actual screen, depending on your configuration and option settings.

No.	Item	Description	
1	Message	Displays the message depending on the status.	
2	Desktop	Displays function icons including the functions registered in program. Icons that are not displayed on the first page will appear by changing the page.	
3	Screen-switching keys	Use these buttons to switch between desktop pages.  NOTE  You can also switch views by touching the screen and moving the finger sideways (i.e. swiping).	
		Select the function.  FAX  Custom Box  Copy  Send  FAX Box  Erowser  2  Status/ Device Job Cancel Informatio	
4	Taskbar	Displays task icons.	
5	[Logout]	Logs out the current user. This is displayed when user login administration is enabled.	
6	Login User Name	Displays the logged-in user name. This is displayed when user login administration is enabled. Selecting "Login User Name" will display the information of the logged-in user.	

#### **Editing the Home Screen**

You can change the background of the Home screen as well as which icons are displayed.

#### Display the screen.

1 [System Menu/Counter] key > [Home]

#### **NOTE**

If user login administration is enabled, you can only change the settings by logging in with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

## Configure the settings.

The available settings are shown below.

Item	Description
Customize Desktop	Specify the function icons to display on the desktop.*1 Select [Add] to display the screen for selecting the function to display. Select the function to display and [OK]. Select an icon and [Previous] or [After] to change the display position of the selected icon on the Desktop. To delete an icon from desktop, select the desired one and select [Delete].
Customize Taskbar	Specify the task icons to display on the taskbar.*2
Wallpaper	Configure the wallpaper of the Home screen.  Value: Images 1 to 8

<sup>\*1</sup> Displays a maximum of 58 function icons including the installed applications and the functions that can be used when options are installed.

<sup>\*2 8</sup> task icons can be displayed.

#### **Available Functions to Display on Desktop**

Function	Icon	Description	Reference page
Copy*1	The state of the s	Displays the Copy screen.	page 5-17
Send*1		Displays the Send screen.	page 5-21
FAX*2		Displays the FAX screen.	Refer to the FAX Operation Guide.
Custom Box*1		Displays the Custom Box screen.	page 5-52
Job Box*1	D	Displays the Job Box screen.	page 4-18
Removable Memory*1		Displays the Removable Memory screen.	page 5-64
FAX Box*2		Displays the FAX Box screen.	Refer to the FAX Operation Guide.
Internet Browser		Displays the Internet Browser screen.	page 5-68
Send to Me (E-mail)*3		Displays the Send screen. The E-mail address of the logged-in user is set as the destination.	page 5-38
Send to Me from Box (E-mail)*3		Displays the Custom Box screen. The E-mail address of the logged-in user is set as the destination.	page 5-58
Program		Calls up the registered program. The icon will change according to the function of the program.	page 5-9
Application Name*4	Panel	Displays the selected applications.	page 5-12

<sup>\*1</sup> Selected at the time of shipment from factory.

<sup>\*2</sup> Displayed only on products with the fax function installed.\*3 Displayed when user login administration is enabled.

<sup>\*4</sup> The icon of the application appears.

### **Available Functions to Display on Taskbar**

Function	Icon	Description	Reference page
Status/Job Cancel*1		Displays the Status screen. If an error occurs, the icon will show "!". Once the error clears, the display will return to normal.	_
Device Information*1	(ii)	Displays the Device Information screen. Check the system and network information.  You can also check information on the options that are used.	page 2-20
Language*1	@	Displays the Language setting screen in System Menu.	page 8-10
Paper Setting*1	0	Displays the Paper setting screen in System Menu.	page 8-7
Wi-Fi Direct	0	Wi-Fi Direct is set and a list of information relating to the machine that can use the network appears.	page 8-49
System Menu*1	0	Displays the System Menu screen.	page 8-2
Help*1	?	Displays the Help screen.	page 2-27
Program*1	€	Displays the program list screen.	page 5-9
Accessibility/ Standard		Magnifies the text and icons on the screen. Pressing the Accessibility icon switches the icon to the Standard icon. Press the Standard icon to return to the previous view.	page 2-28
Message Board	<b>=</b>	Displays the Message Board screen.	page 8-30
		NOTE	
		To use this function, set "Message Board" to [ <b>ON</b> ] in System Menu.	
		<ul><li>Command Center RX User Guide</li></ul>	

<sup>\*1</sup> Selected at the time of shipment from factory.

# **Display for Device Information**

Shows device information. Allows you to check system and network information, as well as options that are used.

- 1 [Home] key > [Device Information]
- 2 Check the device information.


Tab	Description
Identification/Wired Network	You can check ID information such as the model name, serial number, host name and location, and the IP address of the wired network.
Wi-Fi*1	You can check ID information such as the model name, serial number, host name and location, and the IP address of the wireless network.
FAX*2	You can check the local fax number, local fax name, local fax ID and other fax information.
Software Ver./Capability	You can check the software version and performance.
Option	You can check information on the options that are used.

<sup>\*1</sup> Displayed only when the Wireless Network Interface Kit is installed. The Wireless Network Interface Kit is an option for some models. Contact your dealer or our sales or service representatives for detail.

- → IB-35 "Wireless Network Interface Kit" (page 11-5)
- \*2 Displayed only on products with the fax function installed.

# **Display Setting Screen**

The following procedure is an example of the Copy screen.

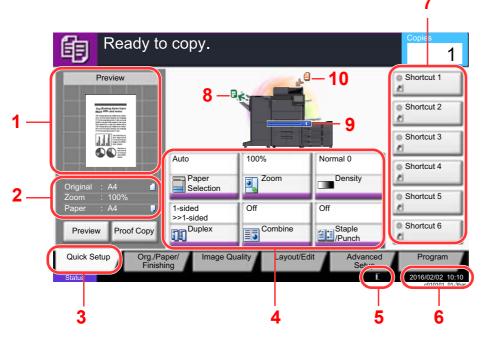

- 1 Shows an image of the output paper.
- 2 Original : Shows the original size

when the original is

placed.

Zoom: Shows the

magnification of the document to be printed.


Paper: Shows the size of the

output paper.

- 3 Displays the Quick Setup screen.
- 4 Set the copy functions.
- 5 Remaining amount of toner.
- 6 Displays the time.
- 7 Displays registered shortcuts.
- 8 Displays the output tray.
- 9 Displays the paper source.
- 10 Displays the original position.


# **Functions Key**

To configure the settings for functions, select the tab and press the function key.

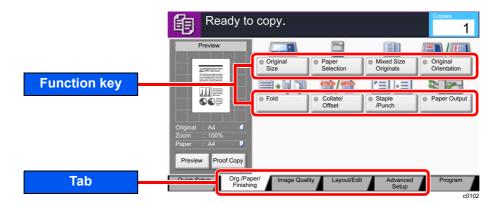

# **Using the Screen**


Touch panel keys that are pressed are outlined in red.

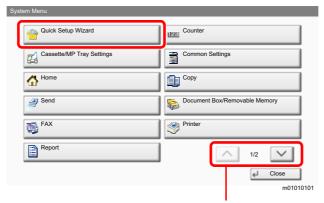

Select  $[ \land ]$  or  $[ \lor ]$  to scroll up and down.

# **Display of Keys That Cannot Be Set**

Keys of features that cannot be used due to feature combination restrictions or non-installation of options are in a nonselectable state.

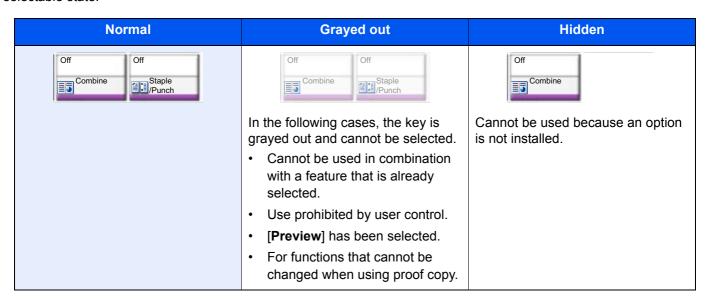



#### ■ NOTE

If a key that you wish to use is grayed out, the settings of the previous user may still be in effect. In this case, select the [Reset] key and try again.

If the key is still grayed out after the [Reset] key is selected, it is possible that you are prohibited from using the function by user control. Check with the administrator of the machine.

# **Original Preview**

You can display a preview image of the scanned document on the panel.



#### **NOTE**

- To view a preview of an image stored in a Custom Box, refer to the following:
  - ▶ Previewing Documents/Checking Document Details (page 5-51)
- The procedure described here is for copying a single-page original.
  - Display the screen.


[Home] key > [Copy] key

Place the originals.

### Display a preview image.

#### 1 Select [Preview].


The machine starts scanning the original. When scanning is completed, the preview image appears on the panel.

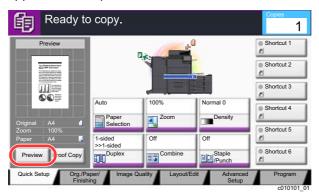

#### 2 Select [Detail].

You can check the finished image in greater detail.




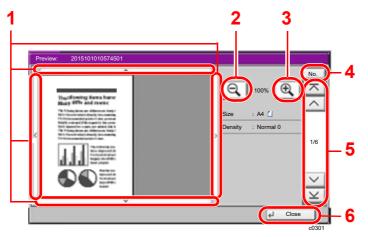

- 1 In magnified view, you can move the range of display.
- 2 Zoom out.
- 3 Zoom in.
- 4 In multiple-page documents, you can change pages by entering the desired page number.
- 5 In multiple-page documents, you can use these buttons to change pages.
- 6 Close the Preview screen.

#### **Duplex Printing**

Settings for duplex printing appear.

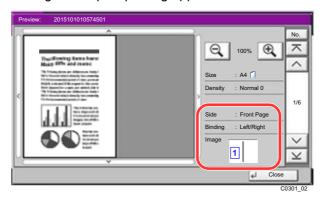

# NOTE

- To change the quality or the layout, select [Cancel] or the [Stop] key.
   Change the settings and select [Preview] again to see a preview image with the new settings.
- Depending on the function you are using, even if you scan a multi-page original, only the first page can be previewed.
- 3 If there is no problem with the preview image, press the [Start] key. Copying starts.


#### **Using the Preview Screen**

When the Preview screen is displayed, you can do the following by moving the finger that is touching the touch panel.

Function	Description
Drag	With the finger touching the touch panel, slide the finger to move the position of the displayed preview.
Pinch in Pinch out	With two fingers touching the touch panel, widen or tighten the space between the two fingers to zoom in and out on the view.

# **Entering Numbers**

When entering numbers, numeric keys appear on the touch panel if you select the [**Numeric Keypad**] key on the operation panel or select the area in which the number is entered.

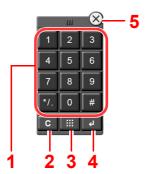



- 1 Enter numbers and symbols.
- 2 Clear entered numbers.
- 3 Quick No. Search key.
  - → Using the Quick No. Search Key (page 2-26)
- 4 Entry by numeric keys is confirmed.
  - → Using the Enter Key (page 2-26)
- 5 Close the numeric keypad.

# NOTE


- Numeric keys do not appear on the touch panel if an optional numeric keypad is installed.
- Alphabetic letters appear on numeric keys if an optional FAX Kit is installed. Alphabetic letters are used to remember the FAX number.

#### Example: When entering the number of copies

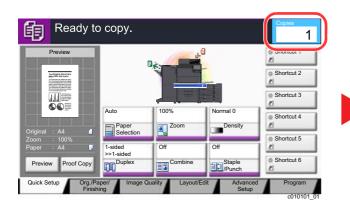

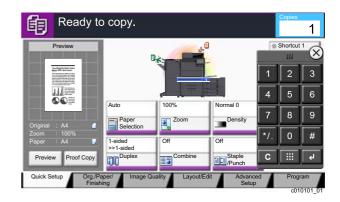


#### Example: When entering a one-touch key number

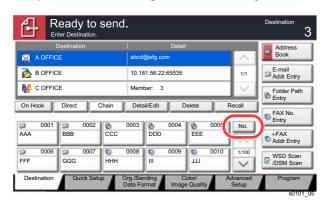



#### Example: When searching for an address number

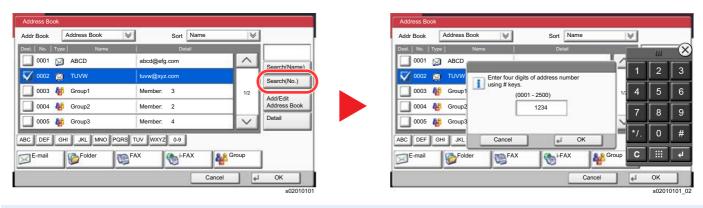

## NOTE

Moving your finger while touching the top of the numeric keypad enables you to freely move to any key. (Drag operation)



- For copy and print screens, you can set numeric keys to be displayed in advance. In addition, you can select the layout for numeric keys that are used on the application.
  - → Numeric Keypad Settings (page 8-31)

# **Using the Enter Key**


The Enter key has the same function as the key with the Enter mark  $(\leftarrow)$ , such as the  $[OK \leftarrow]$  key and the  $[Close \leftarrow]$ .

# **Using the Quick No. Search Key**

The Quick No. Search key performs the same action as the [**No.**] displayed on the touch panel. Use the Quick No. Search keys to perform an action by simply entering a number directly using the numeric keys. For example, you can specify the speed dial for a transmission destination or recall a stored program by its program number.

For more information on speed dialing, refer to the following:

◆ Specifying Destination (page 5-40)

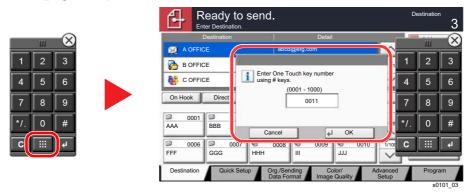


# **Help Screen**

If you have difficulty operating the machine, you can check how to operate it using the touch panel.

To show the Help screen for a function, select [**Help**] on the panel of the setting screen of that function. The Help screen shows explanations of functions and how to use them.

### Display the Paper Selection screen.


- → Paper Selection (page 6-19)
- Select [Help] on the panel.

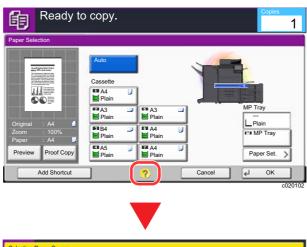



#### Selecting [Help] on the Home Screen

Show the Help list.

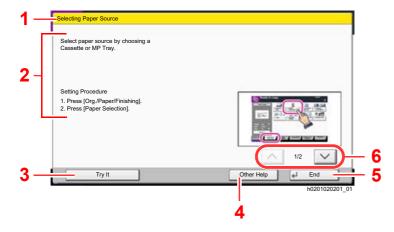

- 1 Help titles.
- 2 Displays information about functions and machine operation.
- 3 Show the screen of the tab that includes the function explained in Help. (In the case of this screen, the screen that appears after step 1 of "Setting Procedure" is performed will appear.)
- 4 Displays the Help list.
- 5 Closes the Help screen and returns to the original screen.
- 6 Scrolls up and down when the help text cannot be displayed in its entirety on a single screen.

# **Accessibility Functions (Magnifying the View)**

You can magnify the text and keys displayed on the touch panel. You can also select items and move to the next screen using the numeric keys.




#### NOTE

- This function can be used on the Home screen and on the functions that were registered via Copy/Send Quick Setup.
- To configure any functions that are not displayed on the Accessibility screen, you need to return to the original view. Select the [Accessibility Display] key again.

While using the Copy or Send functions, select the [Accessibility Display] key.

Large keys and text appear on the touch panel.

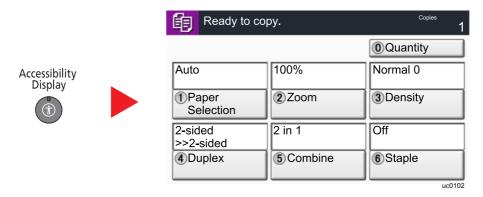

You can also control the screen using the numeric key corresponding to the number in circle. (Example: Press the [2] key on the numeric key pad to zoom.)

Control the functions according to the display on the screen.

# Login/Logout

If you are setting a function that requires administrator rights, or if user login administration is enabled, you must enter your login user name and login password.



#### **NOTE**

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

You will be unable to login if you forget your login user name or login password. In this event, login with administrator privileges and change your login user name or login password.

# Login

#### **Normal login**

### Enter the login user name and login password to login.

If this screen is displayed during operations, select [Login User Name] to enter the login user name.




- Character Entry Method (page 11-9)
- 2 [Login Password] > Enter the login password > [OK]

# NOTE

- [# Keys] can be selected to enter the number with the numeric keys on the operation
- If [Network Authentication] is selected as the user authentication method, authentication destinations are displayed and either [Local] or [Network] can be selected as the authentication destination.
- To authenticate by ID card, select [ID Card Login].

# Select [Login].

#### Simple Login

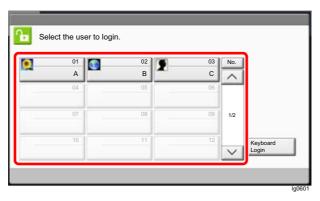


If this screen is displayed during operations, select a user and log in.



If a user password is required, an input screen will be displayed.

→ Simple Login Settings (page 9-27)

# Logout

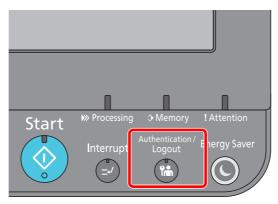

To logout from the machine, select the [Authentication/Logout] key to return to the login user name/login password entry screen.

Users are automatically logged out in the following circumstances:

- When the machine enters the sleep state.
- When the auto panel reset function is activated.

# **Default Settings of the Machine**

The default settings of the machine can be changed in System Menu. Before using this machine, configure such settings as date and time, network configuration, and energy saving functions as needed.

#### **NOTE**

For settings that are configurable from System Menu, refer to the following:

→ Setup and Registration (System Menu) (page 8-1)

# **Setting Date and Time**

Follow the steps below to set the local date and time at the place of installation.

When you send an E-mail using the transmission function, the date and time as set here will be printed in the header of the E-mail message. Set the date, time and time difference from GMT of the region where the machine is used.

#### **NOTE**

- · To make changes after this initial configuration, refer to the following:
  - ▶ Date/Timer/Energy Saver (page 8-68)
- The correct time can be periodically set by obtaining the time from the network time server.
  - Command Center RX User Guide

### Display the screen.

[System Menu/Counter] key > [Date/Timer/Energy Saver]

## Configure the settings.

[Time Zone] > [Date/Time] > [Date Format]

Item	Description
Time Zone	Set the time difference from GMT. Choose the nearest listed location from the list. If you select a region that utilizes summer time, configure settings for summer time.
Date/Time	Set the date and time for the location where you use the machine. If you perform Send as E-mail, the date and time set here will be displayed on the header.  Value: Year (2000 to 2037), Month (1 to 12), Day (1 to 31), Hour (00 to 23), Minute (00 to 59), Second (00 to 59)
Date Format	Select the display format of year, month, and date. The year is displayed in Western notation.  Value: Month/Day/Year, Day/Month/Year, Year/Month/Day

# **Network Setup**

# **Configuring the Wired Network**

The machine is equipped with network interface, which is compatible with network protocols such as TCP/IP (IPv4), TCP/IP (IPv6), NetBEUI, and IPSec. It enables network printing on the Windows, Macintosh, UNIX and other platforms.

Set up TCP/IP (IPv4) to connect to the Windows network.

Be sure to connect the network cable before configuring the settings.

Connecting LAN Cable (page 2-7)

For other network settings, refer to the following:

Network (page 8-47)

#### **NOTE**

If user login administration is enabled, you can only change the settings by logging in with administrator privileges. If user login administration is disabled, the user authentication screen appears. Enter a login user name and password, and select [Login].

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

#### IPv4 setting

# Display the screen.

[System Menu/Counter] key > [System/Network] > "Network" [Next] > "Wired Network Settings" [Next] > "TCP/IP Setting" [Next] > "IPv4" [Change]

# Configure the settings.

When using DHCP server

[DHCP]: Set to [On].

When setting the static IP address

[DHCP]: Set to [Off].

[IP Address]: Enter the address.

[Subnet Mask]: Enter the subnet mask in decimal representation (0 to 255).

[Default Gateway]: Enter the address.

[Auto-IP]: Set to [Off].

When using the Auto-IP, enter "0.0.0.0" in [IP Address].



#### IMPORTANT

After changing the setting, restart the network from System Menu, or turn the machine OFF and then ON.

Restart Network (page 8-58)

#### NOTE

Ask your network administrator for the IP address in advance, and have it ready when you configure this setting.

In the following cases, set the IP address of DNS server on the Command Center RX.

- When using the host name with "DHCP" setting set to "Off"
- When using the DNS server with IP address that is not assigned by DHCP automatically. Setting the IP Address of the DNS Server, refer to the following:
- Command Center RX User Guide

# **Configuring the Wireless Network**

When the Wireless Network Interface Kit (IB-35 and IB-51) is installed on the machine and the connection settings are configured, it is possible to print or send in a wireless network (wireless LAN) environment. The configuration methods are as follows:

Configuration Method	Description	Reference Page
Configuring the Connection from the Operation Panel on This Machine	Use Quick Setup Wizard when configuring the network in a wizard-style screen, without setting individually in System menu.	Quick Setup Wizard (page 2-44)
	Use Wi-Fi Settings or Wireless Network to configure the network in details from System menu.	Wi-Fi Settings (page 8-50) Wireless Network (page 8-60)
Setting the Connection by Using the Wi-Fi Setup Tool	This is the tool included in the Product Library. You can configure the connection according to the instructions provided by the wizard.	Setting the Connection by Using the Wi-Fi Setup Tool (page 2-34)
Setting the Connection by Using the Setup Utility of IB-51	This is the setup tool included in the CD of IB-51. You can use it on both Windows and Mac OS.	IB-51 Operation Guide
Configuring Connections on the Web Page	For the IB-35, the connection can be set from the Command Center RX.	Command Center RX User Guide
	For the IB-51, the connection can be set on the dedicated Web page.	IB-51 Operation Guide

#### NOTE

- The Wireless Network Interface Kit (IB-35) is an option for some models and the Wireless Network Interface Kit (IB-51) is a standard option. Contact your dealer or our sales or service representatives for detail.
  - → IB-35 "Wireless Network Interface Kit" (page 11-5)
  - → IB-51 "Wireless Network Interface Kit" (page 11-5)
- When you want to switch to the network interface other than Wired (default) after installing an optional Network Interface Kit (IB-50) and a Wireless Network Interface Kit (IB-35 or IB-51), select the desired setting on "Primary Network (Client)".
  - ▶ Primary Network (Client) (page 8-62)

#### Setting the Connection by Using the Wi-Fi Setup Tool

To send the Wi-Fi settings configured in the Wi-Fi Setup Tool to the machine, connect the computer or handheld device with the machine locally. The connection methods are wired connection via LAN cable and wireless LAN connection (Wi-Fi Direct).

#### NOTE

- Before using the Wi-Fi Setup Tool, connect your computer to this machine locally with wired LAN cable or Wi-Fi
- To use Wi-Fi Direct, confirm that the Wi-Fi Direct is enabled (Wi-Fi Direct is set to [ON]) and Restart Network from the operation panel, before your computer will be connected to this machine with Wi-Fi Direct.
- To use a wired LAN cable directly connected to the machine, the Auto-IP (Link-local) address will be assigned to the machine and the computer. This machine applies Auto-IP as the default settings.
- Configure the settings on the operation panel if your computer supports WPS.
  - → Wi-Fi Settings (page 8-50)
  - → Wireless Network (page 8-60)

#### Wired Connection by Using LAN Cable

### Connect the machine with a computer

- 1 Connect the machine with a computer via LAN cable when the machine is powered on.
- 2 Turn on the computer.
  IP address (link local address) of the machine and computer is generated automatically.

# 2 Insert the DVD.



# NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select [Cancel].
- If the autorun screen is displayed, click [Run setup.exe].
- If the user account management window appears, click [Yes] ([Allow]).


## Display the screen.



- 1 Click [View License Agreement] and read the License Agreement.
- 2 Click [Accept].

# 4 Select [Maintenance].

# [Wi-Fi Setup Tool] > [OK]

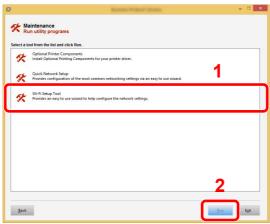

### Configure the settings.

- 1 [Do not use automatic configuration] > [Next] > [Next]
- 2 [Use LAN cable] > [Next] > [Next]
- 3 [Easy setup] > [Next]

The machine is detected.

## NOTE

- Only one machine can be searched using Wi-Fi Setup Tool. It may take times to search the machine.
- If the machine is not detected, select [Advanced setup] > [Next]. Select [Express] or [Custom] as device discovery method and specify the IP address or host name to search the machine.
- 4 Select the machine > [Next]
- 5 Select [Use the device settings.] on [Authentication mode], and enter the login user name and password. Login user name and Password are both Admin.
- 6 Configure the communication settings > [Next]
- 7 Change the settings of access point as necessary > [Next]
  The network is configured.

#### Wireless LAN Connection by Using Wi-Fi Direct

### Display the screen.

[System Menu/Counter] key > [System/Network] > "Network" [Next] > "Wi-Fi Direct Settings" [Next] > "Wi-Fi Direct" [Change]

# Configure the settings.

[On] > [OK]

### **?** Restart the network.

[System Menu/Counter] key > [System/Network] > "Network" [Next] > "Restart Network" [Start] > [Yes]

# Connect a computer or a handheld device with the machine.

Setting Wi-Fi Direct (page 2-38)


# 5 Insert the DVD.



### NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select [Cancel].
- If the autorun screen is displayed, click [Run setup.exe].
- If the user account management window appears, click [Yes] ([Allow]).


## 6 Display the screen.

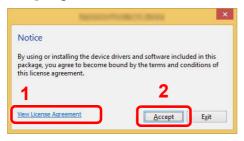

- Click [View License Agreement] and read the License Agreement.
- 2 Click [Accept].

## 7 Select [Maintenance].

## [Wi-Fi Setup Tool] > [OK]

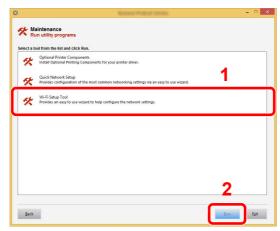

# Configure the settings.

- 1 [Do not use automatic configuration] > [Next] > [Next]
- 2 [Wi-Fi Direct] > [Next] > [Next]
- 3 [Advanced setup] > [Next]

Select [Express] or [Custom] as device discovery method and specify the IP address or host name to search the machine.

- 4 Select the machine > [Next]
- **5** Select [**Use the device settings.**] on [**Authentication mode**], and enter the login user name and password. Login user name and Password are both Admin.
- 6 Configure the communication settings > [Next]
- 7 Change the settings of access point as necessary > [Next] The network is configured.

# **Setting Wi-Fi Direct**

Setting Wi-Fi Direct enables you to print from the Wi-Fi Direct environment. The configuration methods are as follows:

# **NOTE**

To use Wi-Fi Direct, Wireless Network Interface Kit (IB-35) must be installed in the machine.

The Wireless Network Interface Kit (IB-35) is an option for some models. Contact your dealer or our sales or service representatives for detail.

▶ IB-35 "Wireless Network Interface Kit" (page 11-5)

#### **Configuring the Connection from the Operation Panel on This Machine**

Connecting to Computers or Handheld Devices that Support Wi-Fi Direct

### Display the screen.

[System Menu/Counter] key > [System/Network] > "Network" [Next] > "Wi-Fi Direct Settings" [Next] > "Wi-Fi Direct" [Change]

## Configure the settings.

[On] > [OK]

### Restart the network.

[System Menu/Counter] key > [System/Network] > "Network" [Next] > "Restart Network" [Start] > [Yes]

# Specify the machine name from the computer or handheld device.

If a confirmation message appears on the operation panel of the machine, select [Yes].

The network between this machine and the handheld device is configured.

#### Connecting to Computers or Handheld Devices Unsupported Wi-Fi Direct

Here, we'll explain the procedures for connecting to iOS handheld devices.

# 1 Display the screen.

[System Menu/Counter] key > [System/Network] > "Network" [Next] > "Wi-Fi Direct Settings" [Next] > "Wi-Fi Direct" [Change]

# Configure the settings.

[On] > [OK]

# Restart the network.

[System Menu/Counter] key > [System/Network] > "Network" [Next] > "Restart Network" [Start] > [Yes]

## [Home] key > [Wi-Fi Direct]

- Note the network name (SSID), IP address, and password.
- **6** Configure the handheld device.
  - 1 [Settings] > [Wi-Fi]
  - 2 Select the network name (SSID) appeared in step 5 from the list.
  - 3 Enter the password that was provided in step 5 > [Connect]
    The network between this machine and the handheld device is configured.

#### Configuring the Connection by Using Push Button

When your computer or handheld device does not support Wi-Fi Direct but supports WPS, you can configure the network using push button.

### Display the screen.

[System Menu/Counter] key > [System/Network] > "Network" [Next] > "Wi-Fi Direct Settings" [Next] > "Wi-Fi Direct" [Change]

Configure the settings.

[On] > [OK]

Restart the network.

[System Menu/Counter] key > [System/Network] > "Network" [Next] > "Restart Network" [Start] > [Yes]

- [Home] key > [Wi-Fi Direct]
- Press the push button on the computer or handheld device and select [Push Button] on the screen of operation panel simultaneously.

The network between this machine and the computer or handheld device is configured.

# **⊘** IMPORTANT

You can connect up to three handheld devices at the same time using Wi-Fi Direct setting. When the devices that support Wi-Fi Direct are connected, if you want to connect other device, disconnect the already-connected devices from the network. The disconnection methods are as follows:

- Disconnect the network from the computer or handheld computer
- Disconnecting all devices from the network on the operation panel
   Select [Home] > [Wi-Fi Direct] > [Connected Device List] > [Disconnect All]
- · Configuring auto disconnecting time from the System menu
  - <u>Wi-Fi Direct Settings (page 8-49)</u>
- Configuring auto disconnecting time from the Command Center RX
  - Command Center RX User Guide

# **Configuring NFC**

NFC (Near Field Communication) is the internal standard for near field communication in which the data communication distance is limited to approximately 10 cm. Establishing data communication simply requires you to show the handheld device supporting NFC to this machine.

The configuration methods are as follows:

#### **Configuring Connections on the Web Page**

You can set NFC from the Command Center RX.

Command Center RX User Guide

#### **Configuring the Connection from the Operation Panel on This Machine**

Configure the NFC from the System Menu.

▶ NFC (page 8-66)

This section presents an example for configuring the NFC from the System Menu.

Display the screen.

[System Menu/Counter] key > [System/Network] > "NFC" [Change]

Configure the settings.

[On] > [OK]

# **Energy Saver Function**

If a certain period of time elapses after the machine is last used, the machine automatically enters Low Power Mode to reduce power consumption. If a further period of time elapses without the machine being used, the machine automatically enters Sleep Mode, which minimizes power consumption.

### **Low Power Mode**

If the machine is not operated for a certain period of time, the energy saver indicator will light up and the screen will become dark to reduce power consumption. This status is referred to as Low Power Mode.

"Low power." will be displayed on the screen.

The amount of time before entering Low Power Mode: 2 minutes (default setting).

If print data is received during Low Power Mode, the machine automatically wakes up and starts printing. Also when fax data arrives while the machine is in Low Power Mode, the machine automatically wakes up and starts printing.

To resume, perform one of the following actions.

- · Select any key on the operation panel.
- Touch the touch panel.
- Place originals in the document processor.

Recovery time from Low Power Mode is as follows.

10 seconds or less

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.




#### NOTE

If the Low Power Timer is equal to the Sleep Timer, a Sleep mode is preceded.

# Sleep

To enter Sleep, select the [**Energy Saver**] key. Touch panel and all indicators on the operation panel will go out to save a maximum amount of power except the Energy Saver indicator. This status is referred to as Sleep.

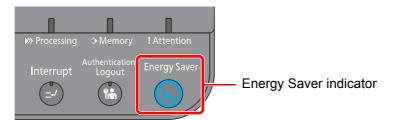

If print data is received during Sleep, the machine automatically wakes up and starts printing.

Also when fax data arrives while the machine is in Sleep, the machine automatically wakes up and starts printing.

To resume, perform the following actions.

- Select any key on the operation panel.
- Touch the touch panel.
- Place originals in the document processor.

Recovery time from Sleep Mode is as follows.

· 30 seconds or less

Note that ambient environmental conditions, such as ventilation, may cause the machine to respond more slowly.

# **Auto Sleep**

Auto Sleep automatically switches the machine into Sleep if left idle for a preset time.

The amount of time before entering Sleep is as follows.

- For Europe: 20 minutes (default setting)
- Except for Europe: 60 minutes (default setting)

To change the preset sleep time, refer to the following:

→ Quick Setup Wizard (page 2-44)



NOTE

If the Low Power Timer is equal to the Sleep Timer, a Sleep Mode is preceded.

# Sleep Rules (models for Europe)

You can set whether Sleep Mode operates for each function. When the machine enters Sleep Mode, the ID card cannot be recognized.

For more information on Sleep Rules settings, refer to the following:

Sleep Rules (models for Europe) (page 8-70)

# Sleep Level (Energy Saver) (models except for **Europe**)

This mode reduces power consumption even more than normal Sleep Mode, and allows Sleep Mode to be set separately for each function. Printing from a computer connected with a USB cable is not available while the machine is asleep. The time required for the machine to wake up from power save mode and resume normal operation will be longer than for normal Sleep Mode.



**■ NOTE** 

If the optional Network Interface Kit is installed, Energy Saver cannot be specified.

For more information on Sleep Level (Energy Saver) Mode settings, refer to the following:

Quick Setup Wizard (page 2-44)

# **Energy Saver Recovery Level**

This machine can reduce power consumption when recovering from Energy Saver Mode.

For EnergySaver RecoveryLevel, "Full Recovery", "Normal Recovery" or "Power Saving Recovery" can be selected.

The factory default is "Normal Recovery".

For more information on Energy Saver Mode settings, refer to the following:

- Quick Setup Wizard (page 2-44)
- EnergySaver RecoveryLevel (page 8-70)

# **Weekly Timer Settings**

Set the machine to automatically turn OFF and wake up at times specified for each day.

For more information on Weekly Timer Settings, refer to the following:

→ Quick Setup Wizard (page 2-44)

# **Power Off Timer (models for Europe)**

If the machine is not used while in sleep mode, the power automatically turns off. The Power Off Timer is used to set the time until the power turns off.

The factory setting for the time until the power turns off: 3 days

→ Power Off Timer (models for Europe) (page 8-71)

# **Quick Setup Wizard**

For FAX functions, paper settings, Energy Saver functions and network settings, the following settings can be configured in a wizard-style screen.

FAX Setup		Configures basic fax settings. This function is displayed when the optional FAX is installed.  FAX Operation Guide		
		1. Dialing/RX Mode	Dialing Mode (Port 1, Port 2*1)*2 Reception Mode Auto (DRD)*3	
		2. Local FAX Information	Local FAX Name (Port 1, Port 2*1) Local FAX Number (Port 1, Port 2*1) Local FAX ID TTI	
		3. Sound	FAX Speaker Volume FAX Monitor Volume Job Finish Buzzer	
		4. Rings	Rings (Normal)*4 Rings (TAD)*4 Rings (FAX/TEL)*4	
		5. Output	Media Type Paper Output (Port 1, Port 2*1) Reduced RX Size	
	6. Redial	Retry Times		
	Power Off Setup	Show Power Off Message	_	
Energy Saver Setup		Configures sleep mode and low power mode.		
		1. Sleep Mode	For Europe Sleep Timer Sleep Rules Except for Europe Sleep Timer Sleep Level	
		2. Low Power Mode	Low Power Timer	
		3.Recovery Mode	Energy Saver Recovery Level	
		4.Weekly Timer Settings	Weekly Timer Schedule*5 Retry Times*5 Retry Interval*5	

Network Setup	Configures network settings.	
	1. Network	Network Selection*6
		Wi-Fi <sup>*7</sup>
		DHCP*8
		IP Address*9
		Subnet Mask*9
		Default Gateway*9

- \*1 This is displayed when the option of two FAX Kits has been installed.
- \*2 Inch version only.
- \*3 DRD reception mode is available for some countries.
- \*4 This setting does not appear in some regions.
- \*5 This function is displayed when [Weekly Timer] is set to [On].
- \*6 This function is displayed when the Wireless Network Interface Kit (IB-35) is installed. The Wireless Network Interface Kit is an option for some models. Contact your dealer or our sales or service representatives for detail.
  - → IB-35 "Wireless Network Interface Kit" (page 11-5)
- \*7 This function is displayed when [Network Selection] is set to [Wi-Fi].
- \*8 This function is displayed when [Network Selection] is set to [Wired Network].
- \*9 This function is displayed when [DHCP] is set to [Off].

### **NOTE**

If the user authentication screen appears, enter your login user name and login password and select [Login]. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

### Display the screen.

[System Menu/Counter] key > [Quick Setup Wizard]

### Select a function.

### Configure the settings.

Start the wizard. Follow the instructions on the screen to configure settings.



#### **NOTE**

If you experience difficulty configuring the settings, refer to the following:

→ Help Screen (page 2-27)

Control	Description	
End	Exits the wizard. Settings configured so far are applied.	
Previous	Returns to the previous item.	
Skip	Advances to the next item without setting the current item.	
Next	Advances to the next screen.	
Back	Returns to the previous screen.	
Complete	Register the settings and exit the wizard.	

# **Installing Software**

Install appropriate software on your PC from the included DVD (Product Library) if you want to use the printer function of this machine or perform TWAIN / WIA transmission or Network FAX transmission from your PC.

### **Software on DVD (Windows)**

You can use either [Express Install] or [Custom Install] can be selected for the installation method. [Express Install] is the standard installation method. To install components that cannot be installed by [Express Install], use [Custom Install].

For details on Custom Installation, refer to the following:

#### → Custom Install (page 2-50)

Software	Description	Express Install
KX DRIVER	This driver enables files on a computer to be printed by the machine. Multiple page description languages (PCL XL, KPDL, etc.) are supported by a single driver. This printer driver allows you to take full advantage of the features of the machine.  Use this driver to create PDF files.	0
KX XPS DRIVER	This printer driver supports the XPS (XML Paper Specification) format developed by Microsoft Corporation.	_
KPDL mini-driver/PCL mini-driver	This is a Microsoft MiniDriver that supports PCL and KPDL. There are some restrictions on the machine features and option features that can be used with this driver.	_
FAX Driver	This makes it possible to send a document created in a computer software application as a fax via the machine.	
Kyocera TWAIN Driver	This driver enables scanning on the machine using a TWAIN-compliant software application.	0
Kyocera WIA Driver	WIA (Windows Imaging Acquisition) is a function of Windows that enables reciprocal communication between an imaging device such as a scanner and an image processing software application. An image can be acquired using a WIA-compliant software application, which is convenient when a TWAIN-compliant software application is not installed in the computer.	_
KYOCERA Net Viewer	This is a utility that enables monitoring of the machine on the network.	_
Status Monitor	This is a utility that monitors the printer status and provides an ongoing reporting function.	0
File Management Utility	le Management Utility  This makes it possible to send and save a scanned document to a specified network folder.	
KYOCERA Net Direct Print	This makes it possible to print a PDF file without starting Adobe Acrobat/Reader.	_
FONTS	These are display fonts that enable the machine's built-in fonts to be used in a software application.	0

### NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- The optional FAX Kit is required in order to make use of fax functionality.
- WIA Driver and KX XPS DRIVER cannot be installed on Windows XP.

### **Installing Software in Windows**

#### **Express Install**

The following procedure is an example for installing the software in Windows 8.1 using [Express Install].

Custom Install (page 2-50)

#### Insert the DVD.

For details on Custom Installation, refer to the following:



### NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select [Cancel].
- If the autorun screen is displayed, click [Run setup.exe].
- If the user account management window appears, click [Yes] ([Allow]).

### Display the screen.




- Click [View License Agreement] and read the License Agreement.
- 2 Click [Accept].

### 3 Select [Express Install].



#### Install the software.

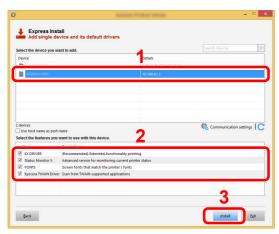

You can also select [Use host name for port name] and set to use the host name of the standard TCP/IP port. (A USB connection cannot be used.)




#### ( IMPORTANT

If Wi-Fi or Wi-Fi Direct is enabled, be sure to specify the IP address for the port name. Installation may fail if the host name is specified.




#### NOTE

- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network or USB cable and that it is turned on and click C (Reload).
- If the Windows security window appears, click [Install this driver software anyway].
- To install Status Monitor on Windows versions preceding Windows 8, it is necessary to install Microsoft .NET Framework 4.0 beforehand.

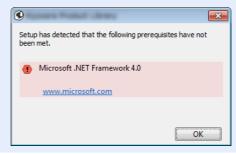

#### Finish the installation. 5

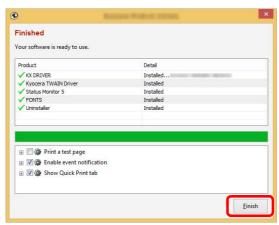

When "Your software is ready to use" appears, you can use the software. To print a test page, click the "Print a test page" checkbox and select the machine.

Click [Finish] to exit the wizard.



#### NOTE

When you have selected [Device settings] in Windows XP, the dialog box for device setting will appear after [Finish] is clicked. Configure the settings for options installed on the machine. Device settings can be configured after the installation is completed.

#### **Printer Driver User Guide**

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.

If you are installing the TWAIN driver, continue by configuring the following:

→ Setting TWAIN Driver (page 2-57)

#### **Custom Install**

The following procedure is an example for installing the software in Windows 8.1 using [Custom Install].

#### Insert the DVD.



#### NOTE

- Installation on Windows must be done by a user logged on with administrator privileges.
- If the "Welcome to the Found New Hardware Wizard" dialog box displays, select [Cancel].
- If the autorun screen is displayed, click [Run setup.exe].
- If the user account management window appears, click [Yes] ([Allow]).

### Display the screen.




- 1 Click [View License Agreement] and read the License Agreement.
- 2 Click [Accept].

### Select [Custom Install].

#### Install the software.

1 Select the device to be installed.

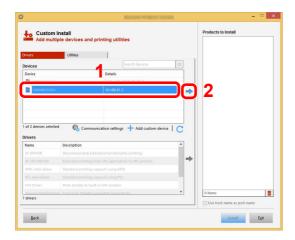


### **⊘** IMPORTANT


If Wi-Fi or Wi-Fi Direct is enabled, be sure to specify the IP address for the port name. Installation may fail if the host name is specified.

### NOTE


- The machine cannot be detected unless it is on. If the computer fails to detect the machine, verify that it is connected to the computer via a network or USB cable and that it is turned on and click C (Reload).
- If the desired device does not appear, select [Add custom device] to directly select the device.
- 2 Select the driver to be installed.

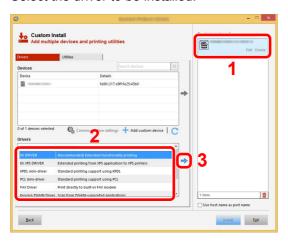

3 Click [Utility] tab and select the utility to be installed.

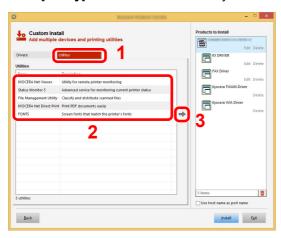


4 Click [Install].

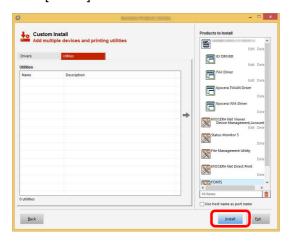


### NOTE

To install Status Monitor on Windows versions preceding Windows 8, it is necessary to install Microsoft .NET Framework 4.0 beforehand.

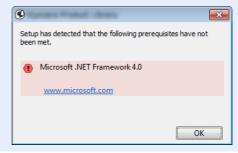

#### Finish the installation. 5

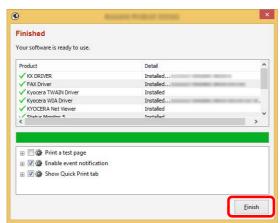

When "Your software is ready to use" appears, you can use the software. To print a test page, click the "Print a test page" checkbox and select the machine.

Click [Finish] to exit the wizard.

#### NOTE

When you have selected [Device settings] in Windows XP, the dialog box for device setting will appear after [Finish] is clicked. Configure the settings for options installed on the machine. Device settings can be configured after the installation is completed.

#### **Printer Driver User Guide**

If a system restart message appears, restart the computer by following the screen prompts. This completes the printer driver installation procedure.

If you are installing the TWAIN driver, continue by configuring the following:

Setting TWAIN Driver (page 2-57)

### **Uninstalling the Software**

Perform the following procedure to delete the Software from your computer.



Uninstallation on Windows must be done by a user logged on with administrator privileges.

### Display the screen.


Click [Search] in charms, and enter "Uninstall Kyocera Product Library" in the search box. Select [Uninstall Kyocera Product Library] in the search list.



In Windows 7, click [Start] button on the Windows and then select [All Programs], [Kyocera], and [Uninstall Kyocera Product Library] to display the Uninstall Wizard.

#### Uninstall the software.

Place a check in the check box of the software to be deleted.

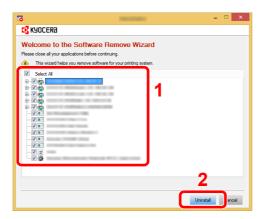

### Finish uninstalling.

If a system restart message appears, restart the computer by following the screen prompts. This completes the software uninstallation procedure.

#### **NOTE**

- The software can also be uninstalled using the Product Library.
- In the Product Library screen, click [Uninstall], and follow the on-screen instructions to uninstall the software.

### **Installing Software in Mac Computer**

The machine's printer functionality can be used by a Mac computer.

### NOTE

- · Installation on Mac OS must be done by a user logged on with administrator privileges.
- When printing from a Macintosh computer, set the machine's emulation to [KPDL] or [KPDL(Auto)].
  - → Printer (page 8-39)
- If connecting by Bonjour, enable Bonjour in the machine's network settings.
  - → Bonjour (page 8-54)
- In the Authenticate screen, enter the name and password used to log in to the operating system.
- When printing via AirPrint, you do not have to install the software.

#### Insert the DVD.




Double-click the [Kyocera] icon.

### Display the screen.



Double-click [Kyocera OS X x.x] depending on your Mac OS version.

### Install the Printer Driver.

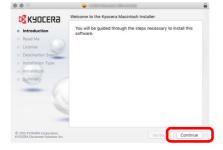

Install the printer driver as directed by the instructions in the installation software.

This completes the printer driver installation.


If a USB connection is used, the machine is automatically recognized and connected. If an IP connection is used, the settings below are required.

#### Configure the printer.

1 Open System Preferences and add the printer.




2 Select [Default] and click the item that appears in "Name" and then select the driver in "Use".

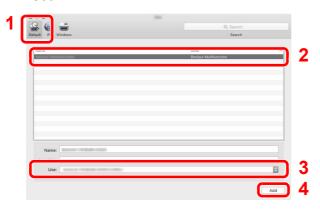

#### **NOTE**

When using an IP connection, click the IP icon for an IP connection and then enter the host name or IP address. The number entered in "Address" will automatically appear in "Name". Change if needed.

3 Select the options available for the machine.

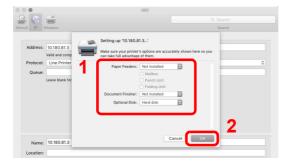

4 The selected machine is added.



### **Setting TWAIN Driver**

Register this machine to the TWAIN Driver. Instructions are based on interface elements as they appear in Windows 8.1.

### Display the screen.

1 Click [Search] in charms, and enter "TWAIN Driver Setting" in the search box. Select [TWAIN Driver Setting] in the search list.




#### **NOTE**

In Windows 7, select [Start] button on the Windows, [All Programs], [Kyocera] and then [TWAIN Driver Setting]. TWAIN Driver screen appears.

2 Click [Add].



### **Configure TWAIN Driver.**

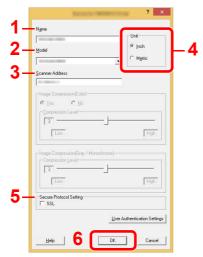

- 1 Enter the machine name.
- 2 Select this machine from the list.
- 3 Enter the machine's IP address or host name.
- 4 Set units of measurement.
- 5 When using SSL, select the checkbox beside SSL.
- 6 Click [OK].



#### NOTE

When the machine's IP address or host name is unknown, contact Administrator.

### Finish registering.





Click [Delete] to delete the added machine. Click [Edit] to change names.

### **Setting WIA Driver**

Register this machine to the WIA Driver. Instructions are based on interface elements as they appear in Windows 8.1.

#### Display the screen.


1 Click [Search] in charms, and enter "View scanners and cameras" in the search box. Select [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.




#### **NOTE**

In Windows 7, click [Start] button on the Windows and enter [Scanner] in [Program and File Search]. Click [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

2 Select the same name as this machine from WIA Drivers, and click [Properties].

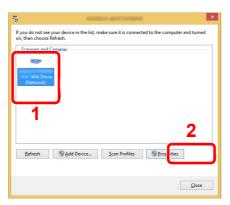

### **Configure WIA Driver.**

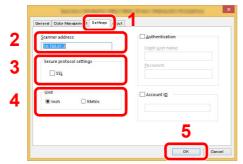

- 1 Click the [Settings] tab.
- 2 Enter the machine IP addresses or host name.
- 3 When using SSL, select the checkbox beside SSL.
- 4 Set units of measurement.
- 5 Click [OK].

# **Checking the Counter**

Check the number of sheets printed and scanned.

- Display the screen.

  [System Menu/Counter] key > [Counter]
- Check the counter.

# **Additional Preparations for the Administrator**

In addition to the information provided in this chapter, the administrator of this machine should check the following, and configure the settings as needed.

### **Sending Documents to a PC**

#### To Send to a Shared Folder (Send to Folder (SMB))

To send a document that has been loaded, you need to create a shared folder to receive the document on your computer.

→ Preparation for Sending a Document to a Shared Folder in a PC (page 3-15)

#### To E-mail Scanned Images (Send as E-mail)

You can send a scanned original image as an E-mail attachment.

→ E-mail Settings (page 2-67)

### **Strengthening the Security**

This machine is shipped with two default users registered one with Machine Administrator rights, and another with Administrator rights. Logging in as this user will allow you to configure all settings; therefore, please change the login user name and password.

In addition, this machine is equipped with user authentication function, which can be configured to limit the access to this machine to only those who have a registered login name and password.

◆ User Authentication and Accounting (User Login, Job Accounting) (page 9-1)

I want to	Function	Reference page
Restrict the users of the machine.	User Login	page 9-2
	Authentication Security	page 9-5
	Auto Panel Reset	page 8-68
	ID Card Settings*1	page 9-30
Restrict the basic functions that can be	Local Authorization	page 9-18
used.	Group Authorization Set.	page 9-19
	Guest Authorization Set.	page 9-22
Prevent another user from handling the documents stored in the machine.	Custom Box	page 5-47
Output the document stored in the machine at the time when user operates the device via operation panel.	Remote Printing	page 8-30

<sup>\*1</sup> The optional Card Authentication Kit is required.

I want to	Function	Reference page
Prevent the data stored in the machine	Data Overwrite*1	Refer to the <b>Data</b>
from being leaked.	Encryption*1	Security Kit (E) Operation Guide.
	PDF Encryption Functions	page 6-72
Completely delete the data on the machine before disposing of the machine.	Data Sanitization	page 8-65
Record the operation history of users.	Login History Settings	page 8-44
	Device Log History Settings	page 8-45
	Secure Comm. Error Log	page 8-46
Protect the transmission from interception	IPP over SSL	page 8-56
and wiretapping.	HTTPS	page 8-56
	LDAP Security	Refer to the Command Center RX User Guide.
	SMTP Security	page 8-54
	POP3 Security	page 8-54
	FTP Encrypted TX	page 6-76
	Enhanced WSD (SSL)	page 8-57
	IPSec	page 8-54
	SNMPv3	page 8-57
Verify the software in the machine.	Software Verification	page 8-65

<sup>\*1</sup> The optional Data Security Kit is required.

### **Command Center RX**

If the machine is connected to the network, you can configure various settings using Command Center RX.

This section explains how to access Command Center RX, and how to change security settings and the host name.

#### Command Center RX User Guide



To fully access the features of the Command Center RX pages, enter the User Name and Password and click [Login]. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings on the navigation menu. The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)

Login User Name: **Admin Login Password: Admin** 

Settings that the administrator and general users can configure in Command Center RX are as follows.

Setting	Description		General User
Device Information	The machine's structure can be checked.	0	0
Job Status	Displays all device information, including print and scan jobs, storing jobs, scheduled jobs, and job log history.	0	0
Document Box	Add or delete document boxes, or delete documents within a document box.	0	○*1
Address Book	Create, edit, or delete addresses and address groups.	0	○*1
Device Settings	Configure the advanced settings of the machine.	0	_
Function Settings	Configure the advanced function settings.	0	_
Network Settings	Configure the network advanced settings.	0	_
Security Settings	Configure the security advanced settings.	0	_
Management Settings	Configure the advanced management settings.	0	_

<sup>\*1</sup> The logged in user may not be able to configure some settings, depending on the permissions of the user.



#### **NOTE**

The optional FAX Kit is required in order to make use of fax functionality. Here, information on the FAX settings has been omitted.

FAX Operation Guide

### **Accessing Command Center RX**


#### Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name. Click in the following order to check the machine's IP address and the host name.

[Device Information] in the home screen > [Identification/Wired Network]

Examples: https://10.180.81.3/ (for IP address)

https://MFP001 (if the host name is "MFP001")

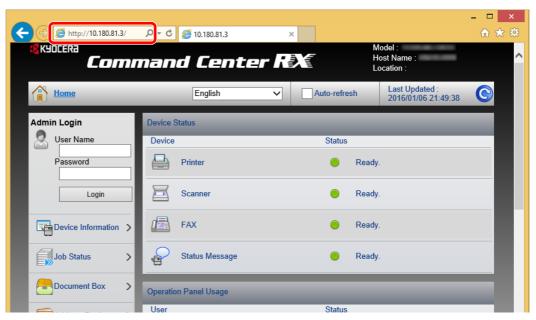

The web page displays basic information about the machine and Command Center RX as well as their current status.

### NOTE

If the screen "There is a problem with this website's security certificate." is displayed, configure the certificate.

#### Command Center RX User Guide

You can also continue the operation without configuring the certificate.

### Configure the function.

Select a category from the navigation bar on the left of the screen.

### NOTE

To fully access the features of the Command Center RX pages, enter the User Name and Password and click [Login]. Entering the predefined administrator password allows the user to access all pages, including Document Box, Address Book, and Settings on the navigation menu. The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)

Login User Name: **Admin** Login Password: Admin

# **Changing Security Settings**

#### Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  Click in the following order to check the machine's IP address and the host name.
  [Device Information] in the home screen > [Identification/Wired Network]
- 3 Log in with administrator privileges.




The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)

Login User Name: Admin Login Password: Admin

4 Click [Security Settings].

### Configure the Security Settings.

From the [Security Settings] menu, select the setting you want to configure.

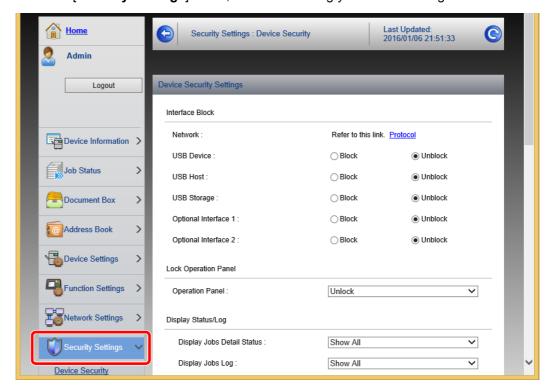

#### **NOTE**

For details on settings related to certificates, refer to the following:

Command Center RX User Guide

### **Changing Device Information**

#### Display the screen.


- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  Click in the following order to check the machine's IP address and the host name.
  [Device Information] in the home screen > [Identification/Wired Network]
- 3 Log in with administrator privileges.



The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)


Login User Name: Admin Login Password: Admin

4 From the [Device Settings] menu, click [System].

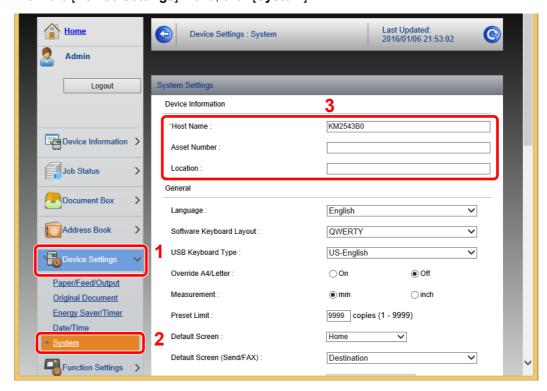

#### Specify the host name.

 Enter the device information, and then click [Submit].



After changing the setting, restart the network or turn the machine OFF and then ON. To restart the network interface card, click [Reset] in the [Management Settings] menu, and then click [Restart Network] in "Restart".

### **E-mail Settings**

By configuring the SMTP settings, it is possible to send the images scanned by the machine as E-mail attachments and to send E-mail notices when jobs have been completed.

To use this function, this machine must be connected to a mail server using the SMTP protocol.

In addition, configure the following.

SMTP settings

Item: "SMTP Protocol" and "SMTP Server Name" in "SMTP"

 The sender address when the machine sends E-mails Item: "Sender Address" in "E-mail Send Settings"

The setting to limit the size of E-mails
 Item: "E-mail Size Limit" in "E-mail Send Settings"

The procedure for specifying the SMTP settings is explained below.

#### Display the screen.

Display the SMTP Protocol screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  Click in the following order to check the machine's IP address and the host name.


[Device Information] in the home screen > [Identification/Wired Network]

3 Log in with administrator privileges.



The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)

Login User Name: Admin Login Password: Admin 4 From the [Network Settings] menu, click [Protocol].

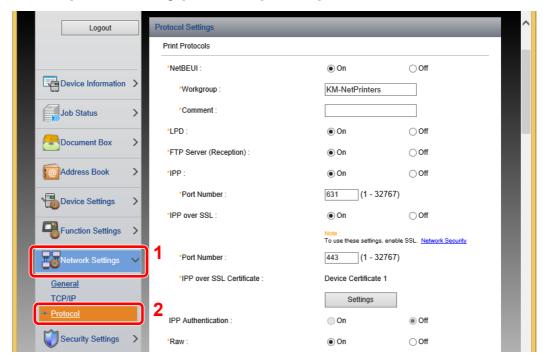

### Configure the settings.


Set "SMTP (E-mail TX)" to [On] in the "Send Protocols".



### 3 Display the screen.

Display the E-mail Settings screen.

From the [Function Settings] menu, click [E-mail].

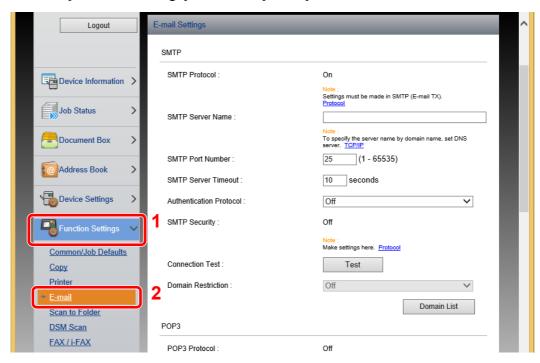

### Configure the settings.

Enter "SMTP" and "E-mail Send Settings" items.

Setting		Description
SMTP		Set to send e-mail from the machine.
	SMTP Protocol	Displays the SMTP protocol settings. Check that "SMTP Protocol" is set to [ <b>On</b> ]. If [ <b>Off</b> ] is set, click [ <b>Protocol</b> ] and set the SMTP protocol to [ <b>On</b> ].
	SMTP Server Name*1	Enter the host name or IP address of the SMTP server.
	SMTP Port Number	Specify the port number to be used for SMTP. The default port number is 25.
	SMTP Server Timeout	Set the amount of time to wait before time-out in seconds.
	Authentication Protocol	To use SMTP authentication, enter the user information for authentication.
	SMTP Security	Set SMTP security.
		Turn on "SMTP Security" in "SMTP (E-mail TX)" on the [ <b>Protocol Settings</b> ] page.
	Connection Test	Tests to confirm that the E-mail function is operating under the settings without sending a mail.
	Domain Restriction	To restrict the domains, click the [ <b>Domain List</b> ] and enter the domain names of addresses to be allowed or rejected. Restriction can also be specified by e-mail address.

Setting		Description
POP3	POP3 Protocol	You don't need to set the following items when you only
	Check Interval	enable the function of sending e-mail from the machine. Set the following items if you want to enable the function of
	Run once now	receiving e-mail on the machine.
	Domain Restriction	Command Center RX User Guide
	POP3 User Settings	
E-mail Send Settings	E-mail Size Limit	Enter the maximum size of E-mail that can be sent in kilobytes. When E-mail size is greater than this value, an error message appears and E-mail sending is cancelled. Use this setting if you have set E-mail Size Limit for SMTP server. If not, enter a value of 0 (zero) to enable E-mail sending regardless of the size limit.
	Sender Address*1	Specify the sender address for when the machine sends E-mails, such as the machine administrator, so that a reply or non-delivery report will go to a person rather than to the machine. The sender address must be entered correctly for SMTP authentication. The maximum length of the sender address is 128 characters.
	Signature	Enter the signature. The signature is free form text that will appear at the end of the E-mail body. It is often used for further identification of the machine. The maximum length of the signature is 512 characters.
	Function Defaults	Change the function default settings in [Common/Job Default Settings] page.

<sup>\*1</sup> Be sure to enter the items.

### 5 Click [Submit].

### **Registering Destinations**

#### Display the screen.

- Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  Click in the following order to check the machine's IP address and the host name.

[Device Information] in the home screen > [Identification/Wired Network]

3 Log in with administrator privileges.

The factory default setting for the default user with administrator privileges is shown below. (Upper case and lower case letters are distinguished (case sensitive).)



Login User Name: Admin Login Password: Admin

4 From the [Address Book] menu, click [Machine Address Book].



5 Click [Add].

### Populate the fields.

1 Enter the destination information.


Enter the information for the destination you want to register. The fields to populate are the same as when registering via operation panel.

- Registering Destinations in the Address Book (page 3-25)
- 2 Click [Submit].

# **Creating a New Custom Box**

#### Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  Click in the following order to check the machine's IP address and the host name.
  [Device Information] in the home screen > [Identification/Wired Network]
- 3 From the [Document Box] menu, click [Custom Box].

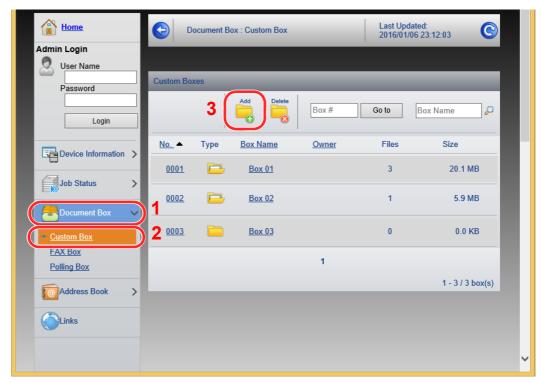

4 Click [Add].

### Configure the Custom Box.

1 Enter the box details.


Enter the information for the custom box you want to register. For details on the fields to populate, refer to the following:

- Command Center RX User Guide
- 2 Click [Submit].

# **Printing a document stored in a Custom Box**


#### Display the screen.

- 1 Launch your Web browser.
- 2 In the address or location bar, enter the machine's IP address or the host name.
  Click in the following order to check the machine's IP address and the host name.
  [Device Information] in the home screen > [Identification/Wired Network]
- 3 From the [Document Box] menu, click [Custom Box].

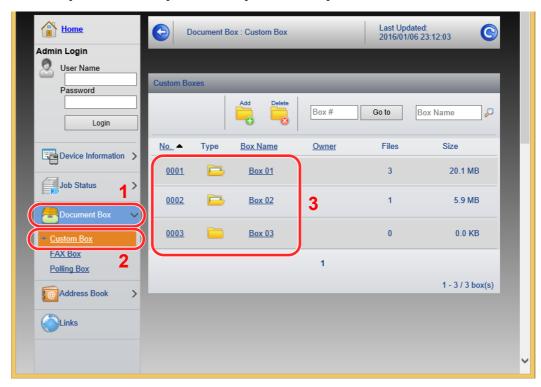

4 Click the number or name of the Custom Box in which the document is stored.

### Print the document.

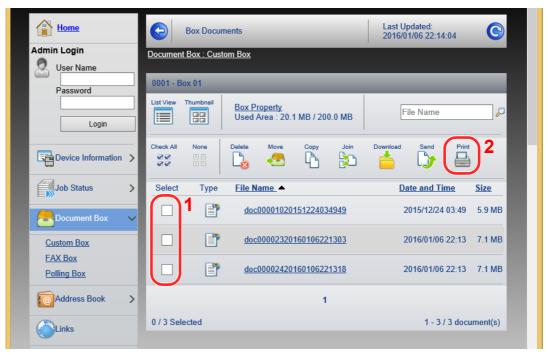

- Select the document you wish to print.
   Select the checkbox of the document to be printed.
- 2 Click [Print].
- 3 Configure settings for printing, click [Print].

# **Transferring Data from Our Other Products**

By using the machine's utility, you can smoothly migrate address books when the machine is to be replaced.

This section explains how to transfer data between our products.

### **Migrating the Address Book**

The Address Book registered on the machine can be backed up or migrated using the KYOCERA Net Viewer on the included DVD.

For details on operating the KYOCERA Net Viewer, refer to the following:


KYOCERA Net Viewer User Guide

#### **Backing Up Address Book Data to PC**


#### Launch the KYOCERA Net Viewer.

### Create a backup.


1 Right-click on the model name from which you want to back up the Address Book, and select [Advanced] - [Set multiple devices].

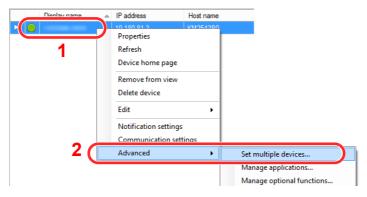


2 Select [Custom Mode] and click [Next].

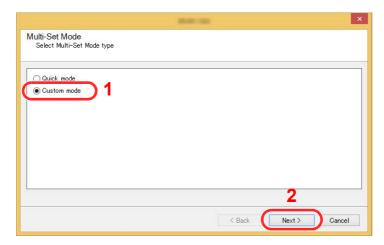


3 Select destination device group and click [Next].

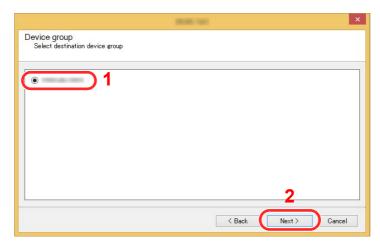


4 Select [Device Address Book] and click [Next].

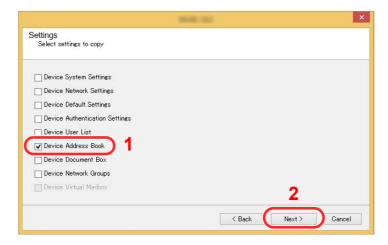

5 Select [Create from device] and remove the checkmark from [Overwrite settings on target device], and then click [Next].

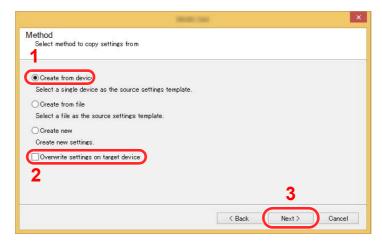

6 Select the model you want to back up, and click [Next].

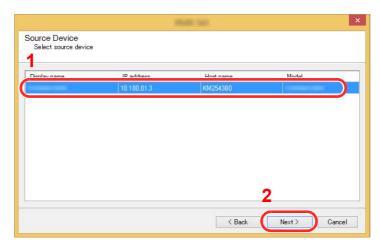


### **NOTE**

If the "Admin Login" screen appears, enter the "Admin Login" and "Login Password", and then click **[OK]**. The default settings are as follows (Upper case and lower case letters are distinguished (case sensitive)).


Login User Name: Admin Login Password: Admin

7 Click on [Save to file].

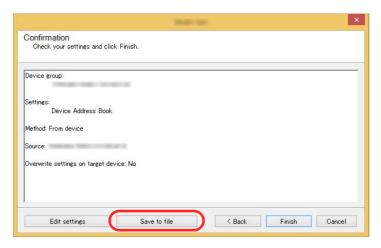

8 Specify the location to save the file, enter the file name, and then click [Save]. For "Save as type", make sure to select "XML File".

9 After saving the file, always click [Cancel] to close the screen.

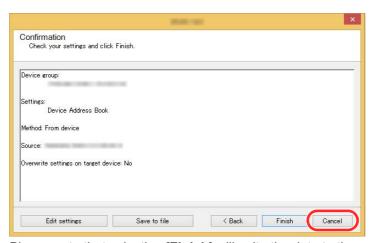


Please note that selecting [Finish] will write the data to the machine's Address Book.

#### Writing Address Book Data to the Machine

#### **1** Launch the KYOCERA Net Viewer.

#### 2 Load the Address Book data.


1 Right-click on the model name to which you want to transfer the Address Book, and select [Advanced] - [Set multiple devices].

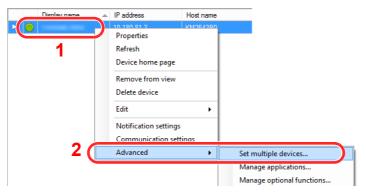


2 Select [Custom Mode] and click [Next].




3 Select destination device group and click [Next].

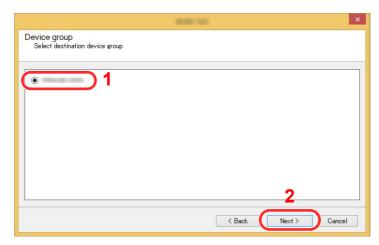

4 Select [Device Address Book] and click [Next].

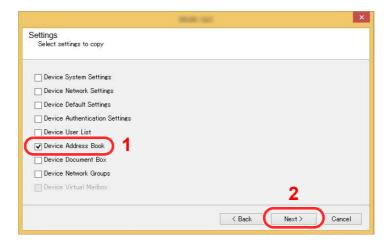


5 Select [Create from file] and remove the checkmark from [Overwrite settings on target device], and then click [Next].

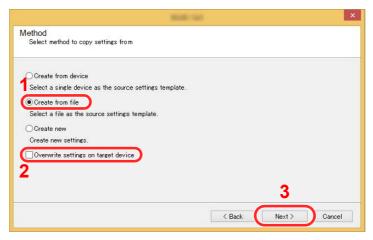


Selecting the [Overwrite settings on target device] checkbox will overwrite the machine's Address Book from entry No.1.

6 Click [Browse] and select the backup Address Book file, and then click [Next].

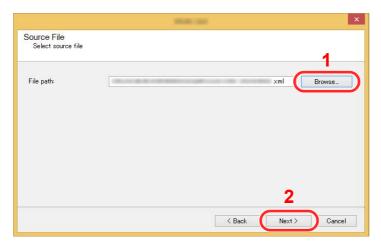

7 Click [Finish].

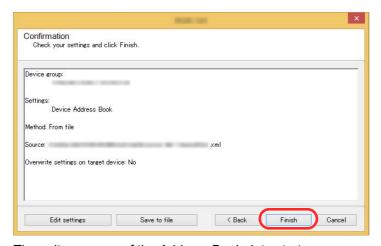

The write process of the Address Book data starts.

8 Once the write process is complete, click [Close].

# **Preparation before Use**


This chapter explains the following operations.

Loading Paper	3-2
Precaution for Loading Paper	3-2
Selecting the Paper Feeder Units	
Loading in the Cassettes	3-4
Loading in the Large Capacity Feeder	3-8
Loading in the Side Feeder (3,000-sheet)	
Precautions for Outputting Paper	3-14
Right Tray	3-14
Side Feeder Top Tray	3-14
Preparation for Sending a Document to a Shared Folder in a PC	
Making a Note of the Computer Name and Full Computer Name	3-15
Making a Note of the User Name and Domain Name	3-16
Creating a Shared Folder, Making a Note of a Shared Folder	3-17
Configuring Windows Firewall	3-20
Registering Destinations in the Address Book	
Adding a Destination (Address Book)	3-25
Adding a Destination on One Touch Key (One Touch Key)	3-32

### **Loading Paper**

#### **Precaution for Loading Paper**

When you open a new package of paper, fan the sheets to separate them slightly prior to loading in the following steps.

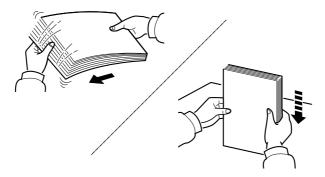

Fan the paper, then tap it on a level surface.

In addition, note the following points.

- If the paper is curled or folded, straighten it before loading. Paper that is curled or folded may cause a jam.
- Avoid exposing opened paper to high humidity as dampness can be a cause of problems. Seal any remaining paper after loading in the multipurpose tray or cassettes back in the paper storage bag.
- Leaving paper in the cassette for a long time may cause a discoloration of paper by heat from the cassette heater.
- If the machine will not be used for a prolonged period, protect all paper from humidity by removing it from the cassettes and sealing it in the paper storage bag.



#### **IMPORTANT**

If you copy onto used paper (paper already used for printing), do not use paper that is stapled or clipped together. This may damage the machine or cause poor image quality.




#### **NOTE**

If you use special paper such as letterhead, paper with holes or paper with pre-prints like logo or company name, refer to the following:

→ Paper (page 11-12)

### **Selecting the Paper Feeder Units**

Select the paper feeder units according to the size and type of paper.

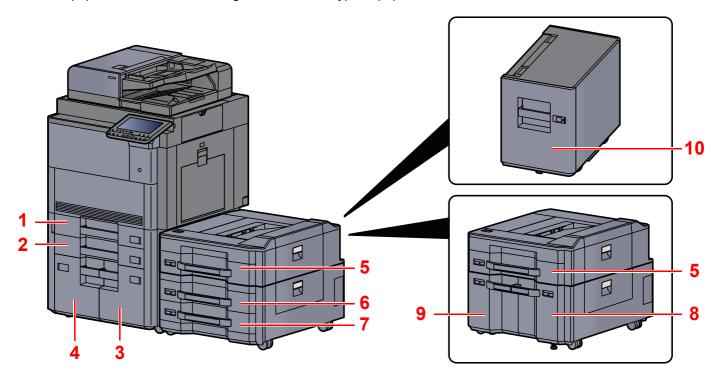

No.	Name	Paper Size	Paper Type	Capacity	Page
1	Cassette 1	A3, A4-R, A4, A5-R, B4, B5-R, B5, 216×340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, 12×18", Oficio II, Folio, 8K, 16K-R, 16K	Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Thick, High Quality, Custom 1 to 8	500 sheets (80 g/m <sup>2</sup> )	page 3-4
2	Cassette 2				
3	Cassette 3	A4, B5, Letter		1,500 sheets	page 3-8
4	Cassette 4			(80 g/m <sup>2</sup> )	
5	Cassette 5	A3, A4-R, A4, A5-R, B4, B5-R, B5, 216×340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, 12×18", Oficio II, Folio, 8K, 16K-R, 16K	Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Thick, Coated, High Quality, Custom 1 to 8	500 sheets (80 g/m <sup>2</sup> )	page 3-4
6	Cassette 6		Plain, Rough, Vellum, Recycled, Preprinted, Bond,		
7	Cassette 7		Color, Prepunched, Letterhead,		
8	Cassette 6	A4, B5, Letter	Thick, High Quality, Custom 1 to 8	1,500 sheets (80 g/m <sup>2</sup> )	page 3-8
9	Cassette 7				
10	Cassette 5	A4, Letter, B5 (Fixed to one of sizes.)		3,000 sheets (80 g/m <sup>2</sup> )	page 3-12


#### NOTE

- The number of sheets that can be held varies depending on your environment and paper type.
- You should not use inkjet printer paper or any paper with a special surface coating. (Such paper may cause paper jams or other faults.)
- For higher quality color printing, use special color paper.

#### **Loading in the Cassettes**

Load the paper in Cassette 1, Cassette 2, Cassette 5 (PF-7130), Cassette 6 (PF-730) and Cassette 7 (PF-730). The procedures here represent the Cassette 1.


#### Pull the cassette completely out of the machine.

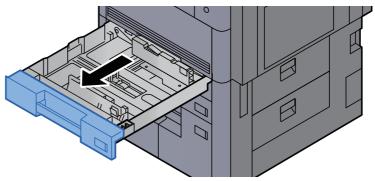

#### NOTE


Do not pull out more than one cassette at a time.

#### Adjust the paper length guide to the paper size required.

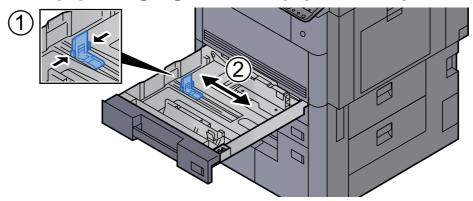


#### NOTE


(Cassette 1 or Cassette 2 only) When using 12×18" size paper, move the paper length guide to the extreme left and lay it down.

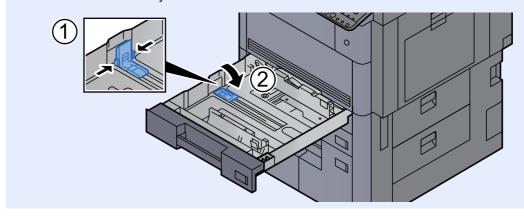


#### Press the paper width guide lock to release the lock.

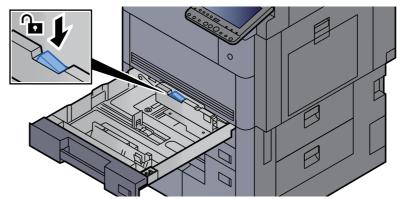

### Adjust the position of the paper width guides located on the left and right sides of the cassette.

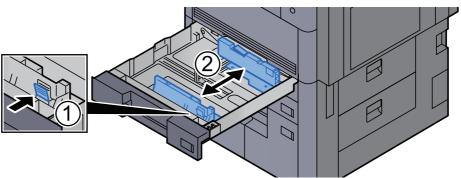

#### Load paper.

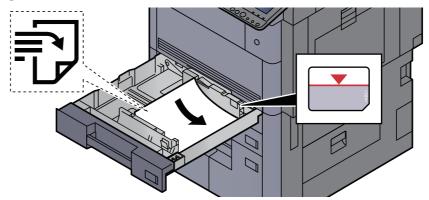


#### *⊘* IMPORTANT


- Load the paper with the print side facing up.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
  - ▶ Precaution for Loading Paper (page 3-2)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

### 6 Be sure that the paper length and width guides rest securely against the paper.


If there is a gap, readjust the guides to fit the paper.

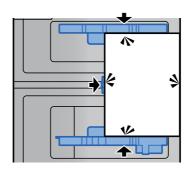


#### Press the paper width guide lock to lock.

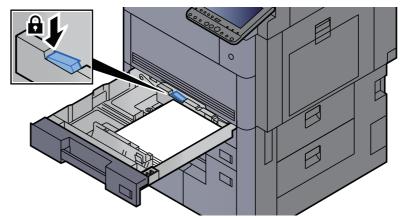

#### **8** Gently push the cassette back in.

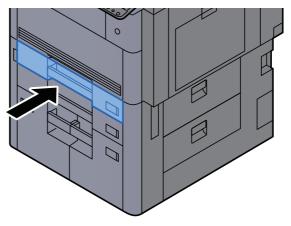


#### For Cassette 1 and 2, insert a sheet of the required paper size and type, as shown in the illustration.

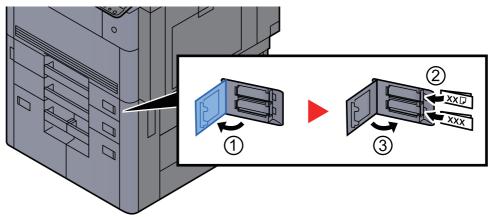

#### NOTE

For Cassette 5, 6 and 7, insert a sheet of the required paper size and type, as shown in the illustration.

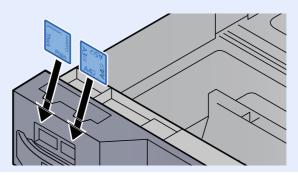

#### 10 Display the screen.

[System Menu/Counter] > [Cassette/MP Tray Settings] > "Cassette 1" [Next]

#### **11** Configure the function.

Select the paper size and paper type.

**▶** Cassette 1 (to 7) (page 8-7)

#### NOTE


Paper size can be automatically detected and selected, refer to the following.

- → Paper Selection (page 6-19)

#### **Loading in the Large Capacity Feeder**


Load the paper in Cassette 3, Cassette 4, Cassette 6 (PF-740) and Cassette 7 (PF-740). The procedures here represent the Cassette 3.

#### Pull the cassette completely out of the machine.

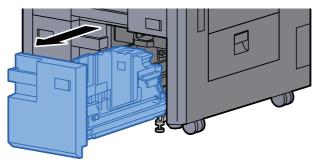


#### Adjust the cassette size.

1 Rotate the Paper Size Guide (A) clamp and remove. Pull the Paper Size Guide (A) up and out.

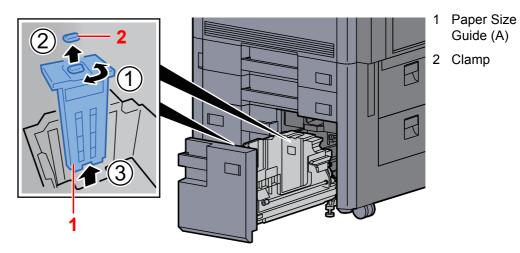


Insert the Paper Size Guide (A) into the slot (bottom of cassette) for the paper size to be used.

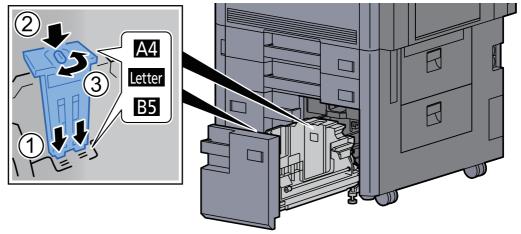

Make sure that the top of the Paper Size Guide (A) matches the paper size to be used, attach the clamp, and rotate the clamp to lock it.

Gently try moving the Paper Size Guide (A) to verify that it is fixed.

3 With the bottom of the cassette pressed all the way down, press the hook on the side of the Paper Size Guide (B) to release it and pull out the Paper Size Guide (B).

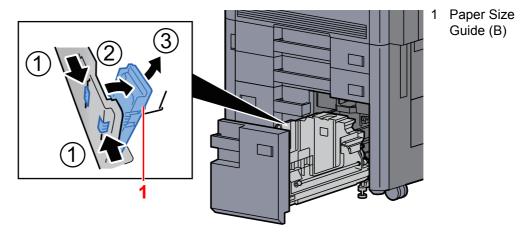


4 Adjust the Paper Size Guide (B) to the paper size.

#### **A4**

Insert the Paper Size Guide (B) into the slot marked A4 (on the bottom of the cassette), and lock the hook (it will make a "click" sound).


Gently try moving the Paper Size Guide (B) to verify that it is fixed.

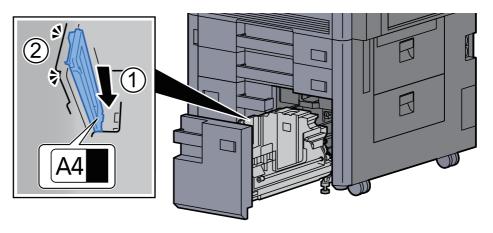

#### **B5**

Open the Paper Size Guide (B) as shown, insert into the slot marked B5 (on the bottom of the cassette), and lock the hook (it will make a "click" sound).


Gently try moving the Paper Size Guide (B) to verify that it is fixed.

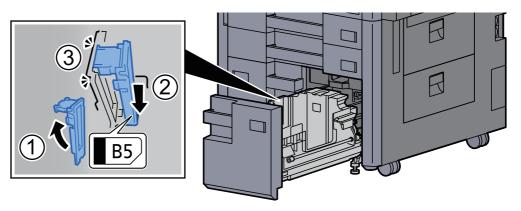

#### Letter


The Paper Size Guide (B) is not attached.

With the bottom of the cassette pressed all the way down, press the hook on the side of the Paper Size Guide (C) to release it and pull out the Paper Size Guide (C).

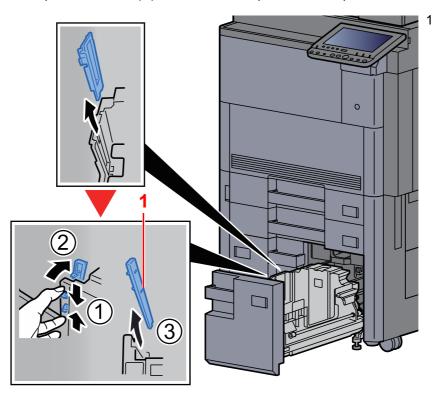

Paper Size Guide (C)


#### 3 Load paper.

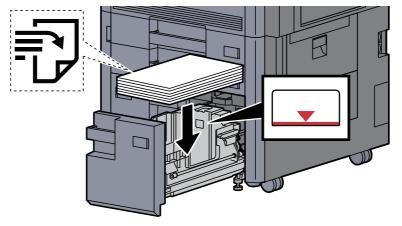


#### **⋈** IMPORTANT

- Load the paper with the print side facing up.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
  - ▶ Precaution for Loading Paper (page 3-2)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.

#### Gently push the cassette back in.

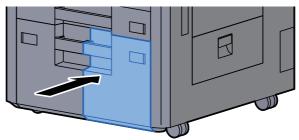


For Cassette 3 and 4, insert a sheet of the required paper size and type, as shown in the illustration.

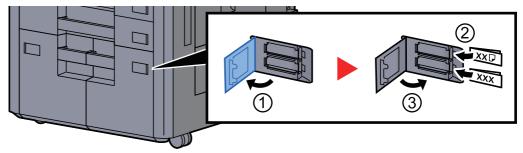

#### **NOTE**

For Cassette 6 and 7, insert a sheet of the required paper size and type, as shown in the illustration.

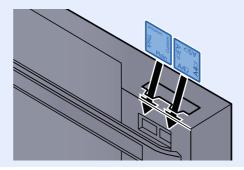

#### Display the screen. 6

[System Menu/Counter] > [Cassette/MP Tray Settings] > "Cassette 3" [Next]


#### Configure the function.

Select the paper size and paper type.


Cassette 1 (to 7) (page 8-7)

#### **Loading in the Side Feeder (3,000-sheet)**

#### Pull the cassette completely out of the machine.

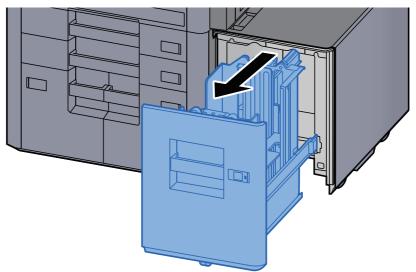

#### 2 Load paper.

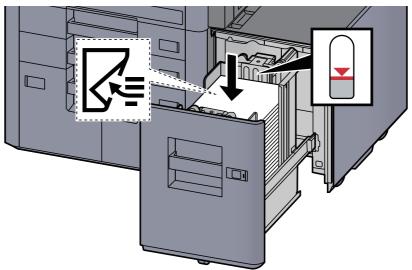


#### NOTE

The default paper size setting is A4. If you need the paper size changed to B5 or Letter, contact your service representative.


#### **⋈** IMPORTANT

- · Load the paper with the print side facing down.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
  - → Precaution for Loading Paper (page 3-2)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator.

Gently push the cassette back in.

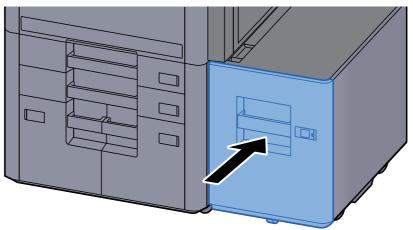

Insert the indication on the sheet so as to match the size and type of paper to be placed.

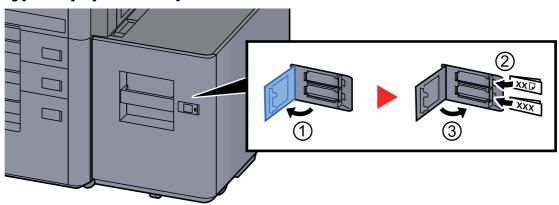

5 Display the screen.

[System Menu/Counter] > [Cassette/MP Tray Settings] > "Cassette 5" [Next] > "Media Type" [Change]

6 Configure the function.


Select the paper type.

**▶** Cassette 1 (to 7) (page 8-7)

### **Precautions for Outputting Paper**

#### **Right Tray**


When using the right tray for output, open the right tray as shown below.

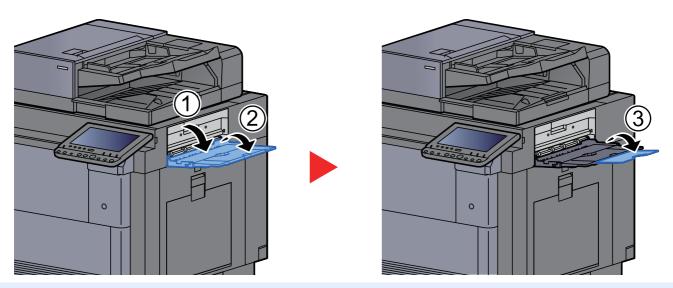

- **NOTE**
- The tray confirmation screen will be displayed if you attempt to output paper with the right tray closed.
- · Output tray capacity is as follows. 70 sheets (64 g/m<sup>2</sup>, 80 g/m<sup>2</sup>)

#### **Side Feeder Top Tray**

If multiple sheets are sent simultaneously when using the Side Feeder (500-sheet×3) or Large Capacity Side Feeder (500, 1,500-sheet×2), they are output to the Top Tray of the Side Feeder.

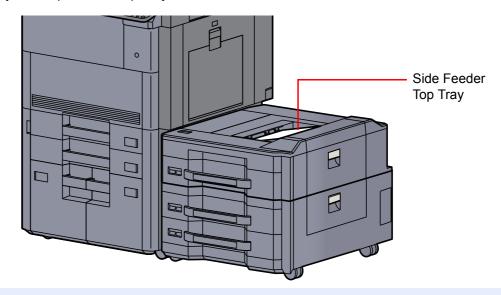

**NOTE** 

Load the paper correctly.

### **Preparation for Sending a Document to a Shared Folder in a PC**

Check the information that needs to be set on the machine and create a folder to receive the document on your computer. Screens of Windows 8.1 are used in the following explanation. The details of the screens will vary in other versions of Windows.



#### **NOTE**

Log on to Windows with administrator privileges.

#### Making a Note of the Computer Name and Full **Computer Name**

Check the name of the computer name and full computer name.

#### Display the screen.

In Windows 8.1, right-click [PC] in the Start screen and select [Properties]. Or, right-click the Window icon and select [System].

In Windows 8, select the desktop in the Start screen, right-click [Computer] from [Libraries], and then select [Properties].



#### NOTE

In Windows XP, right-click [My Computer] and select [Properties]. The [System Properties] dialog box appears. Click the [Computer Name] tab in the window that

In Windows 7, from [Start] button on the Windows, select [Computer] and then [System Properties].

In Windows 10, right-click [Start] button on the Windows and select [System].

#### Check the computer name.



Check the computer name and full computer name.

#### Screen example:

Computer name: PC001

Full computer name: PC001.abcdnet.com

#### Windows XP:

If the full computer name does not have a dot (.), the full computer name and the computer name are the same.

If the full computer name has a dot (.), the text string in front of the dot (.) in the full computer name is the computer name.

Example: PC001.abcdnet.com

PC001 is the computer name

PC001.abcdnet.com is the full computer name

After checking the computer name, click the **Close** button to close the **System Properties** screen.

In Windows XP, after checking the computer name, click the **[Cancel]** button to close the **"System Properties"** screen.

#### **Making a Note of the User Name and Domain Name**

Check the domain name and user name for logging onto Windows.

#### Display the screen.

Click [Search] in charms, and enter "Command Prompt" in the search box. Select [Command Prompt] in the search list.


In Windows 7, from [Start] button on the Windows, select [All Programs] (or [Programs]), [Accessories] and then [Command Prompt].

In Windows 10, right-click [Start] button on the Windows and select [Command Prompt].

The Command Prompt window appears.

#### Check the domain name and user name.

At the Command Prompt, enter "net config workstation" and then press [Enter].

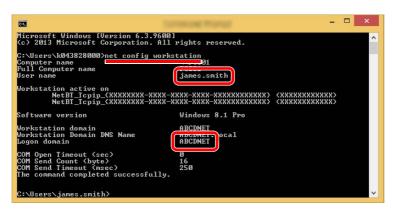

Check the user name and domain name.

Screen example:

User Name: james.smith Domain Name: ABCDNET

## Creating a Shared Folder, Making a Note of a Shared Folder

Create a shared folder to receive the document in the destination computer.



If there is a workgroup in System Properties, configure the settings below to limit folder access to a specific user or group.

1 Select [Settings] in charms on Desktop, and select [Control Panel], [Appearance and Personalization], and then [Folder Options].




In Windows XP, click [My Computer] and select [Folder Options] in [Tools].

In Windows 7, from [Start] button on the Windows, select [Control Panel], [Appearance and Personalization], and then [Folder Options].

In Windows 10, open up a window in File Explorer and select [**View**], [**Options**], and then [**Folder Options**].

2

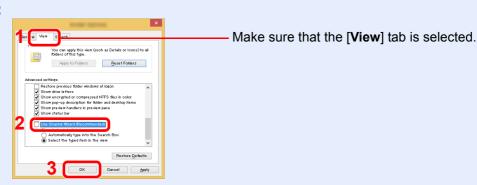

Remove the checkmark from [**Use Sharing Wizard (Recommended)**] in "Advanced settings".

In Windows XP, click the [View] tab and remove the checkmark from [Use Simple File Sharing (Recommended)] in "Advanced settings".


#### Create a folder.

1 Create a folder on your computer.

For example, create a folder with the name **"scannerdata"** on the desktop.



2 Right-click the "scannerdata" folder, select [Property], and click [Sharing] and [Advanced Sharing].

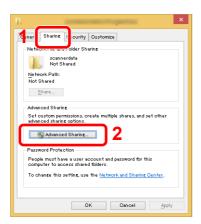

In Windows XP, right-click the "scannerdata" folder and select [**Sharing and Security**] (or [**Sharing**]).


#### Configure permission settings.

1 Select the [Share this folder] checkbox and click the [Permissions] button.




In Windows XP, select [Share this folder] and click the [Permissions] button.

- 2 Make a note of the [Share name].
- 3 Click the [Add] button.

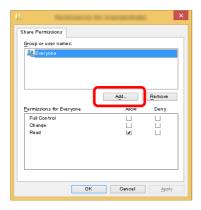

4 Specify the location.

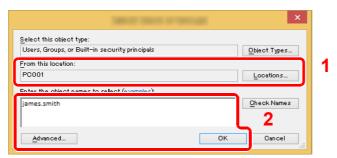

1 If the computer name that you made a note of on page 3-15 is the same as the domain name:

If the computer name is not shown in "From this location", click the [Locations] button, select the computer name, and click the [OK] button.

Example: PC001

If the computer name that you made a note of on page 3-15 is not the same as the domain name:


If the text after the first dot (.) in the full computer name that you made a note of does not appear in "From this location", click the [Locations] button, select the text after the dot (.), and click the [**OK**] button.

Example: abcdnet.com

- → Making a Note of the User Name and Domain Name (page 3-16)
- 2 Enter the user name that you made a note of on page in the text box, and click the [OK] button.

Also the user name can be made by clicking the [Advanced] button and selecting a user.

5 Set the access permission for the user selected.

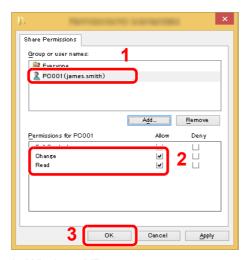


- 1 Select the user you entered.
- 2 Select the [Allow] checkbox of the "Change" and "Read" permissions
- 3 Press [OK].

In Windows XP, go to step 7.

#### **NOTE**

"Everyone" gives sharing permission to everyone on the network. To strengthen security, it is recommended that you select "Everyone" and remove the "Read" [Allow] checkmark.

- 6 Click the [OK] button in the "Advanced Sharing" screen to close the screen.
- 7 Check the details set in the [Security] tab.

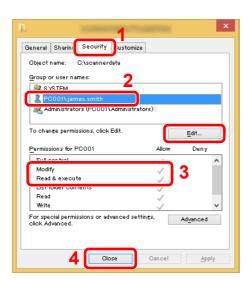

- 1 Select the [Security] tab.
- 2 Select the user you entered. If the user does not appear on "Group or user names", click [Edit] button to add user in a similar way of "configuration of permission settings".
- 3 Make sure that checkmarks appear on [Allow] checkbox for the "Modify" and "Read & execute" permissions.
- 4 Click the [Close] button.

In Windows XP, make sure that checkmarks appear on [Allow] checkbox for the "Modify" and "Read & execute" permissions, and click the [OK] button.

#### **Configuring Windows Firewall**

Permit sharing of files and printers and set the port used for SMB transmission.




#### **NOTE**

Log on to Windows with administrator privileges.

#### Check file and printer sharing.


1 In charms on Desktop, click [Settings], [Control Panel], [System and Security], and then [Windows Firewall].

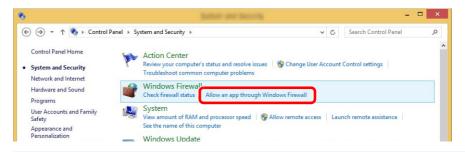




If the User Account Control dialog box appears, click the [Continue] button.

2 Select the [File and Printer Sharing] checkbox.

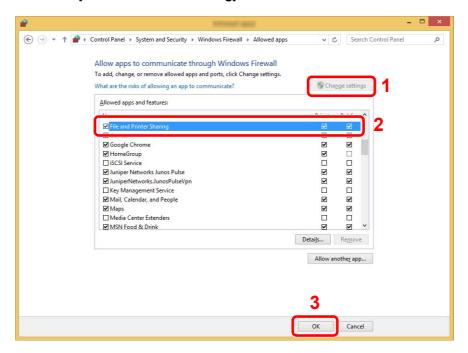

#### Add a port.

1 In charms on Desktop, click [Settings], [Control Panel], [System and Security], and [Check firewall status].

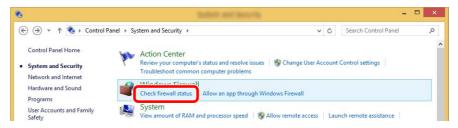


2 Select [Advanced settings].




3 Select [Inbound Rules].




4 Select [New Rules].

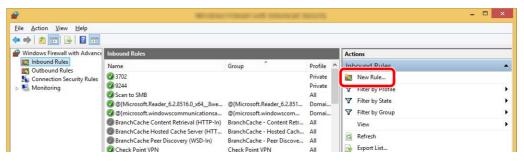


5 Select [Port].

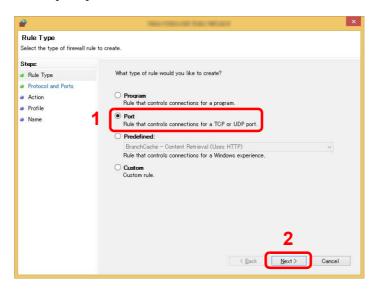


Select [TCP] as the port to apply the rule to. Then select [Specific local ports] and enter "445" then click [Next].

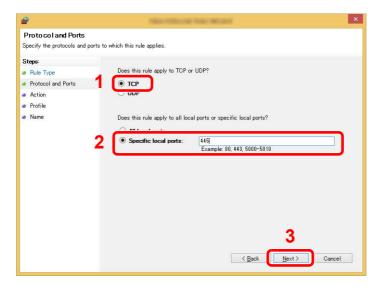


7 Select [Allow the connection] and click the [Next] button.

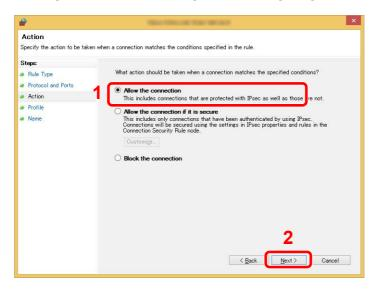

8 Make sure all checkboxes are selected and click the [Next] button.

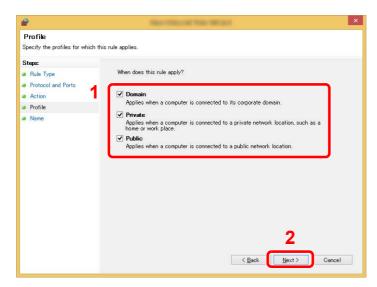

9 Enter "Scan to SMB" in "Name" and click [Finish].

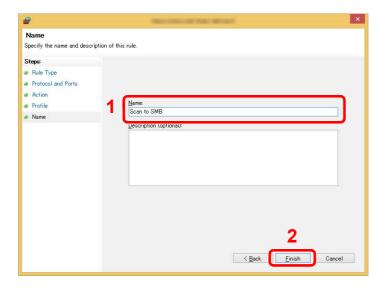

#### In Windows 7

1 In Windows 7, from [Start] button on the Windows, select [Control Panel], [System and Security], and then [Allow a program through Windows Firewall].

If the User Account Control dialog box appears, click the [Continue] button.

- 2 Configure the settings.
  - → Configuring Windows Firewall (page 3-20)

#### In Windows XP or Windows Vista

1 In Windows XP, from [Start] button on the Windows, select [Control Panel], and then [Windows Firewall].

In Windows Vista, from [Start] button on the Windows, select [Control Panel], [Security], and then [Turn Windows Firewall on or off].

If the User Account Control dialog box appears, click the [Continue] button.

- 2 Click the [Exceptions] tab and then the [Add port...] button.
- 3 Specify Add a Port settings.

Enter any name in "Name" (example: Scan to SMB). This will be the name of the new port. Enter "445" in "Port Number". Select [TCP] for "Protocol".

4 Click [OK] button.

#### In Windows 10

- 1 In Windows 10, right-click [Start] button on the Windows and select [Control Panel], [System and Security], and then [Allow an app through Windows Firewall].
  If the User Account Control dialog box appears, click the [Continue] button.
- 2 Configure the settings.
  - Configuring Windows Firewall (page 3-20)

## **Registering Destinations in the Address Book**

Save frequently used destinations to the Address Book or One Touch Keys. The saved destinations can be changed. The destinations are available for Send as E-mail, Send to Folder, and Fax Transmission (Only on products with the fax function installed).



- · Registering and editing of the Address Book can also be done in Command Center RX.
  - Registering Destinations (page 2-71)
- · Editing of the Address Book and One Touch Keys can be restricted to administrators.
  - **▶** Edit Restriction (page 8-67)

#### **Adding a Destination (Address Book)**

Add a new destination to the Address Book. There are two registering methods, contacts and groups. When adding a group, enter the group name and select group members from the Address Book.



If registering and editing of the Address Book is restricted to administrators, you can edit the Address Book by logging in with administrator privileges.

- **▶** Edit Restriction (page 8-67)
- Command Center RX User Guide

#### Registering a contact address

A maximum of 2,000 contact addresses can be registered. Each address can include the information such as destination name, E-mail address, FTP server folder path, computer folder path, and FAX No. (Only on products with the fax function installed).

#### 1 Display the screen.

[System Menu/Counter] key > [Edit Destination] > "Address Book" [Add/Edit] > [Add] > [Contact] > [Next]

#### 2 Add the name.

- 1 Select "Address Number" [Change].
- 2 Use [+] / [-] or the numeric keys to enter an address number (1 to 2500).
  To have the number assigned automatically, enter "0000".



Address Number is an ID for a destination. You can select any available number out of 2,000 numbers for contacts and 500 numbers for groups.

If you specify an address number that is already in use, an error message appears when you select [**Save**] and the number cannot be registered. If you set "0000" as the address number, the address is registered under the lowest available number.

3 Select [OK].

The screen shown in step 1 reappears.

- 4 Select "Name" [Change].
- **5** Enter the destination name (up to 32 characters) to be displayed on the Address Book and select [**OK**].

The screen shown in step 1 reappears.



Refer to the following for details on entering characters.

→ Character Entry Method (page 11-9)

#### Add the address.

#### **E-mail Address**

"E-mail Address" [Change] > Enter the E-mail address > [OK]



Refer to the following for details on entering characters.

→ Character Entry Method (page 11-9)

#### The Folder (SMB) Address

"Host Name", "Path", "Login User Name" and "Login Password" [Change] > Enter the information > [OK]



#### NOTE

For the computer name, share name, domain name, and user name, enter the information that you noted when you created the shared folder. For details on creating shared folders, refer to the following:

Preparation for Sending a Document to a Shared Folder in a PC (page 3-15)

The table below explains the items to be entered.

Item	Description	Max. No. of Characters
Host Name*1	Computer name	Up to 70 characters
Path	Share name For example: scannerdata If saving in a folder in the shared folder: share name\folder name in shared folder	Up to 128 characters
Login User Name* <sup>2</sup>	If the computer name and domain name are the same: User Name For example: james.smith If the computer name and domain name are different: Domain name\User name For example: abcdnet\james.smith	Up to 64 characters
Login Password	Windows logon password (Case sensitive.)	Up to 64 characters

<sup>\*1</sup> You can also specify the port number. Enter the following format separated by a colon. "Host name: port number" or "IP address: port number"

To enter the IPv6 address, enclose the address in brackets [].

(Example: [2001:db8:a0b:12f0::10]:445)

If the port number is not specified in [Host Name], the default port number is 445.

\*2 When sending a document through an optional network interface (IB-50 or IB-51), "\" cannot be used. If the computer name is different from the domain name, login user name needs to be input by using "@." (Example: james.smith@abcdnet)

To search for a folder on a PC on the network, select "Search Folder from Network" or "Search Folder by Host Name" [Next].

If you selected "Search Folder from Network" [Next], you can search all PCs on the network for a destination.

If you pressed "Search Folder by Host Name" [Next], you can enter the "Domain/Workgroup", and "Host Name" to search PCs on the network for the destination.

A maximum of 500 addresses can be displayed. Select the host name (PC name) that you want to specify in the screen that appears, and select [Next]. The login user name and login password entry screen appears.

After you enter the login user name and login password name of the destination PC, the shared folders appear. Select the folder that you want to specify and select [Next]. The address of the selected shared folder is set.

Select the folder from the Search Results list.

#### NOTE

- Refer to the following for details on entering characters.
  - → Character Entry Method (page 11-9)
- Select [Connection Test] to check the connection to the server you chose. If the connection fails, check the entries you made.

#### The Folder (FTP) Address

"Host Name", "Path", "Login User Name" and "Login Password" [Change] > Enter the information > [OK]

The table below explains the items to be entered.

Item	Descriptions	Max. No. of Characters
Host Name*1	Host name or IP address of FTP server	Up to 70 characters
Path*2	Path for the file to be stored For example: User\ScanData If no path is entered, the file is stored in the home directory.	Up to 128 characters
Login User Name	FTP server login user name	Up to 64 characters
Login Password	FTP server login password	Up to 64 characters

- \*1 You can also specify the port number. Enter the following format separated by a colon.
  - "Host name: port number" or "IP address: port number"

To enter the IPv6 address, enclose the address in brackets [].

(Example: [2001:db8:a0b:12f0::10]:21)

If the port number is not specified in [Host Name], the default port number is 21.

\*2 When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.



#### NOTE

- · Refer to the following for details on entering characters.
  - ◆ Character Entry Method (page 11-9)
- Select [Connection Test] to check the connection to the FTP server you chose. If the connection fails, check the entries you made.

#### **Check if the destination entry is correct > [Save]**

The destination is added to the Address Book.

To register the registered address in a one-touch key, select [Save] > [Yes]



#### NOTE

Refer to the following for registering the One Touch Key.

◆ Adding a Destination on One Touch Key (One Touch Key) (page 3-32)

#### Add the group

Compile two or more contacts into a group. Designations in the group can be added at the same time. When adding a group, a maximum of 500 groups can be added in the Address Book.



#### NOTE

To add a group, you need individually added destinations. Register one or more individual destinations as needed before proceeding. Up to 100 destinations for the E-mail, 500 destinations for the FAX, 100 destinations for the i-FAX, and a total of 10 destinations for the FTP and SMB can be registered per group.

#### Display the screen.

[System Menu/Counter] key> [Edit Destination] > "Address Book" [Add/Edit] > [Add] > [Group] > [Next]

#### Add the name.

- Select "Address Number" [Change].
- 2 Use [+] / [-] or the numeric keys to enter an address number (1 to 2,500). To have the number assigned automatically, set "0000".

#### **◯** NOTE

- Address Number is an ID for a group. You can select any available number out of 2,000 numbers for contacts and 500 numbers for groups.
- If you specify an address number that is already in use, an error message appears when you select [Save] and the number cannot be registered. If you set "0000" as the address number, the address is registered under the lowest available number.
- 3 Select [**OK**]. The "Add Group" screen reappears.
- 4 Select "Name" [Change].
- 5 Enter the group name displayed on the Address Book > [OK] The "Add Group" screen reappears.

#### NOTE

Up to 32 characters can be entered. Refer to the following for details on entering characters.

Character Entry Method (page 11-9)

#### Select the members (destinations).

- **1** [Member] > [Add]
- Select destinations (contacts) to add to the group > [OK]



#### **◯** NOTE

Destinations can be sorted or searched by destination name or address number.

Checking and Editing Destinations (page 5-43)

If you have more destinations to add, repeat Steps 2 to 3.

### Check if the selected destination was added to the group > [Save]

The group is added to the Address Book.

To register the registered address in a one-touch key, select [Save] > [Yes]

NOTE

Refer to the following for registering the One Touch Key.

→ Adding a Destination on One Touch Key (One Touch Key) (page 3-32).

#### **Editing Address Book Entries**

Edit the destinations (contacts) you added to the Address Book.

#### Display the screen.

- 1 [System Menu/Counter] key > [Edit Destination] > "Address Book" [Add/Edit]
- 2 Select a destination or group to edit > [Detail]
  - **NOTE**

Destinations can be sorted or searched by destination name or address number.

→ Specifying Destination (page 5-40)

#### Edit the destination.

#### **Editing a Contact**

- 1 Change "Name", "Address Number" and destination type and address.
  - → Adding a Destination (Address Book) (page 3-25)
- 2 [Save] > [Yes]

Register the changed destination.

#### Add a destination to a group

- 1 Change "Name" and "Address Number".
  - → Add the group (page 3-29)
- 2 [Member] > [Add]
- 3 After you have completed the changes, [Save] > [Yes] Register the changed destination.

#### To delete any destination from the group

- 1 [Member] > Select the delete destination > [Delete] > [Yes]
- 2 After you have completed the changes, [Save] > [Yes] Register the changed destination.

#### **Deleting Address Book Entries**

Delete the destinations (contacts) you added to the Address Book.

#### Display the screen.

- 1 [System Menu/Counter] key> [Edit Destination] > "Address Book" [Add/Edit]
- 2 Select a destination or group to delete.

#### NOTE

Destinations can be sorted or searched by destination name or address number.

**▶** Specifying Destination (page 5-40)

#### [Delete] > [Yes]

Delete the contact or group.

## Adding a Destination on One Touch Key (One Touch Key)

Assign a new destination (contact or group) to an one touch key. A maximum of 1,000 destinations can be registered.

#### NOTE

- · Refer to the following for use of One Touch Key.
  - Specifying Destination (page 5-40)
- You can add One Touch keys and change their settings on Command Center RX.
  - → Registering Destinations (page 2-71)
- If registering and editing of the One Touch Keys is restricted to administrators, you can edit the One Touch Keys by logging in with administrator privileges.
  - → Edit Restriction (page 8-67)
  - Command Center RX User Guide

#### Display the screen.

[System Menu/Counter] key > [Edit Destination] > "One Touch Key" [Add/Edit]

#### Add One Touch Keys.


Select a One Touch Key number (0001 to 1000) for the destination > [Add/Edit] Selecting [No.] or the Quick No. Search key on the numeric keypad enables direct entry of a One Touch Key number.

#### NOTE

For the Quick No. Search key, refer to the following:

→ Using the Quick No. Search Key (page 2-26)

Select a One Touch Key with no registered destination.

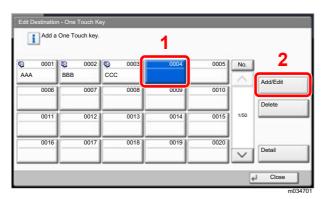

- 2 Select "Display Name" [Change].
- 3 Enter the One Touch Key name displayed in the send base screen > [OK]

#### NOTE

Up to 24 characters can be entered. Refer to the following for details on entering characters.

- Character Entry Method (page 11-9)
- 4 Select "Destination" [Change].

The Address Book appears.

5 Select a destination (contact or group) to add to the One Touch Key number > [Next] Selecting [Detail] shows the detailed information of the selected destination.

#### NOTE

Destinations can be sorted or searched by destination name or address number.

- Specifying Destination (page 5-40)
- 6 Select [Save].

The destination will be added to the One Touch Key.

#### **Editing One Touch Key**

#### Display the screen.

- 1 [System Menu/Counter] key > [Edit Destination] > "One Touch Key" [Add/Edit]
- 2 Select a One Touch Key number (0001 to 1000) to edit. Selecting [No.] or the Quick No. Search key on the numeric keypad enables direct entry of a One Touch Key number.

#### Changing the Registered Information.

- 1 Select [Add/Edit].
- 2 Select a new destination (contact or group). Selecting [Detail] shows the detailed information of the selected destination.
  - NOTE

Destinations can be sorted or searched by destination name or address number.

- Specifying Destination (page 5-40)
- 3 [OK] > [Save] > [Yes]

Add the destination to the One Touch Key.

#### **Deleting the Destination to the One Touch Key**

#### Display the screen.

- 1 [System Menu/Counter] key > [Edit Destination] > "One Touch Key" [Add/Edit]
- 2 Select a One Touch Key number (0001 to 1000) to edit. Selecting [No.] or the Quick No. Search key on the numeric keypad enables direct entry of a One Touch Key number.

#### Delete the Registered Information.

Select [Delete] > [Yes]

The data registered in the One Touch Key is deleted.

## 4 Printing from PC


#### This chapter explains the following topics:


Printer Driver Properties Screen	4-2
Displaying the Printer Driver Help	4-3
Changing the Default Printer Driver Settings (Windows 8.1)	4-3
Printing from PC	4-4
Printing on Standard Sized Paper	4-4
Printing on Non-standard Sized Paper	4-6
Banner Printing	4-9
Canceling Printing from a Computer	4-1
Printing from the Handheld Device	4-16
Printing by AirPrint	4-16
Printing by Google Cloud Print	4-16
Printing by Mopria	4-16
Printing with Wi-Fi Direct	4-16
Printing with NFC	4-17
Printing Data Saved in the Printer	4-18
Specifying the Job Box from a Computer and Storing the Job	4-18
Printing Documents from Private Print Box	4-19
Deleting the Documents Stored in the Private Print Box	4-19
Printing Document from Stored Job Box	4-20
Deleting the Documents Stored in the Stored Job Box	4-20
Printing Document from Quick Copy Box	4-2 <sup>-</sup>
Deleting the Documents Stored in the Quick Copy Box	4-2 <sup>-</sup>
Printing Document from Proof and Hold Box	4-22
Deleting the Documents Stored in the Proof and Hold Box	4-22
Monitoring the Printer Status (Status Monitor)	4-23
Accessing the Status Monitor	4-23
Exiting the Status Monitor	4-23
Quick View State	4-23
Printing Progress Tab	4-24
Paper Tray Status Tab	4-24
Toner Status Tab	4-24
Alert Tab	4-2
Status Monitor Context Menu	4-2
Status Monitor Notification Settings	4-20

#### **Printer Driver Properties Screen**

The printer driver properties screen allows you to configure a variety of print-related settings.

#### Printer Driver User Guide

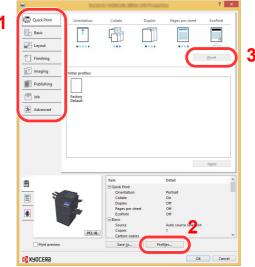

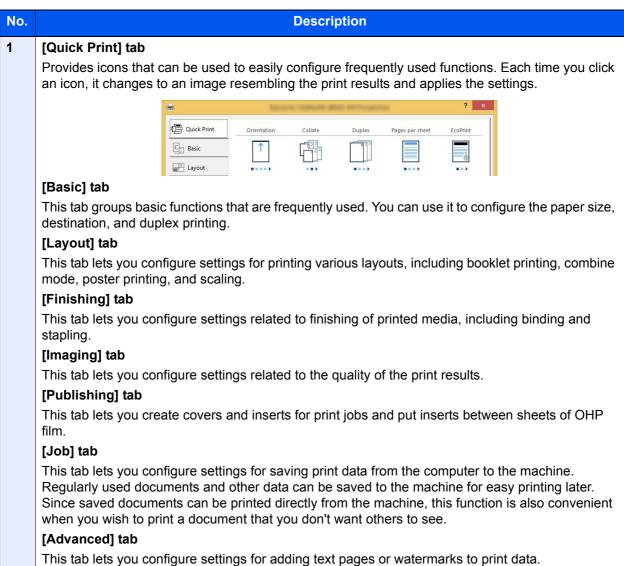

No.	Description	
2	[Profiles] Printer driver settings can be saved as a profile. Saved profiles can be recalled at any time, so it's a convenient practice to save frequently used settings.	
3	[Reset] Click to revert settings to their initial values.	

# **Displaying the Printer Driver Help**

The printer driver includes Help. To learn about print settings, open the printer driver print settings screen and display Help as explained below.



- 1 Click the [?] button in the upper right corner of the screen.
- 2 Click the item you want to know about.



The Help appears, even when you click the item you want to know about and press the [F1] key on your keyboard.

# Changing the Default Printer Driver Settings (Windows 8.1)

The default printer driver settings can be changed. By selecting frequently used settings, you can omit steps when printing. For the settings, refer to the following:


- Printer Driver User Guide
  - In charms on Desktop, click [Settings], [Control Panel], and then [Devices and Printers].
  - 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
  - Click the [Basic] button on the [General] tab.
  - 4 Select the default settings and click the [OK] button.

# **Printing from PC**

This section provides the printing method using the KX DRIVER.

# **NOTE**

- To print the document from applications, install the printer driver on your computer from the supplied DVD (Product Library).
- In some environments, the current settings are displayed at the bottom of the printer driver.

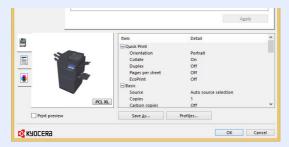

- When printing the cardstock or envelopes, load the cardstock or envelopes in the multipurpose tray before
  performing the following procedure.
  - **▶** Loading Paper in the Multipurpose Tray (page 5-5)

# **Printing on Standard Sized Paper**

If you loaded a paper size that is included in the print sizes of the machine, select the paper size in the [Basic] tab of the print settings screen of the printer driver.



Specify the paper size and media type to print from the operation panel.


Cassette/MP Tray Settings (page 8-7)

# Display the screen.

Click [File] and select [Print] in the application.

# Configure the settings.

1 Select the machine from the "Printer" menu and click the [Properties] button.

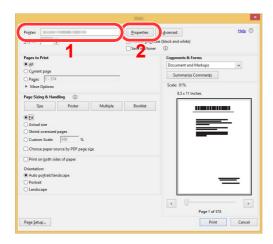


2 Select the [Basic] tab.

3 Click "Print size" menu and select the paper size to use for printing.

To load the paper of size that is not included in print sizes of the machine such as cardstock or envelopes, the paper size needs to be registered.

→ Printing on Non-standard Sized Paper (page 4-6)

To print on the special paper such as thick paper or transparency, click "Media type" menu and select the media type.

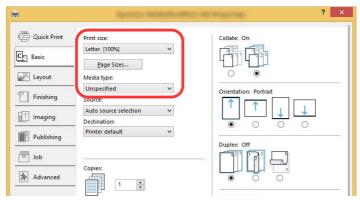

4 Click [OK] button to return to the Print dialog box.

# 3 Start printing.

Click the [OK] button.

# **Printing on Non-standard Sized Paper**

If you loaded a paper size that is not included in the print sizes of the machine, register the paper size in the [Basic] tab of the print settings screen of the printer driver.

The registered size can be selected from the "Print size" menu.



To execute printing at the machine, set the paper size and type in the following:

Original/Paper Settings (page 8-11)

### Display the screen.

1 In charms on Desktop, click [Settings], [Control Panel], and then [Devices and Printers].




In Windows 7, click [Start] button on the Windows, and then click [Devices and Printers].


- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click the [Preferences] button on the [General] tab.

# 2 Register the paper size.

1 Click the [Basic] tab.

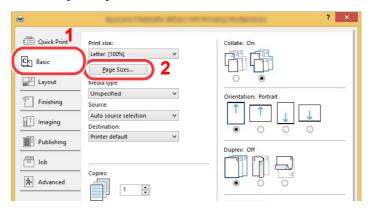


- 2 Click the [Page Size...] button.
- 3 Click the [New] button.

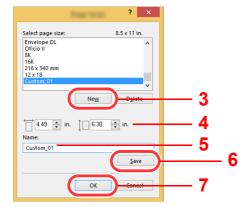

4 Enter the paper size.

- 5 Enter the name of the paper.
- 6 Click the [Save] button.
- 7 Click the [OK] button.
- 8 Click the [OK] button.

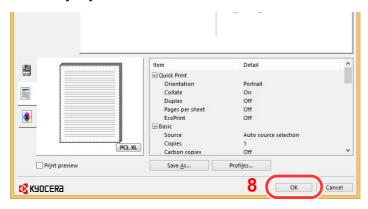


# 3 Display the print settings screen.

Click [File] and select [Print] in the application.


# Select the paper size and type of non-standard size paper.

1 Select the machine from the "Printer" menu and click the [**Properties**] button.

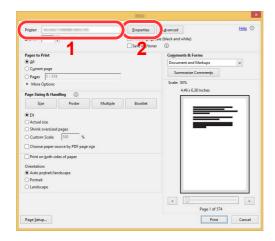

2 Select the [Basic] tab.

3 Click "Print size" menu and select the paper size registered in step 2.

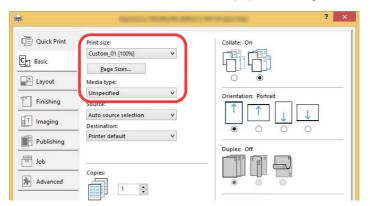

To print on the special paper such as thick paper or transparency, click "Media type" menu and select the media type.

#### NOTE

If you loaded a postcard or envelope, select [Cardstock] or [Envelope] in the "Media type" menu.

- 4 Select the paper source in the "Source" menu.
- 5 Click [**OK**] button to return to the Print dialog box.

#### Start printing. 5

Click the [OK] button.

# **Banner Printing**

When a document length from 470.1 mm (18.5") to a maximum of 1,220.0 mm (48") is specified for printing, the print job is treated as banner printing.

Max. number of sheets	1 sheet (manual feed), 10 sheets (when optional banner tray is attached*1)	
Paper width 210 mm to 304.8 mm (8.26" to 12")		
Paper length	470.1 mm to 1,220 mm (18.5" to 48")	
Paper weight	136 to 163 g/m <sup>2</sup>	
Media type	Heavy 2	

<sup>\*1</sup> When the banner tray (option) is used, up to 10 sheets of banner paper can be fed continuously For details, refer to the follows:


#### **Using the Multipurpose Tray**

## Display the screen.


Click [File] and select [Print] in the application.

# Configure the settings.

1 Select the machine from the "Printer" menu and click the [**Properties**] button.

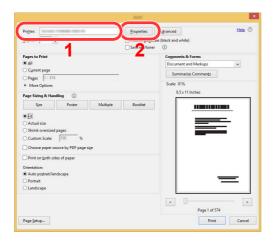


2 Select the [Basic] tab.

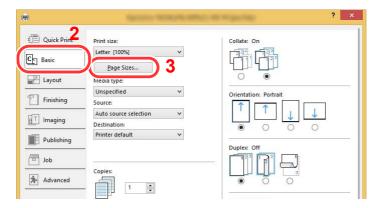

3 Click the [Page Size...] button.

<sup>→</sup> Using the Banner Tray (Option) (page 4-12)


# Register the paper size.

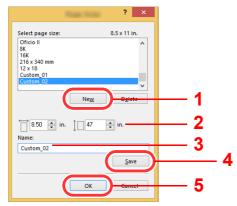

- 1 Click the [New] button.
- 2 Enter the length (470.1 mm (18.51") or longer), and width of the custom paper size being registered.
- 3 Enter the name of the paper.
- 4 Click the [Save] button.
- 5 Click the [OK] button.

#### Configure the print paper size. 4

1 Click "Print size" menu and select the paper size registered in step 3.

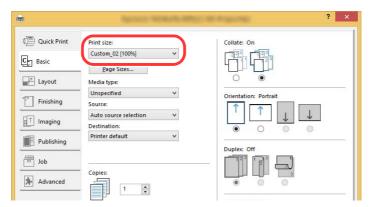

2 Click the [OK] button.




#### NOTE

When banner printing, a resolution of 600 dpi is set.

# 5 Start printing.


Click the [OK] button.

When you execute printing in this case, a message appears on the machine's operation panel. Place the paper in the Multipurpose Tray, continue to support it so that it does not fall, and select [Continue]. To cancel printing, select [Cancel].

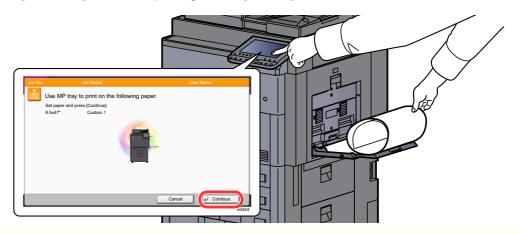


#### **IMPORTANT**

- If an output tray that cannot be used for banner printing such as Mailbox (option) is selected in the printer driver, the output tray automatically changes to a tray that can be used.
- After pressing [Continue], support the paper with both hands so that it feeds in correctly.

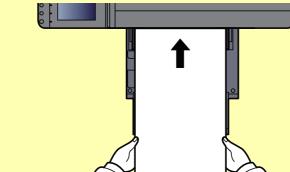

• After printing starts, catch the paper when it is output so that it does not fall.

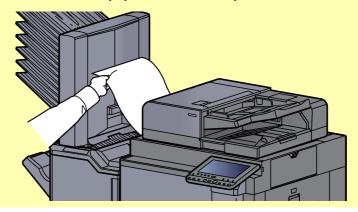

Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets.

→ Message Banner Print (page 8-28)

#### **Using the Banner Tray (Option)**

When the banner tray (option) is used, up to 10 sheets of banner paper can be fed continuously.

The operation procedure for setting the banner paper by using the printer driver is the same as that of using the multipurpose tray.

Using the Multipurpose Tray (page 4-9)




The paper length supported in banner tray is 900 mm to 1,220 mm (35.44" to 48").

#### Open the multipurpose tray.


Open the multipurpose tray until it stops.

Do not extend the support tray section of the multipurpose tray.

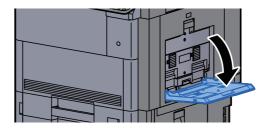


# Attach the banner tray.

1 Release the paper width guide lock on the banner tray and open to the maximum width.

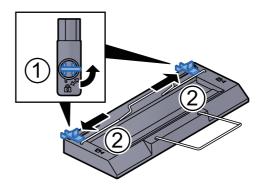


2 Attach the banner tray to the multipurpose tray.

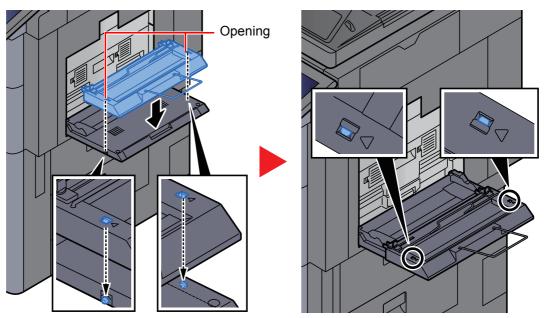

Fit the openings on the sides of the banner tray onto the tabs on the sides of the multipurpose tray, and press into place.


# 3 Load paper.

1 Open the paper width guides on the multipurpose tray to the maximum width.

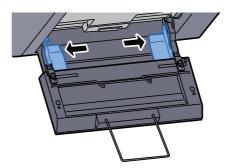


Make sure that the banner tray is attached so that the paper width guides on the banner tray are outside the paper width guides on the multipurpose tray.


2 Load banner paper so that it passes under the paper clamp bar.

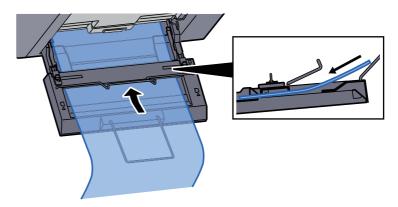

3 Loop the banner paper back and place the end on the paper support.

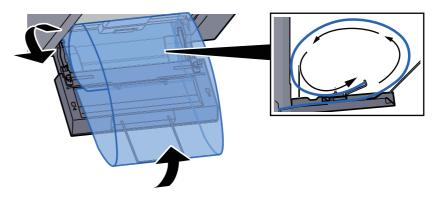


4 Adjust the paper width guides to the width of the paper.

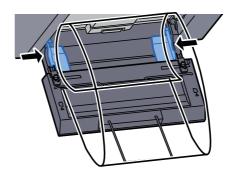

### **IMPORTANT**

If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.

5 Adjust the paper width guides on the banner tray to the same width as the paper width guides on the multipurpose tray and lock.

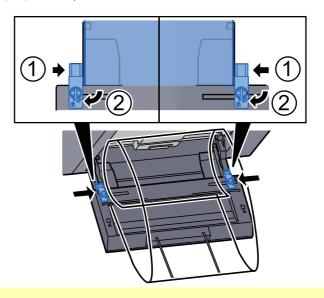

### **IMPORTANT**

Remove the paper when banner printing finishes, or when you are not using the banner tray.



#### **№** NOTE

The print confirmation screen can be set in System Menu to not appear when the banner tray is attached. This will allow continuous printing on multiple sheets. Refer to the follows:

Message Banner Print (page 8-28)

# **Canceling Printing from a Computer**

To cancel a print job executed using the printer driver before the printer begins printing, do the following:



When canceling printing from this machine, refer to the following:

- → Canceling Jobs (page 5-20)
- 1 Double-click the printer icon ( ) displayed on the taskbar at the bottom right of the Windows desktop to display a dialog box for the printer.
- Click the file for which you wish to cancel printing and select [Cancel] from the "Document" menu.

# **Printing from the Handheld Device**

This machine supports the AirPrint, Google Cloud Print and Mopria. According to the supported OS and application, you can print the job from any handheld device or computer without installing a printer driver.

# **Printing by AirPrint**

AirPrint is a printing function that is included standard in iOS 4.2 and later products, and Mac OS X 10.7 and later products.

To use the AirPrint, make sure that the AirPrint setting is enabled in the Command Center RX.

Command Center RX User Guide



# **Printing by Google Cloud Print**

Google Cloud Print is a printing service provided by Google. This service enables a user with a Google account to print from a machine connected to the Internet.

The machine can be configured in the Command Center RX.

Command Center RX User Guide



#### **NOTE**

A Google account is necessary to use Google Cloud Print. Obtain a Google account if you do not have one. It is also necessary to register the machine with the Google Cloud Print service in advance. The machine can be registered from a PC connected to the same network.

# **Printing by Mopria**

Mopria is a standard on printing function included in Android 4.4 or later products.

Mopria Print Service needs to be installed and enabled in advance.

For details on how to use, refer to a Web site of Mopria Alliance.

# **Printing with Wi-Fi Direct**

Wi-Fi Direct is a wireless LAN standard that Wi-Fi Alliance has been established. This is one of the functions of the wireless LAN, without a wireless LAN access point or wireless LAN router, between devices can communicate directly on a peer to peer basis.

The printing procedure by the Wi-Fi Direct is the same as that from the normal handheld devices.

When you use a printer name or Bonjour name on the port settings of the printer property, you can print the job by specifying the name at Wi-Fi Direct connection.

When you use an IP address for the port, specify the IP address of this machine.

# **Printing with NFC**

When the Wi-Fi and Wi-Fi Direct has been configured in advance, the network between this machine and handheld device will be configured by simply tapping an NFC tag.

- → Configuring the Wireless Network (page 2-34)
- → Setting Wi-Fi Direct (page 2-38)

# **Printing Data Saved in the Printer**

You can save the print job into the Job Box of this device and print it as necessary.

If you configure settings in the [Job] tab of the printer driver and then print, the print job will be saved in the Job Box (memory) and printing can be executed at the machine.

Follow the work flow below when using Job Box.

Specifying the Job Box from a computer and sending the print job. (page 4-18)



Using the operation panel to specify a file within a Box and printing it.

You can print the documents from the following boxes.

- Printing Documents from Private Print Box (page 4-19)
- Printing Document from Stored Job Box (page 4-20)
- Printing Document from Quick Copy Box (page 4-21)
- Printing Document from Proof and Hold Box (page 4-22)

# Specifying the Job Box from a Computer and Storing the Job

Click [File] and select [Print] in the application.

The Print dialog box displays.

- Select the machine from the "Name" menu.
- Click the [Properties] button.

The Properties dialog box displays.

Click the [Job] tab and select the [Job storage (e-MPS)] check box to set the function.



NOTE

For information on how to use the printer driver software, refer to the following:

Printer Driver User Guide

# **Printing Documents from Private Print Box**

In Private Printing, you can specify that a job is not to be printed until you operate the machine. When sending the job from the application software, specify a 4-digit access code in the printer driver. The job is released for printing by entering the access code on the operation panel, ensuring confidentiality of the print job. The data will be deleted upon completion of the print job or after the power switch is turned off.

#### Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Private Print/Stored Job] > [Open]
- 3 Select the creator of the document > [Open]

# Print the document.

- 1 Select the document to print > [Print]
- 2 Enter the access code.
- 3 Specify the number of copies to print as desired.
- 4 Select [Start Print].

Printing starts.

Upon completion of printing, the Private Print job is automatically deleted.


# **Deleting the Documents Stored in the Private Print Box**

# Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Private Print/Stored Job] > [Open]
- 3 Select the creator of the document > [Open]

# Delete the document.

Select the document to delete > [Delete] > Enter the access code

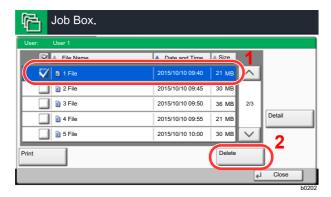

The document is deleted.

# **Printing Document from Stored Job Box**

In Stored Job, the print data sent from the application is saved to the machine. You can set up an access code as necessary. If you set up an access code, enter the access code when printing. Print data will be stored in the Stored Job Box after printing. This will allow printing of the same print data repeatedly.

## Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Private Print/Stored Job] > [Open]
- 3 Select the creator of the document > [Open]

### Print the document.

- Select the document to print > [Print]
- Specify the number of copies to print as desired.
- 3 Select [Start Print].
  Printing starts.



If the document is protected by an access code, the password entry screen will be displayed. Enter the password using the numeric keys.

# **Deleting the Documents Stored in the Stored Job Box**

# Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Private Print/Stored Job] > [Open]
- 3 Select the creator of the document > [Open]

# Delete the document.

- 1 Select the document to delete > [**Delete**]
- 2 If the document is protected by an access code, enter the code.
  The document is deleted.

# **Printing Document from Quick Copy Box**

Quick Copy feature facilitates additional prints of a document already printed. Activating Quick Copy and printing a document using the printer driver allow the print data to be stored in the Quick Copy Job Box. When additional copies are required, you can reprint the required number of copies from the touch panel. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted.

# NOTE

- When the number of jobs reaches the limit, the oldest job will be overwritten by the new one.
- To maintain free space on the box, you can set the maximum number of stored jobs.

#### Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Quick Copy/Proof and Hold] > [Open]
- 3 Select the creator of the document > [Open]

#### Print the document.

- 1 Select the document to print > [Print]
- Specify the number of copies to print as desired.
- 3 Select [Start Print].
  Printing starts.

# **Deleting the Documents Stored in the Quick Copy Box**

# Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Quick Copy/Proof and Hold] > [Open]
- 3 Select the creator of the document > [Open]

# Delete the document.

Select the document to delete > [Delete] > [Yes]

The document is deleted.

# **Printing Document from Proof and Hold Box**

The Proof and Hold feature produces only a single proof print of multiple-print job and holds printing of the remaining copies. Printing a multiple-print job in Proof and Hold using the printer driver allows only a single copy to be printed while maintaining the document data in the Job Box. To continue to print the remaining copies, use the touch panel. You can change the number of copies to print.

### Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Quick Copy/Proof and Hold] > [Open]
- 3 Select the creator of the document > [Open]

# Print the document.

- 1 Select the document to print > [Print]
- 2 Specify the number of copies to print as desired.
- 3 Select [Start Print].
  Printing starts.

# **Deleting the Documents Stored in the Proof and Hold Box**

# Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Quick Copy/Proof and Hold] > [Open]
- **3** Select the creator of the document > [**Open**]

# 2 Delete the document.

Select the document to delete > [**Delete**] > [**Yes**]

The document is deleted.

# **Monitoring the Printer Status (Status Monitor)**

The Status Monitor monitors the printer status and provides an ongoing reporting function.

NOTE

When you activate Status Monitor, check the status below.

- · KX DRIVER is installed.
- Either [Enhanced WSD] or [Enhanced WSD(SSL)] is enabled.
  - Network (page 8-47)

# **Accessing the Status Monitor**

The Status Monitor also starts up when printing is started.


# **Exiting the Status Monitor**

Use either of the methods listed below to exit the Status Monitor.

- Exit manually:
   Click the settings icon and select Exit in the menu to exit the Status Monitor.
- Exit automatically:
   The Status Monitor automatically shuts down after 7 minutes if it is not being used.

# **Quick View State**

The status of the printer is displayed using icons. Detailed information is displayed when the Expand button is clicked.

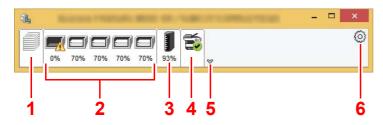


- 1 Printing progress tab
- 2 Paper tray status tab
- 3 Toner status tab
- 4 Alert tab
- 5 Expand button
- 6 Settings icon

Detailed information is displayed by clicking on each icon tab.

# **Printing Progress Tab**


The status of the print jobs is displayed.

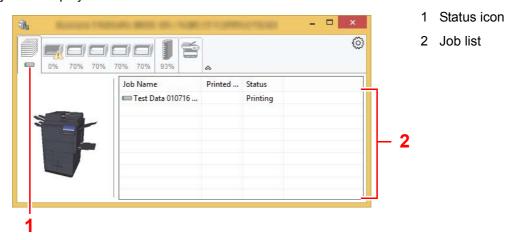

Select a job on the job list and it can be canceled using the menu displayed with a right-click.


# **Paper Tray Status Tab**

Information is displayed about the paper in the printer and about the amount of paper remaining.

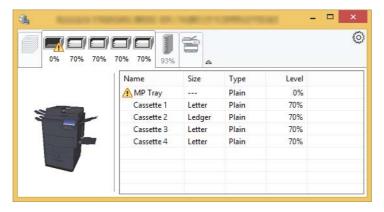


# **Toner Status Tab**

The amount of toner remaining is displayed.

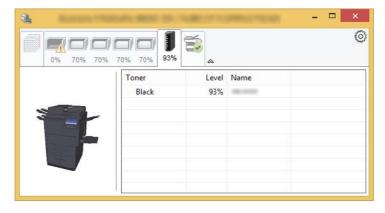


# **Alert Tab**

If an error occurs, a notice is displayed using a 3D image and a message.

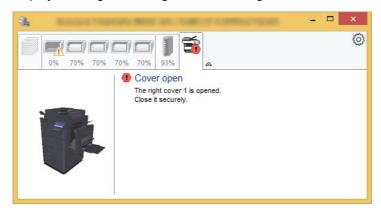

# **Status Monitor Context Menu**

The following menu is displayed when the settings icon is clicked.

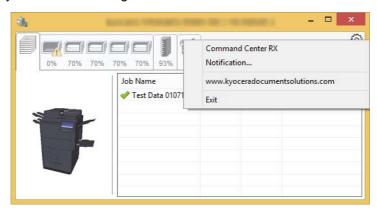

#### Command Center RX

If the printer is connected to a TCP/IP network and has its own IP address, use a web browser to access the Command Center RX to modify or confirm the network settings. This menu is not displayed when using USB connection.

- **→** Command Center RX User Guide
- Notification...


This sets the display of the Status Monitor.

- → <u>Status Monitor Notification Settings (page 4-26)</u>
- www.kyoceradocumentsolutions.com
   Open our website.
- Exit

Exits the Status Monitor.

# **Status Monitor Notification Settings**

The Status Monitor settings and event list details are displayed.

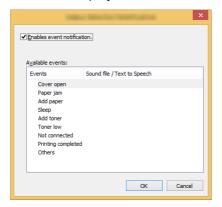


Select whether notification is performed when an error in the event list occurs.

Select Enable event notification.

If this setting is set to Off, then the Status Monitor will not start up even when printing is executed.

- Select an event to use with the text to speech function in Available events.
- Click Sound file / Text to Speech column.

Click the browse (...) button to notify the event by sound file.

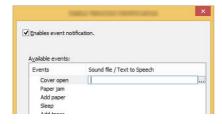



The available file format is WAV.

When customizing the message texts to read on the screen aloud, enter the texts in the text box.

# **5** Operation on the Machine

This chapter explains the following topics:

Loading Originals		Using FMU Connection to Scan an	
Placing Originals on the Platen	. 5-2	Original	5-36
Loading Originals in the Document		Sending to Different Types of Destinations	
Processor		(Multi Sending)	
Loading Paper in the Multipurpose Tray		Send to Me (E-mail)	
Program		Configuring Settings before Sending	5-38
Registering Programs		Sending a Document to the Mail	
Recalling Programs		Address of the Logged In User	
Editing Programs		Canceling Sending Jobs	
Deleting Programs		Handling Destination	
Application	5-12	Specifying Destination	
Installing Applications		Choosing from the Address Book	
Activating Applications		Choosing from the One Touch Key	
Deactivating Applications Uninstalling Applications		Choosing from the Speed Dial Checking and Editing Destinations	
Registering Shortcuts (Copy, Send, and	5-14	Confirmation Screen of Destinations	
Document Box Settings)	5_15	Recall	
Adding Shortcuts	5-15 5-15	How to use the FAX Function	
Editing Shortcuts		Using Document Boxes	
Deleting Shortcuts		What is Custom Box?	
Copying		What is Job Box?	
Basic Operation		What is Removable Memory Box?	
Proof Copy		Fax Box	
Interrupt Copy		Basic Operation for Document Box	
Canceling Jobs		Creating a New Custom Box	
Frequently-Used Sending Method		Editing Custom Box	
Sending Document via E-mail		Deleting Custom Box	
Configuring Settings before Sending		Storing Documents to a Custom Box	
Sending Scanned Document via E-	0 22	Printing Documents in Custom Box	
mail	5-22	Saving Scanned Documents to a	0 00
Sending Document to Desired Shared Folder		Custom Box	5-56
Computer (Scan to PC)		Sending Documents in Custom Box .	
Configuring Settings before Sending		Sending Documents in Custom Box	
Sending Document to Desired Shared		to E-mail Address of Logged In User.	5-58
Folder on a Computer		Moving Documents in Custom Box	
Sending Document to Folder on an FTP		Copying Documents in Custom Box	
Server (Scan to FTP)	5-26	into Other Boxes	5-59
Configuring Settings before Sending		Copying Documents in Custom Box	
Sending Document to Folder on an		to Removable Memory	5-59
FTP Server	5-26	Joining Documents in Custom Box	
Scanning using TWAIN or WIA	5-28	Deleting Documents in Custom Box .	5-61
Configuring Settings before Sending	5-28		5-62
Scanning Document Using		Outputting Repeat Copy Jobs	5-62
Application	5-28	Form for Form Overlay	
Scanning Document stored in a Custom Box	5-29	Operating using Removable USB Memory .	5-64
	5-29	Printing Documents Stored in	
Scanning Document Stored in a Box	5-29	Removable USB Memory	5-64
Useful Sending Method		Saving Documents to USB Memory	
WSD Scan		(Scan to USB)	
Installing the Driver		Check the USB Memory Information	
Executing WSD scan		Removing USB Memory	
DSM Scan		Using the Internet Browser	
Configuring Settings before Sending		Launching and Exiting the Browser	
Executing DSM Scan		Using the Browser Screen	
Scanning with File Management Utility		Manual Staple	5-70
L'Ontiguiring Sottings hotors Sanding	m 716		


# **Loading Originals**

Load the originals on the platen or document processor, depending on the original size, type, volume, and function.

- Platen: Place the sheet, book, postcards, and envelopes.
- Document Processor: Place the multiple originals. You can also place the two sided originals.

# **Placing Originals on the Platen**

You may place books or magazines on the platen in addition to ordinary sheet originals.

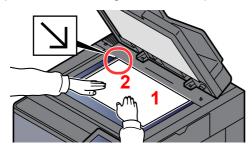


- 1 Put the scanning side facedown.
- 2 Align it flush against the original size indicator plates with the back left corner as the reference point.

# NOTE

- A5 is detected as A4-R. Set the paper size to A5 by using the function key on the touch panel.
  - → Original Size (page 6-18)
- For details on Original Orientation, refer to the following:
  - → Original Orientation (page 6-23)

#### When you place envelopes or cardstock on the platen

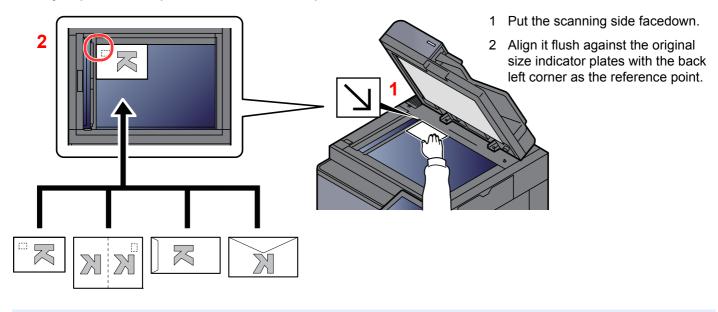



#### NOTE

For the procedure for feeding envelopes or cardstock, refer to the following:

▶ Loading Envelopes or Cardstock in the Multipurpose Tray (page 5-7)



Do not leave the document processor open as there is a danger of personal injury.

#### ( IMPORTANT

- Do not push the document processor forcefully when you close it. Excessive pressure may crack the platen
- When placing books or magazines on the machine, do so with the document processor in the open position.

# **Loading Originals in the Document Processor**

The document processor automatically scans each sheet of multiple originals. Both sides of two-sided originals are scanned.

The document processor supports the following types of originals.

Detail	Document Processor	
Weight	35 to 220 g/m² (duplex: 50 to 220 g/m²) Sizes smaller than B6-R are 50 to 105 g/m² (1-side/duplex)	
Sizes	Maximum A3/Ledger (11.69" × 17"/ 297 × 432 mm) (Long-sized 11.69" × 86.62"/ 297 × 2,200 mm) to Minimum A6-R/Statement-R (4.13" × 5.82"/105 × 148 mm)	
No. of sheets	Plain paper (80 g/m²), Recycled paper, Vellum paper: 270 sheets (Mixed size originals: 30 sheets) Thick paper (120 g/m²): 180 sheets Art paper: 1 sheet	


Do not use the document processor for the following types of originals. Otherwise, the originals may be jammed or the document processor may become dirty.

- Originals bound with clips or staples (Remove the clips or staples and straighten curls, wrinkles or creases before loading. Failure to do so may cause the originals to jam.)
- Originals with adhesive tape or glue
- Originals with cut-out sections
- Curled original
- Originals with folds (Straighten the folds before loading. Failure to do so may cause the originals to jam.)
- Carbon paper
- Crumpled paper

#### **IMPORTANT**


- Before loading originals, be sure that there are no originals left on the original eject table. Originals left on the original eject table may cause the new originals to jam.
- Do not make an impact on the document processor top cover, such as aligning the originals on the top cover. It may cause an error in the document processor.

# Adjust the original width guides.

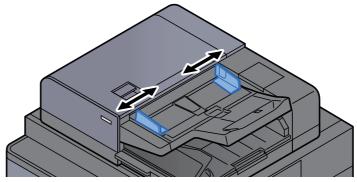

### Place the originals.

1 Put the side to be scanned (or the first side of two-sided originals) face-up. Slide the leading edge into the document processor as far as it will go. The original loaded indicator lights when the original is placed correctly.

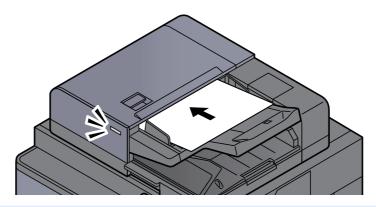


# NOTE

For details on Original Orientation, refer to the following:


→ Original Orientation (page 6-23)

### **⋈** IMPORTANT

• Confirm that the original width guides exactly fit the originals. If there is a gap, readjust the original width guides. The gap may cause the originals to jam.

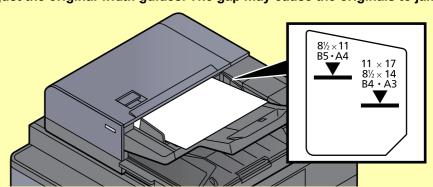

- Ensure that loaded originals do not exceed the level indicator. Exceeding the maximum level may cause the originals to jam.
- Originals with punched holes or perforated lines should be placed in such a way that the holes or perforations will be scanned last (not first).
- 2 Open the original stopper to fit the size of the original set (Original size: B4/Legal or more).

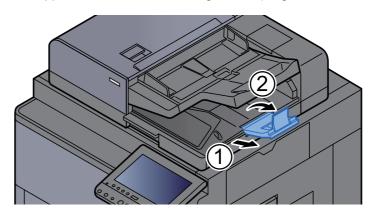

# **Loading Paper in the Multipurpose Tray**

For details of the supported paper sizes, refer to the following:

Choosing the Appropriate Paper (page 11-13)

For the paper type setting, refer to the following:

→ Media Type Setting (page 8-15)

Be sure to use the multipurpose tray when you print on any special paper.

#### (V) IMPORTANT

If you are using a paper weight of 106 g/m<sup>2</sup> or more, set the media type to Thick and set the weight of the paper you are using.


The capacity of the multipurpose tray is as follows.

- A4 or smaller plain paper (80 g/m<sup>2</sup>), recycled paper or color paper: 150 sheets
- B4 or larger plain paper (80 g/m<sup>2</sup>), recycled paper or color paper: 50 sheets
- Thick paper (300 g/m<sup>2</sup>): 10 sheets
- Thick paper (209 g/m<sup>2</sup>): 10 sheets
- Thick paper (200 g/m<sup>2</sup>): 10 sheets
- Thick paper (163 g/m<sup>2</sup>): 50 sheets
- Thick paper (157 g/m<sup>2</sup>): 50 sheets
- Thick paper (104.7 g/m<sup>2</sup>): 50 sheets
- Hagaki (Cardstock): 30 sheets
- Envelope DL, Envelope C5, Envelope #10, Envelope #9, Envelope #6 3/4, Envelope Monarch, Youkei 4, Youkei 2: 10 sheets
- OHP film: 10 sheet
- Coated: 10 sheets
- Banner paper: 470.1 mm (18.51") to a maximum of 1220.0 mm (48"): 1 sheet (manual feed), 10 sheets (when optional banner tray is attached)
- Index tab dividers: 15 sheets

#### **NOTE**

- When you load custom size paper, enter the paper size by referring to the following:
  - → Original/Paper Settings (page 8-11)
- When you use special paper such as transparencies or thick paper, select the media type by referring to the following:
  - → MP Tray Setting (page 8-8)
- Paper size can be automatically detected and selected, refer to the following:
  - → Paper Selection (page 6-19)
  - → MP Tray Setting (page 8-8)


#### Open the multipurpose tray.

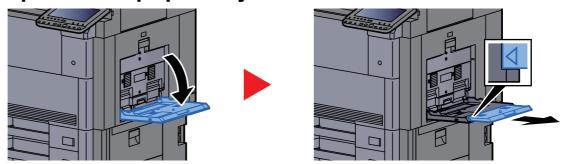


When loading paper sizes 12×18" and from A3 to B4 and Ledger to Legal, extend the support tray section of the multipurpose tray until the "\D" mark is fully appeared.

# 2 Adjust the multipurpose tray size.

Paper sizes are marked on the multipurpose tray.

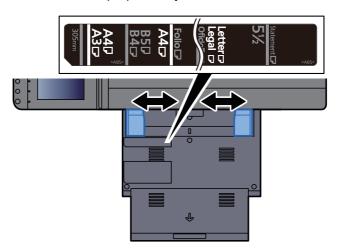

# 3 Load paper.

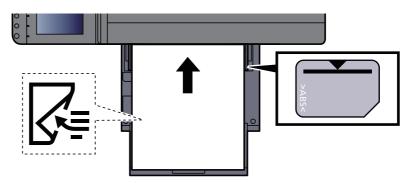

Insert the paper along the paper width guides into the tray until it stops.

After removing new paper from its packaging, fan the paper before loading it in the multipurpose tray.

Precaution for Loading Paper (page 3-2)

# **IMPORTANT**

- When loading the paper, keep the print side facing down.
- · Curled paper must be uncurled before use.
- When loading paper into the multipurpose tray, check that there is no paper left over in the tray from a previous job before loading the paper. If there is just a small amount of paper left over in the multipurpose tray and you want to add more, first remove the left-over paper from the tray and include it with the new paper before loading the paper back into the tray.
- If there is a gap between the paper and the paper width guides, readjust the guides to fit the paper in order to prevent skewed feeding and paper jams.
- Ensure that the loaded paper does not exceed the load limits.

# 4 Specify the type of paper loaded in the multipurpose tray using the operation panel.


→ MP Tray Setting (page 8-8)

#### **Loading Envelopes or Cardstock in the Multipurpose Tray**

Load the paper with the print side facing down. For the procedure for printing, refer to the following:

#### Printer Driver User Guide

Example: When printing the address.

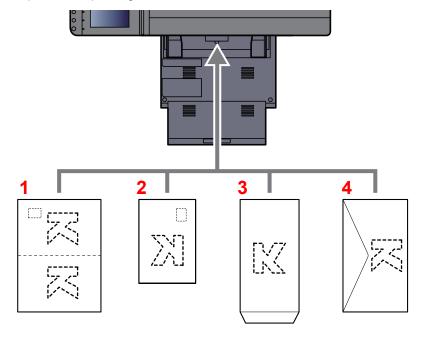

- 1 Oufuku hagaki (Return postcard)
- 2 Hagaki (Cardstocks)
- 3 Portrait form envelopes (Open the flap)
- 4 Landscape form envelopes (Close the flap)

# **⊘** IMPORTANT

- Use unfolded Oufuku hagaki (Return postcard).
- How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it in correctly, otherwise printing may be done in the wrong direction or on the wrong face.

# NOTE

 
When you load envelopes in the multipurpose tray, select the envelope type by referring to the following:

Cassette/MP Tray Settings (page 8-7)

### **Loading Index Paper in the Multipurpose Tray**


### Prepare paper.

Sort the pages so that the 1st page is at the back.




#### Orient the paper in the same orientation.

Place the paper print side down, oriented so that the tabs are on the trailing side of the paper when it feeds in.

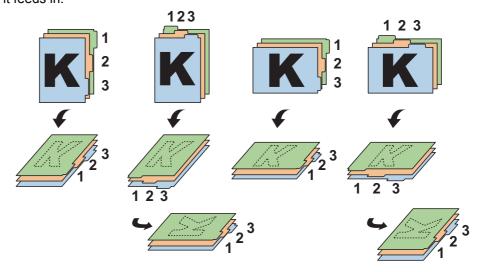

# 3 Load paper.

Load paper in the tray.

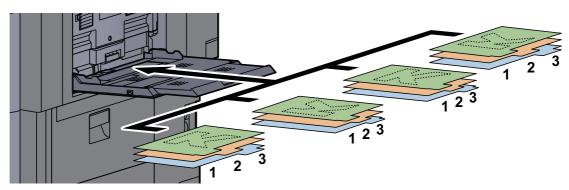

For the procedure for printing, refer to the following:

#### Printer Driver User Guide

Index paper must meet the following conditions.

Item	Description
Paper size	A4/Letter
Paper weight	136 to 256 g/m <sup>2</sup>
Number of tabs	1 to 15
Length of tabs	30 mm or less

# **Program**

By registering sets of frequently used functions as a single program, you can simply press the program number as needed to recall those functions. You can also name the programs for easy identification when recalling.

The programs below have been preregistered. The registered contents can be re-registered for easier use in your environment.

Program name	Description	Default Registration
ID Card Copy	Use this when you want to copy a driver's license or an insurance card. When you scan the front and back of the card, both sides will be combined and copied onto a single sheet.	Copying Functions Combine: [2 in 1] Continuous Scan: [On] Original Size: A5/Statement Paper Selection: Cassette 1 Zoom: Auto Zoom
Eco Copy	Use this to save toner consumption when printing. This changes color printing to black & white with lighter density, so that the toner consumption can be reduced.	Copying Functions EcoPrint: [On] (Level [5])
Newspaper Copy	Use this when you want to copy a newspaper article, or other originals printed on a colored substrate.  This adjusts the image quality so that the color of the substrate or the text on the reverse side will not show on the copy.	Copying Functions Prevent Bleed-thru: [On] Background Density Adj.: [Auto]
Technical Drawing Copy	Use this when you want to copy a drawing that contains shapes drawn with lines, and graphics. Use this also when you want to copy colored lines in black & white.	Copying Functions Original Image: [Text] Sharpness (All): [+3] Background Density Adj.: [Auto]
Confidential Stamp	Use this to show a translucent text "Confidential" on the center of the document.	Copying Functions Prevent Bleed-thru: [On] Stamp: Confidential Font Size: middle Font Color: [Black] Stamp Position: [Center] Display Pattern: [Transparent]



Up to 50 functions combining copying and sending can be registered in the program.

If user login administration is enabled, you can only register functions by logging in with administrator privileges.

# **Registering Programs**

The following procedure is an example of registering the copying function.

#### Display the screen.

- **1** [Home] key > [Copy]
- 2 Select the [Program] tab while the copy mode is accessed.

#### Register the program.

1 [Add] > Select a number (01 to 50) for the program number > [Next]



If you select a program number already registered, the currently registered functions can be replaced with a new set of functions.

2 Enter the new program name > [Save]

The program is registered.

To display a registered program on the Home screen, select **[Yes]** on the confirmation screen that appears, proceed to step 2-3.

- 3 Specify the position in which you want to display the icon of registered program.
- 4 Select [Save].

# **Recalling Programs**

#### Recall the program.

- 1 Select [**Program**] in the Home screen, or the key of the registered program. Selecting the key of the registered program will recall the program. If you selected [**Program**], proceed to step 1-2.
- 2 Select the key for the program number you want to recall.

Select [No.] or the Quick No. Search key on the numeric keypad to enter the program number (01 to 50) directly for recalling.

NOTE

If the program cannot be recalled, the Document Box or the form overlay specified in the program might have been deleted. Check the Document Box.

# Execute the program.

Place the originals > [Start] key

NOTE

[Program] can be pressed in each function to call up the program registered for the function.

# **Editing Programs**

You can change program number and program name.

### Display the screen.

- 1 [Home] key > [Program]
- 2 Select [Edit].

# Edit the program.

- 1 Select the key(s) corresponding to the program number (01 to 50) to change.
- 2 Select [Edit] to change the program number and program name.
  - → Registering Programs (page 5-10)
- 3 [Save] > [Yes]

# **Deleting Programs**

## Display the screen.

- 1 [Home] key > [Program]
- 2 Select [Edit].

# Delete the program.

- 1 Select the key(s) corresponding to the program number (01 to 50) to delete.
- 2 [Delete] > [Yes]

# **Application**

The functionality of the machine can be expanded by installing applications.

Applications that help you perform your daily more efficiently such as a scan feature and an authentication feature are available.

For details, consult your sales representative or dealer.

# **Installing Applications**

To use applications, first install the application in the machine and then activate the application.



#### NOTE

You can install applications and certificates on the machine. The number of applications you can run may vary according to the type of application.

#### Display the screen.

[System Menu/Counter] key > [Application]



#### NOTE

 If the user authentication screen appears, enter your login user name and login password and select [Login]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

· Select [Print Report] to print an application report.

# Install the application.

- 1 [Add] > [OK]
- Insert the removable memory containing the application to be installed into the USB Memory Slot.



#### NOTE

When the message "Removable Memory was recognized. Displaying files. Are you sure?" is displayed, select [No].

3 Select the application to be installed > [Install]

You can view detailed information on the selected application by selecting [Detail].

#### 4 Select [Yes].

Installation of the application begins. Depending on the application being installed, the installation may take some time.

Once the installation ends, the original screen reappears.

#### NOTE

- To install another application, repeat steps 2-3 and 2-4.
- To remove the removable memory, select [Remove Memory] and wait until the message "Removable Memory can be safely removed." appears. Then remove the removable memory.

### **Activating Applications**

#### Display the screen.

[System Menu/Counter] key > [Application]



If the user authentication screen appears, enter your login user name and login password and select [Login]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

### Activate the application.

1 Select the desired application > [Activate]

You can view detailed information on the selected application by selecting [Detail].

2 Enter the license key > [Official]

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to step 3-3. To use the application as a trial, select [Trial] without entering the license key.

3 Select [Yes].



#### **IMPORTANT**

- · If you change the date/time while using the trial version of an application, you will no longer be able to use the application.
- Icons of activated application are displayed in the Home screen.

### Select the application icon in the Home screen.

Select the application icon.

The application will start up.

### **Deactivating Applications**

#### Display the screen.

[System Menu/Counter] key > [Application]

#### NOTE

If the user authentication screen appears, enter your login user name and login password and select [Login]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

#### Deactivate the application.

Select the desired application to exit > [Deactivate]



#### NOTE

Select [x] on the screen if you want to exit the already activated application.

The procedure for exiting some applications may differ.

### **Uninstalling Applications**

#### Display the screen.

[System Menu/Counter] key > [Application]



If the user authentication screen appears, enter your login user name and login password and select [Login]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

### Deactivate the application.

- 1 Select the application you want to delete > [Delete] You can view detailed information on the selected application by selecting [Detail].
- 2 Select [Yes].

# Registering Shortcuts (Copy, Send, and Document Box Settings)

You can register shortcuts in the Quick Setup screen for easy access to the frequently used functions. The settings for the selected function can also be registered. A function name linked to a registered shortcut can be changed as necessary.


### **Adding Shortcuts**

Shortcut registration is performed in the setup screen of each function. Shortcuts can be registered for all functions in which [Add Shortcut] appears on the screen.

In each function, display the configuration screen you want to register.

#### Register the shortcuts.

- 1 Select the setting you want to add.
- 2 Select [Add Shortcut].

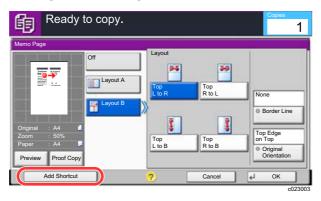


3 Select the keys corresponding to the shortcut number (01 to 06) to register.

### NOTE

If you select a shortcut number already registered, the currently registered shortcut can be replaced with a new one.

4 Enter the shortcut name > [Save].

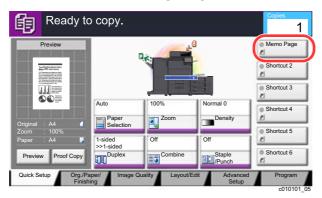

The shortcut is registered.

### **Editing Shortcuts**

In the setup screen of each function, select [Add Shortcut] in the bottom of the screen.

#### Edit the shortcut

- 1 Select [Edit].
- Select the shortcut key you want to edit.
- 3 Select "Shortcut No" [Change] or "Shortcut Name" [Change] > Change the settings > [OK].
- 4 [Save] > [Yes]

### **Deleting Shortcuts**

In the setup screen of each function, select [Add Shortcut] in the bottom of the screen.

#### Delete the shortcut


- 1 Select [Edit].
- 2 Select the shortcut key you want to delete > [Delete this Shortcut] > [Yes]


# **Copying**

The procedures here represent the basic copy operation and how to cancel the copy.

### **Basic Operation**


- **1** [Home] key > [Copy]
- Place the originals.
  - 1 Place the originals.

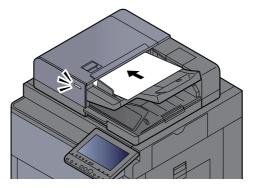

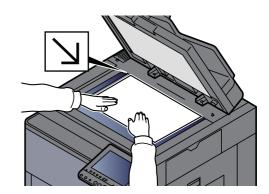

- → Loading Originals (page 5-2)
- 2 Check the preview image.

Check the Original, Zoom, and Paper settings.

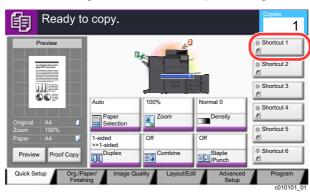



Select [Preview] to show a preview image.

→ Original Preview (page 2-22)


### 3 Select the functions.

To configure the settings for functions, select the function key.

→ How to Select Functions (page 6-2)

#### Use the numeric keys to enter the copy quantity.

Select the [Numeric Keypad] key or the area for inputting the number of sheets to display the numeric keypad. Specify the desired number up to 9,999.

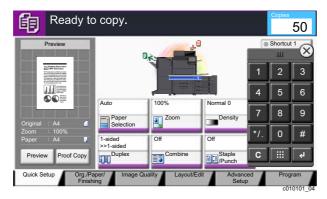


#### Press the [Start] key. 5

Copying begins.

#### NOTE

This function allows you to reserve the next job during printing. Using this function, the original will be scanned while the machine is printing. When the current print job ends, the reserved copy job is printed. If "Reserve Next Priority" is set to [Off], [Reserve Next] will appear. Select [Reserve Next] and configure the necessary settings for the copy job.

▶ Reserve Next Priority (page 8-32)

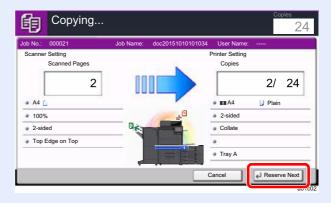


### **Proof Copy**

It is possible to copy one sheet before copying a large number of sheets. This enables you to check the contents and finishing and copy the desired number of sheets without scanning the original if you are satisfied with the result. If you want to make changes, you can change the settings and copy only one sheet again.

#### Configure the settings.

Place the originals onto the machine, and configure the copy settings.

#### Select [Proof Copy].

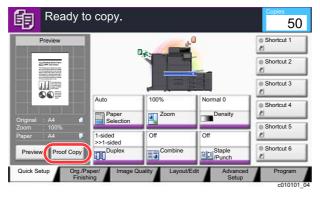

#### Check.

Check contents and finishing.

Modify copy settings according to results. All functions except for functions whose keys are grayed out on the touch panel can be corrected.

To perform a proof copy again, select [Proof Copy].

### 4 Press the [Start] key.

Remaining sheets are copied.

### **Interrupt Copy**

This function allows you to pause the current jobs in progress when you need to make copies immediately.

When the interruption copy ends, the machine resumes the paused print jobs.

#### NOTE

 If the machine is left unused for 60 seconds in interrupt copy mode, interrupt copying is automatically cancelled and printing resumes.

You can change the delay until interrupt copying is canceled. Change the delay as required.

- ◆ Interrupt Clear Timer (page 8-69)
- The interrupt copy function may be unavailable depending on the status of document finisher usage. In this case, try
  the priority override.
  - Priority Override (page 6-65)

#### Configure the settings.

- Select the [Interrupt] key.
   The current print job is temporarily interrupted.
- 2 Place the originals onto the machine for interrupt copy, and configure the copy settings.

#### Press the [Start] key.

Interrupt copying begins.

3 When interrupt copying ends, select the [Interrupt] key.

The machine resumes the paused print jobs.

### **Canceling Jobs**

- Select the [Stop] key with the copy screen displayed.
- Cancel a job.

When there is a job is being scanned

The copy job is canceled.

#### When there is a job printing or on standby

Canceling job screen appears. The current print job is temporarily interrupted.

Select the job you wish to cancel > [Cancel] > [Yes]

### NOTE

If "Reserve Next Priority" is set to [Off], the Copying screen appears in the touch panel. In such case, selecting the [Stop] key or [Cancel] will cancel the printing job in progress.

Reserve Next Priority (page 8-32)


## **Frequently-Used Sending Method**

This machine can send a scanned image as an attachment of an E-mail message or to a PC linked to the network. In order to do this, it is necessary to register the sender and destination (recipient) address on the network.


A network environment which enables the machine to connect to a mail server is required in order to send E-mail. It is recommended that a Local Area Network (LAN) be used to assist with transmission speed and security issues.

Follow the steps below for basic sending. The following four options are available.

- Send as E-mail (E-mail Addr Entry): Sends a scanned original image as an E-mail attachment.
- Sending Document via E-mail (page 5-22)

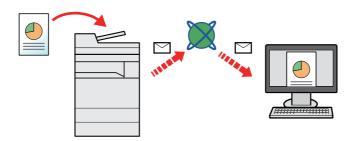

- Send to Folder (SMB): Stores a scanned original image in a shared folder of any PC.
- → Sending Document to Desired Shared Folder on a Computer (Scan to PC) (page 5-23)
- · Send to Folder (FTP): Stores a scanned original image in a folder of an FTP server.
- → Sending Document to Folder on an FTP Server (Scan to FTP) (page 5-26)

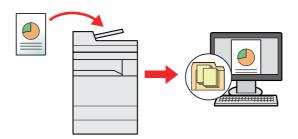

- Image Data Scanning with TWAIN / WIA: Scan the document using a TWAIN or WIA compatible application program.
- → Scanning using TWAIN or WIA (page 5-28)

### NOTE

- · Different sending options can be specified in combination.
  - Sending to Different Types of Destinations (Multi Sending) (page 5-37)
- The fax function can be used on products equipped with fax capability.
  - FAX Operation Guide

## **Sending Document via E-mail**

When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

▶ Primary Network (Client) (page 8-62)


### Configuring Settings before Sending


Before sending an E-mail, configure the SMTP and E-mail settings using the Command Center RX.

<u>► E-mail Settings (page 2-67)</u>

### **Sending Scanned Document via E-mail**

- [Home] key > [Send]
- Place the originals.

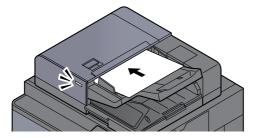

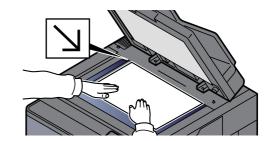

- Loading Originals (page 5-2)
- 3 In the basic screen for sending, select [E-mail Addr Entry].
- Enter destination E-mail address > [OK]

Up to 128 characters can be entered.

◆ Character Entry Method (page 11-9)

To enter multiple destinations, select [**Next Destination**] and enter the next destination. Up to 100 E-mail addresses can be specified.

You can register the entered E-mail address in the Address Book by selecting [**Add Address Book**]. You can also replace the information for a previously registered destination.

Destinations can be changed later.

Confirmation Screen of Destinations (page 5-44)



If [Prohibit] is set to "Broadcast", multiple destinations cannot be entered.

- Broadcast (page 8-34)
- 5 Select the functions.

Press tabs to display other functions.

- **▶** Send (page 6-5)
- 6 Press the [Start] key.

Sending starts.

# Sending Document to Desired Shared Folder on a Computer (Scan to PC)

You can store the scanned document into the desired shared folder on a computer.

### **Configuring Settings before Sending**


Before sending a document, configure the following settings.


- · Make a note of the computer name and full computer name
  - → Making a Note of the Computer Name and Full Computer Name (page 3-15)
- · Make a note of the user name and domain name
  - → Making a Note of the User Name and Domain Name (page 3-16)
- Create a shared folder and make a note of a shared folder
  - Creating a Shared Folder, Making a Note of a Shared Folder (page 3-17)
- · Configure the Windows firewall
  - → Configuring Windows Firewall (page 3-20)

# Sending Document to Desired Shared Folder on a Computer

When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

- ▶ Primary Network (Client) (page 8-62)
  - [Home] key > [Send]
  - Place the originals.

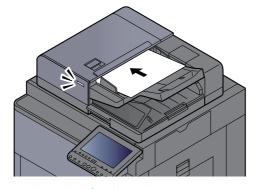

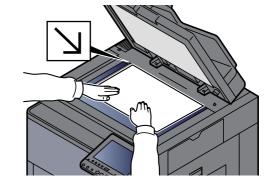

- Loading Originals (page 5-2)
- 3 In the basic screen for sending, select [Folder Path Entry].
- 4 Enter the destination information.
  - 1 Select [SMB].

- 2 Select the key of each item > enter the destination data > [OK].
  - → Character Entry Method (page 11-9)

The table below lists the items to be set.

Item	Detail	Max. characters
Host Name *1	Computer name	Up to 70 characters
Path	Share name For example: scannerdata If saving in a folder in the shared folder: share name\folder name in shared folder	Up to 128 characters
Login User Name*2	If the computer name and domain name are the same: User Name For example: james.smith	Up to 64 characters
	If the computer name and domain name are different: Domain name\User name For example: abcdnet\james.smith	
Login Password	Windows logon password (Case sensitive.)	Up to 64 characters

<sup>\*1</sup> You can also specify the port number. Enter the following format separated by a colon. "Host name: port number" or "IP address: port number"

To enter the IPv6 address, enclose the address in brackets [].

(Example: [2001:db8:a0b:12f0::10]:445)

If the port number is not specified in [Host Name], the default port number is 445.

\*2 When sending a document through an optional network interface (IB-50 or IB-51), "\" cannot be used. If the computer name is different from the domain name, login user name needs to be input by using "@." (Example: james.smith@abcdnet)

To search for a folder on a PC on the network, select "Search Folder from Network" or "Search Folder by Host Name" [Next].

If you selected "Search Folder from Network" [**Next**], you can search all PCs on the network for a destination.

If you pressed "Search Folder by Host Name" [Next], you can enter the "Domain/Workgroup", and "Host Name" to search PCs on the network for the destination.

Up to 500 addresses can be displayed. Select the host name (PC name) that you want to specify in the screen that appears, and select [**Next**]. The login user name and login password entry screen appears.

After you enter the login user name and login password name of the destination PC, the shared folders appear. Select the folder that you want to specify and select [Next]. The address of the selected shared folder is set.

Select the folder from the Search Results list.

#### Check the status.

1 Check the information.

Change the delay as required.

2 Select [Connection Test] to check the connection.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

To enter multiple destinations, select [**Next Destination**] and enter the next destination. You can specify a combine total of up to 10 SMB and FTP destination folders.

You can register the entered information in the Address Book by selecting [Add to Address Book].

NOTE

If [Prohibit] is set to "Broadcast", multiple destinations cannot be entered.

→ Broadcast (page 8-34)

#### 6 Select [OK].

Destinations can be changed later.

Confirmation Screen of Destinations (page 5-44)

#### Select the functions.

Select tabs to display other functions.

→ Send (page 6-5)

### **Press the [Start] key.**

Sending starts.

# Sending Document to Folder on an FTP Server (Scan to FTP)

### **Configuring Settings before Sending**


Before sending a document, configure the FTP Client (Transmission).


▶ Protocol Settings (page 8-54)

### Sending Document to Folder on an FTP Server

When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

- → Primary Network (Client) (page 8-62)
  - [Home] key > [Send]
  - Place the originals.

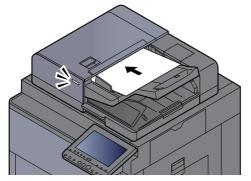

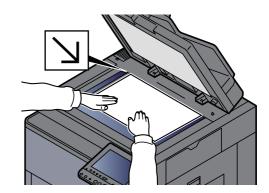

- Loading Originals (page 5-2)
- 3 In the basic screen for sending, select [Folder Path Entry].
- Enter the destination information.
  - 1 Select [FTP].
  - 2 Select the key of each item > enter the destination data > [OK].
    - → Character Entry Method (page 11-9)

The table below lists the items to be set.

Item	Data to be entered	Max. characters
Host Name *1	Host name or IP address of FTP server	Up to 70 characters
Path*2	Path to the receiving folder For example: User\ScanData Otherwise the data will be saved in the home directory.	Up to 128 characters
Login User Name	FTP server login user name	Up to 64 characters
Login Password	FTP server login password (Case sensitive.)	Up to 64 characters

<sup>\*1</sup> You can also specify the port number. Enter the following format separated by a colon.

To enter the IPv6 address, enclose the address in brackets [].

(Example: [2001:db8:a0b:12f0::10]:21)

If the port number is not specified in [Host Name], the default port number is 21.

\*2 When the FTP server is based on Linux/UNIX, the path including the sub-folder is combined by the slash "/" not using the back-slash.

#### Check the status.

1 Check the information.

Change the delay as required.

**2** Select [Connection Test] to check the connection.

"Connected." appears when connection to the destination is correctly established. If "Cannot connect." appears, review the entry.

To enter multiple destinations, select [Next Destination] and enter the next destination.

You can register the entered information in the Address Book by selecting [**Add Address Book**].



If [Prohibit] is set to "Broadcast", multiple destinations cannot be entered.

→ Broadcast (page 8-34)

### 6 Select [OK].

Destinations can be changed later.

Confirmation Screen of Destinations (page 5-44)

#### Select the functions.

Select tabs to display other functions.

→ Send (page 6-5)

### Press the [Start] key.

Sending starts.

<sup>&</sup>quot;Host name: port number" or "IP address: port number"

## **Scanning using TWAIN or WIA**

When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

Primary Network (Client) (page 8-62)

### **Configuring Settings before Sending**

Before sending a document, confirm that TWAIN/WIA driver is installed on a computer and the settings are configured.

- Setting TWAIN Driver (page 2-57)
- Setting WIA Driver (page 2-59)

### **Scanning Document Using Application**

This subsection explains how to scan an original using TWAIN. The WIA driver is used in the same way.

#### Display the screen.

- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the dialog box.



For selecting the machine, see the Operation Guide or Help for each application


#### Configure the scan settings.

Select scanning settings in the dialog box that opens.




For the settings, refer to Help in the dialog box.

### Place the originals.

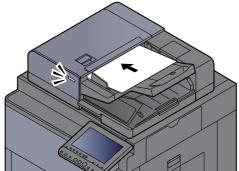



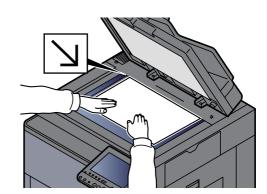

### Scan the originals.

Click the [Scan] button. The document data is scanned.

### **Scanning Document stored in a Custom Box**

Follow the steps as below for scanning a document stored in a custom box using the TWAIN driver. When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

Primary Network (Client) (page 8-62)

### **Configuring Settings before Sending**

Before sending a document, confirm that TWAIN driver is installed on a computer and the settings are configured.

→ Setting TWAIN Driver (page 2-57)

### **Scanning Document Stored in a Box**

This subsection explains how to scan an original using an application supporting TWAIN.

#### Display the screen.

- 1 Activate the TWAIN compatible application software.
- 2 Select the machine using the application and display the dialog box.



For selecting the machine, see the Operation Guide or Help for each application software.

#### Display lists of documents.

Select a custom box stored a document.

If a password has been set for the box, the password entry screen appears. Enter the password and click the **[OK]** button. When you select a box, the document files in the Custom Box appear in "Document List".

2 Set how to display the document data. Click the [Setting] button to select each item.



For the settings, refer to Help in the dialog box.

3 Click [OK] button.

### Scan the originals.

Select the document data to be scanned from "Document List".

Enter the document data name in the Search (Name) to find the data having the same document data name or the document data name with the same beginning.

Click the [**Detail**] button to display the selected document data. When the document data includes multiple pages, select the checkbox beside the pages you want to scan. The selected pages will be scanned.



In this case, the scanned page or the selected document data will not be deleted from the Custom Box.

2 Click the [Acquire] button.

The document data is scanned.

## **Useful Sending Method**

You can specify the following useful scanning (sending) methods.

WSD Scan: Saves images of originals scanned on this machine as files on a WSD-compatible computer.

→ WSD Scan (page 5-31)

DSM Scan: A scanned document can be automatically saved in any format or sent to any destination by reading a scan process from Active Directory.

→ DSM Scan (page 5-34)

Scanning with File Management Utility: Scans a document using the settings of File Management Utility and saves it to a specified network folder or PC.

Scanning with File Management Utility (page 5-36)

Sending to different types of destinations (Multi sending): Sends to different types of destination (E-mail addresses, folders, etc.) in a single operation.

▶ Sending to Different Types of Destinations (Multi Sending) (page 5-37)

Send to Me (E-mail): Sends to the E-mail address of the logged in user when user login is enabled.

→ Send to Me (E-mail) (page 5-38)

### **WSD Scan**

WSD Scan saves images of originals scanned on this machine as files on a WSD-compatible computer.

### NOTE

- To use WSD Scan, confirm that the computer used for WSD scanning and the machine is network-connected, and "WSD Scan" is set to [On] in the network settings.
  - → WSD Scan (page 8-55)
- For information on operating the computer, refer to the computer's help or the operation guide of your software.

When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

Primary Network (Client) (page 8-62)

### **Installing the Driver**

For Windows 8, Windows 8.1 and Microsoft Windows Server 2012

1 Click [Search] in charms, [Control Panel], and then [View devices and printers].

#### 2 Install the driver.

Click [Add a device]. Select the machine's icon and then click [Next].

When the machine's icon is displayed in "**Printers**" on the [**Devices and Printers**] screen, the installation is completed.

#### For Windows 7

### 1 Display [Network] in the Start menu.

Click [Start] button on the Windows and then select [Network].



When [Network] does not appear in the Start menu, perform the following procedure.

- 1 Right-click [Start] and click [Property] in the menu that appears.
- 2 Select the [[Start] menu] tab in the "Task bar and [Start] menu properties" screen, and click [Customize].
- 3 When the "Customize [Start] menu" screen appears, select the "Network" check box and click [OK].

#### Install the driver.

Right-click the machine's icon and then click [Install].

NOTE

If the "User Account Control" window appears, click [Continue]. If the "Found New Hardware" window appears, click [Cancel].

During the installation, double-click the icon shown on the task bar to display the "Driver Software Installation" screen. When "Your devices are ready to use" is displayed on the [Driver Software Installation] screen, the installation is completed.

#### For Windows 10

# 1 Right-click [Start] button on the Windows and select [Control Panel] and then [View devices and printer].

#### Install the driver.


Click [Add a device]. Select the machine's icon and then click [Next].


When the machine's icon is displayed in "Printers" on the [Devices and Printers] screen, the installation is completed.

### **Executing WSD scan**

#### [Home] key > [Send]

#### Place the originals.

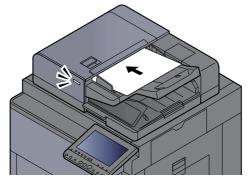

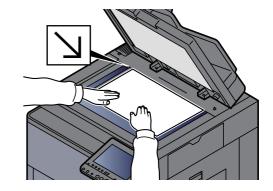

→ Loading Originals (page 5-2)

### 3 Display the screen.

Select [WSD Scan/DSM Scan].

If DSM Scan is set to [Off] in the network settings, select [WSD Scan] and go to step 4.

→ DSM Scan (page 8-55)

### 4 Scan the originals.

Procedure using this machine

1 [From Operation Panel] > [Next]

2 Select the destination computer > [OK]
Select [Reload] to reload the computer list.
You can view information on the selected computer by selecting [Detail].

- 3 Set the type of original, file format, etc., as desired.
- 4 Press the [Start] key.
  Sending begins and the software installed on the computer is activated.

#### **Procedure from Your Computer**

- 1 [From Computer] > [Start]
- **2** Use the software installed on the computer to send the images.

### **DSM Scan**

A scanned document can be automatically saved in any format or sent to any destination by reading a scan process from Active Directory. This function only supports the computers installed Windows Server 2008 R2 or Windows Server 2012.

When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

▶ Primary Network (Client) (page 8-62)

### **Configuring Settings before Sending**

If you are performing DSM scan, check the items below.

- The machine is connected to an Active Directory on the network that the scan process can reference.
- "DSM Scan", "LDAP" and "HTTP" are set to [On] in Network.
  - ▶ Protocol Settings (page 8-54)
- "SSL" is set to [On] in Network.
  - → Security Settings (page 8-58)
- [Network Authentication] is set in.
  - **▶** Enabling User Login Administration (page 9-3)



If the Active Directory that the scan process can reference is not on the network authentication server, DSM must be set in Command Center RX.

**Command Center RX User Guide** 


### **Executing DSM Scan**

#### [Home] key > [Send]




Depending on the settings, the address book screen may appear. In this event, select [Cancel] to display the screen for sending.

### Place the originals.

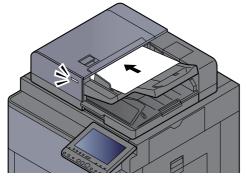

Loading Originals (page 5-2)

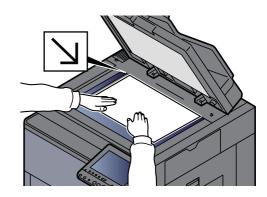

#### Display the screen.

Select [WSD Scan/DSM Scan].

If WSD Scan is set to [Off] in the network settings, select [DSM Scan] and go to step 5.

→ WSD Scan (page 8-55)

#### [DSM Scan] > [Next]

#### 5 Select the scan process to be used > [OK].

Select [Reload] to reload the computer list.

To check the settings, select [Detail].

### **6** Change the settings and add destinations as needed.

Only E-mail addresses can be added as destinations.

In the send base screen, select [**Detail/Edit**], [**Destination**], and then [**Address Book**] or [**E-mail Addr Entry**], and add a destination.

In some scan processes, it may not be possible to change settings or add destinations.

#### Press the [Start] key.

Sending starts.

## **Scanning with File Management Utility**

"FMU Connection" is installed on the machine as a standard application.

FMU Connection can be used to scan an original according to the settings configured with "File Management Utility" on the provided DVD, and save the image data and scanning information on a specified server or in a specified folder. Unlike regular transmission functions, this application lets you use metadata such as the scan date and time and the data format.

### **Configuring Settings before Sending**

The first time you use FMU Connection, you must activate it in System Menu.

→ Application (page 8-75)

To use this function, you must install File Management Utility on your computer and configure settings for the multifunction machine to be used, scanning conditions, and the file save location. To install File Management Utility, refer to the following.

► Installing Software (page 2-47)



#### NOTE

For information on using File Management Utility, refer to the following:

File Management Utility User Guide

### **Using FMU Connection to Scan an Original**

- 1 Make sure that File Management Utility is running on the computer (or server) on which File Management Utility is installed.
- Place the original.
- 3 Select [FMU Connection].

FMU Connection starts.

- 4 Follow the on-screen instructions to enter the necessary information and select [Next].
- When the scan settings screen appears, press each item and configure the necessary settings.


The features that can be set depend on File Management Utility.

6 Press the [Start] key.

Sending starts.

# **Sending to Different Types of Destinations** (Multi Sending)

You can specify destinations that combine E-mail addresses, folders (SMB or FTP), fax numbers and i-FAX. This is referred to as Multi Sending. This is useful for sending to different types of destination (E-mail addresses, folders, etc.) in a single operation.

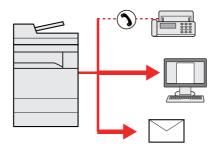

No. of broadcast items: Up to 500

However, number of items are restricted for the following sending options.

E-mail: Up to 100

Folders (SMP, FTP): Total of 10 SMB and FTP

i-FAX: Up to 100

Also, depending on the settings, you can send and print at the same time.

Procedures are the same as used in specifying the destinations of respective types. Continue to enter E-mail address or folder path so that they appear in the destination list. Press the [Start] key to start transmission to all destinations at one time.

#### **NOTE**

- If the destinations include a fax, the images sent to all destinations will be black and white.
- If [Prohibit] is set to "Broadcast", multiple destinations cannot be specified.
  - → Broadcast (page 8-34)

# **Send to Me (E-mail)**

When user login is enabled, the document is sent to the E-mail address of the logged in user.

### **Configuring Settings before Sending**

To use this function, configure the followings.

To use this function, the function icon must be displayed in the home screen.

→ Editing the Home Screen (page 2-17)

An E-mail address must be set in user login for the user who logs in.

→ Adding a User (Local User List) (page 9-8)

# Sending a Document to the Mail Address of the Logged In User

- Select [Home] key.
- 2 Select [Send to Me (E-mail)].

# **Canceling Sending Jobs**

- Select the [Stop] key with the send screen displayed.
- Cancel a job.

When there is a job is being scanned

Job Cancel appears.

When there is a job sending or on standby

Canceling job screen appears. Select the job you wish to cancel > [Cancel] > [Yes]



Selecting the [Stop] key will not temporarily stop a job that you have already started sending.

### **Handling Destination**

This section explains how to select and confirm the destination.

### **Specifying Destination**

Select the destination using either of the following methods except entering address directly:

- Choosing from the Address Book
  - → Choosing from the Address Book (page 5-40)
- Choosing from the External Address Book

For details on the External Address Book, refer to the following:

- Command Center RX User Guide
- Choosing from One Touch key
- · Choosing from the Speed Dial
  - → Choosing from the Speed Dial (page 5-42)
- Choosing from the FAX
  - FAX Operation Guide



- You can set the machine up so that the address book screen appears when you select the [Send] key.
  - → Default Screen (page 8-33)
- · If you are using the products equipped with the fax function, you can specify the fax destination. Enter the other party number using the numeric keypad.

### **Choosing from the Address Book**

For more information about how to register destinations in the Address Book, refer to the following:

▶ Registering Destinations in the Address Book (page 3-25)

### In the basic screen for sending, select [Address Book].



NOTE

For details on the External Address Book, refer to the following:

Command Center RX User Guide

### Select the destinations.

Select the checkbox to select the desired destination from the list. The selected destinations are indicated by a checkmark in the check box. To use an address book on the LDAP server, select "Addr Book" [Ext Address Book].

You can change the order in which the destinations are listed by selecting [Name] or [No.] from the "Sort".



#### NOTE

- To deselect, select the checkbox again and remove the checkmark.
- If [Prohibit] is set to "Broadcast", multiple destinations cannot be selected. This also applies to a group in which multiple destinations are registered.
  - → Broadcast (page 8-34)

#### **Destination Search**

Destinations registered in the Address Book can be searched. Advanced search by type or by initial letter is also available.



Keys used	Search type	Subjects searched
1	Search by name	Search by registered name.
2	Search by number	Search by registered address number.
3	Advanced search by initial letter	Advanced search by initial letter of registered name.
4	Advanced search by destination	Advanced search by type of registered destination (E-mail, Folder (SMB/FTP), FAX, i-FAX or Group). (FAX: Only when the optional FAX Kit is installed. i-FAX: Only when the optional Internet FAX Kit is activated.)
		You can set this function up so that destination types are selected when the address book is displayed. For details, refer to the following:
		→ Narrow Down (page 8-67)

### Accept the destination > [OK]

Destinations can be changed later.

Confirmation Screen of Destinations (page 5-44)



- To delete the destination, select the destination you want to delete and select [Delete].
- You can set the default "Sort" settings.
  - → Sort (page 8-67)


### **Choosing from the One Touch Key**

In the basic screen for sending, select the One Touch Keys where the destination is registered.



If the One Touch Keys for the desired destination is hidden on the touch panel, select  $[\land]$  or  $[\lor]$  to scroll and view next or previous One Touch Keys. This procedure assumes that One Touch Keys have already been registered. For more information on adding One Touch keys, refer to the following:

Adding a Destination on One Touch Key (One Touch Key) (page 3-32)

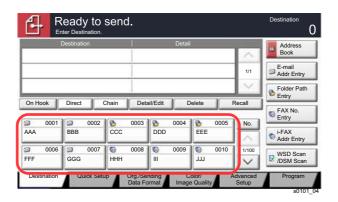


### **Choosing from the Speed Dial**

Access the destination by specifying the 4-digit (0001 to 1000) One Touch Key number (speed dial).

In the basic screen for sending, select [No.] or the Quick No. Search key on the numeric keypad and use the numeric keys to enter the speed dial number in the numeric entry screen.



If you entered the speed dial in 1 to 3-digit, select [OK].

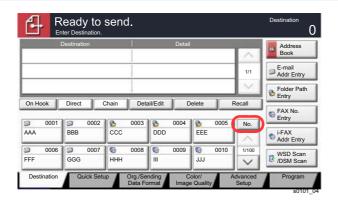

### **Checking and Editing Destinations**

#### Display the screen.

Specify the destination.

→ Specifying Destination (page 5-40)

#### Check and edit the destination.

Select a destination and select [**Detail/Edit**] to check it. The entered addresses can be edited if they have been specified.

Select a destination and select [Delete] to remove the destination from the list.


#### NOTE

- When selecting [**On**] for Entry Check for New Destination, the confirmation screen appears. Enter the same destination again, and select [**OK**].
  - → Entry Check for New Dest. (page 8-33)
- When selecting [On] for Destination Check before Send, the confirmation screen appears after pressing the [Start] key.
  - → Dest. Check before Send (page 8-33)
  - → Confirmation Screen of Destinations (page 5-44)

### **Confirmation Screen of Destinations**

When selecting [On] for Destination Check before Send, the confirmation screen of destinations appears after pressing the [Start] key.

Dest. Check before Send (page 8-33)

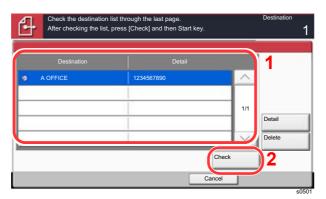

- Select [ ∨ ] or [ ∧ ] to confirm all destination.
  Selecting [Detail] shows the detailed information of the selected destination.
  To delete the destination, select the destination you want to delete > [Delete] > [Yes]
  To add the destination, select [Cancel] and then return to the destination screen.
- 2 Select [Check].



Be sure to confirm all destination by displaying them on the touch panel. You cannot select [Check] unless you have confirmed all destination.

#### Recall

Recall is a function allowing you to send the last entered destination once again. When you want to send the image to the same destination, select [Recall], and you can call the destination you sent on the destination list.

#### Select [Recall].

The destination you sent is displayed on the destination list.



When the last sending included FAX, folders and E-mail destinations, they are also displayed. If necessary, add or delete the destination.

#### Press the [Start] key.

Sending starts.



#### NOTE

- When [On] is selected in "Dest. Check before Send", a destination confirmation screen is displayed when you press the [Start] key.
  - → Confirmation Screen of Destinations (page 5-44)
- Recall information is canceled in the following conditions.
  - When you turn the power off
  - When you send a next image (new recall information is registered)
  - When you log out

## **How to use the FAX Function**

On products with a FAX function, it is possible to use the FAX function. The optional FAX Kit is required in order to make use of FAX functionality.

FAX Operation Guide

### **Using Document Boxes**

Document Box is a function for saving print data from a computer and sharing it with multiple users.

The available Document Boxes are as follows: Custom Box, Job Box, Removable Memory Box, and Fax Box.

#### What is Custom Box?

Custom Box is a component box which you can create within the Document Box and store data for later retrieval. You can create or delete a Custom Box.

The following operations are possible:

- Creating a new Custom Box
- Printing Document in a Custom Box
- Saving scanned documents to a Custom Box
- Sending Documents in a Custom Box
- Editing Documents in a Custom Box
- Deleting Documents in a Custom Box



#### **NOTE**

The operation on Custom Box you perform from operation panel can also be made using Command Center RX.

Command Center RX User Guide

#### What is Job Box?

Job Box is a generic name for the "Private Print/Stored Job Box", "Quick Copy/Proof and Hold Box", "Repeat Copy Box", and "Form for Form Overlay Box". These Job Boxes cannot be created or deleted by a user.



#### NOTE

- You can set up the machine so that temporary documents in job boxes are automatically deleted.
  - Deletion of Job Retention (page 8-38)
- For details on operating the Job Box, refer to the following:
  - → Printing Data Saved in the Printer (page 4-18)

#### Repeat Copy Box

Repeat Copy feature stores the copied original document data in the Job Box and allows you to print additional copies later. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted.

Outputting Repeat Copy Jobs (page 5-62)



#### NOTE

Repeat Copy function is not available when the optional Data Security Kit is installed.

#### Form for Form Overlay Box

Image Overlay feature copies the original document overlaid with a form or image. This Job Box is used to store the forms or images for overlaying.

▶ Form for Form Overlay (page 5-62)

### **What is Removable Memory Box?**

A USB memory stick can be connected to the USB memory slot on the machine to print a saved file. You can print data directly from the USB memory without a PC. Image files scanned using this machine can also be saved to USB memory in the PDF, TIFF, JPEG, XPS, OpenXPS or high compression PDF format (Scan to USB).

#### Fax Box

Fax Box store the fax data. The optional FAX Kit is required in order to make use of FAX functionality.

FAX Operation Guide

### **Basic Operation for Document Box**

This section explains basic operations for document boxes, using examples where tasks are carried out with custom boxes.




#### NOTE

In the following explanation, it is assumed that user login administration is enabled. For details on User Logon privileges, refer to the following:

Editing Custom Box (page 5-53)

#### **Box List**

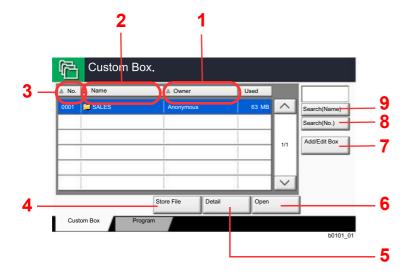


- 1 Listing the boxes by owner in alphabetical order.
- 2 Listing the boxes by name in alphabetical order.
- 3 Listing the boxes by number in ascending/ descending order.
- 4 Saves the document in the selected box.
- 5 Displays the details for the selected box.
- 6 Opens the selected box.
- 7 Registers new boxes and checks, modifies or deletes box information.
- 8 A box can be searched for by Box No.
- 9 A box can be searched for by Box Name.

#### **Document List**


The document list is a list of the documents stored in the custom box. Documents can be listed either by name or as thumbnails. The list can be used as shown below.

#### List

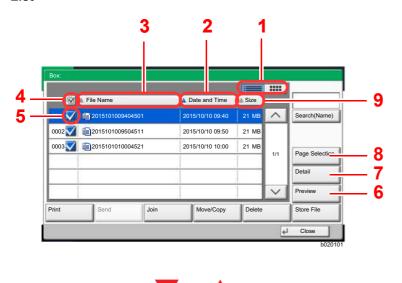

- Switches between list display and thumbnail display.
- 2 Listing the documents by time of update in ascending/descending order.
- 3 Listing the documents by name in alphabetical order.
- Selecting more than one document at a time.
- Selecting documents by checking checkboxes.
- 6 Previews the selected document.
- 7 Select a document in the Document List and select [Detail] to display the details for the selected document.
- 8 Select a document in the Document List and select [Page Selection] to display the selected document.
- 9 Listing the documents by size in ascending/ descending order.

#### **Thumbnail**

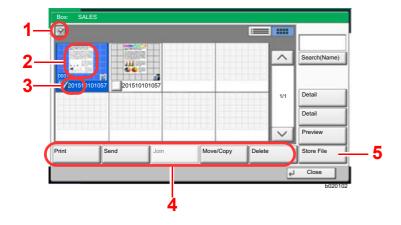

- Selecting more than one document at a time.
- 2 Highlighting a document to display its details with [Detail].
- 3 Selecting documents by checking checkboxes.
- 4 Prints, sends, joins, moves, copies or deletes the selected documents.
- 5 Saves the document in the open box.



#### NOTE

You can select multiple documents by pressing the respective document checkboxes. However, note that you cannot select multiple documents when you are sending documents.

#### **Viewing Box Details**

- Select [Add/Edit Box] in the box list screen.
- 2 Highlight the box whose box details you wish to check and select [Detail/Edit].
  - **NOTE**

If a custom box is protected by a password, enter the correct password.

- ? Check the box details.
- [Cancel] > [Close]

The display returns to the default Document Box screen.

#### **Editing Box Details**

- Select [Add/Edit Box] in the box list screen.
- Highlight the box whose box details you wish to check and select [Detail/Edit].
  - **NOTE**

If a custom box is protected by a password, enter the correct password.

Check the box details.

To edit details, select [**Change**] of the detail you wish to edit. Edit the detail as desired and select [**OK**].

4 If you have changed the details, select [Save] and then select [Yes] in the confirmation screen.

If you do not change the details, select [No].

5 Select [Close].


The display returns to the default Document Box screen.

## **Previewing Documents/Checking Document Details**

# Select (highlight) a document to preview and then select [Preview] or [Detail].

## Preview the document or check the document details.

The operations available in the preview screen are shown below.

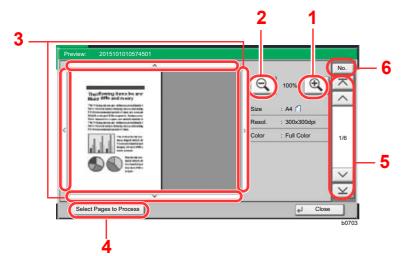

- 1 Zoom in.
- 2 Zoom out.
- 3 When you have zoomed in, you can use these keys to move the displayed area.
- 4 Press to select any page of the open document and print, send or copy to removable memory.
- Selecting a page (page 5-51)
- 5 In multiple-page documents, you can use these buttons to change pages.
- 6 In multiple-page documents, you can change pages by entering the desired page number.



The preview display can be controlled by moving your finger(s) on the touch panel.


→ Original Preview (page 2-22)

## Confirm the document(s) and select [Close].

#### Selecting a page

When printing, sending, or copying a document within a Custom Box, you can specify any pages at will. Select [**Page Selection**] in the document list screen of the Custom Box, or [**Select Pages to Process**] in the Preview screen, to display the page selection screen.

Select the pages you want to work with, and select [Print], [Send], or [Copy to Memory].

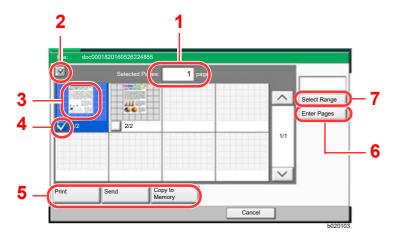

- 1 Displaying the number of pages selected.
- 2 Selecting more than one document at a time.
- 3 Highlighting the selected document.
- 4 Selecting documents by checking checkboxes.
- 5 Selected pages can be printed, sent, or copied to custom box.
- 6 You can specify the pages you want to select by selecting [Enter Pages].
- 7 You can specify a range of selection by selecting [Select Range].
- Printing Documents in Custom Box (page 5-55)
- Sending Documents in Custom Box (page 5-57)
- → Moving Documents in Custom Box (page 5-58)

## **Creating a New Custom Box**

## NOTE

• If user login administration is enabled, you can only change the settings by logging in with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

- If user login administration is enabled, log in with administrator privileges to perform the following operations. They cannot be performed with user privileges.
  - Creating a box
  - Deleting a box of which owner is another user.

## Display the screen.

1 [Home] key > [Custom Box] > [Add/Edit Box]

## Register the Custom Box.

1 [Add] > Enter the information for each item > [OK]

The table below lists the items to be set.

Item	Description
Box No.	Enter the box number by selecting [+], [-] or number keys. The box number can be from 0001 to 1000. A Custom Box should have a unique number. If you enter 0000, the smallest number available will be automatically assigned.
Box Name	Enter a box name consisting of up to 32 characters.
	→ Character Entry Method (page 11-9)
Owner*1	Set the owner of the box. Select the owner from the user list that appears.
Permission*2	Select whether to share the box.
Box Password	User access to the box can be restricted by specifying a password to protect the box. Entering a password is not mandatory. Enter the same password of up to 16 characters in both [Password] and [Confirm Password].  This can be set if [Shared] is selected in Permission.
Usage	The usage for a box can be restricted. To enable a capacity restriction
Restriction	enter a value for the storage capacity of the Custom Box in megabytes by selecting [-], [+] or number keys. You can enter a limit between 1 and 30,000 (MB).
Auto File Deletion	Automatically deletes stored documents after a set period of time. Select [ <b>On</b> ] to enable automatic deletion and then use [+] and [-] or the numeric keys to enter the number of days for which documents are stored. You can enter any number between 1 and 31 (day(s)). To disable automatic file deletion, select [ <b>Off</b> ].

Item	Description
Free Space	Displays the free space on the box.
Overwrite Setting	Specifies whether or not old stored documents are overwritten when new documents are stored. To overwrite old documents, select [Permit]. To retain old documents, select [Prohibit].
Delete after Printed	Automatically delete a document from the box once printing is complete. To delete the document, select [ <b>On</b> ]. To retain the document, select [ <b>Off</b> ].

<sup>\*1</sup> Displayed when the user login administration is enabled.

#### 2 Select [Add].

The Custom Box is created.

## **Editing Custom Box**

## Display the screen.

[Home] key > [Custom Box] > [Add/Edit Box]

## Edit the custom box.

1 Select the box > [Detail/Edit] > Enter the information for each item > [OK] > [Edit]

## NOTE

- When you have logged in as a user, you can only edit a box whose owner is set to that user.
- When you have logged in as administrator, you can edit all boxes.

When user login administration is enabled, the settings that can be changed varies depending on the privileges of the logged in user.

Privileges	Settings that can be changed
Administrator	Box Name
	Box No.
	Owner
	Permission
	Box Password
	Usage Restriction
	Auto File Deletion
	Overwrite Setting
	Delete after Printed

<sup>\*2</sup> Not displayed when "Owner" is set to [No Owner].

Privileges	Settings that can be changed
User	Box Name
	Box Password
	Permission
	Auto File Deletion
	Overwrite Setting
	Delete after Printed

→ Creating a New Custom Box (page 5-52)

## **?** [Save] > [Close]

The display returns to the default Document Box screen.

## **Deleting Custom Box**

#### Display the screen.

[Home] key > [Custom Box] > [Detail/Edit]

## Delete the custom box.

Select the box > [Delete] > [Yes]



- When you have logged in as a user, you can only delete a box whose owner is set to that
- When you have logged in as administrator, you can edit all boxes.

## **Storing Documents to a Custom Box**

Custom box stores the print data which is sent from a PC. For the operation of the printing from the PC, refer to the following:

Printer Driver User Guide

## **Printing Documents in Custom Box**

#### Display the screen.

- 1 [Home] key > [Custom Box]
- Select the box containing the document you want to print.
  - **NOTE**

If a custom box is protected by a password, enter the correct password.

3 Select [Open].

## Print the document.

1 Select the document in the list that you want to print by selecting the checkbox.

The document is marked with a checkmark.

NOTE

To deselect, select the checkbox again and remove the checkmark.

- 2 Select [Print].
- 3 Set the paper selection, duplex printing, etc., as desired.

For the features that can be selected, refer to the following:

Custom Box (Store File, Printing, Send) (page 6-8)

NOTE

Select the [Program] tab when registering or recalling programs.

- → Registering Programs (page 5-10)
- → Recalling Programs (page 5-10)

If a document stored from a computer is selected, the print settings selection screen appears.

- To use the settings used at the time of printing (when the document was saved), select [**Print As Is**]. Select [**Start Print**] to start printing.
- To change the print settings, select [Print after Change Settings] and change the print settings.
  - After a document saved in the machine is selected, the [**Use File Settings**] key may appear in the setting screen for the feature to be used.
- To use the settings saved with the document, select [Use File Settings].
- If you need to change the print settings, select [Print after Change Settings].
- 4 Press the [Start] key.


Printing of the selected document begins.


## **Saving Scanned Documents to a Custom Box**

#### Display the screen.

[Home] key > [Custom Box]

## Place the originals.

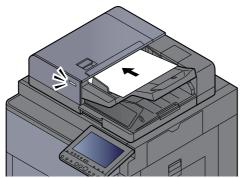

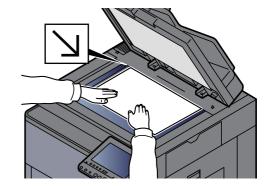

Loading Originals (page 5-2)

## Store the document.

- 1 Select the box > [Store File]
- 2 Select the functions.

To configure the settings for functions, select the function key. By selecting **[tabs]**, other selectable functions will be shown as a list.

→ Custom Box (Store File, Printing, Send) (page 6-8)

## NOTE

- Enter up to 32 characters as the file name.
- Select the [Program] tab when registering or recalling programs.
  - → Registering Programs (page 5-10)
  - → Recalling Programs (page 5-10)
- 3 Press the [Start] key.

The original is scanned and the data is stored in the specified Custom Box.

## **Sending Documents in Custom Box**

When transmitting using wireless LAN, select the interface dedicated to the send function in advance.

Primary Network (Client) (page 8-62)

#### Display the screen.

[Home] key > [Custom Box] > Select the box > [Open]

**NOTE** 

If a custom box is protected by a password, enter the correct password.

#### Send the document.

1 Select the document you wish to send by checking the checkbox.

The document is marked with a checkmark.

**NOTE** 

You cannot select and send multiple documents.

To deselect, press the checkbox again and remove the checkmark.

2 Select [Send].

**NOTE** 

Depending on the settings, the address book screen may appear.

3 Set the destination.

For more information on selecting destinations, refer to the following:

- Specifying Destination (page 5-40)
- 4 Set the sending size, original image, etc., as desired.

For the features that can be set, refer to the following:

Custom Box (Store File, Printing, Send) (page 6-8)

NOTE

Select the [Program] tab when registering or recalling programs.

- Registering Programs (page 5-10)
- → Recalling Programs (page 5-10)
- 5 Press the [Start] key.

Sending of the selected document begins.

# Sending Documents in Custom Box to E-mail Address of Logged In User.

When user login is enabled, documents in the custom box are sent to the E-mail address of the logged in user.

#### Setting before send

Before using this function, the following are necessary.

- The function icon must be displayed in the home screen.
  - → Editing the Home Screen (page 2-17)
- An E-mail address must be set in user login for the user who logs in.
  - → Adding a User (Local User List) (page 9-8)

#### Sending to the E-mail address of the logged in user.

When user login is enabled, documents in the custom box are sent to the E-mail address of the logged in user. Send to the E-mail address of the logged in user. The procedure is as follows.

## Select [Home] key.

## Select [Send to Me from BOX (E-mail)].



When this function is used, functions other than transmission cannot be used.

## **Moving Documents in Custom Box**

## Display the screen.

[Home] key > [Custom Box] > Select the box > [Open]

NOTE

If a custom box is protected by a password, enter the correct password.

## Move the documents.

Select the document in the list that you want to move by selecting the checkbox.
The document is marked with a checkmark.

NOTE

To deselect, select the checkbox again and remove the checkmark.

2 [Move/Copy] > [Move to Custom Box] > [Next] > select the destination of move > [Move/Copy] > [OK]

The selected document is moved.

NOTE

If the box to which the document is to be moved is protected by a password, enter the correct password.

## **Copying Documents in Custom Box into Other Boxes**

#### Display the screen.

[Home] key > [Custom Box] > Select the box > [Open]

NOTE

If a custom box is protected by a password, enter the correct password.

#### Copy the documents.

Select the document in the list that you want to copy by selecting the checkbox. The document is marked with a checkmark.

**NOTE** 

To deselect, select the checkbox again and remove the checkmark.

2 [Move/Copy] > [Copy to Custom Box] > [Next] > select the destination of copy > [Copy] > [OK]

The selected document is copied.

NOTE

If the box to which the document is to copied is protected by a password, enter the correct password.

## **Copying Documents in Custom Box to Removable Memory**

## Display the screen.

[Home] key > [Custom Box] > Select the box > [Open]

NOTE

If a custom box is protected by a password, enter the correct password.

## Copy the documents.

Select the document in the list that you want to copy by selecting the checkbox.

The document is marked with a checkmark.

**NOTE** 

To deselect, select the checkbox again and remove the checkmark.

2 [Move/Copy] > [Copy to Removable Memory] > [Next] > select the destination of copy > [Next] > [Copy] > [OK]

The selected document is copied.

## **Joining Documents in Custom Box**

You can join documents within a custom box into one file.



You can only join a document to other documents in the same custom box. If necessary, move the documents to be joined beforehand.

#### Display the screen.

[Home] key > [Custom Box] > Select the box > [Open]

NOTE

If a custom box is protected by a password, enter the correct password.

## 2 Join the document.

1 Select the documents in the list that you wish to join by selecting the checkbox.

The document is marked with a checkmark.

You can join up to 10 documents.

**NOTE** 

To deselect, select the checkbox again and remove the checkmark.

- 2 Select [Join].
- **3** Arrange the documents into the order in which they are to be joined.

Highlight the document you want to rearrange and select [**Up**] or [**Down**] to move it to the correct place in the sequence.

4 [Next] > [File Name] > Enter the file name for the joined document > [OK]

NOTE

Enter up to 64 characters as the file name.

5 [Join] > [Yes]

The documents are joined.

NOTE

After joining, the original documents are left unchanged. Delete the documents if they are no longer needed.

## **Deleting Documents in Custom Box**

## Display the screen.

- 1 [Home] key > [Custom Box]
- 2 Select the box containing the document > [Open]
  - **NOTE**

If a custom box is protected by a password, enter the correct password.

#### Delete the document.

1 Select the document in the list that you want to delete by selecting the checkbox. The document is marked with a checkmark.

## **◯** NOTE

- [Delete] is disabled until a document is selected.
- To deselect, select the checkbox again and remove the checkmark.
- 2 [Delete] > [Yes]

The document is deleted.

## **Job Box**

This section explains the Repeat Copy Box and the Form for Form Overlay Box. For Private Print/Stored Job Box and Quick Copy/Proof and Hold Box, refer to the following:

Printing Data Saved in the Printer (page 4-18)

## **Outputting Repeat Copy Jobs**

Repeat Copy feature stores the copied original document data in the Job Box and allows you to print additional copies later. By default, up to 32 documents can be stored. When power is turned off, all stored jobs will be deleted. This section explains how to print documents saved by the Repeat Copy function.

Repeat Copy (page 6-66)

## Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Repeat Copy] > [Open]

## Print the document.

- 1 Select the document to print > [Print]
  If the document is protected by a password, enter the password using the numeric keys.
- 2 Specify the number of copies to print as desired > [Start Print] Printing begins.

The Repeat Copy box job will be deleted when the power switch is turned off.

## **Form for Form Overlay**

Image Overlay feature copies the original document overlaid with a form or image. This Job Box is used to store the forms or images for overlaying.

#### Storing a Form

You can store forms to be used for the form overlay in the job box. One page can be registered in one form.

## Place the original.

## 2 Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Form for Form Overlay] > [Open]

## 3 Store the forms.

- 1 Select [Store File].
- 2 If necessary, select the image quality of original, scanning density, etc. before the original is scanned.
- 3 Press the [Start] key.

The original is scanned and stored in the [Form for Form Overlay] box.

## **Deleting a Form Stored**

You can delete the form stored in the job box

## Display the screen.

- 1 [Home] key > [Job Box]
- 2 [Form for Form Overlay] > [Open]

## Delete the forms.

Select the form to delete > [**Delete**] > [**Yes**]
The form is deleted.

## **Operating using Removable USB Memory**

Plugging USB memory directly into the machine enables you to quickly and easily print the files stored in the USB memory without having to use a computer.

The following file types can be printed:

- PDF file (Version 1.7 or older)
- TIFF file (TIFF V6/TTN2 format)
- JPEG file
- XPS file
- OpenXPS file
- · Encrypted PDF file

In addition, you can store scanned image files in USB memory connected to the machine.

The following file types can be stored:

- PDF file format
- TIFF file format
- JPEG file format
- XPS file format
- · OpenXPS file format
- · High-compression PDF file format


## **Printing Documents Stored in Removable USB** Memory

#### **NOTE**

- PDF files you wish to print should have an extension (.pdf).
- Files to be printed should be saved no further down than the top 3 folder levels, including the root folder.
- Use USB memory properly formatted by this machine.
- · Plug the USB memory directly into the USB Memory Slot.

## Plug the USB memory.

1 Plug the USB memory into the USB Memory Slot.

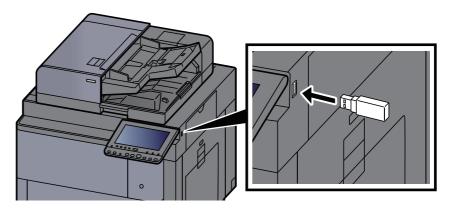

2 When the machine reads the USB memory, "Removable Memory is recognized. Displaying files. Are you sure?" may appear. Select [Yes].

Displays the removable memory screen.

#### **NOTE**

If the message does not appear, select [Removable Memory] on the Home screen.

#### Print the document.

Select the folder containing the file to be printed.

The machine will display documents in the top 3 folder levels, including the root folder.

## NOTE

- 1,000 documents can be displayed.
- To return to a higher level folder, select [Back].
- 2 Select the file to be printed > [Print]
- 3 Change the number of copies, duplex printing, etc. as desired.

For the features that can be selected, refer to the following:

▶ Removable Memory (Store File, Printing Documents) (page 6-14)

#### NOTE

After a document saved in the machine is selected, [Use File Settings] may appear in the setting screen for the feature to be used.

- To use the settings saved with the document, press [Use File Settings].
- If you need to change the print settings, select the desired feature.
- 4 Press the [Start] key.

Printing of the selected file begins.


## Saving Documents to USB Memory (Scan to USB)

You can store scanned documents to a removal USB memory.



The maximum number of the storable files is 1,000.

## Place the originals.

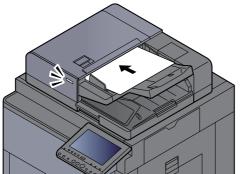




Loading Originals (page 5-2)

## Plug the USB memory.

1 Plug the USB memory into the USB Memory Slot.

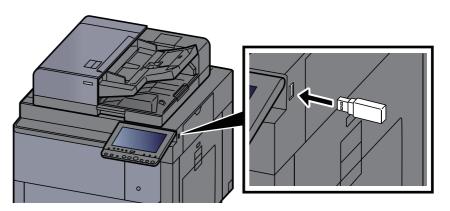

2 When the machine reads the USB memory, "Removable Memory is recognized. Displaying files. Are you sure?" may appear. Select [Yes] to display the removable memory screen. Displays the Removable Memory screen.



#### **NOTE**

If the message does not appear, select [Removable Memory] on the Home screen.

## Store the document.

- 1 Select the folder where the file will be stored > [Open]. The machine will display the top 3 folder levels, including the root folder.
- 2 Select [Store File].
- 3 Set the type of original, file format, etc., as desired. For the features that can be set, refer to the following:
  - → Removable Memory (Store File, Printing Documents) (page 6-14)

- 4 Check the storing image.
- 5 Press the [Start] key.

The original is scanned and the data is stored in the USB memory.

## **Check the USB Memory Information**

- In the removable memory screen, select [Memory Information].
- Once you confirm the information, select [Close].

## **Removing USB Memory**



Be sure to follow the proper procedure to avoid damaging the data or USB memory.

Display the screen.

[Home] key > [Remove Memory]

Select [Remove Memory].

Select [**OK**], and remove the USB memory after "Removable Memory can be safely removed." is displayed.



USB memory can also be removed after checking the status of the device.

→ Device/Communication (page 7-13)

## **Using the Internet Browser**

If the machine is connected to the network, you can browse the Internet on the touch panel.

NOTE

To use the Internet browser, "Internet Browser Setting" must be set to [On] in Internet.

→ Internet (page 8-75)

## **Launching and Exiting the Browser**

#### Display the screen.

1 [Home] key > [Internet Browser]

The Internet browser starts up.

2 Use the browser screen to browse web pages.

For information on how to use the browser screen, refer to the following:

- Using the Browser Screen (page 5-69)
- 3 To exit the browser, select [X] (Close) and then select [Yes] in the exit confirmation screen.
  - NOTE

You can specify preferences such as the way the Internet browser screen is displayed.

→ Browser Environment (page 8-75)

## **Using the Browser Screen**

The operations available in the Internet browser screen are shown below.



- 1 **Title bar**: Displays the page title.
- **Text box**: Pressing the text box displays a keyboard that allows you to type text.
- 3 Close: Closes the Internet browser and returns you to the application list screen.
- Scroll bars: These allow you to scroll the displayed page up, down, left and right by selecting  $[\land]$ ,  $[\lor]$ ,  $[\langle]$  or  $[\gt]$  or by moving one of the slide bars with your finger.
- Back/Forward: Displays the previous page or the next page.
- 6 Reload: Updates the page.
- **Home page**: Displays your specified home page. You can set your home page.
  - **▶** Browser Environment (page 8-75).
- 8 Enter URL: Use this to display a desired web page by entering the URL for that page.
- Search (Search Internet/Retrieval in page): Displays a search menu in which you can select "Retrieval in page" or an Internet search site.

Search Internet: Use the selected search site to search with the entered keyword.

Retrieval in page: Search from the entered keyword in the currently displayed page. You can continue your search by selecting [SearchUp] or [SearchDown].

- 10 **Menu**: Displays the browser setup menu. You can use this menu to specify the browser's display magnification, set the text encoding scheme and check the server certificate.
- 11 Loader/Progress bar: Shows the status of page loading. When the browser is loading a web page, the loader changes to an animated display.
- 12 **Security lock icon**: Displayed when you are viewing a protected page.



#### **NOTE**

Selecting the [Reset] key while the Internet browser is displayed will exit the browser and return you to the application list screen without displaying the browser exit.

## **Manual Staple**

You can staple copied paper manually without any print operation. It is useful when you have forgotten to set the staple sort mode before starting copying, or when you want to staple originals.


## NOTE

- This function requires the optional Document Finisher:
  - ◆ 4,000-Sheet Finisher (page 11-25)
- If there are no staples when manual stapling is performed, the stapling position lamps and stapling position key LEDs all blink. Add staples.
  - → Replacing Staples (4,000-Sheet Finisher) (page 10-10)
- Manual stapling cannot be executed when the machine is in operation.

#### Maximum number of sheets available for manual stapling

	Paper weight		
Paper size	52 - 90 g/m <sup>2</sup> (14.0 - 24.0 lb. Bond)	91 - 105 g/m² (24.3 - 28.0 lb. Bond)	
A4, A4-R, B5, Letter, Letter-R, 16K	65 sheets	55 sheets	
A3, B4, Folio, Ledger	30 sheets	30 sheets	

Use the keys on the control section of the Finisher (optional) for manual stapling.

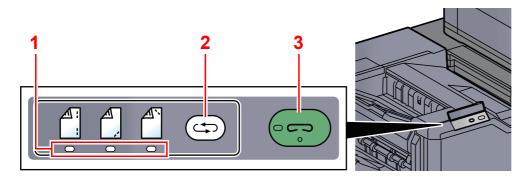

- Stapling position lamps
- 2 Stapling position key
- 3 Stapling key / lamp

## 1 Press the stapling position key on the stapling control section.

The shutter of the paper exit area is opened and this equipment enters into the manual staple mode.

## Set the staple position.

Press the stapling position key to select the stapling position (Back 🎒 / Front 🗐 / 2 Points 🗐 ).

Operation is not possible while the stapling position lamps are blinking. Operate after the lamps light solidly.


## Load the paper.

 
Straighten the edges of the paper well and place the paper front side down in the shutter opening of the output unit.

If the near side of the paper ( ) will be stapled, place the paper against the front guide (A).

If the far side of the paper ( ) will be stapled, place the paper against the back guide (B).

If the edge of the paper ( ) will be stapled at two points, place the paper with the center aligned to the center point between the two side guides (A and B).

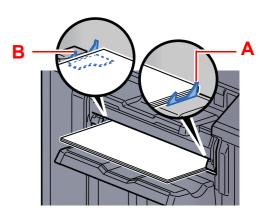



Do not insert your hand inside the open shutter.

#### NOTE

- Press the stapling position key before you place the paper. Once the paper is placed, the stapling position key cannot be used.
- · The stapling lamp lights when the paper is properly placed. If it does not light, replace the paper.

## Staple the paper.

Let go of the paper, and then press the stapling key.

Stapling starts. Stapling finishes and the output is delivered to tray.



Be sure that your hands are away from the paper while stapling is in progress.

#### Finishing the manual staple mode

Press the stapling position key several times until the stapling position lamps turn off. The shutter of the paper exit area closes. It means that manual stapling is finished.

If no operation is performed for approx. 10 seconds, the manual staple mode will be automatically finished.



#### **NOTE**

The time after which manual staple mode is automatically exited can be changed.

Manual Staple (page 8-27)

# **6 Using Various Functions**

<del>-</del>					
Ihis	chapter	explains	the	following	topics:

Functions Available on the Machine	6-2
About Functions Available on the	
Machine	6-2
How to Select Functions	
Copy	6-2
Send	6-5
Custom Box (Store File, Printing,	
Send)	6-8
Removable Memory	0.44
(Store File, Printing Documents)	
Functions	
Original Size	
Paper Selection	
Mixed Size Originals	
Original Orientation	
Fold	
Collate/Offset	
Staple/Punch	
Paper Output	
Density	
Original Image	
EcoPrint	
Color Selection	
Sharpness	
Contrast	6-33
Background Density Adjustment	6-34
(Background Density Adjustment) Prevent Bleed-thru	
Zoom	
Combine Margin/Centering, Margin,	0-30
Centering	6-40
Border Erase	
Booklet	
Duplex	
Cover	6-49
Form Overlay	-
Erase Shadowed Areas	
Page #	
Insert Sheets/Chapters	
Memo Page	
Image Repeat	
Text Stamp	6-57
Bates Stamp	
Continuous Scan	

Auto Image Rotation	6-63
Negative Image	6-64
Mirror Image	6-64
Job Finish Notice	6-64
File Name Entry	6-65
Priority Override	6-65
Repeat Copy	6-66
DP Read Action	6-67
Skip Blank Page	6-67
2-sided/Book Original	6-68
Sending Size	6-69
File Format	6-70
File Separation	6-74
Scan Resolution	6-74
E-mail Subject/Body	6-75
Send and Print	6-75
Send and Store	6-75
FTP Encrypted TX	6-76
File Size Confirmation	6-76
Delete after Printed	6-76
Delete after Transmitted	6-76
Storing Size	6-77
Long Original	6-77
Encrypted PDF Password	6-78
JPEG/TIFF Print	6-78
XPS Fit to Page	6-78


## **Functions Available on the Machine**

## **About Functions Available on the Machine**

This machine provides the various functions available.

## **How to Select Functions**

To configure the settings for functions, select the tab and press the function key.

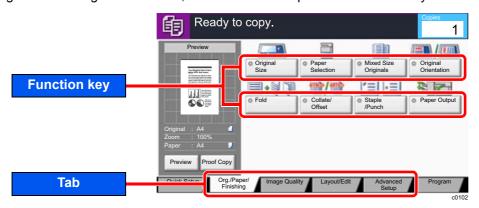

## Copy

For details on each function, see the table below.

Tab
Org./Paper/ Finishing
Configure the settings for
originals, paper, and finishing such
as collate and staple.
Stap.o.


Function key	Description	Reference page
Original Size	Specify the original size to be scanned.	page 6-18
Paper Selection	Select the cassette or multipurpose tray that contains the required paper size.	page 6-19
Mixed Size Originals	Scan the documents of different sizes that are set in the document processor all at once.	page 6-20
Original Orientation	Select the orientation of the original document top edge to scan correct direction.	<u>page 6-23</u>
Fold	Fold the finished documents.	page 6-24
Collate/Offset	Offsets the output by page or set.	page 6-25
Staple/Punch	Staples or punches printed documents.	page 6-26
Paper Output	Specify the output tray.	page 6-30

	Tab
Image	Quality
Configu settings and qua copies.	for density

Function key	Description	Reference page
Density	Adjust density.	page 6-31
Original Image	Select original image type for best results.	page 6-31
EcoPrint	EcoPrint saves toner when printing. Use this function for test prints or any other occasion when high quality print is not required.	page 6-32
Sharpness	Adjusts the sharpness of image outlines.	page 6-33
Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-34
Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-34
Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-33

Layout/Edit


Configure the settings for duplex printing and stamp.

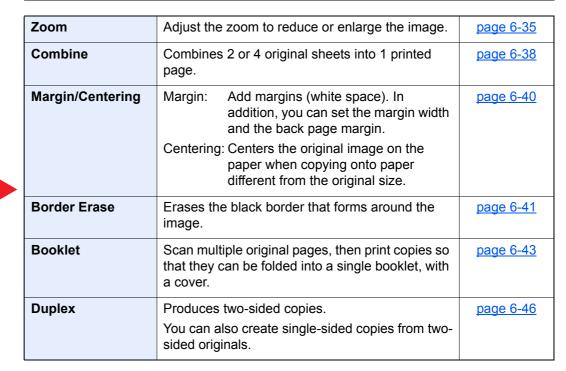

Tab	
Layout/Edit	7
Configure the	/


settings for duplex

printing and stamp.

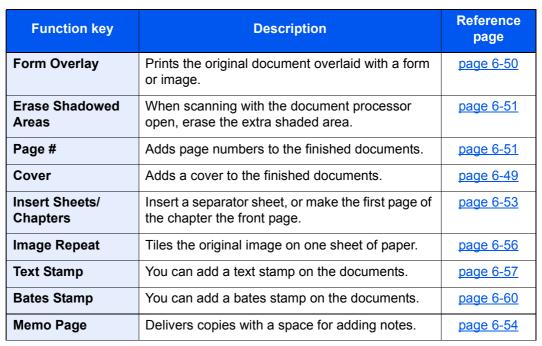


Advanced Setup

Configure the settings for continuous scanning, mirror image copies, and Skip Blank Page function.

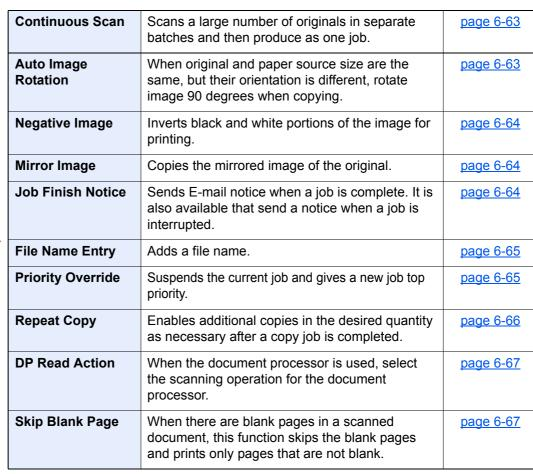

## Send

To configure the settings for functions, select the tab and press the function key.

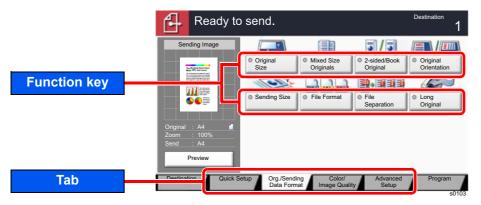

For details on each function, see the table below.

i di detalis dii eacii	ıu
Tab	
Org./Sending	
Data Format	
Configure the	
settings for	
original type and	
file format.	

Function key	Description	Reference page
Original Size	Specify the original size to be scanned.	page 6-18
Mixed Size Originals	Scan the documents of different sizes that are set in the document processor all at once.	page 6-20
2-sided/Book Original	Select the type and orientation of the binding based on the original.	page 6-68
Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-23
Sending Size	Select size of image to be sent.	page 6-69
File Format	Specify the image file format. Image quality level can also be adjusted.	page 6-70
File Separation	Creates several files by dividing scanned original data page by specified number of pages, and sends the files.	page 6-74
Long Original	Reads long-sized original documents using a document processor.	page 6-77

Tab		
Color/		
Image Quality		
Configure the		
settings for		
density, quality of copies, and		
color balance.		

Function key	Description	Reference page
Density	Adjust density.	page 6-31
Original Image	Select original image type for best results.	page 6-31
Scan Resolution	Select fineness of scanning resolution.	page 6-74
FAX TX Resolution	Select fineness of images when sending FAX.	Refer to the FAX Operation Guide.
Color Selection	Select the color mode setting.	page 6-32
Sharpness	Adjusts the sharpness of image outlines.	page 6-33
Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-34
Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-34
Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-33

Tab
Advanced
Advanced Setup
Configure the

Configure the settings for transmission copy, encrypted transmission, and file size confirmation.

Function key	Description	Reference page
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-35
Centering	Centers the original image on the paper when sending onto paper different from the original size.	page 6-40
Border Erase	Erases the black border that forms around the image.	page 6-41
FAX Delayed Transmission	Set a send time.	Refer to the FAX Operation Guide.
Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-63
Job Finish Notice	Sends E-mail notice when a job is complete. It is also available that send a notice when a job is interrupted.	page 6-64
Erase Shadowed Areas	When scanning with the document processor open, erase the extra shaded area.	page 6-51
File Name Entry	Adds a file name.	page 6-65
i-FAX Subject/ Body	Adds subject and body when sending a document by i-FAX.	Refer to the FAX Operation Guide.
FAX Direct Transmission	Sends FAX directly without reading original data into memory.	Refer to the FAX Operation Guide.
FAX Polling RX	Dial the destination and receive documents for Polling Transmission stored in the polling box.	Refer to the FAX Operation Guide.
Send and Print	Prints a copy of the document being sent.	page 6-75
Send and Store	Stores a copy of the document being sent in a Custom Box.	page 6-75
FTP Encrypted TX	Encrypts images when sending via FTP.	page 6-76
Text Stamp	You can add a text stamp on the documents.	<u>page 6-57</u>
Bates Stamp	You can add a bates stamp on the documents.	<u>page 6-60</u>
File Size Confirmation	Checks the file size before sending/storing the original.	page 6-76
FAX TX Report	Print a report of fax transmission results.	Refer to the FAX Operation Guide.
Skip Blank Page	When there are blank pages in a scanned document, this function skips the blank pages and sends only pages that are not blank.	
E-mail Subject/ Body	Adds subject and body when sending a document.	<u>page 6-75</u>

## **Custom Box (Store File, Printing, Send)**

To configure the settings for functions, select the tab and press the function key.



For details on each function, see the table below.

#### **Store File**


Tab	
Functions  Configure the settings when storing the document in the Custom Box.	

Function key	Description	Reference page
Original Size	Specify the original size to be scanned.	page 6-18
Mixed Size Originals	Scan the documents of different sizes that are set in the document processor all at once.	page 6-20
2-sided/Book Original	Select the type and orientation of the binding based on the original.	page 6-68
Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-23
Storing Size	Select size of image to be stored.	page 6-77
Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-34
Density	Adjust density.	page 6-31
Original Image	Select original image type for best results.	page 6-31
Scan Resolution	Select fineness of scanning resolution.	page 6-74
Color Selection	Select the color mode setting.	page 6-32
Sharpness	Adjusts the sharpness of image outlines.	page 6-33
Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-34
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-35
Centering	Centers the original image on the paper when storing onto paper different from the original size.	page 6-40

Tab	
Functions	7
Configure the settings when storing the	<b>.</b>

document in the

Custom Box.

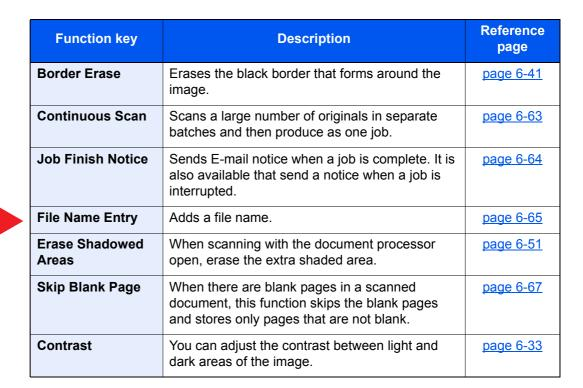



#### **Print**

Tab	
•	

**Functions** 

Configure the settings for paper selection and duplex printing when printing from the Custom Box.

Function key	Description	Reference page
Paper Selection	Select the cassette or multipurpose tray that contains the required paper size.	page 6-19
Collate/Offset	Offsets the output by page or set.	page 6-25
Staple/Punch	Staples or punches printed documents.	page 6-26
Paper Output	Specify the output tray.	page 6-30
Combine	Combines 2 or 4 original sheets into 1 printed page.	<u>page 6-38</u>
Margin/Centering	Margin: Add margins (white space). In addition, you can set the margin width and the back page margin.	<u>page 6-40</u>
	Centering: Centers the original image on the paper when copying onto paper different from the original size.	
Booklet	Print document so that it can be folded into a single booklet, with a cover.	page 6-43
Duplex	Prints 1-sided or open book originals to 2-sided, or 2-sided or open book originals to 1-sided.	page 6-46
Cover	Adds a cover to the finished documents.	page 6-49
Form Overlay	Prints the original document overlaid with a form or image.	page 6-50
Page #	Adds page numbers to the finished documents.	page 6-51
Job Finish Notice	Sends E-mail notice when a job is complete. It is also available that send a notice when a job is interrupted.	<u>page 6-64</u>
File Name Entry	Adds a file name.	page 6-65
Delete after Printed	Automatically deletes a document from the box once printing is complete.	page 6-76
Priority Override	Suspends the current job and gives a new job top priority.	page 6-65
EcoPrint	EcoPrint saves toner when printing. Use this function for test prints or any other occasion when high quality print is not required.	page 6-32
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-35
Fold	Fold the finished documents.	page 6-24
Text Stamp	You can add a text stamp on the documents.	<u>page 6-57</u>
Bates Stamp	You can add a bates stamp on the documents.	<u>page 6-60</u>

Tab
Image Quality
Configure the settings for density and quality of copies.


Function key	Description	Reference page
Density	Adjust density.	page 6-31
Original Image	Select original image type for best results.	page 6-31
Sharpness	Adjusts the sharpness of image outlines.	page 6-33
Background Density Adj.	Removes dark background from originals, such as newspapers.	page 6-34
Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-34
Contrast	You can adjust the contrast between light and dark areas of the image.	page 6-33

#### Send

Sena
Tab
Functions
Configure the settings for file format and FAX

Configure the settings for file format and FAX transmission when sending from the Custom Box.

Function key	Description	Reference page
Sending Size	Select size of image to be sent.	page 6-69
File Format	Specify the image file format. Image quality level can also be adjusted.	page 6-70
FAX TX Resolution	Select fineness of images when sending FAX.	Refer to the FAX Operation Guide.
Centering	Centers the original image on the paper when sending onto paper different from the original size.	page 6-40
FAX Delayed Transmission	Set a send time.	Refer to the FAX Operation Guide.
Job Finish Notice	Sends E-mail notice when a job is complete. It is also available that send a notice when a job is interrupted.	page 6-64
File Name Entry	Adds a file name.	page 6-65
E-mail Subject/ Body	Adds subject and body when sending a document.	page 6-75
i-FAX Subject/ Body	Adds subject and body when sending a document by i-FAX.	Refer to the FAX Operation Guide.
FTP Encrypted TX	Encrypts images when sending via FTP.	page 6-76
Delete after Transmitted	Automatically deletes a document from the box once transmission is complete.	page 6-76
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-35
File Separation	Creates several files by dividing scanned original data page by specified number of pages, and sends the files.	page 6-74
Text Stamp	You can add a text stamp on the documents.	page 6-57
Bates Stamp	You can add a bates stamp on the documents.	page 6-60
File Size Confirmation	Checks the file size before sending/storing the original.	page 6-76
FAX TX Report	Print a report of fax transmission results.	Refer to the FAX Operation Guide.

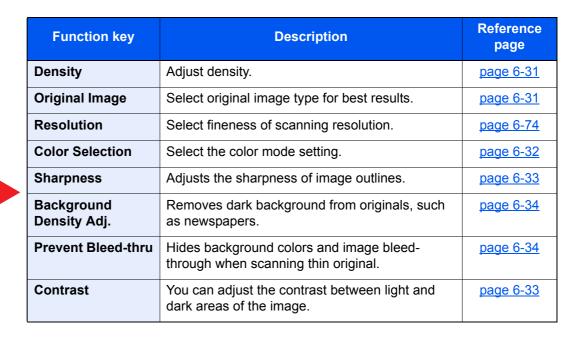

# **Removable Memory (Store File, Printing Documents)**

To configure the settings for functions, select the tab and press the function key.



For details on each function, see the table below.

### **Store File**

Tab	
Configure the settings for color selection and document name when storing the document in the removable memory.	


Function key	Description	Reference page
Original Size	Specify the original size to be scanned.	page 6-18
Mixed Size Originals	Scan the documents of different sizes that are set in the document processor all at once.	page 6-20
2-sided/Book Original	Select the type and orientation of the binding based on the original.	page 6-68
Original Orientation	Select the orientation of the original document top edge to scan correct direction.	page 6-23
Storing Size	Select size of image to be stored.	page 6-77
Prevent Bleed-thru	Hides background colors and image bleed-through when scanning thin original.	page 6-34
Density	Density Adjust density.	
Original Image	Original Image Select original image type for best results.	
Scan Resolution	Scan Resolution Select fineness of scanning resolution.	
Color Selection	Color Selection Select the color mode setting.	
Sharpness	Sharpness Adjusts the sharpness of image outlines.	
Background Density Adj.		
Zoom	Adjust the zoom to reduce or enlarge the image.	page 6-35
Centering	Centers the original image on the paper when storing onto paper different from the original size.	<u>page 6-40</u>
Border Erase	Erases the black border that forms around the image.	page 6-41
Continuous Scan	Scans a large number of originals in separate batches and then produce as one job.	page 6-63

Tab		
Functions		
Configure the settings for color		

selection and document name

when storing the document in the

removable memory.

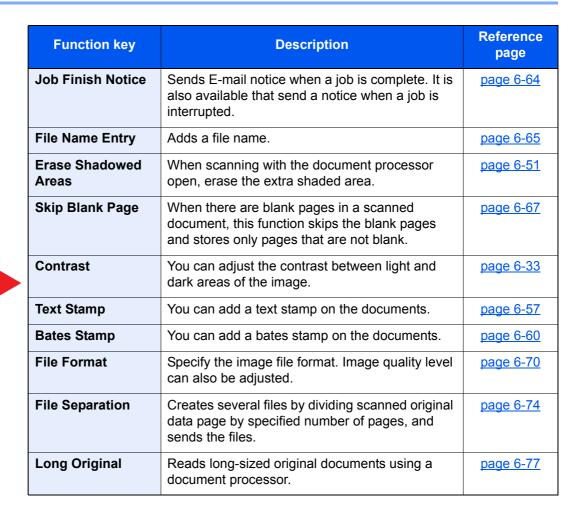


# **Printing Documents**

	Iab	

**Functions** 

Configure the settings for paper selection and duplex printing when printing from the removable memory.

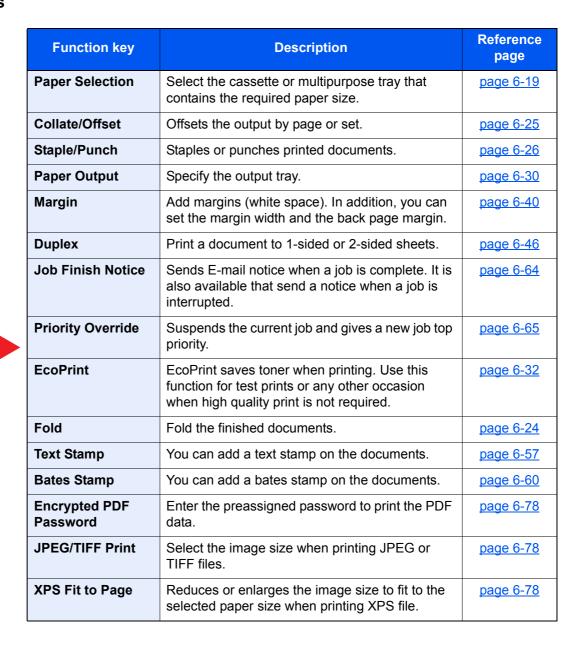



# **Functions**

On pages that explain a convenient function, the modes in which that function can be used are indicated by icons.

lcon	Description
Copy Org./Paper/ Finishing	Access to the function is indicated by icons.  Example: Select the [Org./Paper/Finishing] tab in the Copy screen to use the function.
Send Org./Sending Data Format	Access to the function is indicated by icons.  Example: Select the [Org./Sending Data Format] tab in the Send screen to use the function.
Custom Functions Box	Access to the function is indicated by icons.  Example: Select the [Functions] tab in the Custom Box screen to use the function.
USB Functions	Access to the function is indicated by icons.  Example: Select the [Functions] tab in the Removable Memory screen to use the function.

# **Original Size**









Specify the original size to be scanned.

Select [Standard Sizes 1], [Standard Sizes 2], [Others] or [Size Entry] to select the original size.

Item		Value	Description
Standard Sizes 1	Metric models:	Auto, A3, A4-R, A4, A5-R, A5, A6-R, B4, B5, B5-R, B6-R, B6, Folio, 216×340 mm	Have the size of original detected automatically, or select from the standard sizes.
	Inch models:	Auto, Ledger, Letter-R, Letter, Legal, Statement-R, Statement, 11×15", Oficio II	
Standard Sizes 2	Metric models:	Ledger, Letter-R, Letter, Legal, Statement-R, Statement, 11×15", Oficio II, 8K, 16K-R, 16K	Select from standard sizes except Standard Sizes 1.
	Inch models:	A3, A4-R, A4, A5-R, A5, A6-R, B4, B5-R, B5, B6-R, B6, Folio, 8K, 16K-R, 16K, 216×340 mm	
Others	Hagaki (Cardstoo Custom 1 to 4*1	k), Oufuku hagaki (Return postcard),	Select from postcard or the custom sized originals.
Size Entry	Metric	X: 50 to 432 mm (in 1 mm increments)	Enter the size not included in the standard sizes 1 and 2.*2
		Y: 50 to 297 mm (in 1 mm increments)	When you have selected [Size Entry], select [+] or [-] to set the sizes of "X"
	Inch	X: 2.00 to 17.00" (in 0.01" increments)	<ul><li>(horizontal) and "Y" (vertical). Select [# Keys] to use the numeric keys for entry.</li></ul>
		Y: 2.00 to 11.69" (in 0.01" increments)	-

<sup>\*1</sup> For instructions on how to specify the custom original sizes (Custom 1 to 4), refer to the following:

→ Measurement (page 8-15)



Be sure to always specify the original size when using custom size original.

**<sup>▶</sup>** Custom Original Size (page 8-11)

<sup>\*2</sup> The input units can be changed in System Menu. For details, refer to the following:

# **Paper Selection**







Select the cassette or multipurpose tray that contains the required paper size.

If [Auto] is selected, the paper matching the size of the original is selected automatically.

# NOTE

- Specify in advance the size and type of the paper loaded in the cassette.
  - → Cassette/MP Tray Settings (page 8-7)
- · Cassettes after Cassette 5 are displayed when the optional paper feeder is installed.

To select [MP tray], select [Paper Size] and [Media Type], and specify the paper size and the media type. The available paper sizes and media types are shown in the table below.

	Item		Value	Description
Paper Size	Standard Sizes 1	Metric models:	A3*1*2, A4-R*1*2, A4*1*2, A5-R*1*2, A6-R*2, B4*1*2, B5-R*1*2, B5*1*2, B6-R*2, Folio*1*2, 216×340 mm	Select from the standard size.
		Inch models:	Ledger*1*2, Letter-R*1*2, Letter*1*2, Legal*1*2, Statement-R*1*2, Executive, 12×18", Oficio II	
	Standard Sizes 2	Metric models:	Ledger*1*2, Letter-R*1*2, Letter*1*2, Legal*1*2, Statement-R*1*2, Executive, 12×18", Oficio II, 8K, 16K-R, 16K	Select from standard sizes except Standard Sizes 1.
		Inch models:	A3*1*2, A4-R*1*2, A4*1*2, A5-R*1*2, A6-R*1*2, B4*1*2, B5-R*1*2, B5*1*2, B6-R*1*2, Folio*1*2, 8K, 16K-R, 16K, 216×340 mm	
	Others	ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki (Cardstock)*2, Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Custom*3		Select from special standard sizes and custom sizes.
	Size Entry	Metric	X: 148 to 457 mm (in 1 mm increments) Y: 98 to 304 mm (in 1 mm increments)	Enter the size not included in the standard size.*4
		Inch	X: 5.83 to 18.00" (in 0.01" increments) Y: 3.86 to 12.00" (in 0.01" increments)	When you have selected [Size Entry], use [+]/[-] or the numeric keys to set the sizes of "X" (horizontal) and "Y" (vertical). Select [# Keys] to use the numeric keys for entry.
Media type  Plain (60 to 105 g/m²), Transparency, Rough, Vellum (60 to 105 g/m²), Labels, Recycle Preprinted*5, Bond, Cardstock, Color, Prepunched*5, Letterhead*5, Thick (106 g/m² and Envelope, Coated, High Quality, Index Tab Dividers, Custom 1-8*5		d <sup>*5</sup> , Thick (106 g/m <sup>2</sup> and more),		

<sup>\*1</sup> Paper size is automatically detected in the cassette.

<sup>\*2</sup> Paper size is automatically detected in the Multipurpose Tray.

<sup>\*3</sup> For instructions on how to specify the custom paper size, refer to the following:

Custom Paper Size (page 8-12)

<sup>\*4</sup> The input units can be changed in System Menu. For details, refer to the following:

<sup>&</sup>lt;u>Measurement (page 8-15)</u>

- \*5 For instructions on how to specify the custom paper types 1 to 8, refer to the following:
  - → Media Type Setting (page 8-15)

To print on preprinted or prepunched paper or on letterhead, refer to the following:

◆ Special Paper Action (page 8-14)

# **⊘** IMPORTANT

When paper size and the media type for MP tray is specified, [Paper Settings] is selected. Note that if [MP Tray] is pressed at this point, the settings will be canceled.

# NOTE

- · You can conveniently select in advance the size and type of paper that will be used often and set them as default.
  - → MP Tray Setting (page 8-8)
- If the specified size of paper is not loaded in the paper source cassette or multipurpose tray, a confirmation screen appears. When [Auto] is selected and the same size of paper as the detected original size is not loaded, a paper confirmation screen appears. Load the required paper in the multipurpose tray and press [Continue] to start copying.

# **Mixed Size Originals**









Scan the documents of different sizes that are set in the document processor all at once.

This function cannot be used if platen is used. Different Width is not displayed in inch models.

# Copying

#### **Metric Models**

	Item	Value	Description
Off			
Mixed Size Copies	Original Width	Same Width, Different Width	Select options for the width of set original.
Same Size	Original Width	Same Width, Different Width	Select options for the width of set original.
Copies	Top Page Direction	Long Edge Left, Short Edge Left	Select the original orientation of the first page.

#### **Inch Models**

	Item	Value	Description	
Off	Off			
Mixed Size C	opies	_	Originals are detected individually for size and copied to the same size paper as originals.	
Same Size Copies	Top Page Direction	Long Edge Left, Short Edge Left	Select the original orientation of the first page.	

# Sending

Item	Value	Description
Mixed Size Originals	Off	
	Same Width	Scans and sends multiple sheets of the same width using the document processor.
	Different Width	Scans and sends multiple sheets of different width using the document processor.

# **Storing**

Item	Value	Description		
Off	Off			
Mixed Size Originals	Same Width	Scans and sends multiple sheets of the same width using the document processor.		
	Different Width	Scans and sends multiple sheets of different width using the document processor.		

# **Supported Combinations of Originals**

 
#### Same Width

When the original widths are the same, the combinations of originals that can be placed are as follows.

- B4 and B5
- Ledger and Letter (A3 and A4)
- Legal and Letter-R (Folio and A4-R)

#### Example: B4 and B5







# NOTE

When mixing the original sizes as using the following combination, make sure to set "Auto Detect Original Size" to [On] for "Folio".

Folio and A4

→ Auto Detect Original Size (page 8-13)

#### Different Width (Available for metric models only)

The supported combinations of originals are as follows.

- A3, B4, A4, B5
- B4, A4-R, B5
- A4-R, B5-R, Folio

#### Example: A3, B4, A4, B5





Set the originals of A4 and B5 with vertical orientation.



#### **NOTE**

- Number of sheet that can be placed in the document processor: up to 30 sheets
- · When mixing the original sizes as using the following combination, make sure to set "Auto Detect Original Size" to [On] for "Folio".

A4-R, B5-R, and Folio

Auto Detect Original Size (page 8-13)



# **IMPORTANT**

When placing originals of different width, arrange the originals so that their left sides and top sides are aligned, and place the originals in alignment with the far width guide. If the originals are not aligned in this way, they may not be scanned correctly, and skewing or original jams may result.

# **Selecting How to Copy Originals**

Set the paper size (copy size) when printing scanned document. Select whether you wish to create individual copies on different size paper matching the original sizes or to produce all copies on the same size paper.



#### **NOTE**

This function is available regardless of whether originals have the same width or not.

#### **Mixed Size Copies**

Originals are detected individually for size and copied to the same size paper as originals.



#### Same Size Copies

Originals are all copied to the same size paper.



# **Original Orientation**









Select the orientation of the original document top edge to scan correct direction.

To use any of the following functions, the document's original orientation must be set.

- Zoom (XY Zoom)
- Duplex
- Margin/Centering
- **Border Erase**
- Combine
- Memo page


- Page #
- **Booklet**
- Stapling/Punch (optional feature)
- 2-sided/Book Original
- Text Stamp
- **Bates Stamp**

#### **NOTE**

If [On] is selected in the setting for Original Orientation in System Menu, the selection screen for original orientation appears when you select any of the above functions.

→ Orientation Confirmation (page 8-18)

Select original orientation from [Top Edge on Top], [Top Edge on Left] or [Auto].

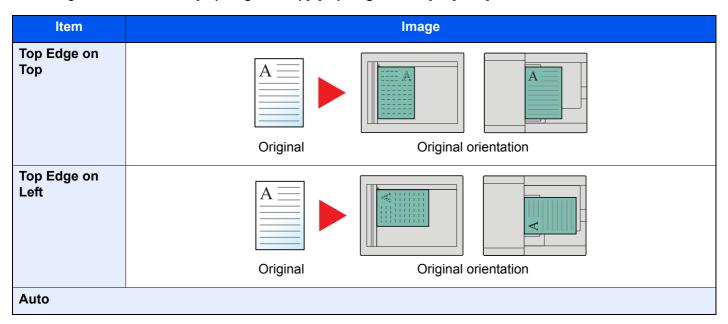



# **NOTE**

The default setting for Original Orientation can be changed.

Orig. Orientation (Copy) (page 8-18)

# **Fold**







Folds the finished documents. Select the fold method.

The following folding options and orientations are available.

	Origi	nal orientation	Orientation: Landscape	Orientation: Portrait
Item			A STATE OF THE PARTY OF THE PAR	A W
Bi-Fold				
	Saddle Sti	itch	A	
Tri-Fold	Inside	R to L/B to T	A	A
		L to R/T to B		
	Outside	R to L/B to T	A	A
		L to R/T to B		



- Folding requires the optional 4,000-Sheet Finisher and the folding unit.
- For details on paper sizes and numbers of sheets that can be folded, refer to the following:
  - → Folding Unit (For 4,000-Sheet Finisher) (page 11-26)

# **Collate/Offset**







Offsets the output by page or set.

Item	Image	Description
Collate		Scans multiple originals and delivers complete sets of copies as required according to page number.
Offset	Without Document Finisher (Option)	Printed copies are produced after rotating each set (or page*1) by 90 degrees.  NOTE  To use offsetting, the same size of paper as the selected paper tray must be loaded in a different orientation in a different paper tray.  The paper sizes supported in Offset: A4, B5, Letter and 16K.
	With Document Finisher (Option)	Printed copies are segregated after each set of copies (or after each page*1).  NOTE  • The optional Document Finisher is required.  • 4.000-Sheet Finisher (page 11-25)  • The paper sizes supported in Offset: A3, A4, B4, B5, 216×340 mm, Ledger, Letter, Legal, Oficio II, 8K and 16K.

<sup>\*1</sup> If [Off] is selected for "Collate" setting, [Each Page] appears. When [On] is selected, [Each Set] appears.

# Staple/Punch







# **Staple**



This function requires the optional Document Finisher. Note also that saddle stitching (center stapling) requires the Folding Unit.

For details on paper sizes and numbers of sheets that can be stapled, refer to the following:

- 4,000-Sheet Finisher (page 11-25)
- Folding Unit (For 4,000-Sheet Finisher) (page 11-26)

Staples the finished documents. The staple position can be selected.

Item	Value	Description	
Staple	Off		
	Top Left	Select the staple position. For details on original	
	Top Right	orientation and staple position, refer to the following:	
	2 staples Left	<ul> <li>Original Orientation and Punch Hole Position (page 6-29)</li> </ul>	
	2 staples Top		
	2 staples Right		
	Saddle Stitch	Select whether to fold the finished documents in two with staples in the center.	
		When placing originals, be sure to place the cover page at the bottom. For details on saddle stitching, refer to the following:	
		→ Booklet (page 6-43)	
Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].	

### **Original Orientation and Staple Position**

Original orientation	Paper orientation		Top Edg	e on Left
Paper orientation	A <u>=</u>	A I	A	A STATE OF THE STA
Cassette paper load direction				
Cassette paper load direction				



One position staple is not slanted for the following paper sizes.

B5-R, 16K-R

# **Mixed Size Stapling**


Even with mixed paper sizes, if the sizes have the same width as shown in the combinations below, the output can be stapled.

- A3 and A4
- B4 and B5
- Ledger and Letter
- Ledger and Letter-R
- 8K and 16K



# **NOTE**

- Number of sheets that can be stapled: up to 30 sheets.
- When performing Mixed Size Stapling, refer to the following:
  - → Mixed Size Originals (page 6-20)

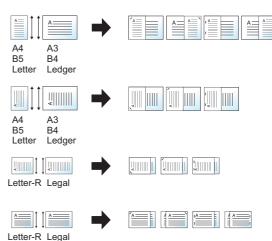

### **Punch**

Punches holes in sets of finished documents.



- This function requires the optional 4,000-Sheet Finisher and Punch Unit.
- For details on paper sizes that can be punched, refer to the following:
  - ▶ Punch Unit (For 4,000-Sheet Finisher) (page 11-25)
- The inch model provides two-hole and three-hole punching. The metric model provides two-hole and four-hole punching.

Item	Value	Description	
Punch	Off		
	2 holes Left	Select the position of punch holes. For details on original	
	2 holes Top	orientation and position of punch holes, refer to the following:	
	2 holes Right	Original Orientation and Punch Hole Position (page	
	3 holes Left	<u>6-29)</u>	
	3 holes Top		
	3 holes Right		
	4 holes Left		
	4 holes Top		
	4 holes Right		
Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].	

# **Original Orientation and Punch Hole Position**

lm	nage	Original o	rientation
Original	Print results	Glass platen	Document processor
A			A
Y W	o <		
A		A	A
W W W W W W W W W W W W W W W W W W W	A A O		

# NOTE

The inch model provides two-hole and three-hole punching. The metric model provides two-hole and four-hole punching.

# **Paper Output**







Specify the output tray.

Item	Description	
Lower Left Tray	r Left Tray Outputs to the Lower Left Tray of the machine.	
Upper Left Tray Outputs to the Upper Left Tray of the machine.		
Right Tray Outputs to the Right Tray of the machine.		

# with optional 4,000-Sheet Finisher

Item	Description	
Right Tray	Outputs to the Right Tray of the machine.	
Tray A	Delivery to the Tray A of the optional Document Finisher.	
Tray B	Delivery to the Tray B of the optional Document Finisher.	
Tray C	Delivery to the Tray C of the optional Document Finisher.	

# with optional Mailbox

Item	Description
Right Tray	Outputs to the Right Tray of the machine.
Tray A	Delivery to the Tray A of the optional Document Finisher.
Tray B	Delivery to the Tray B of the optional Document Finisher.
Tray C	Delivery to the Tray C of the optional Document Finisher.
Tray 1 to 7	Delivery to tray 1 to 7 (tray 1 is the uppermost tray) of the optional Mailbox.  When [ <b>Heavy 3</b> ] (164 g/m² - ) or higher is set in Paper Weight and Mailbox (Option) is set for the output destination, the output destination is automatically changed to a tray that can be used.



The default setting for Paper Output can be changed.

→ Paper Output (page 8-17)

# **Density**







Image Quality

Color/ Image Quality USB Memory

Functions

Adjust density.

(Value: [-4] (Lighter) to [+4] (Darker))



# **Original Image**







Functions / In





Functions

Select original image type for best results.

# Copying

Item	Value	Description
Text+Photo*1 *2	Printer Output	Best for mixed text and photo documents printed on this machine originally.
	Book/Magazine	Best for mixed text and photos printed in a magazine, etc.
Photo	Printer Output	Best for photos printed on this machine originally.
	Book/Magazine	Best for photos printed in a magazine, etc.
	Photo Paper	Best for photos taken with a camera.
Text*1	Off (Light Text/Fine Line)	Best for documents that are mostly text and were originally printed on this machine.
	On (Light Text/Fine Line)	Sharply renders pencil text and fine lines.
Graphic/Map*1	Printer Output	Best for maps and diagrams printed on this machine originally.
	Book/Magazine	Best for maps and diagrams printed in a magazine.

<sup>\*1 &</sup>quot;Highlighter" can be selected.

Select to bring out text and markings made with a highlighter pen. Reproduces the color of the highlighter pen to the extent possible.

<sup>\*2</sup> If gray text is not printed completely using [Text + Photo], selecting [Text] may improve the result.

# Sending/Printing/Storing

Item	Description	
Text+Photo	Best for mixed text and photo documents.	
Photo	Best for photos taken with a camera.	
Text*1	Sharply renders pencil text and fine lines. Select [Text], [Text (Fine Line)] or [Text (OCR)].	

<sup>\*1</sup> The setting "for OCR" can be configured. When [**Text (OCR)**] is selected, scanning produces an image that is suitable for OCR. This function is only available when Color Selection is set to Black and White.

# **EcoPrint**









Functions

EcoPrint saves toner when printing. Use this function for test prints or any other occasion when high quality print is not required.







Item	Value	Description
Off		
On	[1] (Low) to [5] (High)	Adjust the Toner Save Level.

# **Color Selection**











Functions

Select the color mode setting.

Item	Description
Auto Color (Color/Gray)	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Grayscale.
Auto Color (Color/B & W)	Automatically recognizes whether the document is color or black and white, and scan color documents in Full Color and black and white documents in Black and White.
Full Color	Scans the document in full color.
Grayscale	Scans the document in grayscale. Produces a smooth, detailed image.
Black & White	Scans the document in black and white.

<sup>→</sup> Color Selection (page 6-32)

# **Sharpness**







Functions

Image Quality


Color/ Image Quality

Functions

Adjusts the sharpness of image outlines.

When copying penciled originals with rough or broken lines, clear copies can be taken by adjusting sharpness toward "Sharpen". When copying images made up of patterned dots such as magazine photos, in which moire\*1 patterns appear, edge softening and weakening of the moire effect can be obtained by setting the sharpness toward "Blur".

When [AII] is selected, select [-3] to [3] (Blur - Sharpen) to adjust the sharpness. When [Text/Fine Line] is selected, select [0] to [3] (Normal - Sharpen) to adjust the sharpness.

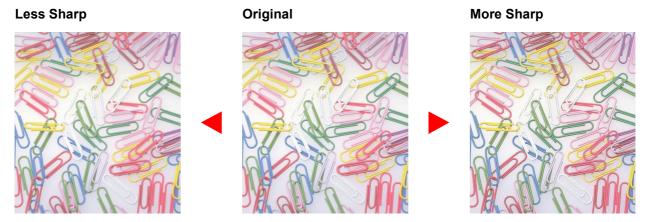

Item	Value	Description	
All	[+1] to [+3] (Sharpen)	Emphasizes the image outline.	
	[-1] to [-3] (Blur)	Blurs the image outline. Can weaken a Moire*1 effect.	
Text/Fine Line	[0] to [3] (Normal - Sharpen)	Makes letters and lines appear sharper. Only text and fine lines are emphasized.	

Patterns that are created by irregular distribution of halftone dots.

# **Contrast**





Color/ Image Quality



Image Quality Image Quality

Color/

Functions

You can adjust the contrast between light and dark areas of the image.



Item	Description	
[+1] to [+4] (Higher)	Increases the sharpness of colors.	
[-1] to [-4] (Lower)	Creates smoother colors.	

# **Background Density Adj. (Background Density Adjustment)**













Removes dark background from originals, such as newspapers.

If the ground color is obtrusive, select [Auto]. If [Auto] does not remove the ground color, select [Manual] and adjust the density of the ground color.

Item	Description	
Off	Does not adjust the ground color.	
Auto	Automatically adjusts the background density based on the original.	
Manual	Select [1] to [5] (Lighter - Darker) to adjust the background density manually.	

# **Prevent Bleed-thru**









 




Functions

Hides background colors and image bleed-through when scanning thin original.

(Value: [Off] / [On])



# Zoom



Adjust the zoom to reduce or enlarge the image.


# Copying

The following zoom options are available.

#### **Standard Zoom**

#### Auto

Adjusts the image to match the paper size.

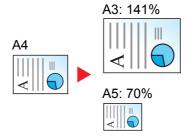


#### **Standard Zoom**

Reduces or enlarges at preset magnifications.

#### **Zoom Entry**

 Manually reduces or enlarges the original image in 1% increments between 25% and 400%. Use the numeric keys or select [+] or [-] to enter the any magnification.




Item	Value	Description
Standard Zoom		
Metric  Auto, 400% Max., 200% A5>>A3, 141% A4>>A3 B5>>B4, 127% Folio>>A3, 106% 11x15">>A3, 100%, 90% Folio>>A4, 75% 11x15">>A4, 70% A3>>A4 A4>>A5, 50%, 25% Min. 25 to 400% (in 1% increments)		Select a preset ratio.  Select [Auto] to use Auto Zoom.  Select [+] or [-] to change the displayed magnification as desired.  Select [# Keys] to use the numeric keys for entry.
Metric (Asia Pacific)	Auto, 400% Max., 200% A5>>A3, 141% A4>>A3 B5>>B4, 122% A4>>B4 A5>>B5, 115% B4>>A3 B5>>A4, 100%, 86% A3>>B4 A4>>B5, 81% B4>>A4 B5>>A5, 70% A3>>A4 B4>>B5, 50%, 25% Min. 25 to 400% (in 1% increments)	
Inch	Auto, 400% Max., 200% STMT>>Ledger, 154% STMT>>Legal, 129% Letter>>Ledger, 121% Legal>>Ledger, 100%, 78% Legal>>Letter, 77% Ledger>>Legal, 64% Ledger>>Letter, 50% Ledger>>STMT, 25% Min. 25 to 400% (in 1% increments)	

#### **XY Zoom**
 
#### **XY Zoom**

Select vertical and horizontal magnifications individually. Magnifications can be set in 1% increments between 25% and 400%.



Item	Value	Description
XY Zoom	X: 25 to 400% (in 1% increments) Y: 25 to 400% (in 1% increments)	Select vertical and horizontal magnifications individually.  Select [+] or [-] to change the displayed magnifications of "X" (horizontal) and "Y" (vertical).  Select [# Keys] to use the numeric keys for entry.
Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction.  Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press [OK].

# **Printing/Sending/Storing**

Item Description	
100% Reproduces the original size.	
Auto Reduces or enlarges original to sending/storing size.	

# NOTE

- To reduce or enlarge the image, select the paper size, sending size, or storing size.
  - ▶ Paper Selection (page 6-19)
  - → Sending Size (page 6-69)
  - → Storing Size (page 6-77)
- Some combinations of original size and paper size or sending size may cause the image to be positioned at the edge of the paper. To center the original vertically and horizontally on the page, use the Centering function.
  - → Margin/Centering, Margin, Centering (page 6-40)

# **Combine**






Combines 2 or 4 original sheets into 1 printed page.


You can select the page layout and the type of boundary lines around the pages.

The following types of the boundary lines are available.

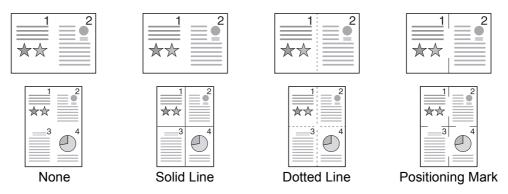

Item		Value	Description	
Off				
2 in 1 Layout		L to R/T to B, R to L/B to T	Select the page layout of scanned originals.	
	Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the boundary line type. Select [Border Line] to select the page boundary line, and select [OK].	
	Original Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction.	
			Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].	
4 in 1	Layout	Right then Down, Left then Down, Down then Right, Down then Left	Select the page layout of scanned originals.	
	Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the boundary line type. Select [Border Line] to select the page boundary line, and select [OK].	
	Original Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction.  Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left].  Then select [OK].	

# Layout image

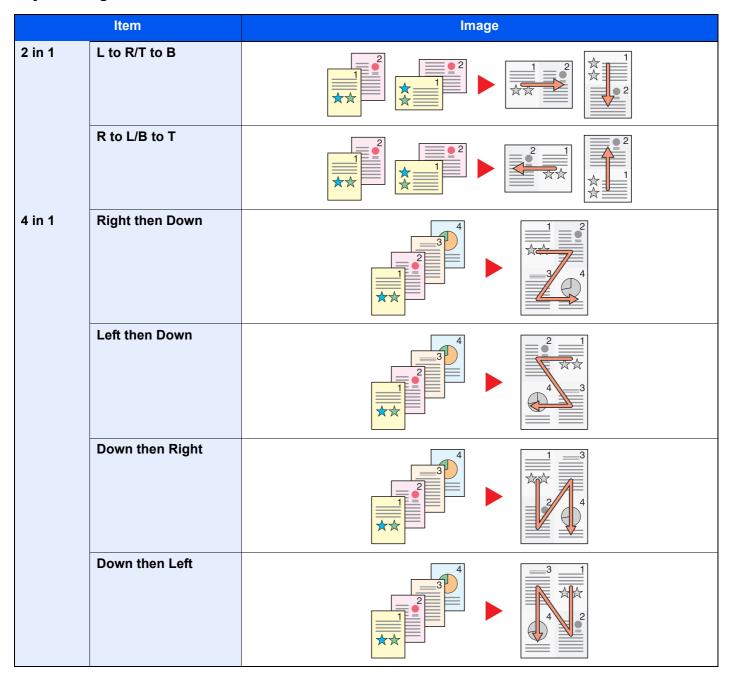

# NOTE

- The paper sizes supported in Combine mode: A3, A4-R, A4, A5-R, B4, B5-R, B5, Folio, 216×340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Oficio II, 8K, 16K-R and 16K.
- When placing the original on the platen, be sure to copy the originals in page order.

# Margin/Centering, Margin, Centering









# Copying/Printing

 
Add margins (white space). In addition, you can set the margin width and the back page margin.

Centering: Centers the original image on the paper when copying onto paper different from the original size.



The default setting for margin width can be changed.

→ Margin Default (page 8-19)



Item		Value	Description
Off			
Margin	Left/Right	Metric: -18 mm to +18 mm	Set the margin width.*1
	Top/Bottom	(in 1 mm increments) Inch: -0.75" to +0.75" (in 0.01" increments)	Select [+] or [-] to enter the margins for "Left/ Right" and "Top/Bottom". Select [# Keys] to use the numeric keys for entry.
	Back Page	Auto, Manual	For duplex copying, select [Back Page] and select [Auto] or [Manual].
			When [Auto] is selected, an appropriate margin is applied automatically on the rear page depending on a margin specified for the front page and a binding orientation.
			When [Manual] is set, you can set a different margin than the front on the back. Set the margin in the screen that is displayed. The setting selections are the same as for the front.
Original Orientation		Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction.  Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].
Centering*2	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction.  Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].

<sup>\*1</sup> The input units can be changed in System Menu.

<sup>→</sup> Measurement (page 8-15)

<sup>\*2</sup> Not displayed when printing from removable memory.

#### Sending/Storing

When you have sent/stored the original after specifying the original size and sending/storing size, depending on these sizes, a margin is created at the bottom, left, or right side of paper. By using the Centering function, the image is placed with a margin equally created for all edges.

(Value: [Off] / [On])


# **Border Erase**



Erases the black border that forms around the image.


The following modes are available.

#### **Border Erase Sheet**

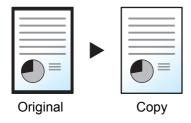


Erases black borders around the single sheet original.

#### **Border Erase Book**

 

Erases black borders around the edges and in the middle of the original such as a thick book. You can specify the widths individually to erase the borders around the edges and in the center of the book.

#### Individual Border Erase

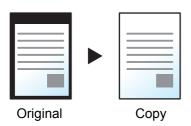

You can specify border erase widths individually for all edges.

# NOTE

- The default setting for border erase width can be changed.
  - → Border Erase Default (page 8-19)
- The default width for back page can be changed.
  - → Border Erase to Back Page (page 8-19)

Ito	em	Value	Description
Off			
Border Erase Sheet	Border	Metric: 0 mm to 50 mm (in 1 mm increments) Inch: 0.00" to 2.00" (in 0.01" increments)	Set the border erase width.*1 Set the value by selecting [+] or [-]. Select [# Keys] to use the numeric keys for entry.
	Back Page	Same as Front Page, Do Not Erase	For 2-sided originals, select [Back Page] and then select [Same as Front Page] or [Do Not Erase].
Border Erase	Border	Metric: 0 mm to 50 mm	Set the border erase width.*1
Book	Gutter	(in 1 mm increments) Inch: 0.00" to 2.00" (in 0.01" increments)	Set the value by selecting [+] or [-]. Select [# <b>Keys</b> ] to use the numeric keys for entry.
	Back Page	Same as Front Page, Do Not Erase	For 2-sided originals, select [Back Page] and then select [Same as Front Page] or [Do Not Erase].
Individual	Тор	Metric: 0 mm to 50 mm	Set the border erase width.*1
Border Erase	Bottom	(in 1 mm increments) Inch: 0.00 to 2.00"	Set the value by selecting [+] or [-]. Select [# <b>Keys</b> ] to use the numeric keys
	Left	(in 0.01" increments)	for entry.
	Right		
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].
	Back Page	Same as Front Page, Do Not Erase	For 2-sided originals, select [Back Page] and then select [Same as Front Page] or [Do Not Erase].

<sup>\*1</sup> The input units can be changed in System Menu.

→ Measurement (page 8-15)

# **Booklet**



The Booklet option allows you to copy sheet originals and produce booklets such as small brochures or pamphlets. A booklet, such as a magazine, is made by folding at the center.

You can print the cover page onto colored paper or thick paper. Paper for the cover is supplied from the multipurpose tray. To feed the cover paper from the cassette, refer to the following:

Paper Source for Cover (page 8-13)




Using the optional 4,000-Sheet Finisher and the folding unit enables you to saddle stitch your copies (fold them in two with staples in the center). Supported paper sizes are A3, A4-R, B4, Ledger, Letter-R, Legal, Oficio II and 8K.

Type of original	Original size	Paper size
One-sided original, Two-sided original	All*1	A3, A4-R, A4, B4, B5-R, B5, Ledger, Letter-R, Letter, Legal, Oficio II and 8K
Book Original	A3, A4-R, A5-R, B4, B5-R, Ledger, Letter-R and 8K	


<sup>\*1</sup> Except for custom sized originals.

### Binding on the left side

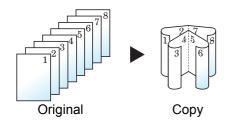


The folded copies can be read from left to right.

# Binding on the right side

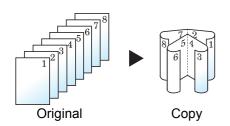

The folded copies can be read from right to left.

# Top binding

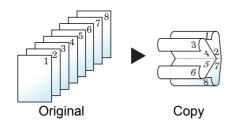

The folded copies can be read from top to bottom.

# Copying

Item		Value	Description	
Off				
1-sided >> Booklet	Finishing		Binding Left, Binding Right, Binding Top	Select the binding orientation of copies.
	Cover	Off		
		Cover: Front Cover Print Setting	Not Print, Front Only, Back Only, Duplex	Select whether to add the cover. Select the printing method for the cover to be inserted.
		Cover: Back Cover Print Setting	Not Print, Front Only, Back Only, Duplex	Select [Cover], and then [Cover], and specify the print setting for the cover to be inserted. Select from [Not Print], [Back Only], [Front Only], and [Duplex], and press [OK].
	Staple/Fold	1	Off, Fold Only, Saddle Stitch	To fold finished copies in half, select [Staple/Fold] and then select [Fold Only].  To use saddle stitching, select [Staple/Fold] and then select [Saddle Stitch].
	Original Orientation		Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press [OK].
2-sided >> Booklet	Original		Binding Left/Right, Binding Top	Select the binding direction of originals.
	Finishing		Binding Left, Binding Right, Binding Top	Select the binding orientation of copies.
	Cover	Off	1	
		Cover: Front Cover Print Setting	Not Print, Front Only, Back Only, Duplex	Select whether to add the cover. Select the printing method for the cover to be inserted.
		Cover: Back Cover Print Setting	Not Print, Front Only, Back Only, Duplex	Select [Cover], and then [Cover], and specify the print setting for the cover to be inserted. Select from [Not Print], [Back Only], [Front Only], and [Duplex], and press [OK].
	Staple/Fold		Off, Fold Only, Saddle Stitch	To fold finished copies in half, select [Staple/Fold] and then select [Fold Only].  To use saddle stitching, select [Staple/Fold] and then select [Saddle Stitch].
Original Orientation		rientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then press [OK].

Item		Value	Description
Book >> Booklet*1	Original	Binding Left, Binding Right	Select the binding direction of originals.
	Finishing	Binding Left, Binding Right	Select the binding orientation of copies.
	Cover	Off, Cover	Select whether to add the cover. Select [Cover] to select [Cover], and select [OK].
	Staple/Fold	Off, Fold Only, Saddle Stitch	To fold finished copies in half, select [Staple/Fold] and then select [Fold Only].
			To use saddle stitching, select [Staple/Fold] and then select [Saddle Stitch].

<sup>\*1 [</sup>Top Edge on Top] is set for "Original Orientation".

# **Printing**

Item			Value	Description
Off				
Booklet	Binding		Left, Right, Top	Select the binding orientation of copies.
	Cover	Off		
		Cover: Front Cover Print Setting	Not Print, Front Only, Back Only, Duplex	Select whether to add the cover. Select the printing method for the cover to be inserted.
		Cover: Back Cover Print Setting	Not Print, Front Only, Back Only, Duplex	Select [Cover], and then [Cover], and specify the print setting for the cover to be inserted. Select from [Not Print], [Back Only], [Front Only], and [Duplex], and press [OK].
	Staple/Fo	ld	Off, Fold Only, Saddle Stitch	To fold finished copies in half, select [Staple/Fold] and then select [Fold Only]. To use saddle stitching, select [Staple/Fold] and then select [Saddle Stitch].

# NOTE

- The number of sheets that can be folded or Saddle Stitch stapled varies depending on paper weight. For details, refer to the following:
  - → Folding Unit (For 4,000-Sheet Finisher) (page 11-26)
- When placing the original on the platen, be sure to place the originals in page order.

# **Duplex**






Produces two-sided copies. You can also create single-sided copies from two-sided originals.

The following modes are available.

#### One-sided to Two-sided

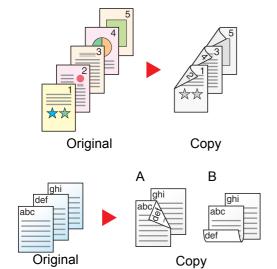

Produces two-sided copies from one-sided originals. In case of an odd number of originals, the back side of the last copy will be blank.

The following binding options are available.

- A Binding Left/Right: Images on the second sides are not rotated.
- B Binding Top: Images on the second sides are rotated 180 degrees. Copies can be bound on the top edge, facing the same orientation when turning the pages.

#### Two-sided to One-sided

 


Copies each side of a two-sided original onto two individual sheets. Place originals in the document processor.

The following binding options are available.

- Binding Left/Right: Images on the second sides are not rotated.
- Binding Top: Images on the second sides are rotated 180 degrees.

#### Two-sided to Two-sided




Produces two-sided copies from two-sided originals. Place originals in the document processor.



# NOTE

 The paper sizes supported in Duplex mode: A3, A4-R, A4, A5-R, B4, B5-R, B5, 216×340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Executive, Oficio II, Folio, 8K, 16K-R and 16K.

#### **Book to One-sided**



Produces a 1-sided copy of a 2-sided or open book original.


The following binding options are available.

Binding Left: Originals with facing pages are copied from left to right. Binding Right: Originals with facing pages are copied from right to left.

# NOTE

- The original sizes supported in Book to One-sided mode: A3, A4-R, A5-R, B4, B5-R, Ledger, Letter-R and 8K
- The paper sizes supported in Book to One-sided mode: A4-R, A4, B5-R, B5, Letter-R, Letter, 16K-R and 16K

#### **Book to Two-sided**

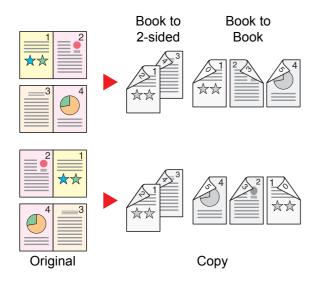

Produces two-sided copies from an open book original with facing pages.

# NOTE

- The original sizes supported in Book to Two-sided mode: A3, A4-R, A5-R, B4, B5-R, Ledger, Letter-R and 8K
- The paper sizes supported in Book to Two-sided mode: A4-R, A4, B5-R, B5, Letter-R, Letter, 16K-R and 16K

### Copying

Prints 1-sided or open book originals to 2-sided, or 2-sided or open book originals to 1-sided. Select the binding orientation for original and finished documents.

Item		Value	Description
1-sided >> 1-sided		_	Disables the function.
1-sided >> 2-sided	Finishing	Binding Left/Right, Binding Top	Select the binding orientation of copies.
z-sided	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].

It	em	Value	Description
2-sided >>	Original	Binding Left/Right, Binding Top	Select the binding orientation of originals.
1-sided	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].
2-sided >>	Original	Binding Left/Right, Binding Top	Select the binding direction of originals.
2-sided	Finishing	Binding Left/Right, Binding Top	Select the binding orientation of copies.
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].
Book >> 1-sided*1	Original	Binding Left, Binding Right	Select the binding direction of originals.
Book >>	Original	Binding Left, Binding Right	Select the binding direction of originals.
2-sided*1	Finishing	Book>>2-sided, Book>>Book	Select the desired Duplex option.

<sup>\*1 [</sup>Top Edge on Top] is set for "Original Orientation".

When placing the original on the platen, consecutively replace each original and press the [Start] key.

After scanning all originals, select [Finish Scan] to start copying.

# **Printing**

Print a document to 1-sided or 2-sided sheets.

Item	Value	Description
1-sided	_	Disables the function.
2-sided	Left/Right	Prints a 2-sided document so that the sheets are aligned properly for binding on the left or right.
	Тор	Prints a 2-sided document so that the sheets are aligned properly for binding on the top.

# Cover



Adds a cover to the finished documents.

You can print the first page and/or the last page onto colored paper or thick paper fed from the different paper source than the regular one. The following two options are available. Paper for the cover is supplied from the multipurpose tray. To feed the cover paper from the cassette, refer to the following:

# → Paper Source for Cover (page 8-13)

The printing method can be set for the covers. Specify a print setting for each cover.

Item		Value	Description
Off			
Front Cover		Not Print, Front Only, Back Only*1, Duplex*1	Different paper has to be inserted for the first page of the document.  Select [Stop Printing], [Front Only], [Back Only], or [Duplex] for the print setting of the inserted paper.
Front and Back Covers	Front Cover Print Setting	Not Print, Front Only, Back Only*1, Duplex*1	Different paper has to be inserted for the first page and last page of the document.
	Back Cover Print Setting	Not Print, Front Only, Back Only*1, Duplex*1	Select [Stop Printing], [Front Only], [Back Only], or [Duplex] for the print setting of the inserted paper.

<sup>\*1</sup> This item appears when finishing is set to 2-sided in "Duplex".

<sup>→</sup> Duplex (page 6-46)


### **Form Overlay**



Prints the original document overlaid with a form or image.

Once you scan and register the form, the form is overlaid onto the original. You can also use a form that is already registered in the Document Box.

Place the original for the form on top of the other originals. When using the optional document processor, the first page of the originals should be placed on the top.

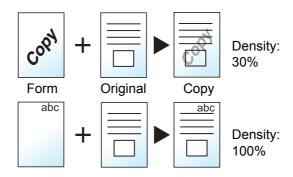

li li	tem	Value	Description
Off		'	
Select Stored Form	Density	10% to 100%	Specify the density of the form to be overlaid.
			Select [+] or [-] in "Density".
	Finishing	Transparent	The form is overlaid on the document.
	Image	Form on Original Image	The form is placed on top of the document.
		Original Image on Form	The form is placed under the document.
	Select Form*1	_	Select the form to be overlaid from Document Box.
			Select [Select Form] to display the Document Box that store documents which can be used as a form. Select the desired form from the list and select [OK].
Scan New Form*2	Density	10% to 100%	Specify the density of the form to be overlaid.
			Select [+] or [-] in "Density".
	Finishing	Transparent	The form is overlaid on the document.
	Image	Form on Original Image	The form is placed on top of the document.
		Original Image on Form	The form is placed under the document.

<sup>\*1</sup> Form must be previously registered in Job Box.

<sup>→</sup> Form for Form Overlay (page 5-62)

<sup>\*2</sup> Not displayed when printing from the custom box.

### **Erase Shadowed Areas**









When scanning with the document processor open, erase the extra shaded area.

(Value: [Off] / [On])




### Page #





Adds page numbers to the finished documents.

The available formats for numbering are [-1-], [P.1] and [1/n]. The format [1/n] prints the total number of pages in the place of "n".

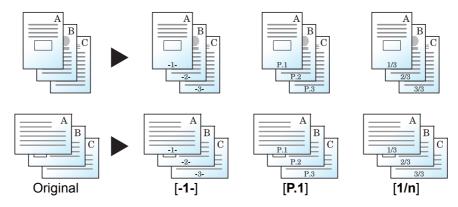

Select the numbering format from [-1-], [P.1] or [1/n].

	Item	Value	Description
Off			
-1-, P.1, 1/n	Position	Top Left, Top Middle, Top Right, Bottom Left, Bottom Middle, Bottom Right, Detail	Select the print position of page number.  Select [Detail] to specify the detailed page number position using numeric values, and to set the page number position ([Same as Front Page], [Mirror Front Page]) when a page number is placed on the back side of the paper in duplex printing.
	1st Page	1 to 10	To start page numbering from a page other than the first page, select [+] or [-] in "1st Page" to specify the starting page. Select [# Keys] to use the numeric keys for entry.
	Start #	1 to 999	To start the numbering with a number other than 1, select [+] or [-] in "Start Number" to specify the starting number. Select [# Keys] to use the numeric keys for entry.

	Item		Value	Description
-1-, P.1, 1/n			_	When a scanned document contains blank pages, add a check mark if you require blank pages to be numbered. Remove the check mark to skip blank pages.
			Auto, Manual (-10 to 0)	If you do not want page numbering through to the last page, select [Last Page]. Select [Manual] and select [+] or [-] to specify the final page to be numbered (a negative number of pages counting backwards from the last page), and then select [OK]. Specify the desired number up to -10. Select [# Keys] to use the numeric keys for entry.
	Font	Size	Font sizes registered in "Text (Text Stamp)" are displayed.  Text (Text Stamp) (page 8-21)	Set the font size of page number.
		Style	None, Bold, Italic, Bold/Italic	Set the font style of page number. Select a font style by checking the checkbox.
		Font	Courier, Letter Gothic	Set the font of page number.
		Color	Black, White	Set the color of page number.
		Density	10 to 100% (in 10% increments)	Set the density of the color of page number. Set the value by selecting [+] or [-].
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of page number.
	Denominator#*2		Auto, Manual (1 to 999)	The total number of pages "n" in the format [1/n] can be changed manually. Select [Denominator #] and select [Manual]. Select [+] or [-] to enter the total number of pages and select [OK]. Select [# Keys] to use the numeric keys for entry.
	Original Orientation		Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].

<sup>\*1</sup> Not displayed when printing from the custom box.\*2 This item appears when [1/n] is selected.

## **Insert Sheets/Chapters**



Insert a separator sheet, or make the first page of the chapter the front page when performing duplex printing.

The configured pages are displayed on the list.

		Item		Value	Description
Off				'	
On A	Add	Separator	Separator Sheet	1 to 998	Enter document page numbers where separators get inserted. Select [+] or [-] to enter the page number. Select [# Keys] to use the numeric keys for entry.
			Paper Source	Cassette 1 to 7, Multipurpose tray	Select the source of the paper for the separator.
		Chapter	Chapter Page	2 to 998	Enter the page numbers of the original document where you want to insert the chapters. Select [+] or [-] to enter the page number. Select [# Keys] to use the numeric keys for entry.
	Edit			_	Change the configuration of the chapter page and separator. The method of operation is the same as that of a new addition.
	Delete		_	Delete the page selected in the list.	
	Sheets Setting		Not Print, Front Only, Back Only*1, Duplex*1	Select [Not Print], [Front Only], [Back Only], or [Duplex] for the print setting of the inserted paper.	

<sup>\*1</sup> This item appears when finishing is set to 2-sided in "Duplex".

**<sup>→</sup>** <u>Duplex (page 6-46)</u>

### **Memo Page**



Delivers copies with a space for adding notes.


You can also print two originals onto the same sheet with a space or add lines to indicate page boundaries.

Select [Layout A] or [Layout B] and select the page layout from "Layout".




The paper sizes supported in Memo mode: A3, A4-R, A4, A5-R, B4, B5-R, B5, 216×340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Oficio II, Folio, 8K, 16K-R and 16K

#### **Layout A**

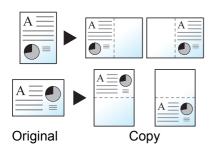

Reduces images of each original page for printing onto half of a page, leaving the other half blank for notes.

#### Layout B

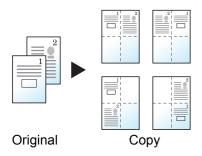

Reduces images of two original pages for printing onto half of a page, leaving the other half blank for notes.

	Item	Value	Description
Off			
Layout A	Layout	Left/Top, Right/Bottom	Select how to lay out the pages of scanned original.
	Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the boundary line type. Select [Border Line] to select the page boundary line, and select [OK].
	Original Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].


Item		Value	Description
Layout B	Layout	Top L to R, Top R to L, Top L to B, Top R to B	Select how to lay out the pages of scanned original.
	Border Line	None, Solid Line, Dotted Line, Positioning Mark	Select the boundary line type. Select [Border Line] to select the page boundary line, and select [OK].
	Original Orientation	Top Edge on Top, Top Edge on Left	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].

## **Image Repeat**




Tiles the 1 copied sheet with an original image. You can also specify the area of the original to repeat.

#### **Zoom Priority**

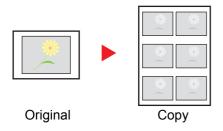

Repeat an image of specified zoom ratio.

### **Double Copy**

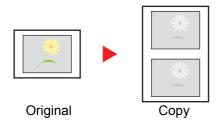

Copy two image.

Item		V	alue	Description	
Off					
Zoom Pr	iority		25 to 400% (in 1% increments)	Set the default screen.  Select [+] or [-] to change the displayed magnification as desired. Select [# Keys] to use the numeric keys for entry.	
	Specify	Off			
	Repeat Area	On: Start	Metric*1 X1: 0 to 431 mm Y1: 0 to 296 mm Inch X1: 0.00 to 16.99" Y1: 0.00 to 11.68"  Metric X2: 1 to 432 mm Y2: 1 to 297 mm Inch X2: 0.01 to 17.00" Y2: 0.01 to 11.69"	To set the area of the original to be repeated, select [On] for "Specify Repeat Area".  Select [+] or [-] to input the area of the original to be repeated Select [# Keys] to use the numeric keys for entry.  Y1: Length from top left of platen to top edge of repeat area  X1: Length from top left of platen to left edge of repeat area  Y2: Height of repeat area  X2: Width of repeat area	
Double Copy				Makes 2 copies of the same original on a single sheet.  For example, you can double-copy an A5 original onto an A4 sheet which you then cut in half to make 2 copies that are identical to the original.	

<sup>\*1</sup> The input units can be changed in System Menu.

<sup>→</sup> Measurement (page 8-15)

## **Text Stamp**









You can add a text stamp on the documents.

#### **Copying/Printing**



This cannot be set when Text Stamp is set in the system settings.

→ Printing Jobs (page 8-22)

	Item	Value	Description
Off			
On	Stamp	Keyboard, Template 1 to 8	Select [ <b>Keyboard</b> ] and enter the text string to be printed, or select a text stamp from the displayed templates.
			NOTE
			Templates that have been set will appear. For details on registering templates, refer to the following:
			→ Text (Text Stamp) (page 8-21)
	Stamp Method	Each Print Page,	Select the stamp method.
		Each Original Page	Select [ <b>Stamp Method</b> ] and set the stamp method for text stamp.
	Position	Top Left, Top Middle, Top	Set the stamp position to be printed.
		Right, Middle Left, Center, Middle Right, Bottom Left,	Select [ <b>Position</b> ] and select the text stamp position.
		Bottom Middle, Bottom Right, Detail	Select [ <b>Detail</b> ] to specify the detailed stamp position using numeric values, and to set the stamp position and angle when a stamp is placed on the back side of the paper in duplex printing.

	Item		Value	Description
On	On Font Size		Registered font sizes are displayed. For details on registering font sizes, refer to the following:  Font (Text Stamp) (page 8-21)	Set the font size of text stamp.
		Character Border	Off, Circle, Rectangle, Underline	Set the character border and underline.
		Style	None, Bold, Italic, Bold/Italic	Set the font style of text stamp. Select a font style by checking the checkbox.
		Font	Courier, Letter Gothic	Set the font of text stamp.
		Color	Black, White	Set the color of text stamp.
		Density	10 to 100% (in 10% increments)	Set the density of text stamp color. Set the value by selecting [+] or [-].
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of text stamp.
Original Orientation		rientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].

### Sending/Storing



This cannot be set when Text Stamp is set in the system settings.

- → Sending Jobs (page 8-24)
- → Storing Jobs (page 8-26)

	Item		Value	Description
Off				
On	Stamp		Keyboard, Template 1 to 8	Select [ <b>Keyboard</b> ] and enter the text string to be printed, or select a text stamp from the displayed templates.
				NOTE  Templates that have been set will appear. For details on registering templates, refer to the following:  → Text (Text Stamp) (page 8-21)
	Position		Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right, Detail	Set the stamp position to be printed.  Select [Position] and select the text stamp position.  Select [Detail] to set the stamp position using numeric values, and to set the stamp angle.
	Font	Size	Registered font sizes are displayed. For details on registering font sizes, refer to the following:  Font (Text Stamp) (page 8-21)	Set the font size of text stamp.
		Character Border	Off, Circle, Rectangle, Underline	Set the character border and underline.
		Style	None, Bold, Italic, Bold/Italic	Set the font style of text stamp. Select a font style by checking the checkbox.
		Font	Courier, Letter Gothic	Set the font of text stamp.
		Color	Black, Red, Green, Blue, Cyan, Magenta, Yellow, White	Set the color of text stamp.
		Density	10 to 100% (in 10% increments)	Set the density of text stamp color. Set the value by selecting [+] or [-].
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of text stamp.
	Original Orientation		Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].

## **Bates Stamp**









You can add a bates stamp on the documents.

#### **Copying/Printing**



This cannot be set when Bates Stamp is set in the system settings.

→ Printing Jobs (page 8-22)

	Item	Value	Description
Off			
On	Stamp	Date, User Name, Serial Number, Numbering, Text 1, Text 2	Set the stamp to be printed.  When [Text 1] or [Text 2] is selected, select [Change] below and enter the text string.  If you selected [Date], select [Date Format] and select [MM/DD/YYYY], [DD/MM/YYYY], or [YYYY/MM/DD] to set the date format.  To set [Numbering], select [Numbering Default] and set the starting sequence number (1 to 9999999). If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits).
	Position	Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right, Detail	Set the stamp position to be printed.  Select [Position] and select the bates stamp position.  Select [Detail] to specify the detailed stamp position using numeric values, and to set the stamp position when a stamp is placed on the back side of the paper in duplex printing.

	Item		Value	Description
On	On Font		Registered font sizes are displayed. For details on registering font sizes, refer to the following:  Font (Bates Stamp) (page 8-21)	Set the font size of bates stamp.
		Style	None, Bold, Italic, Bold/Italic	Set the font style of bates stamp. Select a font style by checking the checkbox.
		Font	Courier, Letter Gothic	Set the font of bates stamp.
		Color	Black, White	Set the color of the bates stamp.
		Density	10 to 100% (in 10% increments)	Set the density of bates stamp color. Set the value by selecting [+] or [-].
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of the bates stamp.
	Original Orientation		Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].

### Sending/Storing



This cannot be set when Bates Stamp is set in the system settings.

- → Sending Jobs (page 8-25)
- → Storing Jobs (page 8-26)

Item		Value	Description	
Off				
On	Position		Date, User Name, Serial Number, Numbering, Text 1, Text 2	Set the stamp to be printed.  When [Text 1] or [Text 2] is selected, press [Change] below and enter the text string.  If you selected [Date], press [Date Format] and select [MM/DD/YYYY], [DD/MM/YYYY], or [YYYY/MM/DD] to set the date format.
				To set [Numbering], select [Numbering Default] and set the starting sequence number (1 to 9999999). If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits).
			Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right, Detail	Set the stamp position to be printed.  Select [Position] and select the bates stamp position.  Select [Detail] to specify the stamp position using numeric values.
	Font	Size	Registered font sizes are displayed. For details on registering font sizes, refer to the following:  Font (Bates Stamp) (page	Set the font size of bates stamp.
			<u>8-21)</u>	
		Style	None, Bold, Italic, Bold/Italic	Set the font style of bates stamp. Select a font style by checking the checkbox.
		Font	Courier, Letter Gothic	Set the font of bates stamp.
		Color	Black, Red, Green, Blue, Cyan, Magenta, Yellow, White	Set the color of bates stamp.
		Density	10 to 100% (in 10% increments)	Set the density of bates stamp color. Set the value by selecting [+] or [-].
		Display Pattern	Transparent, Clipping, Overwrite	Set the display method of bates stamp.
	Original Orientation		Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].

### **Continuous Scan**







 


Scans a large number of originals in separate batches and then produce as one job.

Originals will be scanned continuously until you select [Finish Scan].

Select [On] to use continuous scanning. To use Job Build, select [Job Build]. You can set the functions that appear on the screen during scanning.

(Value: [Off] / [On] / [Job Build])



#### Job Build

When [Job Build] is selected when copying or printing, the binding orientation for finished documents can be selected from [Binding Left], [Binding Right] or [Binding Top].

The following functions can be selected during scanning.

Item	Description
Next Copy: On Back	In duplex copying, prints on the back side if the next page is to be printed on the front side. Select [Next Copy: On Back] to use this function.
Next Copy: On Front	In duplex copying, prints on the front side if the next page is to be printed on the back side. Select [Next Copy: On Front] to use this function.
Sheet Insertion	Inserts a blank paper in the next page. Select [Sheet Insertion] to use this function.

### **Auto Image Rotation**



Automatically rotates the image 90 degrees when the sizes of the original and the loaded paper matches but the orientations are different.

(Value: [Off] / [On])



- You can select whether to rotate the image automatically in the default settings.
  - → Auto Image Rotation (Copy) (page 8-19)
- When you have enabled this function, you can select how the images are rotated.
  - → Auto Image Rotation Action (page 8-32)

## **Negative Image**



Inverts black and white portions of the image for printing.

(Value: [Off] / [On])



This function is only available for black and white copy mode.

### **Mirror Image**



Copies the mirrored image of the original.

(Value: [Off] / [On])

### **Job Finish Notice**









Sends E-mail notice when a job is complete. It is also available that send a notice when a job is interrupted.

Users can be notified of the completion of a job while working at a remote desk, saving the time spent waiting beside the machine to finish.



#### **NOTE**

PC should be configured in advance so that E-mail can be used.

→ Command Center RX (page 2-63)

E-mail can be sent to a single destination.

Item		Description	
Off			
Address	Book	Select the notification destination from the address book.	
	Detail	Information on the selected destination can be viewed.	
Address Book		Select the notification destination on the address book screen, then select [OK].	
Notify when interrupted Add a check mark if you require an e-mail notification when a job is inter		Add a check mark if you require an e-mail notification when a job is interrupted.	
Address Entry		Enter E-mail address directly. Select [E-mail Address], enter the address (up to 128 characters) and select [OK].	
	Notify when interrupted	Add a check mark if you require an e-mail notification when a job is interrupted.	

### **File Name Entry**









Adds a file name.

Additional information such as job number and date and time can also be set. You can check a job history or job status using the file name, date and time, or job number specified here.

Select [File Name], enter the file name (up to 32 characters), and select [OK].

To add date and time, select [**Date and Time**]. To add job number, select [**Job No.**]. The added information will be displayed in "Additional Info".

### **Priority Override**







Suspends the current job and gives a new job top priority.

The suspended job resumes after the other job is finished.

(Value: [Off] / [On])

### NOTE

- This function is not available if current job was an override.
- Priority override may not be available depending on the status of the current print job and memory usage. In this case, try the interrupt copy.
  - → Interrupt Copy (page 5-20)

### **Repeat Copy**



Enables additional copies in the desired quantity as necessary after a copy job is completed.

For confidential documents, you can set up a password for the use of Repeat Copy. In such a case, the correct password must be entered to perform Repeat Copy.

To register a password, select [# Keys] and enter a 4-digit password.

### **⊘** IMPORTANT

- A Repeat Copy job is cleared when the power switch is turned off.
- If you forget the password, Repeat Copy cannot be performed for that document. Make a note of the password beforehand if necessary.

(Value: [Off] / [On])

Repeat Copy is not available when the machine is equipped with the optional Data Security Kit.

When the maximum number of Repeat Copy jobs to retain in the document box is set to 0 (zero), this function cannot be used.

→ Repeat Copy Job Retention (page 8-38)

You can select Repeat Copy as the default setting.

→ Repeat Copy (page 8-20)

Giving a file name to a copy job will facilitate identification of the data when copying.

→ File Name Entry (page 6-65)

#### Repeat Copy

The Repeat Copy jobs are stored in the Job Box. Refer to Outputting Repeat Copy Jobs to print out the Repeat Copy jobs.

Outputting Repeat Copy Jobs (page 5-62)

### **DP Read Action**



When the document processor is used, select the scanning operation for the document processor.

Item	Description	
Speed Priority	Gives priority to scanning speed.	
Quality Priority	Gives priority to image quality at a slightly slower scan speed.	

### **Skip Blank Page**



When there are blank pages in a scanned document, this function skips the blank pages and prints only pages that are not blank.

Blank pages can be set as pages that include ruled lines and a small number of characters.

The machine detects blank pages, saving unnecessary printing without the need to check for blank pages in the document.

Select [Blank Pages + Ruled Lines], [Blank Pages Only] or [Blank Pages + Some Text] in [On].



The originals with punched holes or originals printed on a colored substrate may not be recognized as blank pages.

## 2-sided/Book Original







Select the type and orientation of the binding based on the original.

Item 1-sided		Value	Description  "2-sided/Book Original" is not set.	
		_		
2-sided	Binding	Binding Left/ Right, Binding Top	Select the binding orientation of originals.	
	Original Orientation	Top Edge on Top, Top Edge on Left, Auto	Select the orientation of the original document top edge to scan correct direction. Select [Original Orientation] to choose orientation of the originals, either [Top Edge on Top] or [Top Edge on Left]. Then select [OK].	
Book*1	Binding	Binding Left, Binding Right	Select the binding orientation of originals.	

<sup>\*1 [</sup>Top Edge on Top] is set for "Original Orientation".

### Sample image

	Value	Image
2-sided	Binding Left/Right	
	Binding Top	
Book	Binding Left	
	Binding Right	

## **Sending Size**





Select size of image to be sent.

Select [Standard Sizes 1], [Standard Sizes 2], or [Others] to select the storing size.

Item	Value	Description
Standard Sizes 1	Metric models: Same as Original Size, A3, A4, A5, A6, B4, B5, B6, Folio, 216×340 mm	Select from Same as Original Size or Standard Size.
	Inch models: Same as Original Size, Ledger, Letter, Legal, Statement, 11×15", Oficio II	
Standard Sizes 2	Metric models: Ledger, Letter, Legal, Statement, 11×15", Oficio II, 8K, 16K	Select from standard sizes except Standard Sizes 1.
	Inch models: A3, A4, A5, A6, B4, B5, B6, Folio, 8K, 16K, 216×340 mm	
Others	Hagaki (Cardstock), Oufuku hagaki (Return postcard)	Select from Hagaki (Cardstock).

#### Relationship between Original Size, Sending Size, and Zoom

Original Size, Sending Size, and Zoom are related to each other. For details, see the table below.

Original size and sending size are	the same	different
Original Size (page 6-18)	Specify as necessary.	Specify as necessary.
Sending Size	Select [Same as Original Size].	Select the desired size.
Zoom (page 6-35)	Select [100%] (or [Auto]).	Select [Auto].



#### NOTE

When you specify the sending size that is different from the original size, and select the zoom of [100%], you can send the image as the actual size (No Zoom).

### **File Format**





 


Specify the image file format. Image quality level can also be adjusted.

Select the file format from [PDF], [TIFF], [JPEG], [XPS], [OpenXPS], and [High Comp. PDF].

When the color mode in scanning has been selected for Grayscale or Full Color, set the image quality.

If you selected [PDF] or [High Comp. PDF], you can specify encryption or PDF/A settings.



Item	Value	Color mode
PDF *1*2*3	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
TIFF	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
JPEG	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Full Color, Grayscale
XPS	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
OpenXPS	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
High Comp. PDF *1*2	Compression Ratio Priority, Standard, Quality Priority	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale

- 1 You can create Searchable PDF file by running OCR on the scanned document.
  - → OCR Text Recognition (page 6-71)
- \*2 Set the PDF/A. (Value: [Off] / [PDF/A-1a] / [PDF/A-1b] / [PDF/A-2a] / [PDF/A-2b] / [PDF/A-2u]).
- \*3 Set PDF encryption.
- ▶ PDF Encryption Functions (page 6-72)

### NOTE

- When [High Comp. PDF] is selected, you cannot adjust the image quality.
- You can use PDF encryption functions.
  - ▶ PDF Encryption Functions (page 6-72)
- If encryption is enabled, PDF/A settings cannot be specified.

#### **OCR Text Recognition**

When [PDF] or [High Comp. PDF] is selected for the file format, you can create Searchable PDF file by running OCR on the scanned document. Select [OCR Text Recognition], and then [On], select the language of the document, and select [OK].

Item	Description	
Off	Do not create Searchable PDF file.	
On	Create Searchable PDF file. Select the language to extract from the languages that appear on the touch panel.	

### **NOTE**

- This function cannot be set when you send from the Custom Box.
- If the proper language is not selected, PDF creation may take a long time or the creation may fail. The default language can be changed in System Menu.
  - → Primary OCR Language (page 8-20)
- If you do not set an original in the correct orientation, the text of the document may not be recognized as characters. In addition, it may take some time to create the PDF. Check the following:
  - The original orientation is correct.
- The accuracy of the text recognition depends on the original condition. The following condition may result in decreasing the recognition accuracy.
  - Repeatedly copied documents (as copied copy)
  - Received faxes (with low resolution)
  - Originals with the character space too narrow or wide
  - Originals with the lines on the text
  - Originals with the special fonts
  - Binding part of the book
  - A handwritten texts

#### **PDF Encryption Functions**

If you have selected PDF or High Comp. PDF for file format, you can restrict the access level for displaying, printing, and editing PDF's by assigning a secure password.

Select [PDF] or [High Comp. PDF] in [File Format], and select [Encryption].

Items that can be set vary depending on the setting selected in [Compatibility].

When [Acrobat 3.0 and later, Encryption Level: Middle(40-bit)] is selected

	Item	Value	Description
	ord to Open	Off, On	Enter the password to open the PDF file.
Docume	ent		Select [ <b>On</b> ], enter a password (up to 256 characters) and then select [ <b>Next</b> ].
			Enter the password again for confirmation, and select [ <b>OK</b> ].
Passwo	ord to Edit/Print	Off, On	Enter the password to edit the PDF file.
Docume	ent		Select [ <b>On</b> ], enter a password (up to 256 characters) and then select [ <b>Next</b> ].
			Enter the password again for confirmation, and select [ <b>OK</b> ].
			When you have entered the password and selected [ <b>Detail</b> ] to edit/print document, you can specifically limit the operation.
Pi	rinting Allowed	Not Allowed, Allowed	Restricts printing of the PDF file.
С	hanges Allowed	Not Allowed	Disables the change to the PDF file.
		Commenting	Can only add commenting.
		Page Layout except extracting Pages	Can change the page layout except extracting the pages of the PDF file.
		Any except extracting Pages	Can conduct all operations except extracting the pages of the PDF file.
	copying of Text/ mages/Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.

#### When [Acrobat 5.0 and later, Encryption Level: High(128-bit)] is selected

Item	Value	Description
Password to Open Document	Off, On	Enter the password to open the PDF file.  Select [On], enter a password (up to 256 characters) and then select [Next].  Enter the password again for confirmation, and select [OK].
Password to Edit/Print Document	Off, On	Enter the password to edit the PDF file.  Select [On], enter a password (up to 256 characters) and then select [Next].  Enter the password again for confirmation, and select [OK].  When you have entered the password and selected [Detail] to edit/print document, you can specifically limit the operation.
Printing Allowed	Allowed (Low Resolution only)  Allowed	Disables the printing of PDF file.  Can print the PDF file only in low resolution.  Can print the PDF file in original resolution.
Changes Allowed	Not Allowed Inserting/Deleting/Rotating Pages Commenting Any except extracting Pages	Disables the change to the PDF file.  Can only insert, delete, and rotate the pages of the PDF file.  Can only add commenting.  Can conduct all operations except extracting the pages of the PDF file.
Copying of Text/ Images/Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.

### **File Separation**







Creates several files by dividing scanned original data page by specified number of pages, and sends the files.





#### **NOTE**

A three-digit serial number such as "abc\_001.pdf, abc\_002.pdf..." is attached to the end of the file name.

	Item	Value	Description
Off			
On			Set file separation.  Select [+] or [-] to specify the number of pages. Select [# Keys] to use the numeric keys for entry.
	Attach File to E-mail	All Files in 1 E-mail, 1 file per E-mail	Select how to attach the files to the E-mail. Select [All files in 1 E-mail] to attach and send all files in a single E-mail. Select [1 file per E-mail] to attach and send 1 file per E-mail.

### **Scan Resolution**





Functions





**Functions** 

Select fineness of scanning resolution.

(Value: [600 × 600dpi] / [400 × 400dpi Ultra] / [200 × 400dpi Super] / [300 × 300dpi] / [200 × 200dpi Fine] / [200 × 100dpi Normal])









#### NOTE

The larger the number, the better the image resolution. However, better resolution also means larger file sizes and longer send times.

 
## E-mail Subject/Body





Adds subject and body when sending a document.

Select [Subject] / [Body] to enter the E-mail subject/body.



### NOTE

- The subject can include up to 60 characters, and the body can include up to 500 characters.
- Select [Body 1], [Body 2], or [Body 3] to enter stored text for the body text. For details on registering templates, refer to the following:
  - → E-mail Subject/Body (page 8-20)

#### **Send and Print**



Prints a copy of the document being sent.

(Value: [Off] / [On])

### **Send and Store**




Stores a copy of the document being sent in a Custom Box.

(Value: [Off] / [On])

### NOTE

- When [**On**] is selected, select the Custom Box in which the copy is to be stored. If a password entry screen for the Custom Box appears, enter the password.
- You can view information on the selected Custom Box by selecting [Detail].

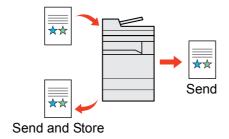

### FTP Encrypted TX





Encrypts images when sending via FTP.

Encryption secures the document transmission.

(Value: [Off] / [On])



Click [Security Settings], and then [Network Security] in the Command Center RX. Be sure that "SSL" of Secure Protocol Settings is "On" and one or more effective encryption are selected in Client side settings.

Command Center RX User Guide

### **File Size Confirmation**





Checks the file size before sending the original. To change the file size, change the settings of each function. When you select [**Recalculate**], the file size is recalculated.

(Value: [Off] / [On])

### **Delete after Printed**



Automatically deletes a document from the box once printing is complete.

(Value: [Off] / [On])

### **Delete after Transmitted**



Automatically deletes a document from the box once transmission is complete.

(Value: [Off] / [On])

### **Storing Size**





Select size of image to be stored.

Select [Standard Sizes 1], [Standard Sizes 2], or [Others] to select the storing size.

Item	Value	Description
Standard Sizes 1	Metric models: Same as Original Size, A3, A4, A5, A6, B4, B5, B6, Folio, 216×340 mm	Select from Same as Original Size or Standard Size.
	Inch models: Same as Original Size, Ledger, Letter, Legal, Statement, 11×15", Oficio II	
Standard Sizes 2	Metric models: Ledger, Letter, Legal, Statement, 11×15", Oficio II, 8K, 16K	Select from standard sizes except Standard Sizes 1.
	Inch models: A3, A4, A5, A6, B4, B5, B6, Folio, 8K, 16K, 216×340 mm	
Others	Hagaki (Cardstock), Oufuku hagaki (Return postcard)	Select from Hagaki (Cardstock).

#### Relationship between Original Size, Storing Size, and Zoom

Original Size, Storing Size, and Zoom are related to each other. For details, see the table below.

Original Size and the size you wish to store as are	the same	different
Original Size (page 6-18)	Specify as necessary.	Specify as necessary.
Storing Size	Select [Same as Original].	Select the desired size.
Zoom (page 6-35)	Select [100%] (or [Auto]).	Select [Auto].



When you select Storing Size that is different from Original Size, and select the Zoom [100%], you can store the image as the actual size (No Zoom).

### **Long Original**





Reads long-sized original documents using a document processor.

(Value: [Off] / [On])

### **NOTE**

- · Long originals are sent in black and white.
- Only a single side of a long original can be scanned. Originals of up to 2,200 mm / 86.62"\*1 long can be scanned.
- A resolution of 300 × 300 dpi or smaller can be selected.
- · This cannot be set when Bates Stamp is set.
- \*1 1,600 mm/63" if fax functions are used.

## **Encrypted PDF Password**



Enter the preassigned password to print the PDF data.

Enter the Password, and select [OK].



 
For details on entering the password, refer to the following:

→ Character Entry Method (page 11-9)

### **JPEG/TIFF Print**



Select the image size when printing JPEG or TIFF files.




Item	Description
Paper Size	Fits the image size to the selected paper size.
Image Resolution	Prints at resolution of the actual image.
Print Resolution	Fits the image size to the print resolution.

### **XPS Fit to Page**



 Reduces or enlarges the image size to fit to the selected paper size when printing XPS file.

(Value: [Off] / [On])



# **7** Status/Job Cancel

#### This chapter explains the following topics:

Checking Job Status	
Details of the Status Screens	
Checking Detailed Information of Jobs	
Checking Job History	7-9
Checking the Detailed Information of Histories	7-10
Sending the Log History	7-10
Job Operation	
Pause and Resumption of Jobs	7-11
Canceling of Jobs	
Priority Override for Waiting Jobs	7-11
Reordering Print Jobs	7-12
Device/Communication	7-13
Checking the Remaining Amount of Toner and Paper (Paper/Supplies)	7-14

## **Checking Job Status**

Check the status of jobs being processed or waiting to be printed.

#### **Available Status Screens**

The processing and waiting statuses of jobs are displayed as a list on the touch panel in four different screens - Printing Jobs, Sending Jobs, Storing Jobs, and Scheduled Jobs.

The following job statuses are available.

Status Display	Job status to be displayed
Print Job Status	<ul><li>Copy</li><li>Printer</li></ul>
	• FAX reception
	E-mail reception  Printing from Decument Box
	Printing from Document Box      Drinting data from removable manager
	Printing data from removable memory  Application
	Application     Joh Report/Liet
	Job Report/List
Send Job Status	FAX transmission
	i-FAX transmission
	• E-mail
	Folder transmission
	Application
	Multiple destination
	Sending Job FAX using Delayed transmission
Store Job Status	• Scan
	• FAX
	• i-FAX
	Printer
	Join Box Document
	Copy Box Document
Scheduled Job	Sending Job FAX using Delayed transmission

#### **Displaying Status Screens**

#### Display the screen.

Select the [Status/Job Cancel] key.

### 2 Select the job you want to check.

Select either of [Print Job Status], [Send Job Status], [Store Job Status] or [Scheduled Job] to check the status.


- → Print Job Status Screen (page 7-3)
- ➤ Send Job Status screen (page 7-5)
- → Store Job Status screen (page 7-6)
- → Scheduled Job Status Screen (page 7-7)

### **Details of the Status Screens**

### NOTE

- You can show the job statuses of all users, or only the statuses of your own jobs.
  - → Display Status/Log (page 8-28)
- This setting can also be changed from Command Center RX.
  - **→** Command Center RX User Guide

#### **Print Job Status Screen**

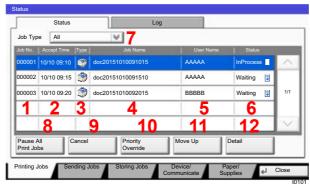

No.	Item	Description
1	Job No.	Acceptance No. of job
2	Accepted Time	Accepted Time of job
3	Туре	Icons that indicate the job type
		Copy job
		Printer job
		Job from Document Box
		FAX reception
		i-FAX reception
		E-mail reception
		Data from removable memory
		Application
		Report/List
4	Job Name	Job Name or file name
5	User Name	User Name for the executed job
6	Status	Status of job
		InProcess: The status before starting to print.
		Printing: Printing
		Waiting: Print Waiting
		Pause: Pausing print job or error
		Canceling: Canceling the job
7	[≽] of "Job Type"	Only selected type of jobs is displayed.


No.	Item	Description
8	[Pause All Print Jobs]	Pauses all the printing jobs. By pressing this key again, the printing jobs will be resumed.
9	[Cancel]	Select the job you want to cancel from the list, and press this key.
10	[Priority Override]	Select the job to be overridden, and press this key.  → Priority Override for Waiting Jobs (page 7-11)
11	[Move Up]	In the list, select the job that you want to move up the job queue and press this key.  Reordering Print Jobs (page 7-12)
12	[Detail]	Select the job whose detailed information you want to display from the list, and press this key.  Checking Detailed Information of Jobs (page 7-8)
		You can select [ <b>Change</b> ] in "Copies" in the detailed information screen to change the number of copies that are printed.

### NOTE

The job name and user name can be changed to other information if needed.

→ Customize Status Display (page 8-29)

#### Send Job Status screen

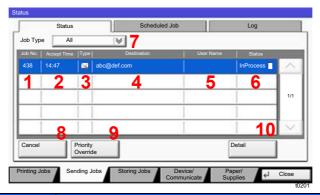


No.	Item	Description
1	Job No.	Acceptance No. of job
2	Accepted Time	Accepted Time of job
3	Туре	Icons that indicate the job type
		Sending Job FAX
		Sending Job i-FAX
		Sending Job E-mail
		Sending Job Folder
		Sending Job Application
		Multi Sending
4	Destination	Destination (Either destination name, FAX number, E-mail address, or server name)
5	User Name	User Name for the executed job
6	Status	Status of job InProcess: The status before starting sending such as during scanning originals Sending: Sending Waiting: Waiting Sending Canceling: Canceling the job Pause: Pausing the job
7	[≽] of "Job Type"	Only selected type of jobs is displayed.
8	[Cancel]	Select the job you want to cancel from the list, and press this key.
9	[Priority Override]	Select the job to be overridden, and press this key. Only displayed when the optional fax kit is installed.
10	[Detail]	Select the job whose detailed information you want to display from the list, and press this key.
		◆ Checking Detailed Information of Jobs (page 7-8)



The address and user name can be changed to other information if needed.

→ Customize Status Display (page 8-29)

#### Store Job Status screen

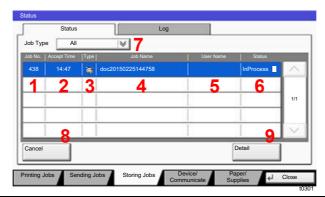


No.	Item	Description	
1	Job No.	Acceptance No. of job	
2	Accepted Time	Accepted Time of job	
3	Туре	Icons that indicate the job type	
		Storing Job Scan	
		Storing Job Printer	
		Storing Job FAX	
		Storing Job i-FAX	
		Join Box Document	
		Copy Box Document	
4	Job Name	Job name or file name is displayed.	
5	User Name	User Name for the executed job	
6	Status	Status of job	
		InProcess: The status before starting to save such as during scanning originals	
		Storing: Storing Data	
		Canceling: Canceling the job	
		Pause: Pausing the job	
7	[	Only selected type of jobs is displayed.	
8	[Cancel]	Select the job you want to cancel from the list, and press this key.	
9	[Detail]	Select the job whose detailed information you want to display from the list, and press this key.	



The job name and user name can be changed to other information if needed.

→ Customize Status Display (page 8-29)

#### **Scheduled Job Status Screen**

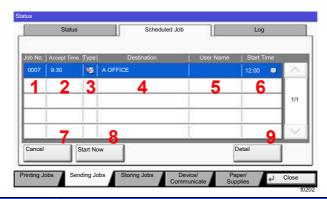

No.	Item	Description
1	Job No.	Acceptance No. of job
2	Accepted Time	Accepted Time of job
3	Туре	Icons that indicate the job type
		Scheduling Job FAX
4	Destination	Destination (Either destination name, FAX number, or No. of broadcast items)
5	User Name	User Name for the executed job
6	Start Time	Time to start the scheduled job
7	[Cancel]	Select the job you want to cancel from the list, and press this key.
8	[Start Now]	Select the job you want to send immediately from the list, and press this key.
9	[Detail]	Select the job whose detailed information you want to display from the list, and press this key.
		→ Checking Detailed Information of Jobs (page 7-8)


# **Checking Detailed Information of Jobs**

# Display the screen.

→ Details of the Status Screens (page 7-3)

# Check the information.

1 Select [**Detail**] for the job for which you wish to display detailed information.

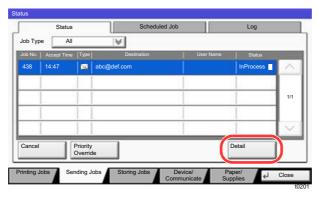

Detailed information of the selected job is displayed.

Use  $[\ \ ]$  or  $[\ \ ]$  to see the next or previous page of information.

In Sending Jobs, you can check the destination by selecting [**Detail**] in "Destination" or "Status/Destination".

"Status/Destination" is displayed when address is selected. Select [**Detail**] to display the list. Select [ $\sim$ ] or [ $\sim$ ], select a destination and select [**Detail**]. Information on the selected job is displayed for checking.

**2** To exit from the detailed information, select [Close].

# **Checking Job History**

# NOTE

- Job history is also available by Command Center RX or KYOCERA Net Viewer from the computer.
  - Command Center RX User Guide
  - **▶** KYOCERA Net Viewer User Guide
- · You can show the job log of all users, or only your own job log.
  - → Display Status/Log (page 8-28)
- · This setting can also be changed from Command Center RX.
  - **▶** Command Center RX User Guide

# **Available Job History Screens**

The job histories are displayed separately in four screens - Printing Jobs, Sending Jobs, Storing Jobs, and FAX Jobs. The following job histories are available.

Screen	Job histories to be displayed
Print Job Log	<ul> <li>Copy</li> <li>Printer</li> <li>FAX reception</li> <li>i-FAX reception</li> <li>E-mail reception</li> <li>Printing from Document Box</li> <li>Job Report/List</li> <li>Printing data from removable memory</li> <li>Application</li> </ul>
Send Job Log	<ul> <li>FAX</li> <li>i-FAX</li> <li>E-mail</li> <li>Folder</li> <li>Application</li> <li>Multiple destination</li> </ul>
Store Job Log	<ul> <li>Scan</li> <li>FAX</li> <li>i-FAX</li> <li>Printer</li> <li>Join Box Document</li> <li>Copy Box Document</li> </ul>
FAX Job Log	→ FAX Operation Guide

### **Displaying Job History Screen**

Display the screen.


Select the [Status/Job Cancel] key.

Select the job to check details.

Select the [Log] tab, and select the job to check details from the list.

# **Checking the Detailed Information of Histories**

- Display the screen.
  - → Displaying Job History Screen (page 7-10)
- Check the information.
  - 1 Select the job to check details from the list, and select [Detail].

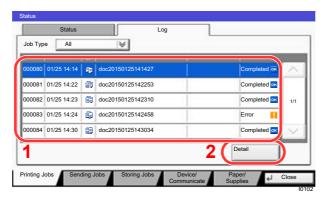

Detailed information of the selected job is displayed.

NOTE

To check the information of the next/previous page, select [∨] or [∧].

**2** To exit from the detailed information, select [Close].

# **Sending the Log History**

You can send the log history by E-mail. You can either send it manually as needed or have it sent automatically whenever a set number of jobs is reached.

Send Log History (page 8-44)

# **Job Operation**

# **Pause and Resumption of Jobs**

Pause/resume all printing jobs in printing/waiting.

Display the screen.

Select the [Status/Job Cancel] key.

Select [Pause All Print Jobs] on the printing jobs status screen.

Printing is paused.

When resuming the printing of jobs that have been paused, select [Resume All Print Jobs].

# **Canceling of Jobs**

A job in printing/waiting status can be canceled.

Display the screen.

Select the [Status/Job Cancel] key.

- Select the job to be canceled from the list, and select [Cancel].
- 3 Select [Yes] in the confirmation screen.

# **Priority Override for Waiting Jobs**

Priority Override function suspends the current job and prints the job in waiting first.

Display the screen.

Select the [Status/Job Cancel] key.

- Select [Printing Jobs].
- **3** Select the job to be given priority, and select [Priority Override].
- Select [Yes] in the confirmation screen.

The current job in printing is suspended, and the job for override.

# **Reordering Print Jobs**

This function allows you to select a queued print job and raise its output priority.

Display the screen.

Select the [Status/Job Cancel] key.

- Select [Printing Jobs].
- 3 Select the job to be assigned a higher priority and select [Move Up].

The priority of the selected job is increased by 1.

To further raise the job's priority, select [Move Up] again. Each time you select [Move Up], the priority increases by 1.

# **Device/Communication**

Configure the devices/lines installed or connected to this machine or check their status.

# Display the screen.

- 1 Select the [Status/Job Cancel] key.
- 2 Select [Device/Communicate].

The screen to check the status or configure the devices is displayed.

# Check the status.

The items you can check are described below.

### "Scanner"

The status of an original scanning or the error information (paper jam, opened cover, etc.) is displayed.

### "Printer"

Error information such as paper jam or out of toner, and status such as waiting or printing are displayed.

### "FAX Port 1", "FAX Port 2", "i-FAX"

- The information such as sending/receiving and dialing is displayed.
  - FAX Operation Guide

## "Removable Memory (USB Memory)"

- The usage and capacity of the external media connected to this machine are displayed.
- · Select [Format] to format external media.



When [Format] is selected, all data in the external media is erased.

· Select [Remove] to safely remove the external media.

### "Hard Disk"

The status of the hard disk is displayed.

### "Connectivity"

The network connection status and the status of the optional keyboard are displayed.

# **Checking the Remaining Amount of Toner and Paper (Paper/Supplies)**

Check the remaining amount of toner, and paper on the touch panel.

# Display the screen.

- 1 Select the [Status/Job Cancel] key.
- 2 Select [Paper/Supplies].

# Check the status.

The items you can check are described below.

### "Toner Information"

The amount of toner remaining is shown in levels. And you can check the status of waste toner box.

### "Paper Status"

You can check the size, orientation, type, and remaining amount of paper in each paper source. The amount of paper remaining is shown in levels.

### "Others"

You can check the status of staples and punch waste box.

# 8 Setup and Registration (System Menu)

# This chapter explains the following topics:

ystem Menu	3-2
Operation Method	3-2
System Menu Settings	3-4
Counter	3-7
Cassette/MP Tray Settings 8	3-7
Common Settings 8-	10
Home 8-	31
Copy 8-	32
Send 8-	33
Document Box/Removable Memory 8-	38
FAX 8-	
Printer 8-	39
Report 8-	42
System/Network8-	
Edit Destination 8-	67
User Login/Job Accounting 8-	68
User Property8-	68
Date/Timer/Energy Saver8-	68
Adjustment/Maintenance8-	72
Internet 8-	75
Application8-	75

# **System Menu**


Configure settings related to overall machine operation.

# **Operation Method**


# Display the screen.

Select the [System Menu/Counter] key.


# Select a function.

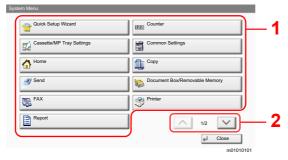

- 1 Displays the System Menu items.
- 2 Scrolls up and down when the list of values cannot be displayed in its entirety on a single screen.
- 3 Displays setting items Select the key of a function to display the setting screen.
- 4 Returns to the previous screen.

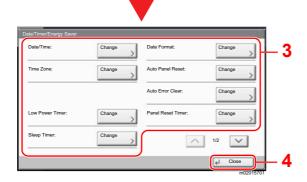

# 3 Configure the function.

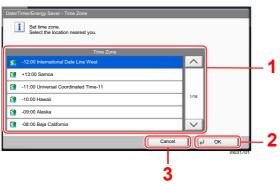

- 1 Enter a setting by selecting it.
- 2 Accepts the settings and exits.
  - Returns to the previous screen without making any changes.

# NOTE

• In order to change settings that require administer privileges, you must log in with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

• If function default settings have been changed, the [Reset] key can be selected in each function screen to immediately change the settings.

Refer to System Menu Settings on the following page and configure as needed.

# **System Menu Settings**

This section explains the functions that can be configured in System Menu. To configure the settings, select the item in System Menu and select the setting item. For details on each function, see the table below.

	Item	Description	Reference Page
Quic	k Setup Wizard	The Quick Setup Wizard configures FAX, Network and Energy Saver settings.	page 2-44
Cour	nter	Check the number of sheets printed and scanned.	page 2-60
Cass	ette/MP Tray Settings	Select paper size and media type for Cassettes and multipurpose tray.	page 8-7
	Cassette 1 (to 7)	Select type of paper in Cassette 1 (to 7).	page 8-7
	MP Tray Setting	Select type of paper in multipurpose tray.	page 8-8
Com	mon Settings	Configure overall machine operation.	page 8-10
	Language	Set the language to use for the touch panel display.	page 8-10
	Default Screen	Select the screen appearing right after start-up (default screen).	page 8-10
	Sound	Set options for buzzer sound during the machine operations.	page 8-10
	Keyboard Layout	Change the layout of the touch panel keyboard used to enter characters.	page 8-11
	Original/Paper Settings	Configure settings for originals and paper.	page 8-11
	Measurement	Select inch or metric for the unit for paper dimensions.	page 8-15
	Error Handling	Select whether to cancel or continue the job when error has occurred.	page 8-16
	Paper Output	Select the output tray respectively for copy jobs, print jobs from Document Box, computers, and FAX RX data.	page 8-17
	Orientation Confirmation	Check the orientation of original.	page 8-18
	Function Defaults	Defaults are the values automatically set after the warm-up is completed or the [Reset] key is selected.  Set the defaults for available settings such as copying and sending. Setting the frequently-used values as defaults makes subsequent jobs easier.	page 8-18
	Optional Keyboard Type	Select the type of optional keyboard that you want to use.	page 8-21
	System Stamp	Configure settings for header, footer, and stamp.	page 8-21
	Manual Staple	Select whether to use Manual Staple.	page 8-27
	Offset Documents by Job	Select whether to offset documents by Job.	page 8-27
	Low Toner Alert	Set the amount of remaining toner to notify the administrator when to order a toner when the toner is running low.	page 8-28
	Offset One Page Documents	Set whether one-page documents are sorted.	page 8-28

	Item	Description	Reference Page
	Display Status/Log	Set the display method of the Status/Log.	page 8-28
	Message Banner Print	Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets.	page 8-28
	Customize Status Display	Select the item that appears for the printing jobs status.	page 8-29
	Message Board Settings	Configure settings for message board.	page 8-30
	Remote Printing	Configure settings for remote printing.	page 8-30
	Numeric Keypad Settings	Select whether or not to display the numeric keypad.	page 8-31
	Prevent Light Reflection	Prevent light reflection when using the Erase Shadowed Areas feature.	page 8-31
	Function Key Assignment	Assign a function to each function key.	page 8-31
	Show Power Off Message	Select whether the confirmation message is displayed, when Power Switch is pressed.	page 8-31
Hom	e	Configure settings for Home screen.	page 8-31
Сору	1	Configures settings for copying functions.	page 8-32
Send		Configures settings for sending functions.	page 8-33
Document Box/Removable Memory		Configures settings related to the Custom Box, Job Box, Sub Address Box and Polling Box. For details on FAX Box and Polling Box, refer to the following:	page 8-38
		→ FAX Operation Guide	
FAX		Configures settings for fax functions.	_
Print	er	<ul> <li>➤ FAX Operation Guide</li> <li>Printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.</li> </ul>	page 8-39
Repo	ort	Print reports to check the machine settings, status, and history. Settings for printing reports can also be configured.	page 8-42
	Print Report	Configure settings for printing reports and histories.	page 8-42
	Admin Report Settings		Refer to the FAX Operation Guide.
	Result Report Setting		page 8-43
	Sending Log History		page 8-44
	Login History Settings		page 8-44
	Device Log History Settings		page 8-45
	Secure Comm. Error Log		page 8-46

	Item	Description	Reference Page
Syste	em/Network	Configure machine system settings.	page 8-47
	Network	Configures network settings.	page 8-47
	Optional Network	Configure settings for the optional Network Interface Kit.	page 8-59
	Primary Network (Client)	Select the network interface to be used for the send function that this machine functions as a client, the network authentication and connecting to external address book.	page 8-62
	Security Level	The Security Level setting is primarily a menu option used by service personnel for maintenance work. There is no need for customers to use this menu.	_
	Interface Block Setting	This allows you to protect this machine by blocking the interface with external devices such as USB hosts or optional interfaces.	page 8-63
	Data Security	Configure settings for data stored in the SSD, hard disk, and machine's memory.	page 8-64
	Optional Function	You can use the optional applications installed on this machine.	page 8-66
	Bluetooth Settings	Set the Bluetooth keyboard.	page 8-66
	Restart Entire Device	Restart the machine without turning the power switch off. Use this to deal with any unstable operation by the machine. (Same as the computer restart.)	page 8-66
	NFC	Set NFC (Near Field Communication).	page 8-66
Edit	Destination	Configures Address Book and One Touch Key settings. Address Book:	page 8-67
		★ Adding a Destination (Address Book) (page 3-25) One Touch Key:	
		★ Adding a Destination on One Touch Key (One Touch Key) (page 3-32)	
User	Login/Job Accounting	Configures settings related to machine management. User Login:	_
		→ Overview of User Login Administration (page 9-2)	
		Job Accounting:  Overview of Job Accounting (page 9-33)	
User Property		Allows you to view information about logged in users and edit	page 8-68
USEI	Troperty	some of that information.	<u>page 0-00</u>
Date/Timer/Energy Saver		Configures settings related to the date and time.	page 8-68
Adjustment/Maintenance		Adjust printing quality and conduct machine maintenance.	page 8-72
Inter	net	Configure settings related to the Internet.	page 8-75
Appl	ication	Configure settings for Application.	page 8-75

# **Counter**

[System Menu/Counter] key > [Counter]

Check the number of sheets printed and scanned.

# **Cassette/MP Tray Settings**

Select paper size and media type for Cassettes and multipurpose tray.

# Cassette 1 (to 7)

[System Menu/Counter] key > [Cassette/MP Tray Settings] > [Cassette 1 (to 7)]

Select paper size and media type for Cassettes 1 to 7.

Selection Item		Selectable Size/Type
Paper Size*1	Auto	Paper size is automatically detected and selected.  Values: Metric, Inch
	Standard Sizes 1*2	Available options are as follows:  Values  Metric models:  A3*3, A4-R*3, A4*3, A5-R*3, B4*3, B5-R*3, B5*3, Folio*3, 216×340 mm Inch models:  Ledger*3, Letter-R*3, Letter*3, Legal*3, Statement-R*3, 12×18"*3, Oficio II
	Standard Sizes 2*2	Select from standard sizes except Standard Sizes 1.  Values  Metric models: Ledger*3, Letter-R*3, Letter*3, Legal*3, Statement-R*3, 12×18"*3, Oficio II, 8K, 16K-R, 16K Inch models: A3*3, A4-R*3, A4*3, A5-R*3, B4*3, B5-R*3, B5*3, Folio*3, 8K, 16K-R, 16K, 216×340 mm
	Size Entry*4	Enter the size not included in the standard size.  Values  Metric  X: 182 to 457 mm (in 1mm increments)  Y: 140 to 304 mm (in 1mm increments)  Inch  X: 7.17 to 18.00" (in 0.01" increments)  Y: 5.51 to 12.00" (in 0.01" increments)
Media Type*5		Select the media type.  Values: Plain (60 - 105 g/m²), Rough, Vellum (60 - 105 g/m²), Recycled, Preprinted*6, Bond, Color, Prepunched*6, Letterhead*6, Coated*7, Thick (106 - 163 g/m²), High Quality, Custom 1 - 8

<sup>\*1</sup> When the optional Side Feeder (3,000-sheet) is used, paper size does not appear.

<sup>\*2</sup> Only A4, B5 and Letter can be specified when Cassette 3 and 4 and optional Cassette 6 and 7 (PF-740) are used.

<sup>\*3</sup> Paper size is automatically detected in the cassette.

<sup>\*4</sup> Can be set when Cassette 1 or 2 is selected.

- \*5 To change to a media type other than "Plain".
  - → Media Type Setting (page 8-15)

When a paper weight that cannot be loaded in the cassette is set for a media type, that media type does not appear.

- \*6 To print on preprinted or prepunched paper or on letterhead.
  - → Special Paper Action (page 8-14)
- \*7 Can be set when Cassette 5 (PF-7130) is selected.

# **MP Tray Setting**

# [System Menu/Counter] key > [Cassette/MP Tray Settings] > [MP Tray Setting]

Select paper size and media type for the multipurpose tray.

Item		Description
Paper Size	Auto	Paper size is automatically detected and selected.  Values: Metric, Inch
	Standard Sizes 1	Available options are as follows:  Values  Metric models:  A3*1, A4-R*1, A4*1, A5-R*1, A6-R*1, B4*1, B5-R*1, B5*1, B6-R*1, Folio, 216×340 mm  Inch models:  Ledger*1, Letter-R*1, Letter*1, Legal*1, Statement-R*1, Executive, 12×18**1, Oficio II
	Standard Sizes 2	Select from standard sizes except Standard Sizes 1.  Values  Metric models: Ledger*1, Letter-R*1, Letter*1, Legal*1, Statement-R*1, Executive, 12×18**1, Oficio II, 8K, 16K-R, 16K Inch models: A3*1, A4-R*1, A4*1, A5-R*1, A6-R*1, B4*1, B5-R*1, B5*1, B6-R*1, Folio*1, 8K, 16K-R, 16K, 216×340 mm
	Others	Select from special standard sizes and custom sizes.  Values: ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki (Cardstock)*1, Oufuku hagaki (Return postcard), Youkei 4, Youkei 2

	Item	Description
Paper Size	Size Entry	Enter the size not included in the standard size.  Values  Metric  X: 148 to 457 mm (in 1mm increments) Y: 98 to 304 mm (in 1mm increments) Inch  X: 5.83 to 18.00" (in 0.01" increments) Y: 3.86 to 12.00" (in 0.01" increments)  X=Length, Y=Width  Vertical  Horizontal
Media Type*2		Select the media type.  Values: Plain (60 to 105 g/m²), Transparency, Rough, Vellum (60 to 105 g/m²), Labels, Recycled, Preprinted*³, Bond, Cardstock, Color, Prepunched*³, Letterhead*³, Envelope, Coated, Thick (106 to 300 g/m²), High Quality, Index Tab Dividers, Custom 1-8

- \*1 Paper size is automatically detected in the Multipurpose Tray.
- \*2 To change to a media type other than "Plain".
  - → Media Type Setting (page 8-15)
- \*3 To print on preprinted or prepunched paper or on letterhead.
  - Special Paper Action (page 8-14)

# NOTE

If the optional FAX Kit is installed, the available media types for printing received faxes are as shown below. Plain, Rough, Vellum, Labels, Recycled, Bond, Cardstock, Color, Envelope, Thick, Coated, High Quality and Custom1-8

# **Common Settings**

Configures overall machine operation.

# Language

[System Menu/Counter] key > [Common Settings] > [Language]

Item	Description
Language	Set the language to use for the touch panel display.

### **Default Screen**

[System Menu/Counter] key > [Common Settings] > [Default Screen]

Item	Description
Default Screen	Select the screen appearing right after start-up (default screen).  Value: Home, Copy, Send, FAX*1, Status, Custom Box, Job Box, Removable Memory, FAX Box*1, Program, Home (Accessibility), Accessibility Copy, Accessibility Send, Accessibility FAX*1, Internet Browser*2, Application Name*3

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

### Sound

[System Menu/Counter] key > [Common Settings] > [Sound]

Item	Description
Buzzer	Set options for buzzer sound during the machine operations.
Volume	Set the buzzer volume level.  Value: 0 (Mute), 1 (Minimum), 2, 3 (Medium), 4, 5 (Maximum)
Key Confirmation	Emit a sound when the operation panel and touch panel keys are selected.  Value: Off, On
Job Finish	Emit a sound when a print job is normally completed.  Value: Off, On, FAX Reception Only*1
Ready	Emit a sound when the warm-up is completed.  Value: Off, On
Warning	Emit a sound when errors occur.  Value: Off, On
Optional Keyboard	Emit a sound to confirm keypresses with a sound.  Value: Off, On
FAX Speaker Volume*1	→ FAX Operation Guide
FAX Monitor Volume*1	→ FAX Operation Guide

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

<sup>\*2</sup> Configure necessary settings for Internet Browser.

<sup>◆</sup> Internet (page 8-75)

<sup>\*3</sup> The running application will be displayed.

<sup>→</sup> Application (page 5-12)

# **Keyboard Layout**

[System Menu/Counter] key > [Common Settings] > [Keyboard Layout]

Item	Description	
Keyboard Layout	Change the layout of the touch panel keyboard used to enter characters.	
	Value: QWERTY, QWERTZ, AZERTY	

# **Original/Paper Settings**

[System Menu/Counter] key > [Common Settings] > [Original/Paper Settings]

Configure settings for originals and paper.

Item	Description		
<b>Custom Original Size</b>	Set up frequently-used custom original size.		
	The custom size option is displayed on the screen to select original size.		
	To register a custom original size, select [ <b>On</b> ] and enter the desired size. Up to four custom original sizes can be added.		
	Value		
	Metric		
	X: 50 to 432 mm (in 1 mm increments) Y: 50 to 297 mm (in 1 mm increments)		
	Inch		
	X: 2.00 to 17.00" (in 0.01" increments) Y: 2.00 to 11.69" (in 0.01" increments)		
	X=Length, Y=Width		
	Vertical Horizontal		
	X   X →		
	Y		

Item	Description	
Custom Paper Size	Set up frequently-used custom paper size.	
	The custom size option is displayed on the screen to select paper size in the multipurpose tray.	
	To register a custom paper size, press [ <b>On</b> ] and enter the desired size. Up to for custom paper sizes can be added.	
	Value	
	Metric V: 148 to 457 mm (in 1 mm increments)	
	X: 148 to 457 mm (in 1 mm increments) Y: 98 to 304 mm (in 1 mm increments)	
	Inch	
	X: 5.83 to 18.00" (in 0.01" increments) Y: 3.86 to 12.00" (in 0.01" increments)	
	X=Length, Y=Width	
	Vertical Horizontal	
	X X X X X X X X X X X X X X X X X X X	
	Media Type: Plain, Transparency, Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Thick, Envelope, Coated, High Quality, Index Tab Dividers, Custom 1-8	
Media Type Setting	Select weight for each media type.	
	For Custom 1-8, settings for duplex printing and media type name can be changed.	
	→ Media Type Setting (page 8-15)	
Default Paper Source Select the default paper source from Cassette 1-7 and multipurpose		
	Value: Cassette 1 (to 7), Multipurpose Tray	
	NOTE	
	[Cassette 5] to [Cassette 7] are displayed when the following options are installed.	
	[Cassette 5]: When a Side Feeder (3,000-sheet), Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.	
	[Cassette 6]: When a Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.	
	[Cassette 7]: When a Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.	
Auto Switch	When Cassette 3, 4 or the optional Large Capacity Side Feeder is selected, the cassette can be switched to another large capacity feeder depending on your usage.  Value: Off, On	

Item		em	Description		
Auto	Auto Detect Original Size		Select whether to automatically detect originals of special or non-standard size.  Select [Metric] when automatically detecting the originals in centimeter sizes. Select [Inch] when detecting the originals in inch sizes.		
Metric A6/Hagaki		A6/Hagaki	As A6 and Hagaki (Cardstock) are similar in size, select either one of them for automatic detection.  Value: A6, Hagaki  NOTE		
			If [Hagaki] is set, only the originals placed on the platen are detected.		
		Folio	Select whether to enable automatic detection of Folio.  Value: Off, On		
		11×15"	Select whether to enable automatic detection of 11×15" size.  Value: Off, On		
	Inch Legal/ Oficio II/ 216×340 mm  Set the original sizes for the device to detect automatically.  Value: Legal, Oficio II, 216×340 mm		,		
Media for Auto (B&W)		o (B&W)	Select a default media type for auto paper selection when [Auto] is selected of Paper Selection. If [Plain] is selected, the paper source with plain paper loaded in the specific size is selected. Select [All Media Types] for the paper source with any kind of paper loaded in the specific size.  Value: All Media Types, Plain, Transparency, Rough, Vellum, Labels, Recycled,		
			Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, Coated, High Quality, Index Tab Dividers, Custom 1 to 8		
Pape	Paper Source for Cover		Select the paper source in which the cover paper used for the Cover function is placed.		
			Value: Cassette 1 (to 7), Multipurpose Tray		
			NOTE		
			[Cassette 5] to [Cassette 7] are displayed when the following options are installed.		
			[Cassette 5]: When a Side Feeder (3,000-sheet), Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.		
			[Cassette 6]: When a Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.		
			[Cassette 7]: When a Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.		

	Item	Description		
Spec	ial Paper Action	When printing on Prepunched, Preprint, and Letterhead, punch-holes might not be aligned or the print direction might be upside-down depending on how originals are set and the combination of copying functions. In such a case, select [Adjust Print Direction] to adjust the print direction. When paper orientation is not important, select [Speed Priority].		
		If [Adjust Print Direction] is selected, load paper according to the steps below.  Example: copying on Letterhead		
		Original Paper Finished Cassette Multipurpose Tray		
		Original Paper Finished Cassette Multipurpose Tray		
		Value: Adjust Print Direction, Speed Priority		
Sepa	rator Paper Source	Select the default paper source for separator sheets.		
		Value: Cassette 1 (to 7), Multipurpose Tray		
		NOTE		
		[Cassette 5] to [Cassette 7] are displayed when the following options are installed.  [Cassette 5]: When a Side Feeder (3,000-sheet), Side Feeder (500-sheet×3), or		
		Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.  [Cassette 6]: When a Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.		
		[Cassette 7]: When a Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.		
Show	v Paper Setup age	Set whether to display the confirmation screen for the paper setting when a new paper is set for each cassette.		
	Cassette 1 to 7	Value: Off, On		
	Multipurpose Tray	NOTE		
		[Cassette 5] to [Cassette 7] are displayed when the following options are installed.  [Cassette 5]: When a Side Feeder (3,000-sheet), Side Feeder (500-sheet×3), or		
		Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.		
[Cassette 6]: When a Side Feeder (500-sheet×3), or Large Cap (500, 1,500-sheet×2) is installed.		[Cassette 6]: When a Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.		
		[Cassette 7]: When a Side Feeder (500-sheet×3), or Large Capacity Side Feeder (500, 1,500-sheet×2) is installed.		

# **Media Type Setting**

The following media type and paper weight combinations are available.

Paper Weight	Weight (g/m²)	Paper Weight	Weight (g/m²)
Light	52 g/m² to 59 g/m²	Heavy 2*1	136 g/m² to 163 g/m²
Normal 1	60 g/m² to 74 g/m²	Heavy 3*1	164 g/m² to 220 g/m²
Normal 2	75 g/m² to 90 g/m²	Heavy 4*1	221 g/m² to 256 g/m²
Normal 3	91 g/m² to 105 g/m²	Heavy 5*1	257 g/m² to 300 g/m²
Heavy 1*1	106 g/m² to 135 g/m²	Extra Heavy*1	Transparencies

<sup>\*1</sup> The processing speed will be slower than normal.

Each media type's default weight is indicated.

Media Type	Default	Media Type	Default
Plain	Normal 2	Prepunched	Normal 2
Rough	Normal 3	Letterhead	Normal 2
Vellum	Heavy 1	Envelope	Heavy 3
Labels	Heavy 2	Thick	Heavy 3
Recycled	Normal 2	High Quality	Normal 2
Preprinted	Normal 2	Coated	Heavy 1
Bond	Normal 3	Index Tab Dividers	Heavy 4
Cardstock	Heavy 4	Custom 1 - 8	Normal 2
Color	Normal 3		

For Custom 1-8, settings for duplex printing and media type name can be changed.

Item		Description	
<b>Duplex Print</b>	x Print Prohibit Duplex printing allowed.		
	Permit	Duplex printing not allowed.	
Name		Change names for Custom 1-8. Names should be not more than 16 characters.  Selecting media type at multipurpose tray, the name after change will be displayed.  Character Entry Method (page 11-9)	

### Measurement

[System Menu/Counter] key > [Common Settings] > [Measurement]

Item	Description	
Measurement	Select inch or metric for the unit for paper dimensions.	
	Value: mm, inch	

# **Error Handling**

# [System Menu/Counter] key > [Common Settings] > [Error Handling]

Select whether to cancel or continue the job when error has occurred.

Item	Description	
Duplexing Error	Set what to do when duplex printing is not possible for the selected paper sizes and media types.  Value  1-sided: Printed in 1-sided  Display Error: Message to cancel printing is displayed.	
Finishing Error	Set alternative actions when finishing (Staple/Punch/Offset) is not available for the selected paper size or media type.  Value  Ignore: The setting is ignored and the job is printed.  Display Error: Message to cancel printing is displayed.	
No Staple Error	Set what to do when staples run out during printing.  Value Ignore: Printing continues without stapling.  Display Error: Message to cancel printing is displayed.  NOTE	
Finished Pages Exceeded	Requires the optional Document Finisher.  Set what to do when finishing (stapling or offsetting) capacity is exceeded during printing.  Value  Ignore: Printing continues without finishing.  Display Error: Message to cancel printing is displayed.  NOTE  Requires the optional Document Finisher.	
Punch Waste Full Error	Set what to do when the punch waste box becomes full during printing.  Value  Ignore: Printing continues without punching.  Display Error: Message to cancel printing is displayed.  NOTE  Requires the optional Document Finisher and Punch Unit.	
Paper Mismatch Error	Set what to do when the selected paper size or type does not match paper size or type loaded in the specified paper source while printing from the computer by specifying the cassette or multipurpose tray.  Value  Ignore: The setting is ignored and the job is printed.  Display Error: Message to cancel printing is displayed.	
Inserted Paper Mismatch	Set what to do when it is detected that the multipurpose tray paper size setting does not match the actual paper size that is fed.  Value Ignore: The setting is ignored and the job is printed.  Display Error: Message to cancel printing is displayed.	

Item	<b>Description</b>	
Paper Jam before Staple	The page from which printing is resumed when a paper jam occurs during a job with stapling can be selected.	
	Value	
	Resume at Top of Page: Resume printing from the first page of the document.	
	Resume at Jammed Page: Resume printing from the page where the jam occurred.	
	NOTE	
	Requires the optional Document Finisher.	
Skewed or multi originals  When skewed originals or multi originals fed at once while scanning to print by ignoring the error or display an error.		
	Value	
	Ignore: The error is ignored and the job is printed.	
	Display Error: Error message to cancel scanning is displayed.	

# **Paper Output**

[System Menu/Counter] key > [Common Settings] > [Paper Output]

Item	Description		
Paper Output	computers, and FAX R	Select the output tray respectively for copy jobs, print jobs from Document Box, computers, and FAX RX data.	
	<ul> <li>Value</li> <li>Lower Left Tray:</li> <li>Upper Left Tray:</li> <li>Right Tray:</li> <li>with optional 4,000-Sh</li> <li>Right Tray:</li> <li>Tray A:</li> <li>Tray B:</li> <li>Tray C:</li> </ul>	Outputs to the Lower Left Tray of the machine. Outputs to the Upper Left Tray of the machine. Outputs to the Right Tray of the machine. Heet Finisher Outputs to the Right Tray of the machine. Delivery to the Tray A of the optional Document Finisher Delivery to the Tray B of the optional Document Finisher Delivery to the Tray B of the optional Document Finisher	
	with optional Mailbox     Right Tray:     Tray A:     Tray B:     Tray C:     Tray 1 to 7:  NOTE  FAX RX data output car	Outputs to the Right Tray of the machine.  Delivery to the Tray A of the optional Document Finisher  Delivery to the Tray B of the optional Document Finisher  Delivery to the Tray B of the optional Document Finisher  Delivery to tray 1 to 7 (tray 1 is the uppermost tray) of the optional Mailbox  The specified when the optional FAX Kit is installed.	

# **Orientation Confirmation**

[System Menu/Counter] key > [Common Settings] > [Orientation Confirmation]

Item	Des	cription
Orientation Confirmation	Select whether to display a screen for se placed on the platen when using the follow	electing the orientation of the originals to be owing functions.
	→ Original Orientation (page 6-23)	
	Zoom (XY Zoom)	• Page #
	Duplex	<ul> <li>Booklet</li> </ul>
	Margin/Centering	<ul> <li>Staple/Punch (optional feature)</li> </ul>
	Border Erase	<ul> <li>2-sided/Book Original</li> </ul>
	Combine	<ul> <li>Text Stamp</li> </ul>
	Memo Page	Bates Stamp
	Value: Off, On	

# **Function Defaults**

[System Menu/Counter] key > [Common Settings] > [Function Defaults]

Item	Description
Orig. Orientation (Copy)	Set the original orientation defaults.
Orig. Orient.(Send/Store)	Value: Top Edge on Top, Top Edge on Left, Auto
Original Image (Copy)	Set the default original document type for copying.
	Value: Text+Photo (Printer), Text+Photo (Magazine), Photo (Printer), Photo (Magazine), Photo (Photo Paper), Text, Text (Fine Line), Graphic/Map (Printer), Graphic/Map (Magazine)
Org. Image (Send/Store)	Set the default original document type for sending/storing.
	Value: Text+Photo, Photo, Text, Text (Fine Line), Text (for OCR)
FAX TX Resolution*1	→ FAX Operation Guide
Scan Resolution	Select the default scanning resolution.
	Value: 600×600dpi, 400×400dpi Ultra Fine, 300×300dpi, 200×400dpi Super Fine, 200×200dpi Fine, 200×100dpi Normal
Color Selection	Select the default color mode for scanning documents.
	Value: Auto Color (Color/Gray), Auto Color (Color/B & W), Full Color, Grayscale, Black & White
File Format	Set the default type of the files.
	Value: PDF, TIFF, JPEG, XPS, OpenXPS, High Comp. PDF
Backgrnd Density (Copy)	Set the default Backgrnd Density (Copy).
	Value: Off, Auto, Manual (Darker 5)
BackgrndDens. (Send/	Set the default Backgrnd Density (Send/Store).
Store)	Value: Off, Auto, Manual (Darker 5)
Prevent Bleed-thru (Copy)	Set the default value for preventing bleed-through (Copy).
	Value: Off, On
Prevent Bleed (Send/Store)	Set the default Prevent Bleed (Send/Store).
	Value: Off, On

Item	Description
Zoom	Select the enlarged/reduced default when paper size/sending size changed after the originals set.  Value: 100%, Auto
Border Erase Default	Set the default width to be erased as a border.  Value  Metric: 0 to 50 mm (in 1 mm increments)  Inch: 0 to 2" (in 0.01" increments)  NOTE  To specify border erase widths around original, set the value in "Border". To specify border erase widths in the middle of original, set the value in "Gutter".
Border Erase to Back Page	Select the Border Erase Method for Back Page of a sheet.  Value: Same as Front Page, Do Not Erase
Margin Default	Set the default margin.  Value  Metric  Left/Right: -18 to 18 mm (in 1 mm increments)  Top/Bottom: -18 to 18 mm (in 1 mm increments)  Inch  Left/Right: -0.75 to 0.75" (in 0.01" increments)  Top/Bottom: -0.75 to 0.75" (in 0.01" increments)
Auto Image Rotation (Copy)	Select the default Auto Image Rotation setting.  Value: Off, On
EcoPrint	Select the EcoPrint default.  Value: Off, On
Toner Save Level (EcoPrint)	Select the default Toner Save Level (EcoPrint).  Value: 1 (Low) to 5 (High)  NOTE  Raising the level reduces toner consumption, but image quality falls.
High Comp. PDF Image	Select the default quality setting for high compressed PDF files.  Value: Compression Ratio Priority, Standard, Quality Priority
Color TIFF Compression	Select the compression method for sending the color documents in the TIFF format.  Value: TIFF V6, TTN2
Image Quality (File Format)	Select the default PDF/TIFF/JPEG/XPS/OpenXPS file quality.  Value: 1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)
Collate/Offset	Set the defaults for Collate/Offset.  Value  Collate: Off, On  Offset: Off, Each Set (If [Off] is selected of Collate, it is set to [Each Page].)
JPEG/TIFF Print	Select the image size (resolution) when printing JPEG or TIFF file.  Value: Fit to Paper Size, Image Resolution, Fit to Print Resolution
XPS Fit to Page	Set the default value for the XPS fit to page function.  Value: Off, On

Item	Description
PDF/A	Select the default PDF/A setting.
	Value: Off, PDF/A-1a, PDF/A-1b, PDF/A-2a, PDF/A-2b, PDF/A-2u
File Name Entry	Set an automatically entered name (default) for jobs. Additional information such as Date and Time and Job No. can also be set.
	Value
	File Name: Up to 32 characters can be entered.
	Additional Info: None, Date and Time, Job No., Job No. & Date and Time, Date and Time & Job No.
E-mail Subject/Body	Set the subject and body automatically entered (default subject and body) when sending the scanned originals by E-mail. Three body messages can be registered, and the initial template can be used to choose which body message is used.  Value
	Subject: Up to 60 characters can be entered.
	Body 1 to 3: Up to 500 characters can be entered.
i-FAX Subject/Body	Set the subject and body automatically entered (default subject and body) when sending the scanned originals by i-FAX.  Value
	Subject: Up to 60 characters can be entered.
	Body: Up to 500 characters can be entered.
	NOTE
	This function is displayed when the optional Internet FAX Kit is activated.
	→ Internet FAX Kit(A) "Internet FAX Kit" (page 11-6)
DP Read Action	Set the operation when a document is scanned from the document processor.
	Value: Speed Priority, Quality Priority
OCR Text Recognition	Set the default OCR Text Recognition.
	Value: Off, On
Primary OCR Language	Set the default language of the text to be extracted. ([English] is selected as a
	default.)
	Select the language to extract from the options displayed on the touch panel.
Repeat Copy	Select the Repeat Copy default.
	Value: Off, On
	NOTE
	<ul> <li>This function will not be displayed when the optional Data Security Kit is installed.</li> <li>This function will not be displayed when Repeat Copy Job Retention is set to 0.</li> </ul>
Chin Blank Bana (Cany)	1 1 1
Skip Blank Page (Copy)	Select the default Skip Blank Page settings.  Value: Off, On
Skip Blank Pg (Send/Store)	value. C.i., C.i.
File Separation	Select the default file separation setting.  Value: Off, On
	NOTE
	If you select [ <b>On</b> ], set the number of pages to be divided. The setting range is 1 to 500 pages.
Cont. Scan (Copy)	Select the default Continuous Scan (Copy) setting.
	Value: Off, On

Item	Description
Continuous Scan (FAX)*1	→ FAX Operation Guide
Cont. Scan (Send/Store)  Select the default Continuous Scan (Send/Store) setting.  Value: Off, On	

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

# **Optional Keyboard Type**

[System Menu/Counter] key > [Common Settings] > [Optional Keyboard Type]

Item	Description
Optional Keyboard Type	Select the type of optional keyboard that you want to use.
	Value: US-English, US-English with Euro, French, German, UK-English

# **System Stamp**

[System Menu/Counter] key > [Common Settings] > [System Stamp]

	Item	Description
Basic		Configure settings for stamps.
	Text (Text Stamp)	Select [Add/Edit] to edit the test string for a template. Up to 8 templates can be registered. Select [Delete] to delete a template.
	Font (Page #)	Set the font size for page numbers when printing them.  Value  Size 1 to 3: 6.0 to 64.0 pt
	Font (Bates Stamp)	When a bates stamp is used, set the font sizes that can be set.  Value  Size 1 to 3: 6.0 to 64.0 pt
	Font (Text Stamp)	Set the font size for stamps when printing them.  Value  Size 1 to 3: 6.0 to 64.0 pt

	Item	Description
Printing Jobs		Configure settings for stamps when a document is printed.  After configuring the setting, return to the Copying Functions or Custom Box (Printing a Document) screen from System Menu, and select the [Reset] key.
	Text Stamp	Select whether to print a text stamp on all printing jobs.  Value: Off, On  NOTE
		When [On] is selected, the Text Stamp settings cannot be changed when printing.
	Edit Text Stamp	Set the default text stamp.
	Stamp	Select a text string to be stamped from templates, or select [ <b>Stamp</b> ] and enter a maximum of 32 characters for the text string.
		NOTE  Templates that have been set will appear. For details on registering templates, refer to the following:
		→ Text (Text Stamp) (page 8-21)
	Stamp Method	Select the stamp method for the text stamp.  Value: Each Print Page, Each Original Page
	Position	Set the text stamp position.  Value: Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right, Detail
		Select [Detail] to specify the detailed stamp position using numeric values, and to set the stamp position and angle when a stamp is placed on the back side of the paper in duplex printing.
	Font	Set the font of the text stamp.  Value  Size: Font sizes registered in Font (Text Stamp) are displayed.  → Font (Text Stamp) (page 8-21)  Character Border: Off, Circle, Rectangle, Underline  Style: None, Bold, Italic, Bold/Italic  Font: Courier, Letter Gothic  Color: Black, White  Density: 10 to 100% (in 10% increments)  Display Pattern: Transparent, Clipping, Overwrite

	Item	Description
Print	ing Jobs	
	Bates Stamp	Select whether to print a bates stamp on all printing jobs.  Value: Off, On
		When [On] is selected, the Bates Stamp settings cannot be changed when printing.
	Edit Bates Stamp	Set the default Bates Stamp.  Value: Date, User Name, Serial Number, Numbering, Text 1, Text 2, Date Format, Numbering Default, Position, Font
		NOTE  To set [Text 1] or [Text 2], select [Change] below and enter a maximum of 32 characters for the text string.  To set [Date], select [Date Format] and set the date display format.  To set [Numbering], select [Numbering Default] and set the starting sequence number (1 to 9999999). If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits).  Select [Detail] in "Position" to specify the detailed stamp position using numeric values, and to set the stamp position to be placed on the back side of the paper in duplex printing.

	Item	<b>Description</b>
Send	ling Jobs	Configure stamp settings for sending documents.  After configuring the setting, return to the Sending Functions or Custom Box (Sending Documents) screen from System Menu, and select the [Reset] key.
	Text Stamp	Select whether to print a text stamp on all sending jobs.  Value: Off, On  NOTE  When [On] is selected, the Text Stamp settings cannot be changed when sending.
	Edit Text Stamp	Set the default text stamp.
	Stamp	Select a text string to be stamped from templates, or select [ <b>Stamp</b> ] and enter a maximum of 32 characters for the text string.
		NOTE
		Templates that have been set will appear. For details on registering templates, refer to the following:
		→ Text (Text Stamp) (page 8-21)
	Position	Set the text stamp position.  Value: Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right, Detail
		NOTE Select [Detail] to specify the detailed stamp position using numeric values, and to set the stamp angle.
	Font	Set the font of the text stamp.  Value
		Size: Font sizes registered in Font (Text Stamp) are displayed.
		► Font (Text Stamp) (page 8-21) Character Border: Off, Circle, Rectangle, Underline
		Style: None, Bold, Italic, Bold/Italic
		Font: Courier, Letter Gothic
		Color: Black, Red, Green, Blue, Cyan, Magenta, Yellow, White
		Density: 10 to 100% (in 10% increments)
		Display Pattern: Transparent, Clipping, Overwrite

Item	Description
Sending Jobs	
Bates Stamp	Select whether to print a bates stamp on all sending jobs.  Value: Off, On  NOTE  When [On] is selected, the Bates Stamp settings cannot be changed when sending.
Edit Bates Stamp	Set the default Bates Stamp.  Value: Date, User Name, Serial Number, Numbering, Text 1, Text 2, Date Format, Numbering Default, Position, Font  NOTE
	To set [ <b>Text 1</b> ] or [ <b>Text 2</b> ], select [ <b>Change</b> ] below and enter a maximum of 32 characters for the text string.  To set [ <b>Date</b> ], select [ <b>Date Format</b> ] and set the date display format.
	To set [Numbering], select [Numbering Default] and set the starting sequence number (1 to 9999999). If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits).
	Select [ <b>Detail</b> ] in "Position" to specify the detailed stamp position using numeric values.

	Item	Description
Stori	ng Jobs	Configure stamp settings for storing documents in removable memory.  After configuring the setting, return to the Custom Box (Storing Documents) screen from System Menu, and select the [Reset] key.
	Text Stamp	Select whether to print a text stamp on all storing jobs.  Value: Off, On  NOTE  When [On] is selected, the Text Stamp settings cannot be changed when storing.
	Edit Text Stamp	Set the default text stamp.
	Stamp	Select a text string to be stamped from templates, or select [Stamp] and enter a maximum of 32 characters for the text string.
		NOTE
		Templates that have been set will appear. For details on registering templates, refer to the following:
		→ Text (Text Stamp) (page 8-21)
	Position	Set the text stamp position.  Value: Top Left, Top Middle, Top Right, Middle Left, Center, Middle Right, Bottom Left, Bottom Middle, Bottom Right, Detail
		NOTE Select [Detail] to specify the detailed stamp position using numeric values, and to set the stamp angle.
	Font	Set the font of the text stamp.  Value
		Size: Font sizes registered in Font (Text Stamp) are displayed.
		▶ Font (Text Stamp) (page 8-21) Character Border: Off, Circle, Rectangle, Underline
		Style: None, Bold, Italic, Bold/Italic
		Font: Courier, Letter Gothic
		Color: Black, Red, Green, Blue, Cyan, Magenta, Yellow, White
		Density: 10 to 100% (in 10% increments)
		Display Pattern: Transparent, Clipping, Overwrite

Item	Description
Storing Jobs	
Bates Stamp	Select whether to print a bates stamp on all storing jobs.  Value: Off, On  NOTE  When [On] is selected, the Bates Stamp settings cannot be changed when storing.
Edit Bates Stamp	Set the default Bates Stamp.  Value: Date, User Name, Serial Number, Numbering, Text 1, Text 2, Date Format, Numbering Default, Position, Font
	NOTE  To set [Text 1] or [Text 2], select [Change] below and enter a maximum of 32 characters for the text string.  To set [Date], select [Date Format] and set the date display format.
	To set [Numbering], select [Numbering Default] and set the starting sequence number (1 to 9999999). If you select [Fixed Digit Number] > [On], you can set the number of digits of the serial number (1 to 7 digits).
	Select [ <b>Detail</b> ] in "Position" to specify the detailed stamp position using numeric values.

# **Manual Staple**

[System Menu/Counter] key > [Common Settings] > [Manual Staple]



Only displayed when the optional 4,000-Sheet Finisher is installed.

Item	Description
Manual Staple	Select whether to use Manual Staple.  Value: Off, On  NOTE
	If you selected [ <b>On</b> ], set the time until manual stapling mode is automatically cancelled. The setting range is 5 to 60 seconds (in 5-second increments).
Staple Position	Set the default Staple Position.  Value: A4, Letter

# Offset Documents by Job

[System Menu/Counter] key > [Common Settings] > [Offset Documents by Job]

Item	Description
Offset Documents by Job	Select whether to offset documents by Job.  Value: Off, On
	NOTE  This function is displayed when an optional Document Finisher is installed.

# **Low Toner Alert**

[System Menu/Counter] key > [Common Settings] > [Low Toner Alert]

Item	Description
Low Toner Alert	Set the amount of remaining toner to notify the administrator when to order a toner when the toner is running low.
	This notification is used for event report, Status Monitor, SNMP Trap.
	Value: Off, On
	NOTE
	If [ <b>On</b> ] is selected, set the amount of remaining toner to alert. The setting range is 5 to 100% (in 1% increments).

# **Offset One Page Documents**

[System Menu/Counter] key > [Common Settings] > [Offset One Page Documents]

Item	Description
Offset One Page Documents	Set whether one-page documents are sorted.  Value: Off, On
	NOTE  This function is displayed when an optional Document Finisher is installed.

# **Display Status/Log**

[System Menu/Counter] key > [Common Settings] > [Display Status/Log]

Set the display method of the Status/Log.

Item	Description
Display Jobs Detail Status	Value: Show All, My Jobs Only, Hide All
Display Jobs Log	Value: Show All, My Jobs Only, Hide All
Display FAX Log*1	Value: Show All, Hide All

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

# **Message Banner Print**

[System Menu/Counter] key > [Common Settings] > [Message Banner Print]

Item	Description
Message Banner Print	Set whether the confirmation screen appears before each sheet is printed when printing multiple banner sheets.  Value: Off, On

# **Customize Status Display**

# [System Menu/Counter] key > [Common Settings] > [Customize Status Display]

Set the items that appear in the status screens for printing jobs, sending jobs, and storing jobs.

Item	Description
Printing Jobs Column 1	Value: Job Name, User Name, Print Pages x Copies, Total Printed Pages
Printing Jobs Column 2	Value: Job Name, User Name, Print Pages x Copies, Total Printed Pages
Sending Jobs Column 1	Value: Job Name, User Name, Destination, Original Pages, Color/Black & White
Sending Jobs Column 2	Value: Job Name, User Name, Destination, Original Pages, Color/Black & White
Storing Jobs Column 1	Value: Job Name, User Name, Original Pages, Color/Black & White
Storing Jobs Column 2	Value: Job Name, User Name, Original Pages, Color/Black & White

# **Message Board Settings**

[System Menu/Counter] key > [Common Settings] > [Message Board Settings]

	Item		Description	
Mess	Message Board		Select whether to use the Message Board.  Value: Off, On	
Mess	Message List		Configure settings for the registered message board.	
	Add		Add a new message board.	
		Device to Show	Select where to show the message.  Value  Hide: Displays no message.	
			Operation Panel: Displays a message on the operation panel.	
			Embedded Web Server: Displays a message in Command Center RX.	
			Panel + Web Server: Displays a message in the operation panel and the Command Center RX.	
		Message Type	Select the message type.  Value: Normal, Alert, Prohibition	
		Place to Show	Select where to show the message in the touch panel.	
	Place to Sno	Place to Silow	Value	
			Login Screen: Login screen of user login administration	
			Home Screen: Home Screen	
			Login Screen+Home Screen: Login screen and Home screen of user login administration	
		Priority Show	Displays the message on the message board.	
			Value: Off, On	
		Title	Enter a maximum of 30 characters for the title to display on the message board.	
		Body	Enter a maximum of 300 characters for the body to display on the message board.	
Delete		e	Deletes the message board selected on the list.	
	Raise Priority		Raise the priority of the message board selected on the list.	
	Lower Priority		Lower the priority of the message board selected on the list.	
	Detail/Edit		Display information on the selected message board.	

# **Remote Printing**

[System Menu/Counter] key > [Common Settings] > [Remote Printing]

Item	Description	
Remote Printing	Select whether to prohibit printing that is performed without operating the machine. When [ <b>Prohibit</b> ] is selected, a document that has been stored in the document box from the printer driver can be printed from the machine. This prevents another person from seeing that document.  Value: <b>Prohibit, Permit</b>	
	NOTE  If [Prohibit] is selected, printing and storing using Quick Copy and Proof and Hold functions are disabled. Printing a received FAX (optional) is not prohibited.	

# **Numeric Keypad Settings**

[System Menu/Counter] key > [Common Settings] > [Numeric Keypad Settings]

Item		Description	
Default Copy/Print from Box  HyPAS Application		Select whether or not to display the numeric keypad.  Value: Off, On	
Layout (HyPAS Application)		Select the HyPAS numeric keypad layout to display upon startup.  Value: Floating, Horizontal, On the Right	

# **Prevent Light Reflection**

[System Menu/Counter] key > [Common Settings] > [Prevent Light Reflection]

Item	Description
Prevent Light Reflection	Prevent light reflection when using the Erase Shadowed Areas feature.
	Value: Off, On

# **Function Key Assignment**

[System Menu/Counter] key > [Common Settings] > [Function Key Assignment]

Assign a function to each function key.

Item	Description	
Function Key 1	Value: Copy, Send, FAX*1, Custom Box, Job Box, Removable Memory, FAX Box, Send to Me (E-mail), Send to Me from Box (E-mail), Internet Browser, None, Program*2, Application*3	
Function Key 2		
Function Key 3	NOTE	
	You can select the functions to be displayed for [AII], [Application], [Program] and [Others].	

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

## **Show Power Off Message**

[System Menu/Counter] key > [Common Settings] > [Show Power Off Message]

Item	Description
Show Power Off Message	Set the mode whether display a confirmation message in power supply off.  Value: Off, On

# **Home**

[System Menu/Counter] key > [Home]

Configure settings for Home screen.

→ Editing the Home Screen (page 2-17)

<sup>\*2</sup> The registered program will be displayed.

<sup>\*3</sup> The running application will be displayed.

# Copy

# [System Menu/Counter] key > [Copy]

Configures settings for copying functions.

Item	Description	
Paper Selection	Set the default paper selection.  Value: Auto, Default Paper Source	
Auto Image Rotation Action	Set whether the image is rotated when the orientation of the document to be printed is different from the orientation of the paper.  Value	
	Unrotated Manual Copy: If a paper source or zoom ratio is specified, the image is not rotated.	
	Apply All: Rotates all images.  Follow Image Size: The image is rotated if the rotated image fits on the paper.	
Auto Paper Selection	If [Auto] is selected for Paper Selection, set the paper size selection method when the zoom changes.  Value	
	Most Suitable Size: Selects paper size based on the current zoom and the size of the original.	
	Same as Original Size: Selects paper that matches the size of the original, regardless the zoom.	
Auto % Priority	When a paper source of different size from the original is selected, select whether automatic zoom (reduce/zoom) is performed.  Value: Off, On	
Paper Size for Small Original	Specify the paper size to be used for a case where the original is too small to be detected in the Auto Paper Selection mode.	
	Value: Default Paper Source, A4-R, A4, A5-R, A6-R, B5-R, B5, B6-R, Letter-R, Letter, Statement-R	
Preset Limit	Restrict the number of copies that can be made at one time.  Value: 1 to 9999 copies	
Reserve Next Priority	Specify whether the default screen appears when a subsequent copy job is reserved while printing is in progress. To have the default screen appear, select [On].  Value: Off, On	
Quick Setup Registration	Select the functions to be registered for Quick Setup.	
	Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary.	
	Six items in the following options are available.	
	Value: Paper Selection, Zoom, Staple/Punch*1, Density, Duplex, Combine, Collate/Offset, Original Image, Original Size, Original Orientation, Continuous Scan, Background Density Adj.	

<sup>\*1</sup> This setting is displayed when the optional Document Finisher is installed. When a punching unit is not installed, this item name is "Staple".

# **Send**

# [System Menu/Counter] key > [Send]

Configures settings for sending functions.

Item	Description
Quick Setup Registration	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary.  Six items in the following options are available.  Value: Original Size, 2-sided/Book Original, Sending Size, Original Orientation, File Format, Density, Original Image, Scan Resolution, FAX TX Resolution*1, Color Selection, Zoom, Continuous Scan, Background Density Adj.
Dest. Check before Send	Select whether to display the confirmation screen of destinations after pressing the [Start] key when performing sending jobs.  Value: Off, On
Color Type	Set the color type when you send color documents.  Value: RGB, sRGB
Entry Check for New Dest.	When adding new destination, select whether to display the entry check screen to check the entered destination.  Value: Off, On
Default Screen	Set the default screen displayed when you select the [Send] key.  Value: Destination, Address Book

	Item	Description		
Send a	and Forward	Select whether to forward the original to another destination when sending images.		
F	Forward	Select whether to forward the original.  Value: Off, On  NOTE  When selecting [On], select rules to forward from [E-mail], [Folder(SMB)], [Folder(FTP)], [FAX]*1, [i-FAX(Via server-On)]*2, and [i-FAX(Via server-Off)]*2.		
С	Destination	Set the destination to which the original is forwarded. One destination can be set.  Follow the steps below to register the destination.  • Address Book  • E-mail Addr Entry  • Folder Path Entry  Specifying Destination (page 5-40)		
C	Color Setting	Configure the color settings for forwarded original.  Value: Auto Color (Color/Gray), Auto Color (Color/B & W), Full Color, Grayscale, Black & White		
Scan Resolution		Select resolution for stored original.  Value: 600x600dpi, 400x400dpi Ultra Fine, 300x300dpi, 200x400dpi Super Fine, 200x200dpi Fine, 200x100dpi Normal		
F	File Format	Select the file format of forwarded original.  → File Format for Send and Forward (page 8-35)		
·		Set whether originals are divided into multiple files before being forwarded.  Value: Off, Each Page		
E	E-mail Subject	Enter a maximum of 60 characters for the subject of forwarded E-mail.  Character Entry Method (page 11-9)		
F	FTP Encrypted TX	Set whether originals are encrypted before being forwarded.  Value: Off, On  NOTE  This function is displayed when SSL is set to [On] in Security Settings.  Security Settings (page 8-58)		
New Destination Entry		Select whether to permit direct entry of destination.  Value: Prohibit, Permit		
Recall Destination		Select whether to permit usage of [Recall] on the Send screen.  Value: Prohibit, Permit		
Broadcast		Set whether to enable broadcast.  Value: Prohibit, Permit		
HighCompressionPDF Mode		Select the compression method for sending High-Compression PDF.  Value: Text Priority, File Size Priority		
OCR Text Recognition Act.		Configure settings for OCR Text Recognition Action.  Value: Speed Priority, Quality Priority		

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

<sup>\*2</sup> This function is displayed when the optional Internet FAX Kit is activated.

# File Format for Send and Forward

## [System Menu/Counter] key > [Send] > [Send and Forward] > [File Format]

Select the file format for forwarded original.

The table below lists the file formats and their details.

File format	Adjustable range of image quality	Color setting
PDF*1	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
TIFF	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
JPEG	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Full Color, Grayscale
XPS	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
OpenXPS	1 Low Quality (High Comp.) to 5 High Quality (Low Comp.)	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale, Black and White
High Comp. PDF*1	Compression Ratio Priority, Standard, Quality Priority	Auto Color (Color/Grayscale), Auto Color (Color/Black and White), Full Color, Grayscale

<sup>\*1</sup> File format can be selected. (Value: [Off] / [PDF/A-1a] / [PDF/A-1b] / [PDF/A-2a] / [PDF/A-2b] / [PDF/A-2u])

## **PDF Encryption Functions**

If you have selected PDF or High Comp. PDF for file format, you can restrict the access level for displaying, printing, and editing PDF's by assigning a secure password.

Items that can be set vary depending on the setting selected in "Compatibility".

#### When [Acrobat 3.0 or later] is selected

[System Menu/Counter] key > [Send] > [Send and Forward] > [File Format] > [PDF/High Comp. PDF] > [Encryption]

	Item		Value	Description
Password to Open Document		Open	Off, On	Enter the password to open the PDF file. Select [Password], enter a password (up to 256 characters) and then select [OK]. Select [Confirmation] to enter the password again for confirmation, and select [OK].
	Password to Edit/Print Document		Off, On	Enter the password to edit the PDF file.  Select [Password], enter a password (up to 256 characters) and then select [OK].  Select [Confirmation] to enter the password again for confirmation, and select [OK].  When you have entered the password to edit/print document, you can specifically limit the operation.
	Detail	Printing Allowed	Not Allowed, Allowed	Restricts printing of the PDF file.
		Changes Allowed	Not Allowed	Disables the change to the PDF file.
			Commenting	Can only add commenting.
			Page Layout except extracting Pages	Can change the page layout except extracting the pages of the PDF file.
			Any except extracting Pages	Can conduct all operations except extracting the pages of the PDF file.
		Copying of Text/Images/ Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.

## When [Acrobat 5.0 or later] is selected

# [System Menu/Counter] key > [Send] > [Send and Forward] > [File Format] > [PDF/High Comp. PDF] > [Encryption]

Item		tem	Value	Description
	Password to Open Document		Off, On	Enter the password to open the PDF file. Select [Password], enter a password (up to 256 characters) and then select [OK]. Select [Confirmation] to enter the password again for confirmation, and select [OK].
	Password to Edit/Print Document		Off, On	Enter the password to edit the PDF file.  Select [Password], enter a password (up to 256 characters) and then select [OK].  Select [Confirmation] to enter the password again for confirmation, and select [OK].  When you have entered the password to edit/print document, you can specifically limit the operation.
	Detail	Printing Allowed	Not Allowed	Disables the printing of PDF file.
			Allowed (Low Resolution only)	Can print the PDF file only in low resolution.
			Allowed	Can print the PDF file in original resolution.
		Changes Allowed	Not Allowed	Disables the change to the PDF file.
			Inserting/Deleting/ Rotating Pages	Can only insert, delete, and rotate the pages of the PDF file.
			Commenting	Can only add commenting.
			Any except extracting Pages	Can conduct all operations except extracting the pages of the PDF file.
		Copying of Text/Images/ Others	Disable, Enable	Restricts the copying of text and objects on the PDF file.

# **Document Box/Removable Memory**

[System Menu/Counter] key > [Document Box/Removable Memory]

Configures settings related to the Custom Box, Job Box, Sub Address Box and Polling Box.

	Item	Description	
Cust	om Box	Configure settings for Custom Box.	
Add/Edit Box   → Creating a New Custom Box (page 5-52)		→ Creating a New Custom Box (page 5-52)	
	Default Setting	Auto File Deletion Time Set the time to automatically delete stored documents.	
FAX	Box*1	→ FAX Operation Guide	
Job	Вох	Configure settings for Job Box.	
	Quick Copy Job Retention	To maintain free space on the hard disk, you can set the maximum number of stored jobs.	
		Value: number between 0 and 300	
		NOTE	
		When 0 is set, Quick Copy cannot be used.	
	Repeat Copy Job Retention	To maintain free space on the hard disk, you can set the maximum number of stored jobs.	
		Value: number between 0 and 50	
		NOTE	
		This function will not be displayed when the optional Data Security Kit is activated. When 0 is set, Repeat Copy cannot be used.	
	Deletion of Job Retention	This setting specifies that documents, such as Private Printing, Quick Copying, or Proof and Hold Printing, saved temporarily in the job box are automatically deleted after they have been saved for a set time.	
		Value: Off, 1 hour, 4 hours, 1 day, 1 week	
		NOTE	
		This function is valid for documents saved after the function is set. Regardless of this function setting, temporary documents are deleted when the power switch is turned off.	
Polli	ng Box*1	→ FAX Operation Guide	

Item	Description
Quick Setup Registration	Select the functions to be registered for Quick Setup. Six keys of the Quick Setup screen are allocated to typical functions but can be changed as necessary.
Store File	Select the functions to be registered for Store File Quick Setup.
	Color Selection, Storing Size, Density, 2-sided/Book Original, Scan Resolution, Zoom, Original Orientation, Original Size, Original Image, Continuous Scan, Background Density Adj.  Value: Off, Key 1 to 6
Print	Select the functions to be registered for Print Quick Setup.
	Paper Selection, Collate/Offset, Staple/Punch, Duplex*2, Combine, Delete after Printed  Value: Off, Key 1 to 6
Send	Select the functions to be registered for Send Quick Setup.  Sending Size, FAX TX Resolution*1, File Format, Delete after Transmitted, Color Selection  Value: Off, Key 1 to 6

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

# **FAX**

[System Menu/Counter] key > [FAX]

Configure settings for FAX.

**▶** FAX Operation Guide

# **Printer**

## [System Menu/Counter] key > [Printer]

Printing from computers, settings are generally made on the application software screen. However, the following settings are available for configuring the defaults to customize the machine.

Item	Description
Emulation	Select the emulation for operating this machine by commands oriented to other types of printers.  Value: PCL6, KPDL, KPDL (Auto)
	When you have selected [KPDL (Auto)], set "Alt Emulation", too.  When you have selected [KPDL] or [KPDL (Auto)], set "KPDL Error Report", too.
Alt Emulation	When you have selected [KPDL (Auto)] as emulation mode, you can switch between KPDL and another emulation mode (alternative emulation) automatically according to the data to print.  Value: PCL6
KPDL Error Re	When an error has occurred during printing in KPDL emulation mode, set whether or not the error report is output.  Value: Off, On

<sup>\*2</sup> Display only when an optional Document Finisher is installed. When a punching unit is not installed, this item name is "Staple".

Item	Description	
EcoPrint	EcoPrint conserves toner when printing. This is recommended for test copies where faded printing is not a problem.  Value: Off, On	
Toner Save Level (EcoPrint)	Select the default Toner Save Level (EcoPrint).  Value: 1 (Low) to 5 (High)	
	NOTE	
	Raising the level reduces toner consumption, but image quality falls.	
Override A4/Letter	Select whether to treat A4 size and Letter, which are similar in size, as the same size when printing.  Value	
	Off: A4 and Letter are not regarded as the same in size.	
	On: A4 and Letter are regarded as the same in size. The machine will use whichever size is in the paper source.	
Duplex	Select binding orientation for duplex mode.	
	Value: 1-sided, 2-sided Bind LongEdge, 2-sided Bind ShortEdge	
Copies	Set the default number of copies, from 1 to 9,999.  Value: 1 to 9999 copies	
Orientation	Set the default orientation, [Portrait] or [Landscape].  Value: Portrait, Landscape	
Form Feed TimeOut	Receiving print data from the computer, the machine may sometimes wait if there is no information signaling that the last page does not have any more data to be printed. When the preset timeout passes, the machine automatically prints paper. The options are between 5 and 495 seconds.	
	Value: 5 to 495 seconds (in 5 second increments)	
LF Action	Set the line feed action when the machine receives the line feed code (character code 0AH).  Value: LF Only, LF and CR, Ignore LF	
CR Action	Set the character return action when the machine receives the character return code (character code 0DH).	
Joh Nome	1.5	
JOD Name	Value: Off, On	
	NOTE	
	When selecting [On], select the job name to be displayed from [Job Name], [Job No. & Job Name], or [Job Name & Job No.].	
User Name	Set whether the user name set in the printer driver is displayed.  Value: Off, On	
Paper Feed Mode	While printing from the computer, select how to feed paper when the paper source and type are specified.  Value	
	Auto: Search the paper source that matches the selected paper size and type. Fixed: Print on paper loaded in the specified paper source.	
	Value: CR Only, LF and CR, Ignore CR  Set whether the job name set in the printer driver is displayed.  Value: Off, On  NOTE  When selecting [On], select the job name to be displayed from [Job Name], [Job No. & Job Name], or [Job Name & Job No.].  Set whether the user name set in the printer driver is displayed.  Value: Off, On  While printing from the computer, select how to feed paper when the paper source and type are specified.  Value  Auto: Search the paper source that matches the selected paper size and type.	

Item	Description
MP Tray Priority	If paper is set in the MP Tray then it is possible for priority to be given to that MP tray in the paper feed.  Value  Off: The printer driver settings are followed.
	Auto Feed: If Auto is selected in the printer driver and there is paper in the MP tray then the paper feed will be from the MP tray.
	Always: If there is paper in the MP tray then the paper feed will be from the MP tray regardless of what is set in the printer driver.
Auto Cassette Change	Select the following actions when the paper runs out in the paper source while printing.  Value: Off, On
	NOTE
	<ul> <li>When selecting [Off], the machine displays "Add the following paper in cassette #." (# is a cassette number) or "Add the following paper in the multipurpose tray.", and stops printing.</li> </ul>
	Load the paper according to the paper source displayed to resume printing.
	<ul> <li>To print from the other paper cassette, select [Paper Selection]. Select the desired paper source.</li> </ul>
	When selecting [On], the machine continues printing automatically when the other cassette contains the same paper as the currently-used cassette.
Wide A4	Turn this to on to increase the maximum number of characters that can be printed in a line for an A4 page (78 characters at 10 pitch) and Letter size page (80 characters at 10 pitch). This setting is only effective in PCL6 emulation.  Value: Off, On
Resolution	Set the resolution used for printing.
	Value: 600 dpi, 1200 dpi
	NOTE
	Settings that are received from the printer driver have priority over the operation panel settings.
KIR	Select the default KIR (smoothing) setting.
	Value: Off, On

# **Report**

Print reports to check the machine settings, status, and history. Settings for printing reports can also be configured.

# **Print Report**

[System Menu/Counter] key > [Report] > [Print Report]

Item	Description	
Status Page	Prints the status page, allowing you to check the information including current settings, available memory space, and optional equipment installed.	
	Status Page  Firmware Version  Firmware Version	
Font List	Prints the font list, allowing you to check the font samples installed in the machine.	
Network Status	Prints the network status, allowing you to check the information including network interface firmware version, network address and protocol.  Network Status Page  KYUDEERA	

Item	<b>Description</b>
Service Status	Prints the service status. More detailed information is available than on the Status Page. Service personnel usually print the service status pages for maintenance purpose.
Optional Network Status	Prints the optional network status, allowing you to check the information including optional network interface firmware version, network address and protocol.  NOTE  This function is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.

# **Admin Report Settings**

[System Menu/Counter] key > [Report] > [Admin Report Settings]

Configure settings for Outgoing FAX report and Incoming FAX report.

▶ FAX Operation Guide

# **Result Report Setting**

[System Menu/Counter] key > [Report] > [Result Report Setting]

	Item	Description	
Send Result Report		Automatically print a report of transmission result when a transmission is complete.	
	E-mail/Folder	Automatically print a report of transmission result when E-mail or SMB/FTP transmission is complete.  Value: Off, On, Error Only	
	FAX*1	→ FAX Operation Guide	
	Canceled before Sending*2	Print a send result report if the job is canceled before being sent.  Value: Off, On	
	Recipient Format*2	Select the Recipient Format for the send result report.  Value: Name or Destination, Name and Destination	
FAX RX Result Report*1		→ FAX Operation Guide	
Job Finish Notice Setting*1		→ FAX Operation Guide	
RX Result Report Type*1*3		→ FAX Operation Guide	

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

<sup>\*2</sup> When "E-mail/Folder" and "FAX" are set to [Off], this function will not be displayed.

<sup>\*3</sup> This is not displayed if you selected [Off] for FAX RX Result Report.

# **Sending Log History**

[System Menu/Counter] key > [Report] > [Sending Log History]

Item	Description	
Auto Sending	This function automatically sends the log history to the specified destinations whenever a set number of jobs has been logged.  Value: Off, On	
	NOTE	
	If [On] is selected, specify the number of job histories. The setting range is 1 to 1,500.	
Send Log History	You can also send the log history to the specified destinations manually.	
Destination	Set the destination to which log histories are sent. Only E-mail address can be set.	
Job Log Subject	Set the subject automatically entered when sending log histories by E-mail.  Value: Up to 60 characters	
SSFC Log Subject	Enter the subject of the printed job history with IC card authentication.  Value: Up to 60 characters	
Personal Information	Select whether to include personal information in the job log.  Value: Include, Exclude	

# **Login History Settings**

[System Menu/Counter] key > [Report] > [Login History Settings]

Item	Description
Login History	Select whether to record the Login History.  Value: Off, On
	NOTE
	If [ <b>On</b> ] is selected, set the number of histories to be recorded. The setting range is 1 to 1,000.
Auto Sending	Select whether the login history is automatically sent to the set address when the number of entries reaches the number set in "Login History".  Value: Off, On
	NOTE
	This function is displayed when "Login History" is set to [On].
Destination	Set the destination to which login histories are sent. E-mail address only can be set as destination.
	NOTE
	This function is displayed when "Login History" is set to [On].
Subject	Set the subject automatically entered when sending login histories by E-mail.  Value: Up to 60 characters
	NOTE
	This function is displayed when "Login History" is set to [ <b>On</b> ].
Log Reset	Resets the recorded login histories.



If the user authentication screen appears, enter your login user name and login password and select [Login]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

# **Device Log History Settings**

[System Menu/Counter] key > [Report] > [Device Log History Settings]

Item	Description
Device Log History	Select whether to record the device log history.  Value: Off, On  NOTE
	If [On] is selected, set the number of histories to be stored. The setting range is 1 to 1,000.
Auto Sending	Select whether the device log history is automatically sent to the set address when the number of entries reaches the number set in "Device Log History".  Value: Off, On
	NOTE  This function is displayed when "Device Log History" is set to [On].
Destination	Set the destination to which device log histories are sent. E-mail address only can be set as destination.
	NOTE  This function is displayed when "Device Log History" is set to [On].
Subject	Set the subject automatically entered when sending device log histories by E-mail.  Value: Up to 60 characters
	NOTE  This function is displayed when "Device Log History" is set to [On].



If the user authentication screen appears, enter your login user name and login password and select [Login]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name Login User N		Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

# Secure Comm. Error Log

[System Menu/Counter] key > [Report] > [Secure Comm. Error Log]

Item	Description
Secure Comm. Error Log	Select whether to record the secure communication error log history.  Value: Off, On
	NOTE  If [On] is selected, set the number of histories to be stored. The setting range is 1 to 1,000.
Auto Sending	Select whether the secure communication error log history is automatically sent to the set address when the number of entries reaches the number set in "Secure Comm. Error Log".  Value: Off, On
	NOTE  This function is displayed when "Secure Communication Error Log History" is set to [On].
Destination	Set the destination to which secure communication error log histories are sent. E-mail address only can be set as destination.
	NOTE  This function is displayed when "Secure Communication Error Log History" is set to [On].
Subject	Set the subject automatically entered when sending secure communication error log histories by E-mail.  Value: Up to 60 characters
	NOTE This function is displayed when "Secure Communication Error Log History" is set to [On].

# NOTE

If the user authentication screen appears, enter your login user name and login password and select [**Login**]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

# System/Network

Configures machine system settings.

#### **Network**

Configures network settings.

#### **Host Name**

[System Menu/Counter] key > [System/Network] > [Network] > [Host Name]

Item	Description	
Host Name	Check the host name of the machine. Host name can be changed from Command Center RX.	
	→ Changing Device Information (page 2-66)	

# **Wired Network Settings**

[System Menu/Counter] key > [System/Network] > [Network] > [Wired Network Settings]

Configure wired network settings.

## **TCP/IP Setting**

Item		<b>Description</b>	
TCP/	IP	Select whether to use TCP/IP Protocol.  Value: Off, On	
IPv4		Set up TCP/IP (IPv4) to connect to the network. This setting is available when [ <b>TCP</b> / <b>IP</b> ] is set to [ <b>On</b> ].	
	IP Address	Set the IP address.  Value: ###.###.###	
		NOTE  When DHCP is set to [On], this function will be grayed out and the value cannot be entered.	
	Subnet Mask	Set the IP subnet mask.  Value: ###.###.###	
		NOTE  When DHCP is set to [On], this function will be grayed out and the value cannot be entered.	
	Default Gateway	Set the IP gateway address.  Value: ###.###.###	
		NOTE When DHCP is set to [On], this function will be grayed out and the value cannot be entered.	
	DHCP	Select whether to use the DHCP (IPv4) server.  Value: Off, On	
	Auto-IP	Select whether to use Auto-IP.  Value: Off, On	

# **⊘** IMPORTANT

- When setting the Auto-IP, enter "0.0.0.0" in [IP Address].
- After changing the setting, restart the network or turn the machine OFF and then ON.

	Item	Description
IPv6		Set up TCP/IP (IPv6) to connect to the network. This setting is available when [ <b>TCP</b> / <b>IP</b> ] is [ <b>On</b> ].
	IPv6	Select whether to use IPv6.  Value: Off, On  NOTE  Selecting [On] displays IP address in [IP Address (Link Local)] after restarting the network.
	RA (Stateless)	Select whether to use RA (Stateless).  Value: Off, On  NOTE  This function is displayed when [IPv6] is set to [On].  Selecting [On] displays IP address in [IP Address (Stateless)] after restarting the network.
	Manual Setting	Manually specify the IP address, prefix length, and gateway address of TCP/IP (IPv6).  Value  IP Address (Manual): 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).  Prefix Length: 0 to 128  Default Gateway: 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).  NOTE  This function is displayed when [IPv6] is set to [On].  To enter "Default Gateway", set [RA (Stateless)] to [Off].
	DHCP	Select whether to use the DHCP (IPv6) server.  Value: Off, On  NOTE  This function is displayed when [IPv6] is set to [On].  Selecting [On] displays IP address in [IP Address (Stateful)] after restarting the network.



# **⊘** IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

#### **LAN Interface**

Item	Description
LAN Interface	Specify the settings for the LAN interface to be used.  Value: Auto, 10BASE-T Half, 10BASE-T Full, 100BASE-TX Half, 100BASE-TX Full, 1000BASE-T



# **⊘** IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

## Wi-Fi Direct Settings

[System Menu/Counter] key > [System/Network] > [Network] > [Wi-Fi Direct Settings]

Set Wi-Fi Direct.



This function is displayed when the Wireless Network Interface Kit (IB-35) is installed.

The Wireless Network Interface Kit is an option for some models. Contact your dealer or our sales or service representatives for detail.

→ IB-35 "Wireless Network Interface Kit" (page 11-5)

Item	Description
Wi-Fi Direct	Select whether to use Wi-Fi Direct.
	Value: Off, On
Device Name	Specify the device name.
	NOTE
	Up to 32 characters can be entered.
	This function is displayed when [Wi-Fi Direct] is set to [On].
IP Address	Check the IP address of the machine.
	→ TCP/IP Setting (page 8-47)
	NOTE
	This function is displayed when [Wi-Fi Direct] is set to [On].
Auto Disconnect	Automatically disconnect devices connected through Wi-Fi Direct.
	Value: Off, On
	NOTE
	If you select [ON], set the waiting time for automatic disconnection.
	This function is displayed when [Wi-Fi Direct] is set to [On].

# Wi-Fi Settings

## [System Menu/Counter] key > [System/Network] > [Network] > [Wi-Fi Settings]

Set Wi-Fi.



This function is displayed when the Wireless Network Interface Kit (IB-35) is installed.

The Wireless Network Interface Kit is an option for some models. Contact your dealer or our sales or service representatives for detail.

→ IB-35 "Wireless Network Interface Kit" (page 11-5)

#### Wi-Fi

Item	Description	
Wi-Fi	Select whether to use Wi-Fi.	
	Value: Off, On	

#### Setup

	Item	Description
Con	nection Status	Check the wireless LAN status.
Quic	k Setup	If the machine will connect to an access point that supports the automatic wireless network setup, connection settings can be configured by Quick Setup.
	Available Network	Displays access points to which the machine can connect.
	WEP Key Index	Select the key index of the access point.  Value: 0 to 3
	Push Button Method	If the access point supports the push button method, wireless settings can be configured using the push button. This setting executes push button, and the connection is started by pressing the push button on the access point.
		NOTE
		The push button method supports only the WPS.
		Starts connection using the machine's PIN code. Enter the PIN code into the access point. The PIN code of the machine is automatically generated.

	Item	Item Description		
Cust	om Setup	The detailed settings for wireless LAN can be changed.		
	Network Name (SSID)	Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.		
		NOTE Up to 32 characters can be entered.		1.
	Network Authentication	Select network authentication type.  Value: Open, WPA2/WPA-PSK, WPA2-PSK, WPA2/WPA-EAP, WPA2-EAP		
	Encryption	Select encryption method. The setting values vary depending on the Network Authentication setting.		
		Network Encryption Authentication		Encryption
		Open	Disable	_
			WEP	WEP Key: Up to 26 characters
				WEP Key Index: 0 to 3
		WPA2/WPA-PSK	Data Encry	yption: AES, Auto
			Preshared	Key: Up to 64 characters
		WPA2-PSK	-	yption: AES
			Preshared	Key: Up to 64 characters
		WPA2/WPA-EAP	P Data Encryption: AES, Auto	
		WPA2-EAP	Data Encryption: AES	
			1	

## **TCP/IP Setting**

Item		<b>Description</b>	
TCP/	IP	Select whether to use TCP/IP Protocol.  Value: Off, On	
IPv4		Set up TCP/IP (IPv4) to connect to the network. This setting is available when [ <b>TCP</b> / <b>IP</b> ] is set to [ <b>On</b> ].	
	IP Address	Set the IP address.  Value: ###.###.###	
		NOTE When DHCP is set to [On], this function will be grayed out and the value cannot be entered.	
	Subnet Mask	Set the IP subnet mask.  Value: ###.###.###	
		NOTE When DHCP is set to [On], this function will be grayed out and the value cannot be entered.	
	Default Gateway	Set the IP gateway address.  Value: ###.###.###	
		NOTE When DHCP is set to [On], this function will be grayed out and the value cannot be entered.	
	DHCP	Select whether to use the DHCP (IPv4) server.  Value: Off, On	
	Auto-IP	Select whether to use Auto-IP.  Value: Off, On	

# **⊘** IMPORTANT

- When setting the Auto-IP, enter "0.0.0.0" in [IP Address].
- After changing the setting, restart the network or turn the machine OFF and then ON.

	Item	Description
IPv6		Set up TCP/IP (IPv6) to connect to the network. This setting is available when [ <b>TCP</b> / <b>IP</b> ] is [ <b>On</b> ].
	IPv6	Select whether to use IPv6.
		Value: Off, On
		NOTE
		Selecting [On] displays IP address in [IP Address (Link Local)] after restarting the network.
	RA (Stateless)	Select whether to use RA (Stateless).
		Value: Off, On
		NOTE
		This function is displayed when [IPv6] is set to [On].
		Selecting [On] displays IP address in [IP Address (Stateless)] after restarting the network.
	Manual Setting	Manually specify the IP address, prefix length, and gateway address of TCP/IP (IPv6).
		Value
		IP Address (Manual): 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).
		Prefix Length: 0 to 128
		Default Gateway: 128-bits address is expressed in eight groups consisting of four-digit hexadecimal digits. The groups are separated by colon (:).
		NOTE
		This function is displayed when [IPv6] is set to [On].
		To enter "Default Gateway", set [RA (Stateless)] to [Off].
	DHCP	Select whether to use the DHCP (IPv6) server.
		Value: Off, On
		NOTE
		This function is displayed when [IPv6] is set to [On].
		Selecting [On] displays IP address in [IP Address (Stateful)] after restarting the network.

# **⊘** IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

## **Restart Network**

Item	Description
Restart Network	Restarts the network.

# **Bonjour**

[System Menu/Counter] key > [System/Network] > [Network] > [Bonjour]

	Item	Description
Bonj	our	Select whether to use Bonjour.
		Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	

## **IPSec**

[System Menu/Counter] key > [System/Network] > [Network] > [IPSec]

Item	Description
IPSec	Select whether to use IPSec.
	Value: Off, On

# **Protocol Settings**

[System Menu/Counter] key > [System/Network] > [Network] > [Protocol Settings]

Configure protocol settings.

	Item	Description
SMT	P (E-mail TX)	Select whether to send E-mail using SMTP.  Value: Off, On
POP	3 (E-mail RX)	Select whether to receive E-mail using POP3.  Value: Off, On
FTP Client (Transmission)		Select whether to send documents using FTP. To use the FTP Client, set the protocol to [On]. The default port number is 21.  Value: Off, On
FTP Server (Reception)		Select whether to receive documents using FTP.*1  Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	
SMB Client (Transmission):		Select whether to send documents using SMB. To use the SMB Client, set the protocol to [On]. The default port number is 445.  Value: Off, On
NetBEUI		Selects whether to receive documents using NetBEUI.*1  Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	

	Item	Description
WSD	Scan	Select whether to use WSD Scan.*1
		Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	
WSD Print		Set whether to use our proprietary web services. WIA driver, TWAIN driver and
		Network FAX driver use this Enhanced WSD web service.*1  Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	
: = = >		Calast whathants was i FAV
i-FAX	•	Select whether to use i-FAX.  Value: Off, On
		NOTE
		This function is displayed when the optional Internet FAX Kit is activated.
DSM	Scan	Select whether to use DSM scan.*1
		Value: Off, On
ThinPrint		Select whether to use ThinPrint. To use the Thin Print protocol, set the protocol to
		[On]. The default port number is 4000.*1, *2  Value: Off, On
		NOTE
		This function is displayed only when the optional ThinPrint Option is activated.
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	
	Thin Print over SSL	To use the Thin Print over SSL protocol, set [Thin Print Over SSL] and [SSL] to [On].
		Value: Off, On
		NOTE
		When selecting [ <b>On</b> ], it also requires a certificate for SSL. The default certificate is the self-certificate of the machine.
		→ Command Center RX User Guide
LPD		Selects whether to receive documents using LPD.*1
		Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	

	Item	Description
Raw		Select whether to receive documents using Raw Port.*1  Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	
IPP		Selects whether to receive documents using IPP. To use the IPP protocol, set [IPP] to [On], and set [SSL] to [Off]. In addition, select [Not Secure (IPP&IPPS)] on IPP Security under Security Settings from the Command Center RX. The default port number is 631.*1  Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	
IDD 4	over SSL	To use the IDD protectal set (IDD) and (SSL) to (On). The default part number is
IPP	over 55L	To use the IPP protocol, set [ <b>IPP</b> ] and [ <b>SSL</b> ] to [ <b>On</b> ]. The default port number is 443.*1,*2
		Value: Off, On
		NOTE
		When selecting [On], it also requires a certificate for SSL. the default certificate is the
		self-certificate of the machine.
		→ Command Center RX User Guide
	Wi-Fi Direct	Set whether to enable this function for each network.  Value: Disable, Enable
	Wi-Fi	value. Disable, Lilable
	Wired Network	
НТТР		Select whether to communicate using HTTP.*1
		Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	
нтті	PS	Select whether to communicate using HTTPS.*1, *2  Value: Off, On
	Wi-Fi Direct	Set whether to enable this function for each network.
	Wi-Fi	Value: Disable, Enable
	Wired Network	
LDA	P	Select whether to use LDAP.
		Value: Off, On

SNMPv1/v2c  Select whether to communicate using SNMP.*1  Value: Off, On  Wi-Fi Direct Wi-Fi Wired Network  SNMPv3  Select whether to enable this function for each network.  Value: Disable, Enable  SNMPv3  Select whether to communicate using SNMPv3.*1  Value: Off, On  Wi-Fi Direct Wi-Fi Wired Network  Set whether to enable this function for each network.  Value: Disable, Enable  Set whether to use our proprietary web services.*1  Value: Off, On  NOTE Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX dr  Wi-Fi Direct Wi-Fi Wi-Fi Wired Network  Set whether to enable this function for each network.  Value: Disable, Enable  Set whether to enable this function for each network.  Value: Disable, Enable	
Wi-Fi Wired Network  SNMPv3 Select whether to communicate using SNMPv3.*1 Value: Off, On  Wi-Fi Direct Wi-Fi Wired Network  Enhanced WSD Set whether to use our proprietary web services.*1 Value: Off, On  NOTE Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX dr  Wi-Fi Wi-Fi Wi-Fi Wi-Fi Wi-Fi Wired Network  Value: Disable, Enable  Wired Network	
Wi-Fi Wired Network  SNMPv3  Select whether to communicate using SNMPv3.*1  Value: Off, On  Wi-Fi Direct Wi-Fi Wired Network  Enhanced WSD  Set whether to use our proprietary web services.*1  Value: Off, On  NOTE  Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX dr  Wi-Fi Direct Wi-Fi Wired Network  Value: Disable, Enable  Wired Network	
SNMPv3  Select whether to communicate using SNMPv3.*1  Value: Off, On  Set whether to enable this function for each network.  Value: Disable, Enable  Wired Network  Enhanced WSD  Set whether to use our proprietary web services.*1  Value: Off, On  NOTE  Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX dr  Wi-Fi Direct  Wi-Fi  Wired Network  Value: Disable, Enable	
Wi-Fi Direct Wi-Fi Wired Network  Enhanced WSD  Wi-Fi Set whether to use our proprietary web services.*1  Value: Off, On  NOTE  Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX dr  Wi-Fi Wi-Fi Wired Network  Wi-Fi Wired Network	
Wi-Fi Wired Network  Set whether to use our proprietary web services.*1 Value: Off, On NOTE Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX dr Wi-Fi Wi-Fi Wired Network  Value: Disable, Enable  Value: Disable, Enable	
Wired Network  Enhanced WSD  Set whether to use our proprietary web services.*1  Value: Off, On  NOTE  Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX dr  Wi-Fi Direct  Wi-Fi  Wired Network  Wired Network	
Enhanced WSD  Set whether to use our proprietary web services.*1  Value: Off, On  NOTE  Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX dr  Wi-Fi Direct  Wi-Fi  Wi-Fi  Wired Network  Set whether to enable this function for each network.  Value: Disable, Enable	
Wi-Fi Direct       Set whether to enable this function for each network.         Wi-Fi       Wi-Fi         Wired Network       Wired Network	
Selecting [Off] will disable the functionality of WIA, TWAIN, and Network FAX dr  Wi-Fi Direct Set whether to enable this function for each network.  Value: Disable, Enable  Wired Network	
Wi-Fi Wired Network  Value: Disable, Enable	/er.
Wired Network	
Enhanced WCD over CCI. Cot whether to use our manifestation and account to 1.2	
Enhanced WSD over SSL  Set whether to use our proprietary web services over SSL.*1, *2  Value: Off, On	
NOTE	
Selecting [ <b>Off</b> ] will disable the functionality of WIA, TWAIN and Network FAX dri	ers.
Wi-Fi Direct Set whether to enable this function for each network.	
Wi-Fi Value: Disable, Enable	
Wired Network	
eSCL Selects whether to receive scanned documents using eSCL.*1	
Wi-Fi Direct Set whether to enable this function for each network.	
Wi-Fi Value: Disable, Enable	
Wired Network	
eSCL over SSL Selects whether to receive scanned documents using eSCL over SSL.*1, *2	
Wi-Fi Direct Set whether to enable this function for each network.	
Wi-Fi Value: Disable, Enable	
Wired Network	

<sup>\*1</sup> The setting will be changed after restarting the device or network.

# **⊘** IMPORTANT

After changing the setting, restart the network or turn the machine OFF and then ON.

<sup>\*2</sup> Set "SSL" to [On] in Security Settings.

<sup>→</sup> Security Settings (page 8-58)

# **Security Settings**

[System Menu/Counter] key > [System/Network] > [Network] > [Security Settings]

Item	Description
SSL	Select whether to use SSL for communication.
	Value: Off, On

# **Proxy**

[System Menu/Counter] key > [System/Network] > [Network] > [Proxy]

	Item	Description
Prox	у	Set the proxy for connection to the Internet from an application.  Value: Off, On
	Use the Same Proxy Server for All Protocols	Set whether the same proxy server is used for all protocols. To use the same proxy server, select the [Use the Same Proxy Server for All Protocols] checkbox.
	Proxy Server (HTTP)	Set a proxy server (HTTP).  Value: (Enter the proxy address and port number.)
	Proxy Server (HTTPS)	Set a proxy server (HTTPS). This setup is available when "Use the Same Proxy Server for All Protocols" is [Off].  Value: (Enter the proxy address and port number.)
	Do Not Use Proxy for Following Domains	Set domains for which no proxy is used.  Value: (Enter the domain name.)

# Ping

[System Menu/Counter] key > [System/Network] > [Network] > [Ping]

Item	Description
Ping	Checks if communication with the destination by entering the host name or IP address of the destination is possible.
	NOTE  If [Primary Network (Client)] is set to [Others], this item is not displayed.

## **Restart Network**

[System Menu/Counter] key > [System/Network] > [Network] > [Restart Network]

Item	Description
Restart Network	Restarts the network.

# **Optional Network**

[System Menu/Counter] key > [System/Network] > [Optional Network]

#### **Basic**

Configure settings for the optional Network Interface Kit.



This menu is displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.

Item	Description
Host Name	Check the host name of the machine. Host name can be changed from Command Center RX.
	→ Changing Device Information (page 2-66)
TCP/IP Setting	For details on setting value.
	→ TCP/IP Setting (page 8-47)
	→ Bonjour (page 8-54)
	→ IPSec (page 8-54)
NetWare	Use NetWare to receive documents.
	See the Operation Guide for the optional network interface card for details.
	Value: Off, On
AppleTalk	Selects whether to receive documents using AppleTalk.*1
	Value: Off, On
LAN Interface	Select the LAN Interface type.*1
	Value: Auto, 10Base-Half, 10Base-Full, 100Base-Half, 100Base-Full, 1000BASE-T
	NOTE
	This function is displayed when the optional Network Interface Kit is installed.
MAC Address Filter	Select whether to use MAC Address Filter.
	→ Operation Guide for the optional Network Interface Kit
	Value: Off, On
Restart Network	Restarts the network card of the device.

<sup>\*1</sup> The setting will be changed after restarting the device or network.

## **Wireless Network**

Configure settings for the optional Wireless Network Interface Kit.



This function is displayed when the Wireless Network Interface Kit (IB-51) is installed.

	Item	Description
Conr	nection Status	You can check the wireless LAN status.
Quic	k Setup	If the machine will connect to an access point that supports the automatic wireless network setup, connection settings can be configured by Quick Setup.
	Available Network	Select access points to which the machine can be connected, enter the Preshared Key and start a connection.
	Push Button Method	If the access point supports the push button method, wireless settings can be configured using the push button. This setting executes push button, and the connection is started by pressing the push button on the access point.
		NOTE
		The push button method supports only the WPS.
	PIN Code Method (Device)	Starts connection using the machine's PIN code. Enter the PIN code into the access point. The PIN code of the machine is automatically generated.
	PIN Code Method (Terminal)	Starts connection using the PIN code of the access point. Enter the PIN code of the access point.

	Item	Description
Cust	om Setup	The detailed settings for wireless LAN can be changed.
	Network Name (SSID)	Set the SSID (Service Set Identifier) of the wireless LAN to which the machine connects.
		NOTE
		Up to 32 characters can be entered.
	Connection Mode	Set the connection mode.
		Value: Ad Hoc, Infrastructure
		NOTE
		<b>Ad Hoc</b> : Directly communicates with the device without going through an access point. This method cannot be used to connect to two or more devices.
		Infrastructure: Performs communication through an access point.
	Channel	Set channel. Use [-] / [+] or the numeric keys to enter a number.
		Value: 1 to 11
	Network Authentication	Select network authentication type. To select other options, open the device home page from a computer.
		Value: Open, Shared, WPA-PSK*1, WPA2-PSK*1
	Encryption	Select encryption method. If the option other than [ <b>Disable</b> ] is selected, enter the WEP key or the Preshared key. The setting values vary depending on the Network Authentication setting. Select [ <b>Data Encryption</b> ].
		When Network Authentication is set to [Open] or [Shared]:
		Value: Disable, WEP
		When Network Authentication is set to [WPA-PSK] or [WPA2-PSK]:  Value: TKIP*2, AES, Auto*2, Preshared Key
		NOTE
		• If [WEP] is selected, enter the WEP key. Up to 26 characters can be entered.
		• If [TKIP], [AES] or [Auto] is selected, enter the Preshared key. Enter the value in 8 to 64 characters.

<sup>\*1</sup> Not displayed if you selected [Ad Hoc] for "Connection Mode".
\*2 Not displayed if you selected [WPA2-PSK] for "Network Authentication".

# **Primary Network (Client)**

[System Menu/Counter] key > [System/Network] > [Primary Network (Client)]



This function is displayed when the optional Network Interface Kit (IB-50) or Wireless Network Interface Kit (IB-51 or IB-35) is installed.

The Wireless Network Interface Kit (IB-35) is an option for some models. Contact your dealer or our sales or service representatives for detail.

▶ IB-35 "Wireless Network Interface Kit" (page 11-5)

Item	Description
Primary Network (Client)	Select the network interface to be used for the send function that this machine functions as a client, the network authentication and connecting to external address book.
	Value: Wi-Fi, Wired Network, Optional Network
	NOTE
	• [Wi-Fi] is displayed when the Wireless Network Interface Kit (IB-35) is installed.
	• [Optional Network] is displayed when the optional Network Interface Kit (IB-50) or Wireless Network Interface Kit (IB-51) is installed.
	<ul> <li>When you select [Optional Network], you can send an E-mail using both optional network interface (IB-50 or IB-51) and wired network interface.</li> </ul>

# **Security Level**

[System Menu/Counter] key > [System/Network] > [Security Level]

Item	Description
Security Level	Specify the security level.
	Value
	Low: This mode is used during maintenance. Do not use normally.
	High: This is the security setting we recommend. Use this setting normally.
	Very High: In addition to [High] setting, this setting disables the machine settings to be changed from external command.
	NOTE
	This function is available when you have logged in as machine administrator.
	→ Adding a User (Local User List) (page 9-8)

# **Interface Block Setting**

## [System Menu/Counter] key > [System/Network] > [Interface Block Setting]

This allows you to protect this machine by blocking the interface with external devices such as USB hosts or optional interfaces.

Item	Description
USB Host	This locks and protects the USB port (USB host).
	Value: Unblock, Block
USB Device	This locks and protects the USB interface connector (USB Device).
	Value: Unblock, Block
USB Storage	This locks and protects the USB memory slot.
	Value: Unblock, Block
	NOTE
	This function is available when USB Host is set to [ <b>Unblock</b> ].
Optional Interface 1	This locks and protects the optional interface slots.
Optional Interface 2	Value: Unblock, Block
	NOTE
	You can set this feature for each slot.



After changing the setting, restart the network or turn the machine OFF and then ON.

# **Data Security**

## [System Menu/Counter] key > [System/Network] > [Data Security]

Configure settings for data stored in the SSD, hard disk, and machine's memory.

Item	Description
Hard Disk/SSD Initialization	Change security functions.
	<ul> <li>NOTE</li> <li>This function is displayed when the optional Data Security Kit is activated.</li> <li>Enter the security password to change security functions.</li> </ul>
Data Overwrite Method	The method used to overwrite data can be changed.  Refer to the following for details.  Data Security Kit (E) Operation Guide  Value
	Once Overwrite: This function overwrites unneeded data areas (in the case of overwriting) or all areas (in the case of system initialization) with zeroes to prevent data restoration.
	3-time Overwrite (DoD): This overwrite method complies with U.S. Department of Defense (DoD) standards, and overwrites unneeded data areas of the hard disk (in the case of overwriting) or all areas (in the case of system initialization) with specific characters, their complements, and random characters to prevent data restoration. Data restoration is not possible even when sophisticated restoration techniques are used, and a higher level of security than Once Overwrite is obtained.
	NOTE  This method may take more time than Once Overwrite method to process a larger amount of data.
Security Password	Customize the security password so that only the administrator can use the security kit.  Enter a new security password 6 to 16 alphanumeric characters and symbols.  Enter the password again for confirmation.  IMPORTANT
	Avoid any easy-to-guess numbers for the security password (e.g. 11111111 or 12345678).
System Initialization	Overwrite all the data stored in the hard disk/SSD when disposing of the machine.  IMPORTANT
	If you accidentally turn the power switch off during initialization, the hard disk/ SSD might possibly crash or initialization might fail.
	NOTE  If you accidentally turn the power switch off during initialization, turn the power switch on again. Initialization automatically restarts.

Item	Description
Data Sanitization	Return the following information registered in the machine to the factory defaults.  • Address Book  • Favorites  • System settings  • Fax transmission and reception / forwarding data  • Transmission histories  • Data saved in Custom Box  • Optional applications
	<ul> <li>Print the status page and then confirm that security data is deleted.</li> <li>Status Page (page 8-42)</li> <li>Once in progress, the processing cannot canceled.</li> <li>Before executing this function, disconnect modular, network, and other cables.</li> <li>Do not turn off the main power switch while sanitizing the data. If the main power is turned off during data erasing, erasing will be executed automatically when the power is restored, however, complete erasure cannot be guaranteed.</li> </ul>
Software Verification	Verify the installed software.  Select [Start] to start verification.  If an error occurs during software verification, contact your dealer or service representative.

## Information erased

Category	Data erased
Devices/jobs	Job settings configured by users
	Network settings
	Image data saved in Document Box, etc.
	Data registered in One Touch keys
	Job histories
	User information (user list, address book, Document Box registered by the user, etc.)
	Account information of job accounting
	Network certificates
	Initial screen on machine changed by service representative
FAX*1	Fax settings configured by users
	Communication restriction settings
	Encryption key settings
	Transmission histories
	Scheduled jobs
	Conditional reception/forwarding settings
Application/program	Application/program added by a user or service representative
	Trial functions

<sup>\*1</sup> Only when the optional fax kit is installed.

#### **Optional Function**

[System Menu/Counter] key > [System/Network] > [Optional Function]

Item	Description
Optional Function	You can use the optional applications installed on this machine.
	→ Optional Applications (page 11-7)

#### **Bluetooth Settings**

[System Menu/Counter] key > [System/Network] > [Bluetooth Settings]

Item	Description
Bluetooth Keyboard	Use Bluetooth keyboard.  Value: Off, On
Search Device	Select a keyboard.

#### **Restart Entire Device**

[System Menu/Counter] key > [System/Network] > [Restart Entire Device]

Item	Description
Restart Entire Device	Restart the machine without turning the main power switch off. Use this to deal with any unstable operation by the machine. (Same as the computer restart.)

#### **NFC**

[System Menu/Counter] key > [System/Network] > [NFC]

Item	Description
NFC	Use NFC (Near Field Communication).  Value: Off, On

#### **Edit Destination**

#### **Address Book**

[System Menu/Counter] key > [Edit Destination] > [Address Book]

Configure settings for address book.

→ Adding a Destination (Address Book) (page 3-25)

#### **One Touch Key**

[System Menu/Counter] key > [Edit Destination] > [One Touch Key]

Configure settings for One Touch Key.

→ Adding a Destination on One Touch Key (One Touch Key) (page 3-32)

#### **Print list**

[System Menu/Counter] key > [Edit Destination] > [Print list]

→ FAX Operation Guide

#### **Address Book Defaults**

[System Menu/Counter] key > [Edit Destination] > [Address Book Defaults]

Item	Description
Sort	Select the default sort setting of the address for the address book.  Value: No., Name
Narrow Down	This procedure can be used to filter (narrow down) the types of destination listed when the address book is displayed.  Value: Off, E-mail, Folder, FAX*1, i-FAX*2, Group
Address Book Type*3	Select whether the machine's address book or the External Address Book appears when the address book is displayed.  Value: Machine Address Book, Ext Address Book

<sup>\*1</sup> Displayed only when the optional fax kit is installed.

#### **Edit Restriction**

[System Menu/Counter] key > [Edit Destination] > [Edit Restriction]

Item	Description
Address Book	Restrict editing of the address book. If you selected [Administrator Only], you can only edit the Address Book by logging in with administrator privileges.  Value: Off, Administrator Only
One-Touch Key	Restrict editing of the One Touch Key. If you selected [ <b>Administrator Only</b> ], you can only edit the One Touch Key by logging in with administrator privileges.  Value: Off, Administrator Only

<sup>\*2</sup> This function is displayed when the optional Internet FAX Kit is activated.

<sup>\*3</sup> This display appears only if the external address book is available.

## **User Login/Job Accounting**

[System Menu/Counter] key > [User Login/Job Accounting]

Configure settings related to machine management.

- Overview of User Login Administration (page 9-2)
- Overview of Job Accounting (page 9-33)
- Unknown ID Job (page 9-52)

## **User Property**

[System Menu/Counter] key > [User Property]

Allows you to view information about logged in users and edit some of that information.

→ Enabling User Login Administration (page 9-3)

## **Date/Timer/Energy Saver**

[System Menu/Counter] key > [Date/Timer/Energy Saver]

Configures settings related to the date and time.

ltem	Description
Date/Time	Set the date and time for the location where you use the machine. If you perform Send as E-mail, the date and time set here will be displayed on the header.  Value: Year (2000 to 2037), Month (1 to 12), Day (1 to 31), Hour (00 to 23), Minute (00 to 59), Second (00 to 59)
	NOTE
	If you change the date/time while using the trial version of an application, you will no longer be able to use the application.
Date Format	Select the display format of year, month, and date. The year is displayed in Western notation.
	Value: MM/DD/YYYY, DD/MM/YYYY, YYYY/MM/DD
Time Zone	Set the time difference from GMT. Choose the nearest listed location from the list. If you select a region that utilizes summer time, configure settings for summer time.
	→ Setting Date and Time (page 2-31)
Auto Panel Reset	If no jobs are run for a certain period of time, automatically reset settings and return to the default setting. Select to use Auto Panel Reset or not.
	Value: Off, On
	NOTE
	For setting the time until the panel is automatically reset, refer to the following:
	→ Panel Reset Timer (page 8-69)
Auto Error Clear	If an error occurs during processing, processing stops to wait for the next step to be taken by the user. In the Auto Error Clear mode, automatically clear the error after a set amount of time elapses.
	Value: Off, On
	NOTE
	For setting the automatic error recovery time, refer to the following:
	→ Error Clear Timer (page 8-69)

Item	Description
Low Power Timer	Set amount of time before entering the Low Power mode.  Value
	For Europe: 1 to 120 minutes (1 minute increments)
	Except for Europe: 1 to 240 minutes (1 minute increments)
	→ Low Power Mode (page 2-41)
Panel Reset Timer	If you select [ <b>On</b> ] for Auto Panel Reset, set the amount of time to wait before Auto Panel Reset.
	Value: 5 to 495 seconds (in 5 second increments)
	NOTE
	This function is displayed when [Auto Panel Reset] is set to [On].
Sleep Timer	Set amount of time before entering Sleep.
	Value
	For Europe: 1 to 120 minutes (10 minutes increments)
	Except for Europe: 1 to 240 minutes (10 minutes increments)
Interrupt Clear Timer	Set the period after which the machine reverts to Normal mode when it has been set to Interrupt Copy mode and then left unused.
	Value: 5 to 495 seconds (in 5 second increments)
Error Job Skip	Set whether a job for which a "Add paper in cassette #" or "Add paper in Multipurpose Tray" error occurred when the job was started is automatically skipped after a set period of time elapses.  Value: Off, On
	NOTE
	When a job is skipped, it is moved to the end of the job queue.
	• If [On] is selected, set the time until the job is skipped. The setting range is 5 to 90 (5 second increments).
Error Clear Timer	If you select [On] for Auto Error Clear, set the amount of time to wait before automatically clearing errors.
	Value: 5 to 495 seconds (in 5 second increments)
	NOTE
	This function is displayed when [Auto Error Clear] is set to [On].
Unusable Time*2	Set a time period during which the machine will not print received faxes.
	→ FAX Operation Guide.

It	em	Description
Sleep Rules (Europe)	(models for	<ul> <li>Select whether to use the Sleep mode for the following functions individually:</li> <li>Network</li> <li>USB Cable</li> <li>ID Card Reader*1</li> <li>FAX*2</li> <li>Application</li> <li>Value: Off, On</li> <li>NOTE</li> <li>If the sleep condition is not turned off, the machine will not wake from sleep mode even if it receives a print job from a computer connected by USB cable. Also, the ID card cannot be recognized.</li> <li>This function will not be displayed when the optional Network Interface Kit or Fiery controller is installed.</li> </ul>
Sleep Level (I for Europe)	models except	Select the sleep level.  Set the Energy Saver mode to reduce power consumption even more than normal Sleep mode.  Value: Quick Recovery, Energy Saver  NOTE  This function will not be displayed when the optional Network Interface Kit or Fiery controller is installed.  Select whether to use the Energy Saver mode for the following functions individually:
		<ul> <li>Network</li> <li>USB Cable</li> <li>ID Card Reader*1</li> <li>FAX*2</li> <li>Application</li> <li>Value: Off, On</li> <li>NOTE</li> <li>When the machine has entered sleep mode with Energy Saver setting, it does not wake from sleep mode when it receives print data from a PC connected by USB cable. Also, the ID card cannot be recognized.</li> </ul>
EnergySaver RecoveryLevel		Select the method of recovery from energy saver.  Value:  Full Recovery: This mode enables the use of all functions immediately.  However, this mode saves less energy.  Normal Recovery: In this mode, you can select the method from the following:  enabling the use of all functions immediately or enabling the use of desired functions only.  If you want to use all functions immediately, select the [Energy Saver] key to execute recovery.  Power Saving Recovery: This mode enables the use of desired functions only.  This mode saves energy most effectively.

Item		Description
Week	dy Timer Settings	Configure settings for switching the machine to OFF and waking it automatically at a specified time for each day of the week.
	Weekly Timer	Select whether to use Weekly Timer.  Value: Off, On
	Schedule	Specify the time for each day of the week at which the machine turns OFF.
	Retry Times	Set the number of retries for turning OFF this machine.  Value: Limited Retries, Unlimited Retries
		NOTE  If [Limited Retries] is selected, set the number of retry. The setting range is 0 to 10.  Retry is not performed when "0" is set.  If [Unlimited Retries] is selected, retry is performed until the machine turns OFF.
	Retry Interval	Set the retry interval.  Use [-] / [+] to enter a number.  Value: 10 to 60 seconds (increments of 10 seconds)
Power Off Rule (models for Europe)		Select whether or not the machine enters Power Off mode for the following function.  Select [On] to set the Power Off mode.  Network  FAX*2  USB Cable  USB Host  NIC*3  Remote Diagnostics  Application  Value: Off, On
		Even when any of the functions is set to [On], if either [FAX] or [NIC] is set to [Off], the machine does not enter Power Off Mode.  Even when [Network] or [USB Cable] is set to [Off], if the machine does not communicate with the other devices, the machine will enter Power Off Mode.
	er Off Timer (models urope)	Select whether to turn off the power automatically after a period of inactivity.  Value: 1 hour, 2 hours, 3 hours, 4 hours, 5 hours, 6 hours, 9 hours, 12 hours, 1 day, 2 days, 3 days, 4 days, 5 days, 6 days, 1 week
Ping	Timeout	Set the time until timeout occurs when [Ping] is executed in "System/Network".  Value: 1 to 30 seconds (in 1 second increments)

<sup>\*1</sup> Displayed when the optional Card Authentication Kit is activated.

<sup>\*2</sup> Displayed only when the optional FAX Kit is installed.

<sup>\*3</sup> Displayed when the optional Network Interface Kit or Wireless Network Interface Kit is installed.

# **Adjustment/Maintenance**

[System Menu/Counter] key > [Adjustment/Maintenance]

Adjust printing quality and conduct machine maintenance.

Item			Description
Dens	sity Adjustm	ent	Adjust density.
	Copy Send/Box		Adjust copy density. Adjustment can be made in 7 levels.
			Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
			Adjust scan density when sending or storing the data in Document Box. Adjustment can be made in 7 levels.
			Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
	FAX*1		→ FAX Operation Guide
Back	ground Den	sity Adj.	Darkens or lightens overall background density adjustment.
	Copy (Auto	<b>)</b>	Darkens or lightens overall background density adjustment during copying. Adjustment can be made in 7 levels.
			Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
	Send/Box (Auto)		Darkens or lightens overall background density when sending images or storing them in the Document Box. Adjustment can be made in 7 levels.
			Value: -3 (Lighter), -2, -1, 0 (Normal), +1, +2, +3 (Darker)
Shar	pness Adjus	stment	Adjust the sharpness of the image outline.
	Сору	All	Sharpen or blur overall image outlines during copying. Adjustment can be made in 7 levels.
			Value: -3 (Blur), -2, -1, 0, +1, +2, +3 (Sharpen)
		Text/Fine Line	Sharpen text/fine line during copying. Adjustment can be made in 4 levels.  Value: 0 (Normal), 1, 2, 3 (Sharpen)
	Send/Box	All	Sharpen or blur overall image outlines when sending or storing them in the Document Box. Adjustment can be made in 7 levels.
			Value: -3 (Blur), -2, -1, 0, +1, +2, +3 (Sharpen)
		Text/Fine Line	Adjust sharpness of the text/fine line when during sending or storing them in the Document Box. Adjustment can be made in 4 levels.
			Value: 0 (Normal), 1, 2, 3 (Sharpen)
Corr	ecting Black	Lines	Correct fine lines (streaks caused by contamination), which may appear on the image, when the document processor is used.
			Value Off: No correction performed.
			On (Low): Correction performed. The reproduction of fine lines on the original may become lighter than when using [Off].
			On (High): Select this item if a streak remains after using [On (Low)]. The reproduction of fine lines on the original may become lighter than when using [On (Low)].
Syst	em Initializa	tion	Initialize the hard disk installed on the machine to return it to the factory defaults.
			NOTE NOTE
			This function will not be displayed when the optional Data Security Kit is activated.

Item	Description
Display Brightness	Set the brightness of the touch panel.  Value: 1 (Darker), 2, 3, 4, 5 (Lighter)
Silent Mode	Set the Silent Mode. Select this mode when the running noise is uncomfortable.  Value: Off, On
	NOTE When [On] is selected, it may take time for the next print job to start.
Auto Color Correction	This setting allows you to adjust the detection level used by the machine to determine whether the original is color or black and white in Auto Color Selection Mode. Setting a lower value will result in more originals being identified as color, while a larger value will tend to increase the number of originals being identified as black and white.  Value: 1 (Color), 2, 3, 4, 5 (B & W)
Tone Curve Adjustment	After prolonged use, or from the effects of surrounding temperature or humidity, the printed output tone may differ from the original. Perform this function to ensure consistency with the original tone.
	→ Tone Curve Adjustment (page 10-39)
Drum Refresh 1	Remove image blur from the printout. It takes about 1 minute. The time required may vary depending on the operating environment.
	→ Drum Refresh 1 (page 10-41)
	NOTE
	Drum Refresh 1 cannot be performed while printing. Execute Drum Refresh 1 after the printing is done.
Drum Refresh 2	Remove white dots from the printout. It takes about 45 seconds. To use [ <b>Drum Refresh 2</b> ], load Ledger or A3 size paper into the Multipurpose tray.
	When you run [ <b>Drum Refresh 2</b> ], the machine makes a vibrating sound for about 45 seconds until drum refreshing is completed. The toner soiling on the ejected paper is normal and does not indicate a fault.
	→ Drum Refresh 2 (page 10-41)
	NOTE
	Drum Refresh 2 cannot be performed while printing. Execute Drum Refresh 2 after the printing is done.
Developer Refresh	Adjust the printed image that is too light or incomplete, even though there is enough toner.
	→ Developer Refresh (page 10-42)
	NOTE
	Waiting time may be longer when the toner is refilled during developer refresh.
Calibration Cycle	Set the calibration cycle.  Value:
	Short: Priority is given to image quality.
	Standard: Balances image quality and print speed.
	Long: Priority is given to print speed.
	NOTE
	When [Custom] is displayed as setting item, the setting cannot be changed.

Item	Description	
Calibration	Calibrate the device to ensure consistency with the original tone.	
	→ Calibration (page 10-42)	
	NOTE	
	Perform Tone Curve Adjustment when consistency with the original tone is not ensured.	
Memory Diagnostics	Perform this function to check the machine memory.	
Contrast	You can increase or decrease the overall contrast.	
Сору	Increases or decreases the overall contrast of copies.	
	Value: -3 (Lower), -2, -1, 0 (Normal), +1, +2, +3 (Higher)	
Send/Box	Increases or decreases the overall contrast when documents are sent or saved in a document box.	
	Value: -3 (Lower), -2, -1, 0 (Normal), +1, +2, +3 (Higher)	
Correct Paper Curl	Some paper types and paper stored in certain conditions may curl. This feature can be used to correct paper curling.	
	Value: Auto, Reduce Downcurl, Reduce Upcurl	
	Upcurl Downcurl	
	·	
Auto Drum Refresh	Select the time length of the drum refresh.	
	Value Off: The Auto Drum Refresh will not be performed.	
	Short: Perform Auto Drum Refresh as Short.	
	Standard: Perform Auto Drum Refresh as Standard.	
	Long: Perform Auto Drum Refresh as Long.	

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

## **Internet**

#### [System Menu/Counter] key > [Internet]

Configure settings related to the Internet.

Item	Description	
Internet Browser	Select whether to use the Internet browser.	
	Value: Off, On	
Browser Environment	This specifies Internet browser preferences such as your home page setting and how pages are displayed.	
	Value:	
	Home page: (Enter the address for Home page.)	
	Text Size: Large, Medium, Small	
	Display Mode: Normal, Just-Fit Rendering, Smart-Fit Rendering	
	Cookie: Accept All, Reject All, Prompt before Accepting	
	→ Internet Browser (page 8-75)	



To use proxy from Internet Browser, refer to the following:

▶ Proxy (page 8-58)

## **Application**

[System Menu/Counter] key > [Application]

Configure settings for Application.

→ Application (page 5-12)

# 9 User Authentication and Accounting (User Login, Job Accounting)

#### This chapter explains the following topics:

 
Overview of User Login Administration	
Managing the Job Account from PC	. 9-2
Managing the Users to Use TWAIN	
for Scanning	. 9-2
Managing the Users to Use WIA for	
Scanning	. 9-2
Managing the Users to Send Faxes	
from a PC	. 9-2
Enabling User Login Administration	. 9-3
Setting User Login Administration	. 9-5
Authentication Security	
Adding a User (Local User List)	
Changing User Properties	
User Login Administration for Printing	
Managing the Users to Scan Using	
TWAIN	9-15
Managing the Users to Scan Using	
WIA	9-16
Managing the Users that Send Faxes	
from a PC	9-17
Local Authorization	
Group Authorization Settings	
Guest Authorization Set	9-22
Obtain NW User Property	9-25
Simple Login Settings	
ID Card Settings	
PIN Code Authorization	9-31
Using User Login Administration	9-32
Login/Logout	
Overview of Job Accounting	
To Manage the Number of Sheets	
Used on Jobs Printed from a PC	9-33
Managing the Scan Job Account by	
Using TWAIN	9-33
Managing the Scan Job Account by	
Using WIA	9-33
Managing the FAX Job Transmitted	
from a PC	9-33
Enabling Job Accounting	
Job Accounting Access	

Job Accounting (Local)	9-36
Adding an Account	9-36
Restricting the Use of the Machine	9-37
Editing an Account	
Deleting an Account	9-39
Job Accounting for Printing	
Job Accounting for Scan Using	
TWAIN	9-41
Job Accounting for Scan Using WIA	9-42
Job Accounting for the FAX	
Transmitted from a Computer	9-43
Configuring Job Accounting	9-44
Default Setting	9-44
Counting the Number of Pages	
Printed	
Print Accounting Report	9-48
Using Job Accounting	
Login/Logout	
Apply Limit	9-50
Copy/Printer Count	
Unknown User Settings	
Unknown ID Job	9-52
Registering Information for a User who	
is Unknown	9-53

# **Overview of User Login Administration**

User login administration specifies how the user access is administered on this machine. Enter a correct login user name and password for user authentication to login.


1 Enable User Login Administration (page 9-3)



2 Set the user (page 9-8)



3 Enter the login user name and password and execute the job (page 9-32)

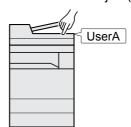

Access are in three levels - "User", "Administrator", and "Machine Administrator". The security levels can be modified only by the "Machine Administrator".

## **Managing the Job Account from PC**


In addition to the above settings, the following are necessary to manage the job account from PC.

#### To Manage the Users to Print from PCs

Printer driver settings are necessary to manage the users that print on the machine from PCs.

1 Set the User Login Administration on the printer driver (page 9-14)

2 Print

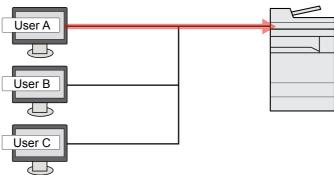

## **Managing the Users to Use TWAIN for Scanning**

TWAIN driver settings on the PC are necessary to manage the users that use TWAIN for scanning.

Managing the Users to Scan Using TWAIN (page 9-15)

## **Managing the Users to Use WIA for Scanning**

WIA driver settings on the PC are necessary to manage the users that use WIA for scanning.

→ Managing the Users to Scan Using WIA (page 9-16)

## Managing the Users to Send Faxes from a PC

FAX driver settings on the PC are necessary to manage the users that send faxes from a PC.

→ Managing the Users that Send Faxes from a PC (page 9-17)

The optional FAX Kit is required in order to make use of fax functionality.

# **Enabling User Login Administration**

This enables user login administration. Select one of the following authentication methods:

Item	Descriptions
Local Authentication	User authentication based on user properties on the local user list stored in the machine.
Network Authentication	User authentication based on Authentication Server. Use a user property stored in Authentication Server to access the network authentication login page.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



#### **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "User Login" [Change]

## Configure the settings.

1 Select [Local Authentication] or [Network Authentication].

Select [Off] to disable user login administration.

If you select [Network Authentication], enter the host name (64 characters or less) and domain name (256 characters or less) for the Authentication Server. Select [NTLM], [Kerberos] or [Ext.] as the server type.

When selecting [Ext.] as the server type, enter the port number.



#### NOTE

Selecting "Domain" [Add/Edit] displays the domain registration list. In the domain registration list screen, select [Add/Edit], and enter the domain name. Up to 10 domain names can be registered.

#### 2 Select [OK].

"Do you want to add a new function to the home screen?" appears when [OK] is selected.

To add a new function, select [Yes]. The selection screen for functions displayed in the home screen will appear.

Available Functions to Display on Desktop (page 2-18)

## **NOTE**

If the login user name and password are rejected, check the following settings.

- · Network Authentication setting of the machine
- User property of the Authentication Server
- · Date and time setting of the machine and the Authentication Server

If you cannot login because of the setting of the machine, login with any administrator registered in the local user list and correct the settings.

## **Setting User Login Administration**

This registers, alters and deletes users and configures the settings for User Login Administration.

## **Authentication Security**

If user authentication is enabled, configure the user authentication settings.

#### **User Account Lockout Setting**

You can prohibit the use of a user account if an incorrect password is entered repeatedly to login with that account.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



#### **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Authentication Security" [Next] > "User Account Lockout Set" [Next]

## **2** Configure the settings.

The following settings can be selected.

Item	Descriptions	
Lockout	Select whether or not account lockout policy is enabled.  Value: Off, On	
Lockout Policy	Specify the conditions and the extent to which the account lockout is applied.	
		until Lookadı
	Number of Retries until Locked: Specify how many login retries are allowed until the account is locked out. (1 to 10 times)	
	Lockout Duration: Specify how long the account is to be locked out until it is unlocked. (1 to 60 minutes)	
	Lockout Target: Specify the extent to which the account lockout is applied. You can select from [All] or [Remote Login Only]. Remote Login Only locks out all operations from outside the operation panel.	
Locked out Users List	Displays a list of locked out users. You can unlock a user by selecting the user in the list, and selecting [Unlock].	
	NOTE	
	This function is displayed when account lockout policy is enabled.	

#### **Password Policy Settings**

You can prohibit the setting and use of passwords that do not comply with the password policy.

Setting the Password Policy makes it more difficult to break the password.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



#### **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Authentication Security" [Next] > "Password Policy Settings" [Next]

#### Configure the settings.

The following settings can be selected.

Item	Descriptions	
Password Policy	Select whether or not password policy is enabled.  Value: Off, On	
Minimum password length	Set the minimum password length of characters for password.  Value: Off, On (1 to 64 characters)	
Password complexity	Set the password complexity.  Value  No more than two consecutive identical char: Off, On At least one uppercase letter (A-Z): Off, On At least one lowercase letter (a-z): Off, On At least one number (0-9): Off, On At least one symbol: Off, On	
Maximum password age	Set the maximum password age.  Value: Off, On (1 to 180 days)	
Policy Violated User List	List of users do not meet password policy requirements.	

## **Adding a User (Local User List)**

You can add up to 1,000 users (including the default login user name).

#### **NOTE**

By default, one of each default user with machine administrator rights and administrator privileges is already stored. Each user's properties are:

#### **Machine Administrator**

User Name: DeviceAdmin

Login User Name: TASKalfa 7002i: 7000, TASKalfa 8002i: 8000 TASKalfa 7002i: 7000, TASKalfa 8002i: 8000 Login Password:

Machine Administrator Access Level:

Administrator

User Name: Admin Login User Name: Admin Login Password: Admin Administrator Access Level:

It is recommended to periodically change the user name, login user name and login password regularly for your security.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



#### **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Local User List" [Add/Edit]

#### **Enter the user information.**

[Add] > Enter the user information > [OK]

Item	Descriptions
User Name	Enter the name displayed on the user list (up to 32 characters).
Login User Name	Enter the login user name to login (up to 64 characters). The same login user name cannot be registered.
Login Password	Enter the password to login (up to 64 characters). Reenter the same password for confirmation and select the [ <b>OK</b> ] key.
Access Level	Select "Administrator" or "User" for user access privileges.

<sup>\*</sup> Upper case and lower case letters are distinguished (case sensitive).

Item	Descriptions
Account Name	Add an account where the user belongs. The user, who registered his/her account name, can login without entering the account ID.
	Overview of Job Accounting (page 9-33)
	NOTE
	Select [Name] or [ID] from the "Sort" to sort the account list.
	<ul> <li>Select [Search(Name)] or [Search(ID)] to search by account name or account ID.</li> </ul>
E-mail Address	The user can register his/her E-mail address. The registered address will be automatically selected for subsequent operations that need any E-mail function.
ID Card	Register ID card information.
Information	Place the ID card on the ID card reader, and select [Read].
	NOTE
	This function is displayed when the optional ID Card Authentication Kit is activated.
	→ Optional Applications (page 11-7)
Local	Set usage authority for each user. Local Authorization must be enabled.
Authorization*1	→ Local Authorization (page 9-18)
	The following restriction items are available:
	Print Restriction:
	Select whether or not use of the print function of the printer is prohibited.
	Copy Restriction:
	Select whether or not use of the copy print function is prohibited.
	Duplex Restriction:
	Select whether only duplex printing is allowed.
	Combine Restriction:
	Specify whether only Combine is allowed.
	EcoPrint Restriction:
	Specify whether only EcoPrint is allowed.
	Send Restriction:
	Select whether or not use of the send function is prohibited.
	FAX TX Restriction*2:
	Select whether or not use of the fax send function is prohibited.
	Storing Restr. in Box:  Select whether or not use of the box store function is prohibited.
	Storing Restr. in Memory:
	Select whether or not use of the removable memory store function is prohibited.
My Panel	You can register the language selection, initial screen, and shortcut settings for each user. Settings registered here can be applied simply by logging in.

<sup>\*1</sup> Displayed when Local Authorization is enabled.

**<sup>▶</sup>** Local Authorization (page 9-18)

<sup>\*2</sup> Displayed only when the optional FAX Kit is installed.

#### NOTE

For details on entering characters, refer to the following:

→ Character Entry Method (page 11-9)

If you selected [Send] in the Default Screen for "My Panel", select the screen to display from [Destination], [Machine Address Book], or a registered external address book.

#### Select [Save].

A new user is added on the local user list.



#### NOTE

If simple login is enabled, a confirmation screen appears when new registration is finished asking if you will configure simple login settings. To configure simple login settings, select **[Yes]**. If you select **[No]**, you will return to the user list screen.

For the procedure for configuring simple login settings, refer to the following:

→ Simple Login Settings (page 9-27)

## **Changing User Properties**

Types of user properties that could be changed may be different depending on user access privilege.



To change the user information of the machine administrator, you must log in with machine administrator authority. You can only view user information if you log in as a regular user.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

#### For a user with administrator rights who logs in

User properties can be changed and users can be deleted. The items, which can be added, are all able to be changed.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

"User Login Setting" [Next] > "Local User List" [Add/Edit]

## Change the user properties.

#### Changing user properties

1 Select the user whose properties you wish to change > [Detail]



Select [Name] or [ID] from the "Sort" to sort the user list.

Select [Search(Name)] or [Search(ID)] to search by name or login user name.

- 2 Refer to step 3 of "Adding a User (Local User List)" to change a user property.
  - → Adding a User (Local User List) (page 9-8)
- 3 [Save] > [Yes]

The user information is changed.

#### Deleting a user

- 1 Select the user to delete.
- **2** [Delete] > [Yes]

The selected user will be deleted.

NOTE

The default user with machine administrator rights cannot be deleted.

#### Changing the user information of logged in user (User Property)

These users can partially change their own user properties including user name, login password, E-mail address, Simple Login, and My Panel.

Although "Login User Name", "Access Level", or "Account Name" cannot be changed, the users can check the present status.

#### Display the screen.

[System Menu/Counter] key > [User Property]

#### Change the user properties.

- 1 Refer to step 3 of "Adding a User (Local User List)" to change a user property.
  - → Adding a User (Local User List) (page 9-8)

Item	Description
User Name	Changes the name shown on the user list. Up to 32 characters can be entered.
Login User Name	Displays the login user name that is entered at login.
Login Password	Changes the password that is entered at login. Up to 64 characters can be entered.
Access Level	Displays the user's access level.
Maximum Password Age	Displays the term of validity of the login password.  NOTE  This function does not appear when Password Policy is set to [Off] or the term of validity of the password is set to [Off].
E-mail Address	Changes the user's e-mail address. Up to 128 characters can be entered.  NOTE  This function appears when Local Authorization is set to [On], Group Authorization is set to [On], and Guest Authorization Setting is set to [On].

Item	Description	
Authorization Rules	Displays the usage restriction that is set for the logged in user.	
	NOTE	
	This function appears when Local Authorization is set to [On], Group Authorization is set to [On], or Guest Authorization Setting is set to [On].	
	[Job Accounting Rules] shows the account name set for the logged in user and the usage restrictions that are set for that account.	
	This function appears when job accounting is set to <b>[On]</b> . For information on job accounting, refer to the following:	
	→ Job Accounting Access (page 9-35)	
Simple Login	When simple login is enabled, changes associated settings.	
	NOTE	
	This function does not appear when Simple Login is set to [ <b>Off</b> ] or the user is not registered in Simple Login.	
ID Card Information	Displays the ID card information of the logged in user.	
	NOTE	
	This function is displayed when the optional ID Card Authentication Kit is activated.	
	→ Optional Applications (page 11-7)	
	This function does not appear when the server type is set to [Ext.] in Network Authentication, and logged in with the user account certificated in the server specified as the [Ext.] server type.	
My Panel	Register the language and default screen for each user. Once registered, the setting will be applied simply by login. Network users are not displayed.	

#### 2 Select [Save].

The user information is changed.

## **User Login Administration for Printing**

It is possible to manage the users that print on this machine from a PC.

#### **Setting Printer Driver**

To manage the users that print on this machine from a PC, the following settings are necessary in the printer driver. Instructions are based on interface elements as they appear in Windows 8.1.

#### Display the screen.

1 Select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].


## NOTE

In Windows 7, click [Start] button on the Windows, and then click [Devices and Printers].

- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click [Administrator] on the [Device Settings] tab.

#### Configure the settings.

1 Select [User Login] on the [User Login] tab.

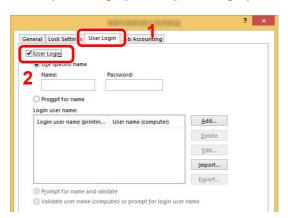

2 Set the User Login Administration.

[**Use specific name**]: This option can be used to specify a user name and password to use the same User login for every print job. If this option is selected, the user does not have to type the name and password for each print job.

[**Prompt for name**]: A screen for entering the user name and password will be displayed when attempting a printing. The user name and password must be entered each time a printing is attempted.

[**Prompt for name and validate**]: A screen for entering the user name and password will be displayed when attempting a printing. The user name and password stored in the Login user name list needs to be entered. The user name and password must be entered each time a printing is attempted.

[Validate user name (computer) or prompt for login user name]: When printing, the Windows user name is searched in the "Login user names" and printing is possible if the name is registered. If the name is not registered, the printing will be canceled for users with only user authority. If the user has administrator privileges, the screen to enter the user name and password will appear.

3 Click [OK].

NOTE

For other settings of job accounting, refer to the following:

Printer Driver User Guide

## **Managing the Users to Scan Using TWAIN**

It is possible to manage the users that scan using TWAIN.

#### **Setting TWAIN Driver**

To manage the users that scan using TWAIN, the following settings are necessary in the TWAIN driver. Instructions are based on interface elements as they appear in Windows 8.1.

#### Display the screen.

1 Select [Search] in charms, and enter "TWAIN Driver Setting" in the search box. Click [TWAIN Driver Setting] in the search list then the TWAIN Driver Setting screen appears.

■ NOTE

In Windows 7, select [Start] button on the Windows, [All Programs], [Kyocera] and then [TWAIN Driver Setting].

2 Select the machine, and click [Edit].



## Configure the settings.

- 1 Click [User Authentication Settings].
- 2 Select the checkbox beside [Authentication], and enter Login User Name and Password.



3 Click [OK].

## **Managing the Users to Scan Using WIA**

It is possible to manage the users that scan using WIA.

#### **Setting WIA Driver**

To manage the users that scan using WIA, the following settings are necessary in the WIA driver. Instructions are based on interface elements as they appear in Windows 8.1.


#### Display the screen.

1 Click [Search] in charms, and enter "Scanner" in the search box. Click [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

#### **NOTE**

In Windows 7, click [Start] button on the Windows and enter [Scanner] in [Program and File Search]. Click [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

2 Select the same name as this machine from WIA Drivers, and press [**Properties**].

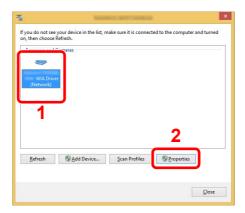

## Configure the settings.

1 Select the checkbox beside [Authentication] on the [Settings] tab, and enter Login User Name and Password.



2 Click [OK].

## Managing the Users that Send Faxes from a PC

It is possible to manage the users that send faxes from a PC.

#### **Setting FAX Driver**

To manage the users that send faxes from a PC, the following settings are necessary in the FAX driver. Instructions are based on interface elements as they appear in Windows 8.1.

#### Display the screen.

1 Select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].


#### **NOTE**

In Windows 7, click [Start] button on the Windows, and then click [Devices and Printers].

- 2 Right-click the printer driver icon of the machine, and click the [**Printing preferences**] menu of the printer driver.
- 3 Click [FAX TX Setting] on the [Printing Preferences] window.

#### Configure the settings.

1 Select [User Login] on the [Authentication] tab.

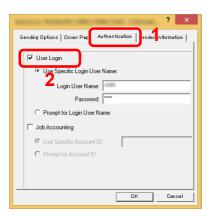

2 Set the User Login Administration.

[Use Specific Login User Name]: This option can be used to specify a user name and password to use the same User login for every FAX job. If this option is selected, the user does not have to type the name and password for each FAX job.

[**Prompt for Login User Name**]: A screen for entering the user name and password will be displayed when attempting a transmission. The user name and password must be entered each time a transmission is attempted.

3 Click [OK].

## **Local Authorization**

Select whether or not to use Local Authorization.

**NOTE** 

When using Local Authorization, the user authentication type must be set to [Local Authentication].

**▶** Enabling User Login Administration (page 9-3)

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Local Authorization" [Change]

#### [Off] or [On] > [OK]

## **Group Authorization Settings**

Set restrictions of the machine usage by each individual group registered in the authentication server.

NOTE

To use the group authorization settings, [**Network Authentication**] must be selected for the authentication method in "Enabling User Login Administration". Select "On" for "LDAP" in "Protocol Detail".

► Enabling User Login Administration (page 9-3)
Protocol Settings (page 8-54)

#### **Group Authorization**

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Group Authorization Set." [Next] > "Group Authorization" [Change]

## 2 [On] > [OK]

#### **Group List (Up to 20)**

Register the groups that are restricted the machine usage. Other users and groups belong to "Others".

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

#### NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Group Authorization Set." [Next] > "Group List" [Change]

#### Configure the settings.

[Add] > Add information on each item > [OK]

Item	Descriptions
Group ID*1	Enter the ID displayed on the group list (between 1 and 4294967295).
Group Name	Enter the name displayed on the group list (up to 32 characters).
Access Level	Select [Administrator] or [User] for group access privileges.
Print Restriction	Select whether or not to reject usage of print functions for the printer.
Copy Restriction	Select whether or not to reject usage of copy functions.
Duplex Restriction	Select whether only duplex printing is allowed.
Combine Restrict.	Specify whether only Combine is allowed.
EcoPrint Restriction	Specify whether only EcoPrint is allowed.
Send Restriction	Select whether or not to reject usage of the send functions.
FAX Transmission*2	Select whether or not to reject usage of the FAX transmissions.
Storing Restr. in Box	Select whether or not to reject usage of storing in the document boxes.
Storing Restr. in Memory	Select whether or not to reject usage of storing in the removable memory.

<sup>\*1</sup> For "Group ID", specify PrimaryGroupID assigned by Active Directory of Windows. If you are using Windows Server 2008, check Attribute Editor tab of user properties. If you are using Windows Server 2000/2003, check ADSIEdit. ADSIEdit is a support tool included on the installation DVD for Windows Server OS (under \SUPPORT\TOOLS).

<sup>\*2</sup> Displayed only when the optional FAX Kit is installed.

## NOTE

For details on entering characters, refer to the following:

→ Character Entry Method (page 11-9)

## Register the group.

Select [Save].

A new group is added on the group list.

#### **Guest Authorization Set.**

When User Login Administration is enabled, set the functions that guest users who cannot log in to the machine are allowed to use.



To use Guest Authorization Set., User Login Administration must be enabled in "Enabling User Login Administration".

**▶** Enabling User Login Administration (page 9-3)

#### **Enabling Guest Authorization**

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Guest Authorization Set." [Next] > "Guest Authorization" [Change]

## 2 [On] > [OK]



If the guest authorization setting is enabled, the [Authentication/Logout] key must be selected when logging in.

In the guest user default settings, only monochrome copying can be used. If you wish to use a different function, log in as a user who can use that function, or change the settings in the guest properties.

#### **Configuring Guest Property**

Register guest user information and functions that are restricted.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

#### **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Guest Authorization Set." [Next] > "Guest Property" [Next]

#### Configure the settings.

Check the settings and change or add information as needed.

Item	Descriptions
User Name	Enter the name displayed on the user list (up to 32 characters). The default setting is "Guest User".
Access Level	The authority of the user appears. This cannot be changed.
Account Name	Add an account where the user belongs.  If the user does not belong to any account, select [Others].

Item	Descriptions
Authorization Rules	Set usage authority for each user. The items you can restrict the access level with are as follows.
	Print Restriction:
	Select whether or not use of the print function of the printer is prohibited.
	Copy Restriction:
	Select whether or not use of the copy print function is prohibited.
	Duplex Restriction:
	Select whether only duplex printing is allowed.
	Combine Restrict.:
	Specify whether only Combine is allowed.
	EcoPrint Restriction:
	Specify whether only EcoPrint is allowed.
	Send Restriction:
	Select whether or not use of the send function is prohibited.
	FAX TX Restriction*1:
	Select whether or not use of the fax send function is prohibited.
	Storing Restr. in Box:
	Select whether or not use of the box store function is prohibited.
	Storing Restr. in Memory:
	Select whether or not use of the removable memory store function is prohibited.

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

## 3 Register the group.

Select [Save].

## **Obtain NW User Property**

Set the required information to obtain the network user property from the LDAP server. The user name and E-mail address obtained with this setting is shown in the user information, the status confirmation screen, and the header of E-mail.



#### **NOTE**

To obtain the network user property from the LDAP server, [Network Authentication] must be selected for the authentication method in "Enabling User Login Administration". Select "On" for "LDAP" in "Protocol Detail".

Enabling User Login Administration (page 9-3) Protocol Settings (page 8-54)

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



#### **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 [User Login Setting] > [Obtain NW User Property] > [On]

## Configure the settings.

[On] > Add information on each item > [OK]

Item	Descriptions
Server Name*1	Enter the LDAP server name or the IP address (up to 64 characters). If a server name is not entered, user information will be acquired from the server set for Network Authentication.
Port	Port number for LDAP server. The default port number is 389.
Name 1*2	Enter the LDAP Attribute to obtain the user name to be displayed from the LDAP server (up to 32 characters).
Name 2*3	Enter the LDAP Attribute to obtain the user name to be displayed from the LDAP server (up to 32 characters).
E-mail Address*4	Enter the LDAP Attribute to obtain the E-mail address from the LDAP server (up to 32 characters).
Authentic at Type*5	Set the authentication method. Select [Simple] or [SASL]. After changing the setting, restart the system or turn the power off and then on.

Item	Descriptions
Search Timeout	Set the amount of time to wait before time-out in seconds (from 5 to 255 seconds).
LDAP Security	Select the type of encryption according to the type of security employed by the LDAP server. The value is [Off], [SSL/TLS] or [STARTTLS].

<sup>\*1</sup> If using Active Directory of Windows, the server name may be the same as the server name entered in the network authentication.

- \*2 If using Active Directory of Windows, displayName of Attribute may be used as "Name 1".
- \*3 "Name 2" can be left out. When you assign displayName in "Name 1" and department in "Name 2", and if the value of displayName is "Mike Smith" and the value of department is "Sales" in Active Directory of Windows, the user name appears as "Mike Smith Sales".
- \*4 If using Active Directory of Windows, mail of Attribute may be used as E-mail Address.
- \*5 Appears when the server type is set to "Kerberos" in "Network Authentication".

# **Simple Login Settings**

The simple login function allows users to log in simply by selecting a user name. Users must be registered in advance to use this functionality.

## NOTE

- · For user registration, refer to the following:
  - → Adding a User (Local User List) (page 9-8)
- To use Simple Login, User Login Administration must be enabled in "Enabling User Login Administration".
  - **▶** Enabling User Login Administration (page 9-3)
- When the guest authorization setting is enabled, the Simple Login screen is not displayed.

#### **Enabling Simple Login**

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Simple Login Settings" [Next] > "Simple Login" [Change]

## 2 [On] or [Off] > [OK]

#### Simple Login Key

Register users to use simple login. You can add up to 20 users.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

## NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "Simple Login Settings" [Next] > "Simple Login Key" [Next]

#### Enter the user information.

- Select the key to which you want to register a user.
- 2 Select [Add/Edit].
- 3 "Display Name" [Change] > Enter the user name to be displayed > [OK]



For details on entering characters, refer to the following:

- → Character Entry Method (page 11-9)
- 4 Select "User" [Change].
- **5** To specify the user from local users, select [**Local User**]. To specify from network users, select [**Network User**].

Select [Next].

The procedure differs depending on the transmission method selected.


#### Specifying the user from local users

Select the user to be set for simple login.

## NOTE

- Select [Name] or [ID] from the "Sort" to sort the account list.
- Select [Search(Name)] or [Search(ID)] to search by account name or account ID.

#### Specifying the user from network users

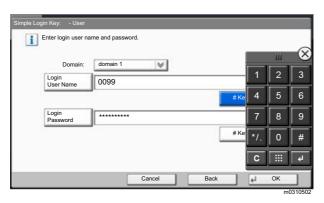

Select [Login User Name] and [Login Password], enter the information of the user to be registered, and select [OK].

If you are specifying a user for whom a domain is set in network authentication, select the "Domain" and select the domain where the user is registered.

#### **NOTE**

For details on entering characters, refer to the following:

- → Character Entry Method (page 11-9)
- 6 "Password" [Change] > [On] or [Off] > [OK] > "Icon" [Change]
- 7 Select the user icon to be displayed and select [OK].

#### Register the user.

Select [Save].

# **ID Card Settings**

If ID card authentication is enabled, select the authentication type.



This functions appears when the Card Authentication kit is activated.

Optional Applications (page 11-7)

This function does not appear when the user logs in as a network authentication user.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



#### **◯** NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "ID Card Settings" [Next]

### Configure the settings.

The following settings can be selected.

Item	Descriptions
Keyboard Login	When ID card authentication is enabled, select whether or not login by keyboard is allowed.  Value: Permit, Prohibit
Additional Authentication*1	Select whether or not to require password entry after authenticating by ID card.  Value: Off, Use Password, Use PIN

This function does not appear when the server type is set to [NTLM] or [Kerberos] in "Network Authentication".

### **PIN Code Authorization**



#### **NOTE**

When using PIN Code Authorization, the network authentication must be enabled and [Ext.] must be selected for server type.

**▶** Enabling User Login Administration (page 9-3)

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



#### **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "User Login Setting" [Next] > "PIN Code Authorization" [Change]

#### [Off] or [On] > [OK]

# **Using User Login Administration**

This section explains procedures while setting job accounting.

# Login/Logout

If user login administration is enabled, the login user name and login password entry screen appears each time you use this machine.

#### Login

If the login user name entry screen appears during operations, log in by referring to the following:

→ Login (page 2-29)

#### Logout

When the operations are complete, select the [Authentication/Logout] key to return to the login user name and login password entry screen.

# **Overview of Job Accounting**

Job accounting manages the copy/print/scan/FAX count accumulated by individual accounts by assigning an ID to each account.


Enable job accounting. (page 9-34)




(page 9-36)



Setting an account. 3 Enter the assigned account ID when performing the job. (page 9-32)

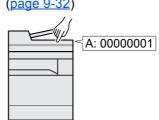


4 Count the number of pages copied, printed, scanned and faxed.

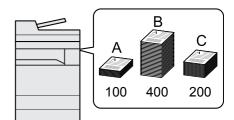

# To Manage the Number of Sheets Used on Jobs **Printed from a PC**

To manage the number of jobs to be printed from the PC on the network, you need to configure settings by using the printer driver on the PC.

Set Job Accounting for the PC on the network by using the printer driver. (page 9-40)

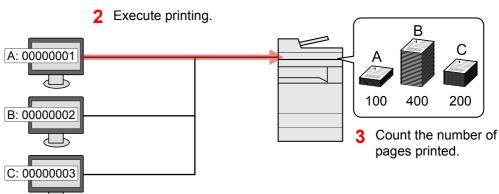

# Managing the Scan Job Account by Using TWAIN

To manage the scan job account by using TWAIN, you need to configure the TWAIN driver settings on the computer connected to the machine.

Job Accounting for Scan Using TWAIN (page 9-41)

# Managing the Scan Job Account by Using WIA

To manage the scan job account by using WIA, you need to configure the WIA driver settings on the computer connected to the machine.

Job Accounting for Scan Using WIA (page 9-42)

# Managing the FAX Job Transmitted from a PC

To manage the number of FAX jobs transmitted from the PC, you need to configure the settings by using the FAX Driver on the PC.

Job Accounting for the FAX Transmitted from a Computer (page 9-43)

The optional FAX Kit is required in order to make use of fax functionality.

# **Enabling Job Accounting**

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

**NOTE** 

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "Job Accounting Settings" [Next] > "Job Accounting" [Change]

#### Configure the settings. 2

[On] > [OK]



- · To disable job accounting, select [Off].
- · When the display returns to System Menu default screen, logout is automatically executed and the screen to enter the Account ID appears. To continue the operation, enter the Account ID.

# **Job Accounting Access**

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 [Job Accounting Settings] > [Job Accounting Access]

#### Configure the settings.

[Local] or [Network] > [OK]

NOTE

To select [**Network**], network authentication must be enabled and [**Ext.**] must be selected for server type.

# **Job Accounting (Local)**

You can add, change and delete an account and set the restriction for each account.

# **Adding an Account**

Up to 1000 individual accounts can be added. The following entries are required.

Item	Descriptions
Account Name	Enter the account name (up to 32 characters).
Account ID	Enter the account ID as many as eight digits (between 0 and 99999999).
Restriction	This prohibits printing/scanning or restricts the number of sheets to load.
	★ Restricting the Use of the Machine (page 9-37)

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "Job Accounting Settings" [Next] > "Job Accounting (Local)" [Next] > "Accounting List" [Add/Edit] > [Add]

# 2 Enter the account information.

1 "Account Name" [Change] > Enter the account name > [OK]

NOTE

For details on entering characters, refer to the following:

- → Character Entry Method (page 11-9)
- 2 "Account ID" [Change] > Enter the account ID > [OK]
  - NOTE

Any "Account ID" that has already registered cannot be used. Enter any other account ID.

- 3 Activate or deactivate restriction.
  - → Restricting the Use of the Machine (page 9-37)
- 4 Select [Save].

A new account is added on the Account List.

# **Restricting the Use of the Machine**

This section explains how to restrict the use of the machine by account or the number of sheets available.

The items that can be restricted differ depending on whether "Individual" or "Total" is selected for "Copy/Print Count".

#### **Restriction Items**

"Individual" selected for Copy/Printer Count "Split" selected for Copy/Printer Count

Item	Descriptions
Copy Restriction (Total)	Limits the number of sheets used for copying.
Print Restriction (Total)	Limits the number of sheets used for printing.
Scan Restriction (Others)	Limits the number of sheets scanned (excludes copying).
FAX TX Restriction	Limits the number of sheets sent by fax. This is displayed when the optional FAX Kit is installed.
FAX Port Restriction	Restricts the ports used for faxing. This is displayed when two optional FAX Kits are installed.

<sup>&</sup>quot;Total" selected for Copy/Printer Count

ltem	Descriptions
Print Restriction (Total)	Limits the total number of sheets used for copying and printing.
Scan Restriction (Others)	Limits the number of sheets scanned (excludes copying).
FAX TX Restriction	Limits the number of sheets sent by fax. This is displayed only on products with the fax function installed.
FAX Port Restriction	Restricts the ports used for faxing. This is displayed when two optional FAX Kits are installed.



Select [Off], [Use Port 1 Only] or [Use Port 2 Only] as the "FAX Port Restriction" setting.

#### **Applying Restriction**

Restriction can be applied in the following modes:

Item	Descriptions
Off	No restriction is applied.
Counter Limit	Restricts the print counter in one-page increments up to 9,999,999 copies.
Reject Usage	Restriction is applied.

# **Editing an Account**

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "Job Accounting Settings" [Next] > "Job Accounting (Local)" [Next] > "Accounting List" [Add/Edit]

#### Edit an account.

1 Select [Detail] for the account name you wish to edit.

- **NOTE**
- Select [Name] or [ID] from the "Sort" to sort the account list.
- Select [Search(Name)] or [Search(ID)] to search by account name or account ID.
- 2 Select the account information to be changed and change the account information.
- 3 [Save] > [Yes]

The account information is changed.

# **Deleting an Account**

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

## NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "Job Accounting Settings" [Next] > "Job Accounting (Local)" [Next] > "Accounting List" [Add/Edit]

#### Delete an account.

- 1 Select the account name you wish to delete.
- 2 [Delete] > [Yes]

The account is deleted.

# **Job Accounting for Printing**

The number of jobs to be printed from the computer can be managed by Job Accounting.

#### **Setting Printer Driver**

To manage the number of jobs to be printed from the PC on the network, you need configure the following settings by using the printer driver on the PC. Instructions are based on interface elements as they appear in Windows 8.1.

#### Display the screen.

1 Select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].


### **NOTE**

In Windows 7, click [Start] button on the Windows, and then click [Devices and Printers].

- 2 Right-click the printer driver icon of the machine, and click the [Printer properties] menu of the printer driver.
- 3 Click [Administrator] on the [Device Settings] tab.

#### Configure the settings.

1 Select [Job accounting] on the [Job Accounting] tab.

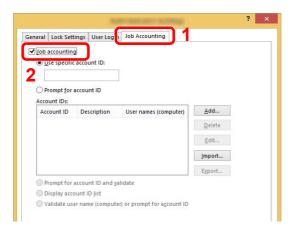

2 Set the Account ID.

[Use specific account ID]: Enter the Account ID. Printing will be performed using the entered Account ID. If this option is selected, the user does not have to enter the Account ID for each print job.

[**Prompt for account ID**]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID must be entered each time a printing is attempted.

[Prompt for account ID and validate]: A screen for entering the Account ID will be displayed when attempting a printing. The Account ID stored in the Account ID list needs to be entered. The Account ID must be entered each time a printing is attempted.

[Display account ID list]: The Account ID list is displayed when printing. The Account ID to be used needs to be selected from the list.

[Validate user name (computer) or prompt for account ID]: When printing, the Windows user name is searched in the "Account IDs" and printing is possible if the name is registered. If the Account ID is not registered, the screen for entering the Account ID will appear.

3 Click [OK].

NOTE

For other settings of job accounting, refer to the following:

Printer Driver User Guide

# **Job Accounting for Scan Using TWAIN**

The number of jobs scanned by using TWAIN can be managed by Job Accounting.

#### **Setting TWAIN Driver**

To manage the number of jobs scanned by using TWAIN, you need to configure the following settings by using the TWAIN Driver on the computer. Instructions are based on interface elements as they appear in Windows 8.1.

#### Display the screen.

1 Select [Search] in charms, and enter "TWAIN Driver Setting" in the search box. Click [TWAIN Driver Setting] in the search list then the TWAIN Driver Setting screen appears.

■ NOTE

In Windows 7, select [Start] button on the Windows, [All Programs], [Kyocera] and then [TWAIN Driver Setting].

2 Select the machine, click [Edit].



## Configure the settings.

- 1 Click [User Authentication Settings].
- 2 Select the checkbox beside [Account], and enter the account ID.



3 Click [OK].

# **Job Accounting for Scan Using WIA**

The number of jobs scanned by using WIA can be managed by Job Accounting.

#### **Setting WIA Driver**

To manage the number of jobs scanned by using WIA, you need to configure the following settings by using the WIA Driver on the computer. Instructions are based on interface elements as they appear in Windows 8.1.


#### Display the screen.

1 Click [Search] in charms, and enter "Scanner" in the search box. Click [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

### **NOTE**


In Windows 7, click [Start] button on the Windows and enter [Scanner] in [Program and File Search]. Click [View scanners and cameras] in the search list then the Scanners and Cameras screen appears.

2 Select the same name as this machine from WIA Drivers, and press [**Properties**].

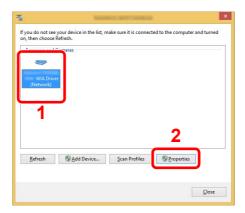

## Configure WIA Driver.

1 Select the checkbox beside [Account ID] on the [Settings] tab, and enter the Account ID.

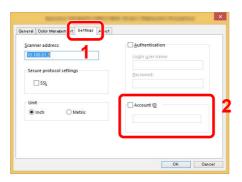

2 Click [OK].

# Job Accounting for the FAX Transmitted from a Computer

The number of FAX jobs transmitted from the computer can be managed by Job Accounting.



#### **NOTE**

FAX functions are available only on products with the fax function installed.

#### **Setting FAX Driver**

To manage the number of FAX jobs transmitted from the computer, you need to configure the following settings by using the FAX Driver on the computer. Instructions are based on interface elements as they appear in Windows 8.1.

#### Display the screen.

1 Select [Settings] in charms on Desktop, and select [Control Panel], and then [Devices and Printers].




#### **NOTE**

In Windows 7, click [Start] button on the Windows, and then click [Devices and Printers].

- 2 Right click the name of the machine to be used as the FAX Driver and select [Printing preferences] from the resulting pull-down menu.
- 3 Click [FAX TX Setting] in the [Printing Preferences] window.

#### Configure the settings.

1 Select [Job Accounting] on the [Authentication] tab.

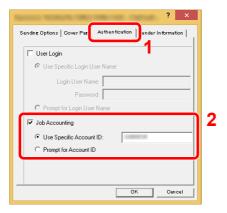

2 Set the Job Accounting.

[Use Specific Account ID]: This option can be used to specify an account ID to use the same Account ID for every FAX job. If this option is selected, the user does not have to enter the Account ID for each FAX job.

[Prompt for Account ID]: A screen for entering the Account ID will be displayed when attempting a transmission. The Account ID must be entered each time a transmission is attempted.

3 Click [OK].

# **Configuring Job Accounting**

# **Default Setting**

Select the default value for usage limit, and whether or not to enable counting by paper size.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

### NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "Job Accounting Settings" [Next] > "Job Accounting (Local)" [Next] > "Default Setting" [Next] > "Default Counter Limit" [Next]

#### Configure the settings.

- 1 Select [Change] for the item you want to modify and then select [+], [-] or use the numeric keys to enter the default restriction on the number of sheets.
- 2 Select [OK].

Item	Description
Counter Limit	When you add a new account, you can change the default restrictions on the number of sheets used. You can set any number from 1 to 9,999,999.
	The items that can be set differ depending on whether [Individual] or [Total] is selected for [Copy/Printer Count].
	→ Copy/Printer Count (page 9-51)
[Individual] selected for	or Copy/Printer Count
Copy Restriction (Total)	Sets the default restriction on the number of sheets used for copying.
Print Restriction (Total)	Sets the default restriction on the number of sheets used for printing.
Scan Restriction (Others)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
FAX TX Restriction*1	Sets the default restriction on the number of sheets used for sending faxes.

Item	Description
[Total] selected for Copy/Printer Count	
Print Restriction (Total) Sets the default restriction on the total number of sh used for copying and printing.	
Scan Restriction (Others)	Sets the default restriction on the number of sheets used for scanning (excludes copying).
FAX TX Restriction*1	Sets the default restriction on the number of sheets used for sending faxes.

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

#### **Count by Paper Size**

This counts the number of pages by paper size (e.g. Letter).



#### **NOTE**

Paper size is available in five types, 1 to 5. These types are specified in accounting reports.

▶ Print Accounting Report (page 9-48)

In addition to paper size, media type can also be specified (e.g. count the letter-size color paper used). If you do not specify the media type, the number of used sheets will be counted for the specified sheet size, regardless of the media type.

#### Display the screen.

[System Menu/Counter] key > [User Login/Job Accounting] > "Job Accounting Settings" [Next]



#### **◯** NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "Job Accounting (Local)" [Next] > "Default Setting" [Next] > "Count by Paper Size" [Next] > "Paper Size 1 (to 5)" [Change]

# Configure the settings.

- 1 Select [On].
- 2 Select the paper size.
- 3 Select [Media Type] to specify media type.
- 4 Select the media type and select [**OK**].
- 5 Select [OK].

# **Counting the Number of Pages Printed**

This counts the number of pages printed. Counts are classified into Total Job Accounting and Each Job Accounting. A new count can also be started after resetting the count data which was stored for a certain period of time.

#### Display the screen.

[System Menu/Counter] key > [User Login/Job Accounting] > "Job Accounting Settings" [Next]

#### **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "Job Accounting (Local)" [Next] > "Total Job Accounting" [Next] or "Each Job Accounting" [Check]

#### Configure the settings.

The table below lists the item you can view.

	Item	Descriptions
Prir	nted Pages	Displays the number of pages copied and printed, and the total number of pages used. You can also use [FAX]*1, [Count by Paper Size], [by Duplex] and [by Combine] to check the number of pages used.
	Copy (B & W)	Displays the number of pages used for black and white copying.
	Printer (B & W)	Displays the number of pages used for black and white printing.
	Copy/Printer (B/W)	Displays the total number of pages used for black-and-white copying and printing.
	FAX*1	Displays the number of pages received.
Count by Paper Size  Displays the number of pages used size as well as the number of pages sizes.  Count by Duplex/ Combine  Displays the number of pages used mode, Duplex (2-sided) mode and the as the pages used in Combine (None		Displays the total number of pages used.
		Displays the number of pages used in the selected paper size as well as the number of pages used in other paper sizes.
		Displays the number of pages used in Duplex (1-sided) mode, Duplex (2-sided) mode and the total for both, as well as the pages used in Combine (None) mode, Combine (2in1) mode, Combine (4in1) mode and the total for all three.
Sca	nned Pages	Displays the number of pages scanned for copying, faxing and other functions, as well as the total number of pages scanned.

Item	Descriptions	
FAX TX Pages*1	Displays the number of pages faxed.	
FAX TX Time*1	Displays the total duration of FAX transmissions.	
Counter Reset	Resets the counter. Select [Yes] in the confirmation screen.	

<sup>\*1</sup> Displayed only when the optional FAX Kit is installed.

#### **Total Accounting**

This counts the number of pages for all accounts and resets the counts for those accounts together at the same time.

#### Check the number of pages.

- Select [Check] at the function to check the count.
   The results will be displayed.
- 2 Confirm the count and select [Close].

#### **Each Job Account**

This counts the number of pages for each account and resets the counts by account. When checking Each Job Accounting, select the account for which you want to check the count.

#### Check the number of pages.

- 1 Select the account to check the count.
- 2 Select [Detail].

### NOTE


- Select [Name] or [ID] from the "Sort" to sort the account names.
- Select [Search(Name)] or [Search(ID)] to search by account name or account ID. To display an account other than your own account, select [Other Account].
- 3 Select [Check] at the function to check the count.
  The results will be displayed.
- 4 Confirm the count and select [Close].

# **Print Accounting Report**

The total pages counted of all relevant accounts can be printed as an accounting report.

Reports have different formats depending on how the count of copiers and printers is administered.

When "Individual" is selected for Managing the Copy/Printer Count.

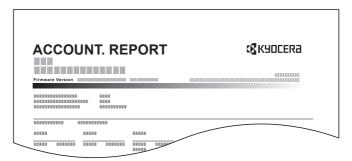

Use the procedure below to print a job accounting report.

#### Prepare paper.

Check that A4 or Letter paper is loaded in the cassette.

#### Display the screen.

[System Menu/Counter] key > [User Login/Job Accounting] > [Job Accounting Settings]



If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

# 3 Print the report.

[Print Accounting Report] > [Yes]

Accounting report is printed.

# **Using Job Accounting**

This section explains procedures while setting job accounting.

# Login/Logout

If job accounting is enabled, an account ID entry screen appears each time you use this machine.

#### Login

1 In the account ID entry screen, enter the account ID using the numeric keys and select [Login].

#### NOTE

- If you entered a wrong character, select the [Clear] key and enter the account ID again.
- If the entered account ID does not match the registered ID, a warning beep will sound and login will fail. Enter the correct account ID.
- · By selecting [Check Counter], you can refer to the number of pages printed and the number of pages scanned.

#### When the screen to enter the login user name and password appears

If user login administration is enabled, the screen to enter the login user name and password appears. Enter a login user name and password to login. If the user has already registered the account information, the account ID entry would be skipped.

- → Adding a User (Local User List) (page 9-8)
- 2 Proceed to complete the rest of the steps.

#### Logout

When the operations are complete, select the [Authentication/Logout] key to return to the account ID entry screen.

# **Apply Limit**

This specifies how the machine behaves when the counter has reached the limit of restriction. The table below describes the action taken.

Item	Descriptions	
Immediately*1	Job stops when the counter reaches its limit.	
Subsequently	Printing/scanning of the job continues but the subsequent job will be rejected.	
Alert Only	Job continues while displaying an alert message.	

<sup>\*1</sup> The next job will be prohibited in sending or in storing in the box.

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting] > "Job Accounting Settings" [Next]

#### **NOTE**

If the login user name entry screen appears during operations, enter a login user name and password, and select [Login]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 Select "Apply Limit" [Change].

## Configure the settings.

Select [Immediately], [Subsequently], or [Alert Only] > [OK]

# **Copy/Printer Count**

You can select how the copying and printing page counts are shown - either the total of both or each of copying and printing individually. The selection may influence restriction on the count and count method. For details, refer to the following:

- ➤ Restricting the Use of the Machine (page 9-37)
- Counting the Number of Pages Printed (page 9-46)
- Print Accounting Report (page 9-48)

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting] > "Job Accounting Settings" [Next]

## NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 Select "Copy/Printer Count" [Change].

### Configure the settings.

Select [Total] or [Individual] > [OK]

# **Unknown User Settings**

#### **Unknown ID Job**

This specifies the behavior for handling the jobs sent with unknown or unsent login user names or User ID. If the User Login is set to invalid and Job Accounting is set to valid, follow the procedure when the Account ID is unknown.

The setting items are as follows.

Item	Descriptions		
Permit	The job is permitted to be printed.		
Reject	The job is rejected (not printed).		

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]



If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "Unknown User Setting" [Next] > [Unknown ID Job].

# Configure the settings.

Select [Permit] or [Reject].

# Registering Information for a User whose ID is Unknown

If you register user information for a user whose ID is unknown, you can check information on the Job Status or Job History screens. In addition, you can restrict available functions.



This function is displayed when [Unknown ID Job] is set to [Permit].

#### Display the screen.

1 [System Menu/Counter] key > [User Login/Job Accounting]

## NOTE

If the login user name entry screen appears during operations, enter a login user name and password, and select [**Login**]. For this, you need to login with administrator privileges.

The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

2 "Unknown User Setting" [Next] > [User Property].

#### Enter the user information.

Enter the user information > [OK]

Fotos the groups displayed on the consultation to 00 shapestons)
Enter the name displayed on the user list (up to 32 characters).
Register an account for a user whose ID is unknown.  Overview of Job Accounting (page 9-33)  NOTE  Select [Name] or [ID] from the "Sort" to sort the account list.  Select [Search(Name)] or [Search(ID)] to search by account
name or account ID.  Set usage authority.
The following restriction items are available:  Print Restriction:  Select whether or not use of the print function of the printer is prohibited.
•

# 10 Troubleshooting

Thic	chanter	avalaine	tha	following	tonice:
11113	CHADLE	CADIGILIS	เมเต	TOHOWITIG	ludics.

 
Regular Maintenance	. 10-2
Cleaning	. 10-2
Cleaning Glass Platen	. 10-2
Cleaning inside of the Document Processor	. 10-2
Cleaning Slit Glass	. 10-3
Toner Container Replacement	. 10-4
Replace the Waste Toner Box	. 10-7
Loading Paper	. 10-9
Replacing Staples (4,000-Sheet Finisher)	10-10
Replacing Staples (Folding Unit)	10-11
Disposing of the Punch Waste	
Troubleshooting	
Solving Malfunctions	
Machine Operation Trouble	
Printed Image Trouble	
Responding to Messages	
Adjustment/Maintenance	10-39
Overview of Adjustment/Maintenance	10-39
Tone Curve Adjustment	10-39
Drum Refresh 1	10-41
Drum Refresh 2	10-41
Calibration	10-42
Developer Refresh	10-42
Clearing Paper Jams	10-43
Jam Location Indicators	10-43
Remove any jammed paper in Cassette 1	10-45
Remove any jammed paper in Cassette 2	10-46
Remove any jammed paper in Cassette 3	10-48
Remove any jammed paper in Cassette 4	10-49
Remove any jammed paper in Cassette 5	
(Side Feeder (3,000-sheet))	10-52
Remove any jammed paper in Cassette 5	
(Side Feeder (500-sheet×3) / Large	
Capacity Side Feeder (500,	
1,500-sheet×2))	10-54
Remove any jammed paper in Cassette 6,	40.57
7 (Side Feeder (500-sheet×3))	10-57
Remove any jammed paper in Cassette 6	
(Large Capacity Side Feeder (500, 1,500-sheet×2))	10 50
Remove any jammed paper in Cassette 7	10-59
(Large Capacity Side Feeder (500,	
1,500-sheet×2))	10-62
Remove any jammed paper in the	
Multipurpose Tray	10-65
- L - L 1	

Remove any jammed paper in Right	
Cover 1  Remove any jammed paper in Right	10-66
Cover 3	10-70
Remove any jammed paper in Right Cover 4	10-71
Remove any jammed paper in the Upper Left Tray / 4,000-sheet Finisher (Tray C)	10-73
•	10-74
Remove any jammed paper in the Right Tray	10-75
Remove any jammed paper in the Top Cover, Right Cover 1 (Side Feeder (500-sheet×3) / Large Capacity Side	
Feeder (500, 1,500-sheet×2))	10-76
1,500-sheet×2))	10-78
Remove any jammed paper in the Mailbox. Remove any jammed paper in the	10-80
Document Processor Remove any jammed paper in the	10-81
4,000-sheet Finisher (Inner)Remove any jammed paper in the	10-82
4,000-sheet Finisher (Tray A) Remove any jammed paper in the	10-84
4,000-sheet Finisher (Tray B) Remove any jammed paper in the Folding	10-87
UnitRemove any jammed paper in the Folding	10-90
Tray	
Finisher	

# **Regular Maintenance**

# **Cleaning**

Clean the machine regularly to ensure optimum printing quality.




For safety, always unplug the power cord before cleaning the machine.

# **Cleaning Glass Platen**

Wipe the inside of the document processor and the glass platen with a soft cloth dampened with alcohol or mild detergent.

**IMPORTANT** 

Do not use thinner or other organic solvents.

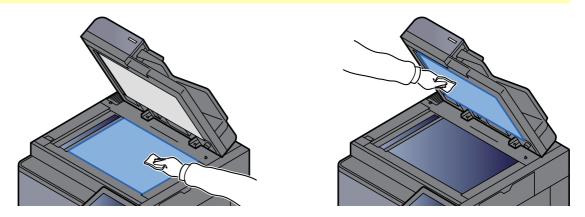

# **Cleaning inside of the Document Processor**


Clean the dual scanning unit with the supplied cleaning cloth.




**IMPORTANT** 

Do not use thinner or other organic solvents.

Remove the cloth from the cleaning cloth compartment and open the document processor cover.

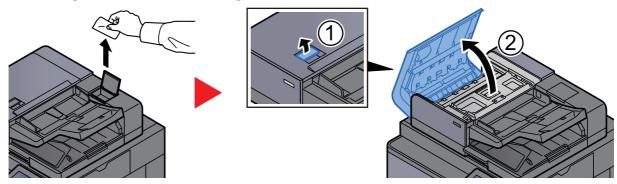

Clean inside of the document processor.

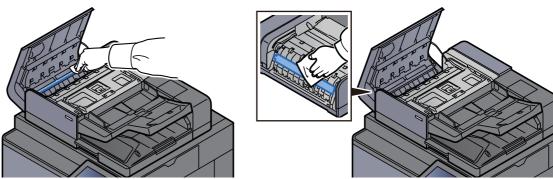

# **Cleaning Slit Glass**

Clean the slit glass surface and the reading guide with the supplied cleaning cloth.




#### **◯** IMPORTANT

Clean the slit glass surface with the supplied cleaning cloth.





Dirt on the slit glass or the reading guide may cause black streaks to appear in the output.

Remove the cloth from the cleaning cloth compartment.

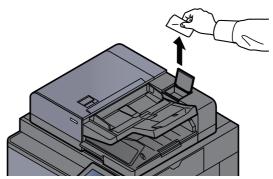

Clean the slit glass surface and the reading guide.

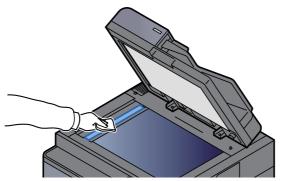

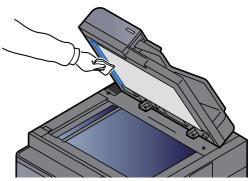

# **Toner Container Replacement**

When toner is empty, the following message will be displayed.

"Toner is empty."

When toner runs low, the following message will be displayed. Make sure you have a new toner container available for replacement.

"Toner is low. (Replace when empty.)"




- For the toner container, always use a genuine toner container. Using a toner container that is not genuine may cause image defects and product failure.
- The memory chip in the toner container of this product stores information necessary for improving customer convenience, operation of the recycling system for used toner containers, and planning and development of new products. The stored information does not include information that makes it possible to identify individuals, and is only used anonymously for the above purposes.




#### **CAUTION**

Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.


Tilt the operation panel upwards and open the front cover.

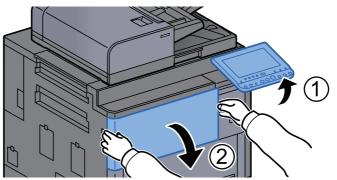


Turn the toner container release lever to the vertical position.

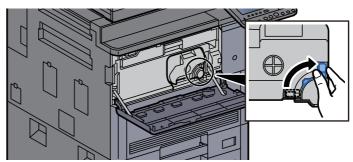


**Remove the toner container.** 

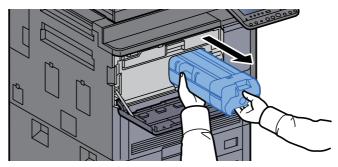

Put used toner container into the plastic waste bag.

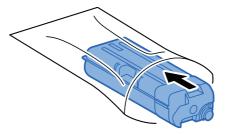


Remove the new toner container from the box.

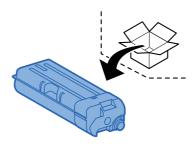




Do not touch the points shown below.

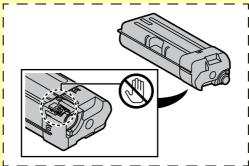


6 Tap the toner container.



#### Shake the toner container.

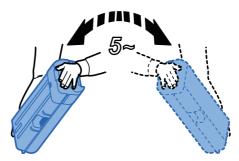


Install the toner container.

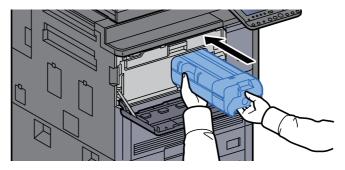

Turn the toner container release lever to the horizontal position.




10 Close the front cover.

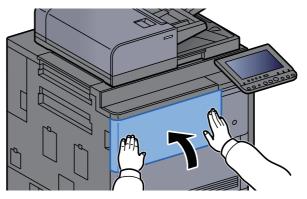

- NOTE
- If the front cover does not close, check that the new toner container is installed correctly.
- Return the exhausted toner container to your dealer or service representative. The collected toner container will be recycled or disposed in accordance with the relevant regulations.


# **Replace the Waste Toner Box**

 When the waste toner box is full, the following message will be displayed. Immediately replace the waste toner box. "Waste toner box is full."




Do not attempt to incinerate parts which contain toner. Dangerous sparks may cause burns.


Open the waste toner box cover.

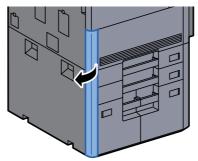


Remove the Waste Toner Box.

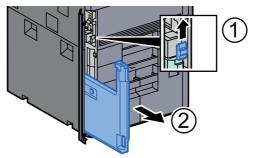


3 Put used Waste Toner Box into the plastic waste bag.

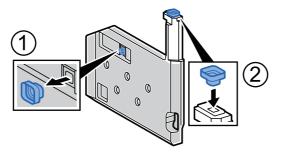

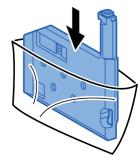


Remove the new Waste Toner Box.

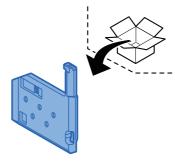

Install the Waste Toner Box.



Close the waste toner box cover.

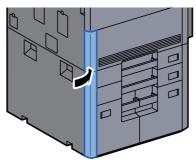

# NOTE

Return the exhausted waste toner box to your dealer or service representative. The collected waste toner box will be recycled or disposed in accordance with the relevant regulations.

# **Loading Paper**

When Cassette # runs out of paper, the following messages will be displayed.

"Add paper in cassette #."

"Add paper in Multipurpose tray."

- ▶ Loading in the Cassettes (page 3-4)
- → Loading in the Large Capacity Feeder (page 3-8)
- Loading in the Side Feeder (3,000-sheet) (page 3-12)
- **▶** Loading Paper in the Multipurpose Tray (page 5-5)

### NOTE

If [Show Paper Setup Message] is set to [On], the confirmation screen for the paper setting will be displayed when a new paper is set. If a paper is changed, select [Change] and then change the settings of the paper.

- → MP Tray Setting (page 8-8)

# Replacing Staples (4,000-Sheet Finisher)


When the Staple Unit runs out of staples, the following messages will be displayed. The staple cartridge holder need to be replenished with staples.

"Staple is empty."




If the Staple Unit runs out of staples, contact your dealer or service representative.


Open the finisher front cover 1.

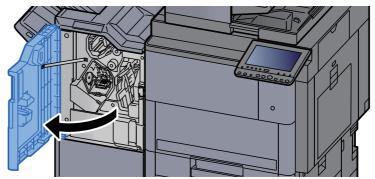


Remove the Staple Cartridge Holder (A).

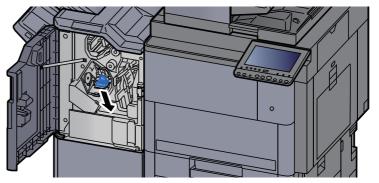


Replace the staples.

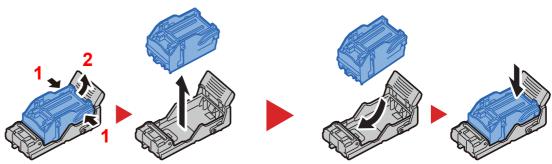

### Install the Staple Cartridge Holder (A).

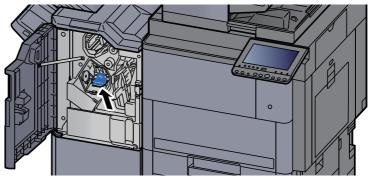

#### Close the cover.

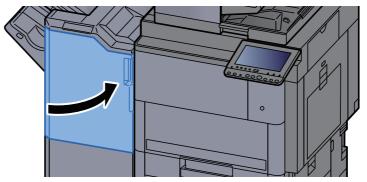

# **Replacing Staples (Folding Unit)**


When the Staple Unit runs out of staples, the following messages will be displayed. The staple cartridge holder need to be replenished with staples.

"Staple is empty."




If the Staple Unit runs out of staples, contact your dealer or service representative.


### Open the finisher front cover 1 and 2.

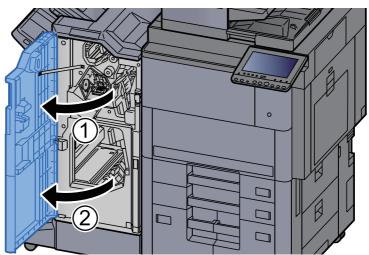


#### Remove the Staple Cartridge Holder (B) or (C).

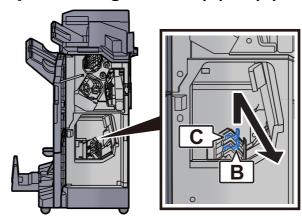


Replace the staples.

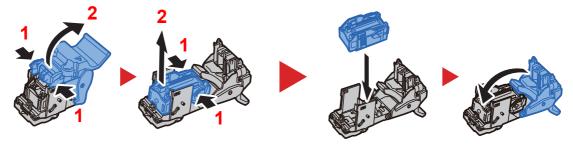

Install the Staple Cartridge Holder (B) or (C).

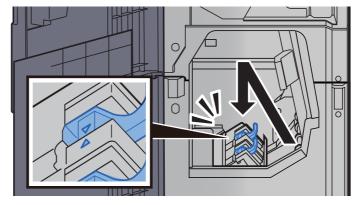

### Close the covers.

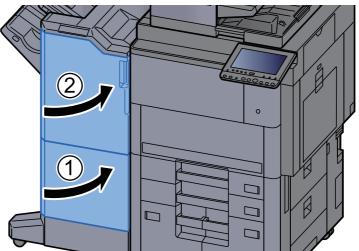

# **Disposing of the Punch Waste**

When the waste punch box is full, the following messages will be displayed. Empty the punch waste box.


"Empty the punch waste box."

Leave the power switch on the machine switched ON while performing this procedure.

#### Open the finisher front cover 1.



#### Remove the Punch Waste Box.

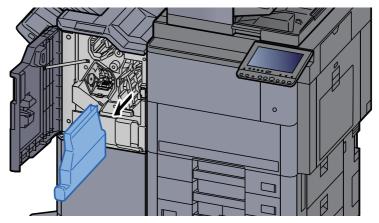


**⋒** NOTE

Take care not to spill the waste hole punch scraps when removing the box.


### 3 Empty the Punch Waste Box.



#### Install the Punch Waste Box.

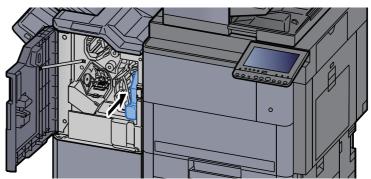

# 5 Close the cover.

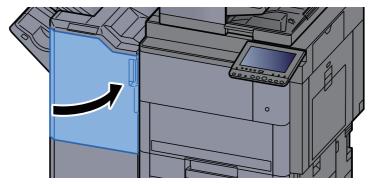

# **Troubleshooting**

## **Solving Malfunctions**

The table below provides general guidelines for problem solving.

If a problem occurs with your machine, look into the checkpoints and perform procedures indicated on the following pages. If the problem persists, contact your Service Representative.



When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

→ Display for Device Information (page 2-20)

### **Machine Operation Trouble**

When the following machine operation troubles occur, implement appropriate procedures.

Symptom	Checkpoints	Corrective Actions	Reference Page
An application does not start.	Is the Auto Panel Reset time short?	Set the Auto Panel Reset time to 30 seconds or more.	page 8-69
The screen does not respond when the power	Is the machine plugged in?	Plug the power cord into an AC outlet.	_
switch is turned on.	Is the machine powered on?	Turn on the main power switch.	page 2-2
Pressing the [Start] key does not produce copies.	Is there a message on the screen?	Determine the appropriate response to the message and respond accordingly.	page 10-23
	Is the machine in Sleep mode?	Select any key on the operation panel to recover the machine from Sleep mode.	page 2-41
Blank sheets are ejected.	Are the originals loaded correctly?	When placing originals on the platen, place them face-down and align them with the original size indicator plates.	page 5-2
		When placing originals in the document processor, place them face-up.	page 5-3
	_	Check that the settings of the application software.	_

Symptom	Checkpoints	Corrective Actions	Reference Page
Paper often jams.	Is the paper loaded correctly?	Load the paper correctly.	<u>page 3-4</u>
	_	Turn the orientation 180 degrees around in which the paper is positioned.	page 3-4
	Is the paper of the supported type? Is it in good condition?	Remove the paper, turn it over, and reload it.	page 3-4
	Is the paper curled, folded or wrinkled?	Replace the paper with new paper.	page 3-4
	Are there any loose scraps or jammed paper in the machine?	Remove any jammed paper.	page 10-43
2 or more sheets are overlaps when ejected. (multi feed)  ABC 123		Load the paper correctly.	page 3-2
Printouts are wrinkled.	Is the paper loaded correctly?	Load the paper correctly.	page 3-4
$\begin{bmatrix} \mathbf{ABC} \\ 123 \\ \rangle \end{bmatrix}$	_	Turn the orientation 180 degrees around in which the paper is positioned.	page 3-4
	Is the paper damp?	Replace the paper with new paper.	<u>page 3-4</u>
Printouts are curled.  ABC 123	_	Turn the paper over in the cassette, or turn the orientation 180 degrees around in which the paper is positioned.	page 3-4
	Is the paper damp?	Replace the paper with new paper.	<u>page 3-4</u>
	Is the paper printed out to the 4,000-Sheet Finisher?	Change the [Correct Paper Curl].	page 8-74
Printer driver cannot be installed.	Is the driver installed with the host name while Wi-Fi or Wi-Fi Direct function is available?	Specify the IP address instead of the host name.	page 2-49

Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot print.	Is the machine plugged in?	Plug the power cord into an AC outlet.	_
	Is the machine powered on?	Turn on the main power switch.	page 2-2
	Are the USB cable and network cable connected?	Connect the correct USB cable and network cable securely.	page 2-7
	Is the print job paused?	Resume printing.	page 7-11
	When the wired or Wi-Fi network is configured using the name resolution, does the IP address (private address) of the other network which can not access	The number of host name and domain name which can be used with the machine is one respectively. Configure the network under this restriction.	_
	coexists?	Change the settings of name resolution such as NetBEUI and DNS, or network environment settings.	Command Center RX User Guide
		Select Wi-Fi, Wired Network or Optional Network as an unlimited- use network on Primary Network (Client).	page 8-62
		Set to [Wired Network] or [Wi-Fi] either one of [On], and set the other setting to [Off].	page 8-54
Cannot print with USB memory.	Is the USB host blocked?	Select [Unblock] in the USB host settings.	page 8-63
USB memory not recognized.	_	Check that the USB memory is securely plugged into the machine.	_
While "Auto-IP" is already set to [ <b>On</b> ], the IP address is not assigned automatically.	Is a value other than "0.0.0.0" entered for the link local address of TCP/IP(v4)?	Enter "0.0.0.0" for the IP address of TCP/IP(v4).	page 2-32

Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot send via SMB.	Is the network cable connected?	Connect the correct network cable securely.	page 2-7
	Have the network settings for the equipment been configured properly?	Configure the TCP/IP settings properly.	page 8-47
	Have the folder sharing settings been configured properly?	Check sharing settings and access privileges under the folder properties.	page 3-17
	Is the selected interface selected as the Primary Network?	Specify the host name or IP address of the interface selected as the Primary Network, or set the interface to be used again.	page 8-62
	Has the SMB protocol been set to [On]?	Set the SMB protocol setting to [On].	page 8-54
	Has [ <b>Host Name</b> ] been entered properly? *1	Check the name of the computer to which data is being sent.	page 5-23
	Has [Path] been entered properly?	Check the share name for the shared folder.	page 5-23
	Has [Login User Name] been entered properly? *1 *2	Check the domain name and login user name.	page 5-23
	Has the same domain name been used for [Host Name] and [Login User Name]?	Delete the domain name and backslash ("/") from [Login User Name].	page 5-23
	Has [Login Password] been entered properly?	Check the login password.	page 5-23
	Have exceptions for Windows Firewall been configured properly?	Configure exceptions for Windows Firewall properly.	page 3-20
	Do the time settings for the equipment, domain server, and data destination computer differ?	Set the equipment, domain server, and data destination computer to the same time.	_
	Is the screen displaying Send error?	Refer to Responding to Send Error.	page 10-35
Cannot send via the e-mail.	Is the E-mail send size limit set in the SMTP server registered on the machine?	Check the limit value is entered to "E-mail Size Limit" of [E-mail] setting in Command Center RX and change the value as necessary.	page 2-67
The machine is emitting steam in the area around the paper ejection slot.	Check the room temperature to see if it is low, or if damp paper was used.	Depending on the printing environment and the paper's condition, the heat generated during printing will cause the moisture in the paper to evaporate, and the steam emitted may look like smoke. This is not a problem, and you can continue printing. If the steam concerns you, raise the room temperature, or replace the paper with a newer, dryer paper.	

Symptom	Checkpoints	Corrective Actions	Reference Page
Cannot create	Is the proper language selected?	Check the language to extract.	page 6-71
Searchable PDF file.	Can the texts on the original not be recognized as texts, or is the PDF creation time taken?	<ul> <li>Check the following:</li> <li>The original orientation is correct.</li> <li>When setting the originals with the mixed orientation at once, [On] is selected for [Auto Image Rotation].</li> </ul>	page 6-71
Cannot search a text that you want to search on the	Have you set [OCR Text Recognition] in [File Format]?	Set [OCR Text Recognition] in [File Format].	page 6-71
PDF file.	Are the texts of the scanned original fainted or too light?	Set [Density] to darker level.	page 6-31
	Is the background of the scanned	Set [Background Density Adj.] to	page 6-31
	original too dark and the texts are difficult to recognize?	[On] or [Manual] and manually adjust the density lighter. Otherwise, set [Density] to darker level.	page 6-34
	Is the text or image on the back of the original visible on the front?	Set [Prevent Bleed-through] to [On].	page 6-34
Cannot find the machine with WSD.	Did you search by specifying the machine's IP address or host name?	For security reasons, [HTTP] protocol is set to [Off], and therefore you cannot search by IP address or host name.	_

<sup>\*1</sup> You can also enter a full computer name as the host name (for example, pc001.abcdnet.com).

<sup>\*2</sup> You can also enter login user names in the following formats: Domain\_name/user\_name (for example, abcdnet/james.smith) User\_name@domain\_name (for example, james.smith@abcdnet)

# **Printed Image Trouble**

When the following printed image trouble occurs, implement appropriate procedures.

Symptom	Checkpoints	Corrective Actions	Reference Page
Printed images are totally	Is the paper damp?	Replace the paper with new paper.	page 3-2
too light.	Have you changed the density?	Select appropriate density level.	page 6-31
ABC   ABC   123		To adjust the overall density, use [Adjustment/Maintenance] on the System Menu and adjust the density as required.	page 8-72
	Is the toner distributed evenly within the toner container?	Shake the toner container from side to side several times.	page 10-5
	Is there a message on the screen about adding the toner?	Replace the toner container.	page 10-4
	Is EcoPrint mode enabled?	Disable [EcoPrint] mode.	page 8-19
	_	Make sure the paper type setting is correct for the paper being used.	page 8-15
	_	Run [Calibration].	page 10-42
	_	Run [Drum Refresh 1].	page 10-41
	_	Run [Developer Refresh].	page 10-42
Printed images are too dark even though the background of the	Have you changed the density?	Select appropriate density level.	page 6-31 page 8-72
scanned original is white.	_	Run [Calibration].	page 10-42
ABC	_	Run [Drum Refresh 1].	page 10-41
123	_	Run [Developer Refresh].	page 10-42
Copies have a moire pattern (dots grouped together in patterns and not aligned uniformly).	Is the original a printed photograph?	When making copies Set the original image to [Printer Output] or [Book/ Magazine] in [Photo].	page 6-31
	_	When making copies Select [-1] to [-3] in [Sharpness].	page 6-33
Texts are not clearly printed.	Did you choose appropriate image quality for the original?	Select appropriate image quality.	page 6-31
ABC 123		When making copies Select [-1] to [-3] in [Sharpness].	page 6-33

Symptom	Checkpoints	Corrective Actions	Reference Page
Black dots appear on the white background.	Is the original holder or the glass platen dirty?	Clean the original holder or the glass platen.	page 10-2
ABC	_	Run [Drum Refresh 1].	page 10-41
123	_	Run [Developer Refresh].	page 10-42
Printed images are fuzzy. Printed images are cut off.	Is the device used in an environment with high humidity or where the temperature or humidity changes suddenly?	Use in an environment that has suitable humidity.	_
ABC 123		Run [Drum Refresh 1].	page 10-41
Printed images are skewed.	Are the originals placed correctly?	When placing originals on the platen, align them with the original size indicator plates.	page 5-2
ABC		When placing originals in the document processor, align the original width guides securely before placing the originals.	page 5-3
	Is the paper loaded correctly?	Check the position of the paper width guides.	page 3-4
Printed images have vertical lines.  ABC 123	Is the slit glass dirty?	Clean the slit glass.	page 10-3
Dirt on the top edge or back of the paper.  ABC 123	Is the interior of the machine dirty?	Open the right cover. If the machine interior is dirty with toner, clean it using soft, dry, lint-free cloth.	_

Symptom	Checkpoints	Corrective Actions	Reference Page
Part of the image is	_	Open and then close the right cover.	_
periodically faint or shows white lines.	_	Run [Drum Refresh 1].	page 10-41
	_	Run [Developer Refresh].	page 10-42
Print on the back of the sheet is visible on the front.  ABC 123		Set [Prevent Bleed-through] to [On].	page 6-34 page 8-18

# **Responding to Messages**

If the touch panel or the computer displays any of these messages, follow the corresponding procedure.



When contacting us, the serial number will be necessary. To check the serial number, refer to the following:

**▶** Display for Device Information (page 2-20)

#### Α

Message	Checkpoints	Corrective Actions	Reference Page
Acceptable fold count exceeded.	Is the acceptable number of sheets exceeded?	Select [Continue] to print using Fold per acceptable number of sheets. Select [Cancel] to cancel the job.	_
Acceptable staple count exceeded.*1	Is the acceptable number of sheets exceeded?	Select [Continue] to print without using Staple. Select [Cancel] to cancel the job.	_
Access point was not detected.	_	Check if the access point has been set correctly.	_
Activation error.	_	Failed to activate the application. Contact administrator.	_
	_	Expansion Authentication is disabled. Turn the power switch off and on. If the error exists, contact administrator.	_
Add paper in cassette #.	Is the indicated cassette out of paper?	Load paper. Select the available paper. Select [Continue] to print.	page 3-2
Add paper in multipurpose tray.	Is the paper of the selected size loaded in the multipurpose tray?	Load paper. Select the available paper. Select [Continue] to print.	page 5-5
Adjusting Scanner.	_	The machine is under the adjustment to maintain its quality. Please wait.	_
Adjusting	_	The machine is under the adjustment to maintain its quality. Please wait.	_

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

<sup>→</sup> Auto Error Clear (page 8-68)

В

Message	Checkpoints	Corrective Actions	Reference Page
Box is not found.	_	The specified box cannot be found. Job is canceled. Select [End].	_
Box limit exceeded.*1	Is [End] displayed on the screen?	The specified box is full, and no further storage is available. Job is canceled. Select [ <b>End</b> ]. Try to perform the job again after printing or deleting data from the box.	_
	_	Repeat Copy box is full, and no further repeat copy is available. Select [Continue] to print scanned pages. Select [Cancel] to cancel the job.	_
Broadcast error.	_	An error has occurred during broadcast transmission. The job is canceled. Select [End].	_

<sup>\*1</sup> When Auto Error Clear is set to [On], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

Auto Error Clear (page 8-68)

C

Message	Checkpoints	Corrective Actions	Reference Page
Calibrating	_	The machine is under the adjustment to maintain its quality. Please wait.	
Cannot Banner Print.		System stamp is set up. Banner print cannot be carried out. Job is canceled. Select [End].	_
Cannot connect to Authentication	_	Set machine time to match the server's time.	page 2-31
Server.*1	_	Check the domain name.	page 9-2
	_	Check the host name.	page 9-2
	_	Check the connection status with the server.	_
Cannot connect to Server.	_	Check the connection status with the server.	_
Cannot connect.	_	This appears when the Wi-Fi or Wi-Fi Direct connection did not complete. Check the settings, and check the signal conditions.	page 8-49 page 8-50

Message	Checkpoints	Corrective Actions	Reference Page
Cannot duplex print on this paper.*1	Did you select a paper size/type that cannot be duplex printed?	If the selected paper is not changed and [Continue] is selected, duplex is released. Select the available paper. Select [Continue] to print.	page 6-46
Cannot find the destination computer. Check the computer.	Is the machine and the PC to which the scanned image is to be sent connected to the network?	<ul> <li>Check the network and SMB settings.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> <li>Host name and IP address</li> <li>Port number</li> </ul>	page 2-6
	Is the account information (user ID, password) used to access the shared folder to which the scanned image is to be sent incorrect?	Check the following settings of the PC to which the scanned image is to be sent.  Host name Path Login user name  NOTE If the sender is a domain user, specify the domain name. [Login User ID]@[Domain Name] Example: sa720XXXX@km Login password Folder share permissions of the recipient	
Cannot fold this paper.	Did you select a paper size/type that cannot be folded?	If the selected paper is not changed and [Continue] is selected, fold is released. Select the available paper. Select [Continue] to print.	page 6-24
Cannot offset this paper.*1	Did you select a paper size/type that cannot be offset?	If the selected paper is not changed and [Continue] is selected, offset is released. Select the available paper. Select [Continue] to print.	page 6-25
Cannot perform remote printing.	_	Remote printing is prohibited. The job is canceled. Select [End].	page 8-30
Cannot print the specified number of copies.*1	_	Only one copy is available. Select [Continue] to continue printing. Select [Cancel] to cancel the job.	_

Message	Checkpoints	Corrective Actions	Reference Page
Cannot process this job.*1	_	Restricted by Authorization settings. The job is canceled. Select [End].	_
	_	Restricted by Job Accounting. The job is canceled. Select [End].	page 9-34
Cannot punch at the specified position.	Have you selected a position that cannot be punched?	If the selected paper is not changed and [Continue] is selected, punch is released.	page 6-28
		Select the available paper. Select [Continue] to print.	
Cannot punch this paper.	Did you select a paper size/type that cannot be punched?	If the selected paper is not changed and [Continue] is selected, punch is released.  Select the available paper.	page 6-28
Cannot read data in this ID card.	_	Select [Continue] to print.  In registration process, the ID card information was not read correctly. Hold again the ID card over the ID card reading part.	_
		If the same message still appears, the ID card may not be compatible with this product. Change it to another ID card.	
Cannot recognize.	_	Make sure your ID card has been registered.	_
Cannot staple at the specified position.	Have you selected a position that cannot be stapled?	If the selected paper is not changed and [Continue] is selected, staple is released. Select the available paper. Select [Continue] to print.	page 6-26
Cannot staple this paper.*1	Did you select a paper size/type that cannot be stapled?	If the selected paper is not changed and [Continue] is selected, staple is released.	page 6-26
		Select the available paper. Select [Continue] to print.	
Cannot use ##### due to a failure.	_	Call service.	_
Check the document processor.	Is the top cover of the document processor open?	Close the document processor cover.	_
	Is the document processor open?	Close the document processor.	_
Check the main unit right tray.	Is the main unit right tray closed?	Open the main unit right tray.	page 3-14
	Is the acceptable storage capacity exceeded?	Remove the paper. Printing then resumes.	_

Message	Checkpoints	Corrective Actions	Reference Page
Check the paper in the multipurpose tray.	_	The paper size is different. Set selected size paper and select [Continue].	<u>page 5-5</u>
Check the side feeder.		The side feeder is not installed correctly. Attach the side feeder.	_
Confidential document was detected.	_	The machine detects the document guard pattern. Job is canceled. Select [ <b>End</b> ].	

<sup>\*1</sup> When Auto Error Clear is set to [On], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

Auto Error Clear (page 8-68)

Ε

Message	Checkpoints	Corrective Actions	Reference Page
Empty the punch waste box.	Is the punch waste box full?	Follow the instructions on the screen. and empty the punch waste box.	page 10-13
Error occurred at cassette #.	_	Open the cassette. Check inside the machine and remove the paper.	_

F

Message	Checkpoints	Corrective Actions	Reference Page
Failed to specify Job Accounting.*1	_	Failed to specify Job Accounting when processing the job externally. The job is canceled. Select [End].	_
Failed to store job retention data.	_	The job is canceled. Select [End].	_
FAX box limit exceeded.	_	Follow the instructions on the screen and delete documents from the FAX box to make room for FAX reception.	FAX Operation Guide
		To check the canceled job, select the [Status/Job Cancel] key and then [Printing Jobs] to check receipt result.	
Folding tray is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper. Printing then resumes.	_

<sup>\*1</sup> When Auto Error Clear is set to [On], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

<sup>→</sup> Auto Error Clear (page 8-68)

#### Н

Message	Checkpoints	Corrective Actions	Reference Page
Hard Disk error.	_	An error has occurred on the hard disk. Job is canceled. Select [End].	_
		The error cords are as follows.	
		01: The amount of data that can be saved at once has been exceeded. Restart the system or turn the power OFF/ON. If the error still occurs, divide the file into smaller files.	
		If the error occurs after the file is divided, the hard disk is damaged. Execute [System Initialization].	
		04: Insufficient space on the hard disk to complete this operation. Move data or delete unneeded data.	
Hard disk failure. Call service.	_	Call service.	_

I

Message	Checkpoints	Corrective Actions	Reference Page
Incorrect account ID.*1	_	The account ID was incorrect when processing the job externally. The job is canceled. Select [End].	_
Incorrect box password.	_	The box password was incorrect when processing the job externally. The job is canceled. Select [End].	_
Incorrect Login User Name or Password.*1	_	The login user name or password was incorrect when processing the job externally. The job is canceled. Select [End].	_
Install the punch waste box.		Follow the instructions on the screen. and install the punch waste box.	page 10-13
Install the waste toner box.	_	The waste toner box is not installed correctly. Set it correctly.	page 10-7

<sup>\*1</sup> When Auto Error Clear is set to **[On]**, processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

<sup>→</sup> Auto Error Clear (page 8-68)

J

Message	Checkpoints	Corrective Actions	Reference Page
Job Accounting restriction exceeded.*1	Is the acceptable printing count restricted by Job Accounting exceeded?	The printing count exceeded the acceptable count restricted by Job Accounting. Cannot print any more. The job is canceled. Select [End].	

<sup>\*1</sup> When Auto Error Clear is set to [On], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

Auto Error Clear (page 8-68)

K

Message	Checkpoints	Corrective Actions	Reference Page
KPDL error. *1	_	PostScript error has occurred. The job is canceled. Select [End].	_

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

M

Message	Checkpoints	Corrective Actions	Reference Page
Machine failure.		Internal error has occurred.  Make a note of the error code displayed on the screen. Call service.	
Mailbox tray is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper. Printing then resumes.	_
Main unit lower left tray is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper and select [Continue]. Printing then resumes.	_
Main unit upper left tray is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper and select [Continue]. Printing then resumes.	_
Maximum number of scanned pages.	Is the acceptable scanning count exceeded?	Cannot scan pages any more. Follow the instructions on the screen.	_

<sup>→</sup> Auto Error Clear (page 8-68)

Message	Checkpoints	Corrective Actions	Reference Page
Memory is full.*1	_	The memory is full and the job cannot be continued. Select [Continue] to print the scanned pages. The print job cannot be processed completely. Select [Cancel] to cancel the job.	
		The process cannot be performed due to insufficient memory. If only [End] is available, select [End]. The job will be canceled.  When insufficient memory occurred frequently, contact your dealer or service representative.	

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

<u>▶ Auto Error Clear (page 8-68)</u>

N

Message	Checkpoints	Corrective Actions	Reference Page
Non-genuine toner installed.	Is the installed toner container our own brand?	We will not be liable for any damage caused by the use of third party supplies in this machine.	_

Ρ

Message	Checkpoints	Corrective Actions	Reference Page
Paper jam.	_	If a paper jam occurs, the machine will stop and the location of the jam will be indicated on the screen. Leave the machine on and follow the instructions to remove the jammed paper.	page 10-43
Paper left.	_	Remove paper from the document finisher.	_
Perform Tone Curve Adjustment in the System Menu.	Over long periods of use, the effects of the ambient temperature and humidity can cause output hues to vary slightly.	Run [Tone Curve Adjustment].	page 10-39

Message	Checkpoints	Corrective Actions	Reference Page
Performing Drum Refresh	_	The machine is under the adjustment to maintain its quality. Please wait.	
Preparing to print.	_	The machine is under the adjustment to maintain its quality. Please wait.	_

R

Message	Checkpoints	Corrective Actions	Reference Page
Regulating the temperature	_	The machine is under the adjustment to maintain its quality. Please wait.	_
Removable memory error.*1	Is writing to a removable memory prohibited?	An error occurred in the removable memory. The job stopped. Select [End]. The error cord is as follows. 01: Connect a removable memory that can be written to.	
		An error occurred in the removable memory. The job stopped. Select [End]. The error cord is as follows. 01: The amount of data that can	page 5-64
		be saved at once has been exceeded. Restart the system or turn the power OFF/ON. If the error still occurs, the removable memory is not compatible with the machine. Use the removable memory formatted by this machine. If the removable memory cannot be formatted, it is damaged. Connect a compatible removable memory.	
Removable Memory is full.*1		The job is canceled. Select [End]. Insufficient free space in the removable memory. Delete unneeded files.	_
Remove originals in the document processor.	Are there any originals left in the document processor?	Remove originals from the document processor.	_

Message	Checkpoints	Corrective Actions	Reference Page
Replace all originals and press [Continue].	_	Remove originals from the document processor, put them back in their original order, and place them again. Select [Continue] to resume printing. Select [Cancel] to cancel the job.	
Running security function	_	Running security function. Please wait.	_

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

<u>▶ Auto Error Clear (page 8-68)</u>

S

Message	Checkpoints	Corrective Actions	Reference Page
Scanner memory is full.*1	_	Scanning cannot be performed due to insufficient memory of the scanner. Follow the instructions on the screen.	_
Scheduled sending jobs exceeded.		The number of jobs has exceeded the limit set for delayed transmission. Select [End]. The job is canceled. Wait until the delayed transmission is executed, or cancel the delayed transmission and then perform the job again.	
Send error.*1		An error has occurred during transmission. The job is canceled. Select [ <b>End</b> ]. Refer to Responding to Send Error for the error code and corrective actions.	page 10-35
Skewed originals or multi originals fed at once.	_	See the caution attached on the document processor and check the originals. If the originals are jammed, follow the instructions on the screen to remove the originals.	_
Staple is empty. *1	Has the staple cartridge holder run out of staples?	If the staples are depleted, the machine will stop and the location of staple depletion will be indicated on the screen. Leave the machine on and follow the instructions to replace the staple case. Select [Continue] to print without stapling. Select [Cancel] to cancel the job.	page 10-10 page 10-11

Message Checkpoints		Corrective Actions	Reference Page
Staple is empty. (Manual Staple)			page 10-10
Staple jam.	_	If a staple jam occurs, the machine will stop and the location of the jam will be indicated on the screen. Leave the machine on and follow the instructions to remove the jammed staple.	page 10- 100
System error.	_	System error has occurred. Follow the instructions on the screen.	_

<sup>\*1</sup> When Auto Error Clear is set to [**On**], processing resumes automatically after a set amount of time elapses. For details on Auto Error Clear, refer to the following:

<u>▶ Auto Error Clear (page 8-68)</u>

Т

Message	Checkpoints	Corrective Actions	Reference Page
The cover is open.	Is there any cover which is open?	Close the cover indicated on the screen.	_
The device cannot be connected because allowed connections would be exceeded.	Are three handheld devices connected simultaneously?	Cancel a connection to a portable device that is not being used, or set the machine's auto disconnect time to break portable device connections.	page 8-49
The folding unit is open.	_	Close the folding unit.	_
The password does not meet password policy.	Is the password expired?	Change the login password. The job is canceled. Select [End].	page 9-7 page 9-8
	Is the password policy requirement (such as password length or required characters) changed?	Confirm the password policy requirements and change the login password.  The job is canceled. Select [End].	page 9-7 page 9-8
The phone receiver is — off the hook.		Put down the receiver.	_
The removable memory is not formatted.  Is the removable memory formatted by this machine?		Perform [Format] on this machine.	_
The slit glass requires — cleaning.		Clean the slit glass using the cleaning cloth supplied with the document processor.	page 10-3
This ID card is already registered to another user.		Your ID card has already been registered. Change it to another ID card.	_

Message Checkpoints		Corrective Actions	Reference Page
This user account is	_	Contact administrator.	_
locked out.		The job is canceled. Select [End].	
Time for maintenance soon. #####			_
Toner is empty.	_	Replace the toner container.	page 10-4
Toner container is empty.	_	Replace the toner container.	page 10-4
Toner is low. (Replace when empty.)	_	It is almost time to replace the toner container. Obtain a new toner container.	_
Tray # is full of paper.	Is the acceptable storage capacity exceeded?	Remove the paper. Printing then resumes.	_
	Is the paper curled?	Check the checkpoints of "Printouts are curled." in Solving Malfunctions and take the corrective actions.	page 10-16

U

Message	Checkpoints	Corrective Actions	Reference Page
Unknown Toner Installed. PC	Does the installed toner container's regional specification match the machine's?	Install the specified container.	_

W

Message	Checkpoints	Corrective Actions	Reference Page
Warning for high temperature. Adjust the room temperature.	emperature. Adjust		_
Warning for low temperature. Adjust the room temperature.		Print quality may be deteriorated. Adjust the temperature and the humidity of your room.	_
Warning low memory. —		Cannot start the job. Try again later.	_
Waste toner box almost full.	_	It is almost time to replace the waste toner box. Obtain a new waste toner box.	_
Waste toner box is full.	Is the waste toner box full?	Replace the waste toner box.	page 10-7

Υ

Message	Checkpoints	Corrective Actions	Reference Page
You cannot use this box.	_	You cannot use the specified box. Job is canceled. Select [End].	_

## Responding to Send Error

Error Code	Message	Corrective Actions	Reference Page
1101	Failed to send the e-mail. Failed to send i-FAX.	Check the host name of the SMTP server on the Command Center RX.	page 2-67
	Failed to send via FTP.	Check the host name of FTP.	page 5-26
	Failed to send via SMB.	Check the host name of SMB.	page 5-23
1102	Failed to send via SMB.	Check the SMB settings.  Login user name and login password  NOTE  If the sender is a domain user, specify the domain name.  Host name Path	page 5-23
	Failed to send the e-mail.	Check the following on the Command Center RX.  SMTP login user name and login password POP3 login user name and login password  E-mail size limit	page 2-67
	Failed to send i-FAX.	Check the following on the Command Center RX.  SMTP login user name and login password POP3 login user name and login password	Refer to FAX Operation Guide
	Failed to send via FTP.	<ul> <li>Check the FTP settings.</li> <li>Login user name and login password</li> <li>NOTE</li> <li>If the sender is a domain user, specify the domain name.</li> <li>Path</li> <li>Folder share permissions of the recipient</li> </ul>	page 5-26

Error Code	Message	Corrective Actions	Reference Page
1103	Failed to send via SMB.	Check the SMB settings.  Login user name and login password  NOTE  If the sender is a domain user, specify the domain name.  Path  Folder share permissions of the recipient	page 5-23
	Failed to send via FTP.	Check the FTP settings.  Path Folder share permissions of the recipient	page 5-26
1104	Failed to send the e-mail.	Check the e-mail address.  NOTE  If the address is rejected by the domain, you cannot send the email.	page 5-22
	Failed to send i-FAX.	Check the i-FAX address.  NOTE  If the address is rejected by the domain, you cannot send the email.	Refer to FAX Operation Guide
1105	Failed to send via SMB.	Check the following settings.  [System Menu/Counter] key > [System/ Network] > [Network] > [TCP/IP Settings] >  [Protocol Detail] > [SMB Client (Transmission)]	page 8-47
	Failed to send the e-mail.	Select [ <b>On</b> ] of the SMTP settings on the Command Center RX.	page 2-67
	Failed to send via FTP.	Check the following settings.  [System Menu/Counter] key > [System/ Network] > [Network] > [TCP/IP Settings] >  [Protocol Detail] > [FTP Client (Transmission)]	page 8-47
	Failed to send i-FAX.	Select [On] of the i-FAX settings on the Command Center RX.	page 2-67
1106	Failed to send the e-mail. Failed to send i-FAX.	Check the sender address of SMTP on the Command Center RX.	page 2-67
1131	Failed to send via FTP.	Enable the SSL.  [System Menu/Counter] key > [System/ Network] > [Network] > [Secure Protocol] >  [SSL]	page 8-58

Error Code	Message	Corrective Actions	Reference Page
1132	Failed to send the e-mail.	Check the following of the SMTP server.  Is SMTP over SSL available?  Is the encryption available?	Refer to the Command Center RX User Guide.
	Failed to send via FTP.	Check the following of the FTP server.  Is FTPS available?  Is the encryption available?	_
2101	Failed to send via SMB.	<ul> <li>Check the network and SMB settings.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> <li>Host name and IP address</li> <li>Port number</li> </ul>	_
	Failed to send via FTP.	<ul> <li>Check the network and FTP settings.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> <li>Host name and IP address</li> <li>Port number</li> </ul>	_
	Failed to send the e-mail. Failed to send i-FAX.	<ul> <li>Check the network and Command Center RX.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> <li>POP3 server name of the POP3 user</li> <li>SMTP server name</li> </ul>	page 2-67
2102 2103	Failed to send via FTP.	<ul> <li>Check the network.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> </ul> Check the following of the FTP server.	_
		<ul><li>Is FTP available?</li><li>The server is not operating properly.</li></ul>	
	Failed to send the e-mail. Failed to send i-FAX.	<ul> <li>Check the network.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> </ul>	_
2201 2202 2203 2231	Failed to send the e-mail. Failed to send via FTP. Failed to send via SMB. Failed to send i-FAX.	<ul> <li>Check the network.</li> <li>The network cable is connected.</li> <li>The hub is not operating properly.</li> <li>The server is not operating properly.</li> </ul>	_
2204	Failed to send the e-mail. Failed to send i-FAX.	Check the e-mail size limit of the SMTP settings on the Command Center RX.	page 2-67

Error Code	Message	Corrective Actions	Reference Page
3101	Failed to send the e-mail.	Check the authentication methods of both the sender and the recipient.	_
	Failed to send via FTP.	<ul><li>Check the network.</li><li>The network cable is connected.</li><li>The hub is not operating properly.</li><li>The server is not operating properly.</li></ul>	_
3201	Failed to send the e-mail. Failed to send i-FAX.	Check the SMTP user authentication method of the recipient.	_
0007 4201 4701 5101 5102 5103 5104 7101 7102 7103 720f	_	Turn the power switch off and back on. If this error occurs several times, make a note of the displayed error code and contact your service representative.	page 2-11
9181	_	The scanned original exceeds the acceptable number of pages of 999. Send the excess pages separately.	_

# **Adjustment/Maintenance**

### **Overview of Adjustment/Maintenance**

If there is an image problem and the message to run adjustment or maintenance menu appears, run Adjustment/Maintenance in the system menu.

The table below lists the item you can carry out.

Item	Description	Reference Page
Tone Curve Adjustment	When the printed output tone may differ from the original, perform this function to ensure consistency with the original tone.	page 10-39
Drum Refresh 1	Remove image blur from the printout.	page 10-41
Drum Refresh 2	Remove white spots from the printout.	page 10-41
Calibration	Calibrate the device to ensure consistency with the original tone.	page 10-42
Developer Refresh	Adjust the printed image that is too light or incomplete, even though there is enough toner.	page 10-42


# **Tone Curve Adjustment**

After prolonged use, or from the effects of surrounding temperature or humidity, the printed output tone may differ from the original. Perform this function to ensure consistency with the original tone. Before executing Tone Curve Adjustment, execute calibration. If calibration does not improve the tones, perform Tone Curve Adjustment.

#### → Calibration (page 10-42)

A total of 2 pattern pages (No. 1 and 2) are printed during adjustment. The printed patterns are read sequentially during the adjustment.

#### Load paper.

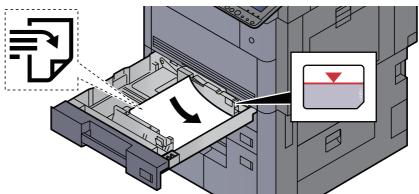

#### *⋈ W W*


- Load the paper with the print side facing up.
- After removing new paper from its packaging, fan the paper before loading it in the cassette.
  - → Loading in the Cassettes (page 3-4)
- Before loading the paper, be sure that it is not curled or folded. Paper that is curled or folded may cause paper jams.
- Ensure that the loaded paper does not exceed the level indicator (see illustration above).
- If paper is loaded without adjusting the paper length guide and paper width guide, the paper may skew or become jammed.

#### Display the screen.

[System Menu/Counter] key > [Adjustment/Maintenance] > "Tone Curve Adjustment" [Next]

#### Adjust the tone curve.

- Select [Start]. A pattern is printed.
  Check that the number "1" is printed at the bottom of the pattern.
- 2 As shown in the illustration, place the printed side down on the platen with the edge with the arrows toward the back.

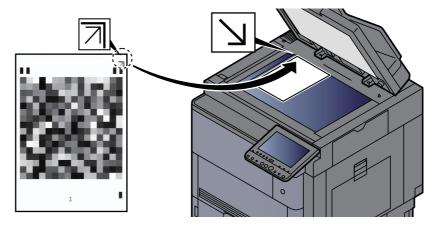

- 3 Select [Start]. The pattern is read and adjustment begins. The second pattern is output.
- 4 Check that the number "2" is printed at the bottom of the pattern and repeat steps 2 to 3 to read pattern 2.
- 5 Select [**OK**] in the adjustment end confirmation screen.

#### **Drum Refresh 1**

Remove image blur from the printout.

**№** NOTE

Drum Refresh 1 cannot be performed while printing. Execute Drum Refresh 1 after the printing is done.

#### Display the screen.

[System Menu/Counter] key > [Adjustment/Maintenance] > "Drum Refresh 1" [Next]

#### Perform the drum refresh.

Select [Start]. "Drum Refresh 1" begins.

#### **Drum Refresh 2**


Remove white dots from the printout.



Drum Refresh 2 cannot be performed while printing. Execute Drum Refresh 2 after the printing is done.

#### Load paper.

Load Ledger or A3 size paper into the Multipurpose tray.

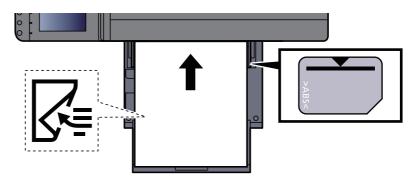

#### Display the screen.

[System Menu/Counter] key > [Adjustment/Maintenance] > "Drum Refresh 2" [Next]

#### Perform the drum refresh.

Select [Start]. "Drum Refresh 2" begins.



**◯** NOTE

When you run [Drum Refresh 2], the machine makes a vibrating sound for about 45 seconds until drum refreshing is completed. The toner soiling on the ejected paper is normal and does not indicate a fault.

#### **Calibration**

Calibrate the device to ensure consistency with the original tone.

#### Display the screen.

[System Menu/Counter] key > [Adjustment/Maintenance] > "Calibration" [Next]

#### Perform the calibration.

Select [Start]. "Calibration" begins.

NOTE

When consistency with the original tone is not ensured even after performing calibration, refer to the following:

→ Tone Curve Adjustment (page 10-39)

### **Developer Refresh**

Adjust the printed image that is too light or incomplete, even though there is enough toner.

#### Display the screen.

[System Menu/Counter] key > [Adjustment/Maintenance] > "Developer Refresh" [Next]

#### Perform the Developer Refresh.

Select [Start]. "Developer Refresh" begins.

NOTE

Waiting time may be longer when the toner is refilled during developer refresh.


# **Clearing Paper Jams**

If a paper jam occurs, printing stops and the location at which the paper jam has occurred and the following message appear on the touch panel.

"Paper Jam."


Refer to these procedures to remove the jammed paper.

### **Jam Location Indicators**

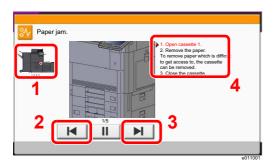

- 1 Shows the location of a paper jam.
- 2 Shows the previous step.
- 3 Shows the next step.
- 4 Shows the removal procedure.

If a paper jam occurs, the location of the jam will be displayed on the touch panel as well as the clearing instructions.

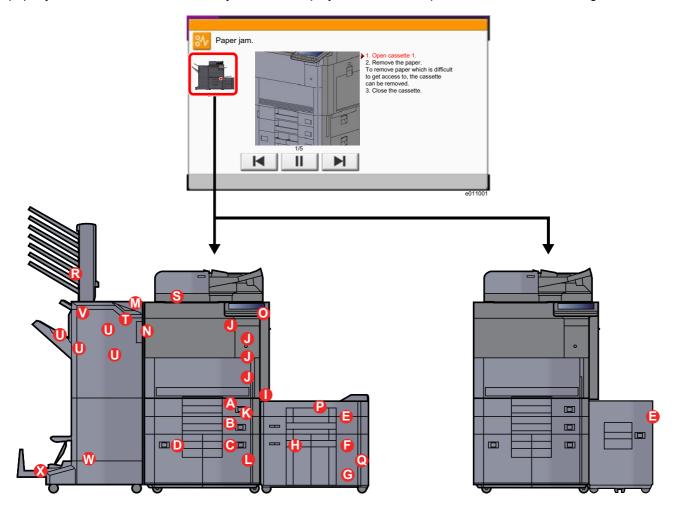

Paper Jam Location Indicator	Paper Jam Location	Reference Page
Α	Cassette 1	page 10-45
В	Cassette 2	page 10-46
С	Cassette 3	page 10-48
D	Cassette 4	page 10-49
E	Cassette 5 (Side Feeder (3,000-sheet))	page 10-52
	Cassette 5 (Side Feeder (500-sheet×3) / Large Capacity Side Feeder (500, 1,500-sheet×2))	page 10-54
F	Cassette 6 (Side Feeder (500-sheet×3))	page 10-57
	Cassette 6 (Large Capacity Side Feeder (500, 1,500-sheet×2))	page 10-59
G	Cassette 7 (Side Feeder (500-sheet×3))	page 10-57
Н	Cassette 7 (Large Capacity Side Feeder (500, 1,500-sheet×2))	page 10-62
I	Multipurpose Tray	page 10-65
J	Right Cover 1	page 10-66
К	Right Cover 3	page 10-70
L	Right Cover 4	page 10-71
M	Upper Left Tray / 4,000-Sheet Finisher (Tray C)	page 10-73
N	Lower Left Tray	page 10-74
0	Right Tray	page 10-75
Р	Top Cover, Right Cover 1 (Side Feeder (500-sheet×3) / Large Capacity Side Feeder (500, 1,500-sheet×2))	page 10-76
Q	Right Cover 2 (Side Feeder (500-sheet×3) / Large Capacity Side Feeder (500, 1,500-sheet×2))	page 10-78
R	Mailbox	page 10-80
s	Document Processor	page 10-81
Т	4,000-Sheet Finisher (Inner)	page 10-82
U	4,000-Sheet Finisher (Tray A)	page 10-84
V	4,000-Sheet Finisher (Tray B)	page 10-87
W	Folding Unit	page 10-90
Х	Folding Tray	page 10-95


After you remove the jam, the machine will warm up again and the error message will be cleared. The machine resumes with the page that was printing when the jam occurred.

# Remove any jammed paper in Cassette 1


# **A**CAUTION


- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.

#### Pull Cassette 1 out toward you until it stops.

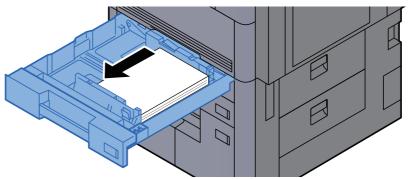


#### Remove any jammed paper.

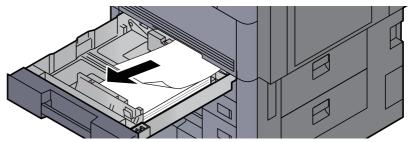

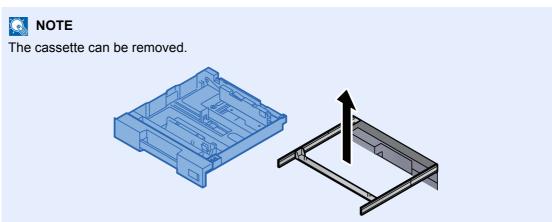


### 3 Push Cassette 1 back in.

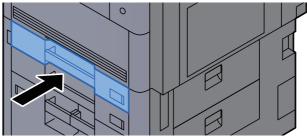


## Remove any jammed paper in Cassette 2

# **A**CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - 1 If the optional side feeder is installed, detach the side feeder.

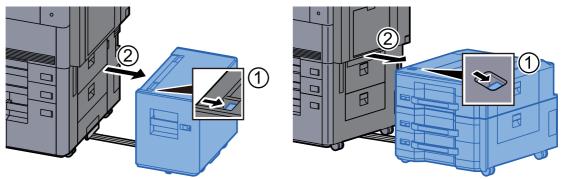


Open Right Cover 3.

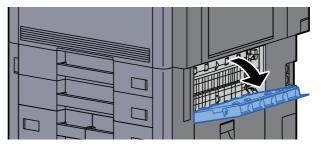



Remove any jammed paper.




Pull Cassette 2 out toward you until it stops.

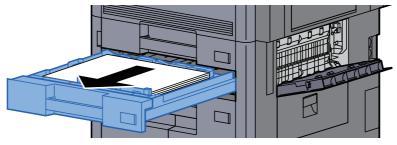

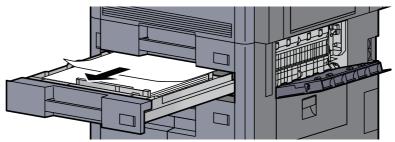


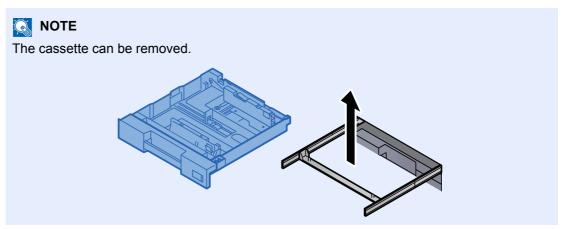


6 Push Right Cover 3 and Cassette 2 back in.

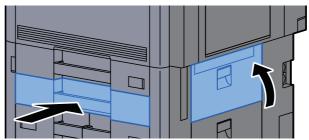

7 If the optional side feeder is installed, return the side feeder to the original position.

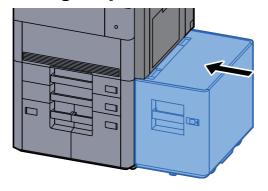


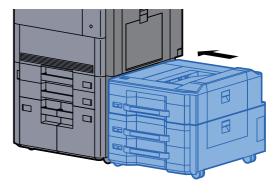


## Remove any jammed paper in Cassette 3

# **A**CAUTION


- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - 1 If the optional side feeder is installed, detach the side feeder.

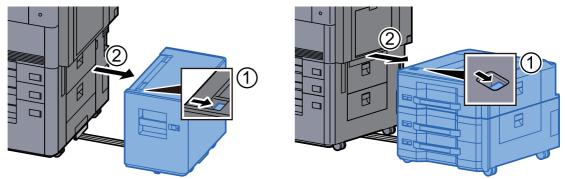


Open Right Cover 4.

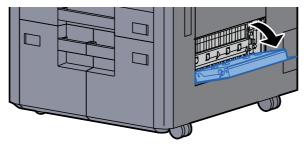


3 Remove any jammed paper.

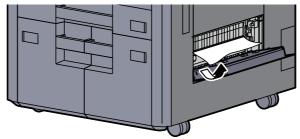


Pull Cassette 3 out toward you until it stops.

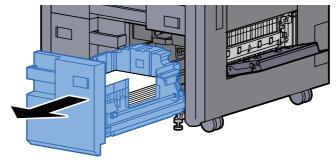


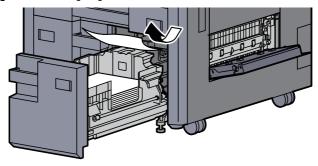


Push Right Cover 4 and Cassette 3 back in.

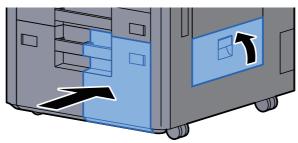

7 If the optional side feeder is installed, return the side feeder to the original position.

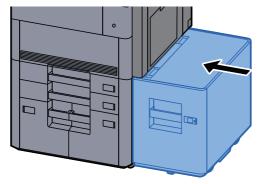


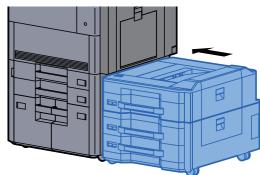

## Remove any jammed paper in Cassette 4



- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - 1 If the optional side feeder is installed, detach the side feeder.

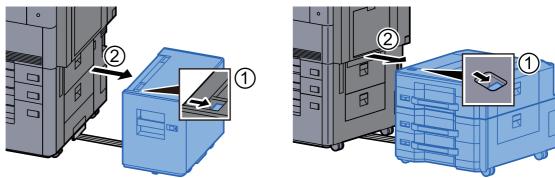


Open Right Cover 4.




Remove any jammed paper.




Pull Cassette 3 out toward you until it stops.

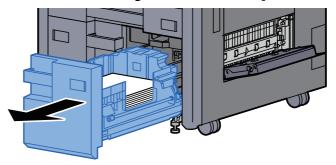


5 Pull Cassette 4 out toward you until it stops.

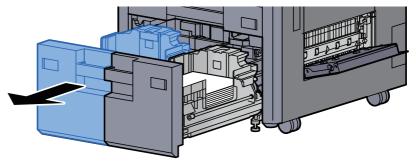


6 Pull out paper feed unit (B1).

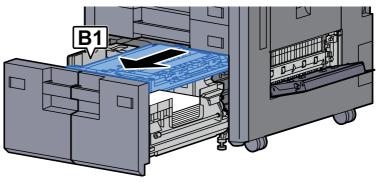


Open cover (B2).

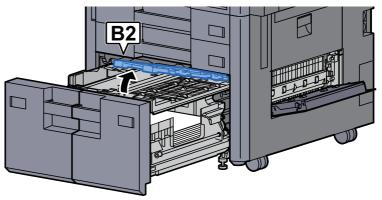


Remove any jammed paper.

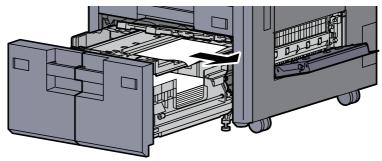


O Push the paper feed unit, Cassette 3 and Cassette 4 back in.

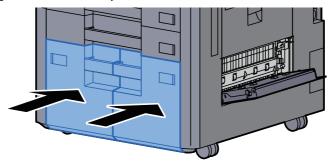


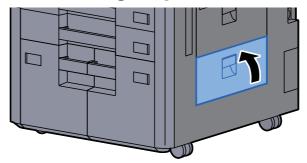

# 11 If the optional side feeder is installed, return the side feeder to the original position.

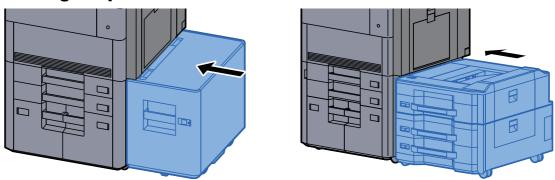


# Remove any jammed paper in Cassette 5 (Side Feeder (3,000-sheet))

 


- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


#### Detach the side feeder.

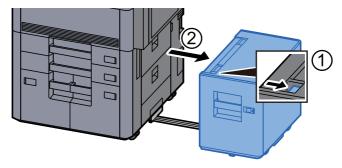


#### 2 Remove any jammed paper.

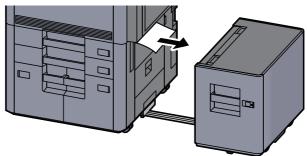


Pull Cassette 5 out toward you until it stops.

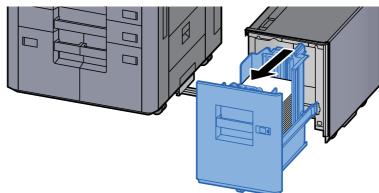


Remove any jammed paper.

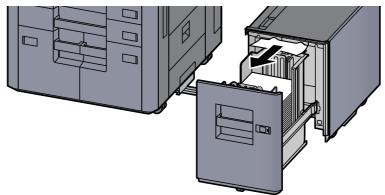

5 Return Cassette 5 and the side feeder to the original position.

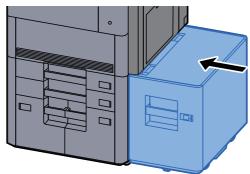


# Remove any jammed paper in Cassette 5 (Side Feeder (500-sheet×3) / Large Capacity Side Feeder (500, 1,500-sheet×2))

 


- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


#### Detach the side feeder.

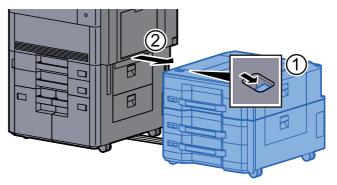


7 Remove any jammed paper.

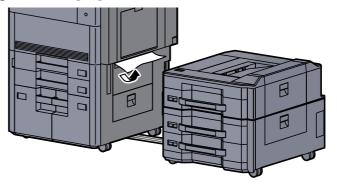


Open the side feeder top cover and the side feeder right cover 1.

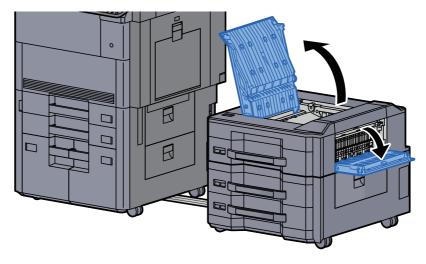


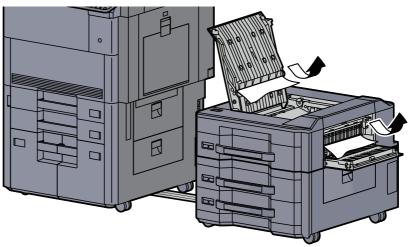


Pull Cassette 5 out toward you until it stops.

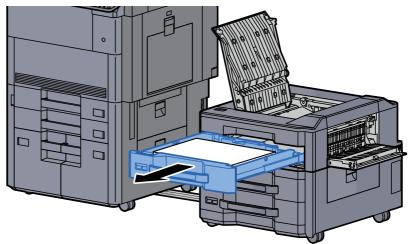


6 Remove any jammed paper.

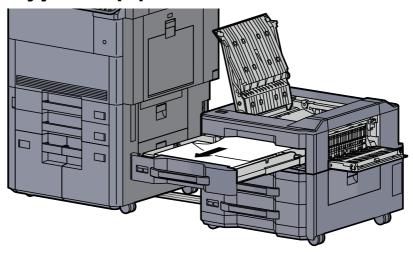


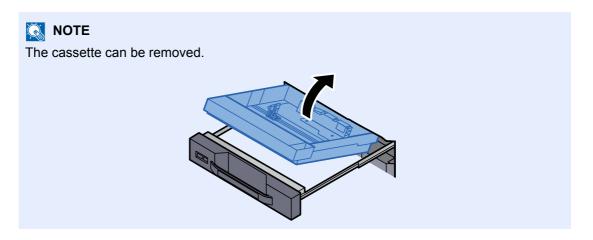

7 Return Cassette 5 and the covers to the original position.

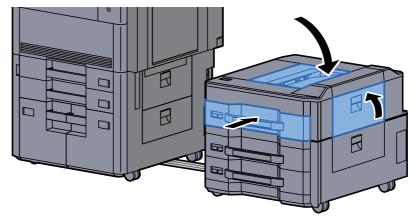


**Return the side feeder to the original position.** 

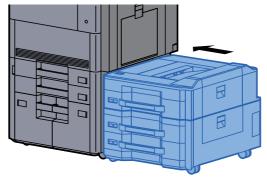


# Remove any jammed paper in Cassette 6, 7 (Side Feeder (500-sheet×3))

 See the explanation for Cassette 6 below.




- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


#### Detach the side feeder.

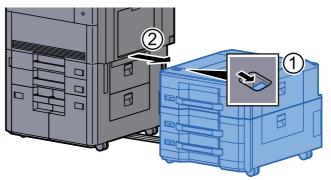


Remove any jammed paper.

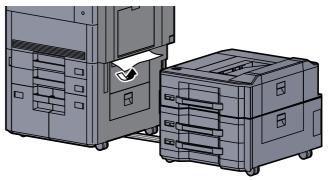


3 Open the side feeder right cover 2.

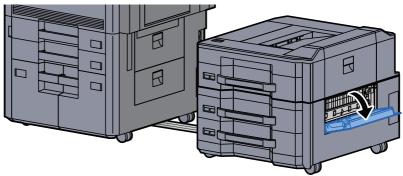


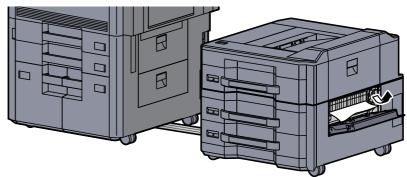


5 Pull Cassette 6 out toward you until it stops.

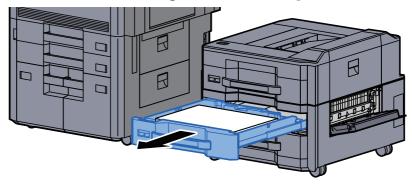


**6** Remove any jammed paper.

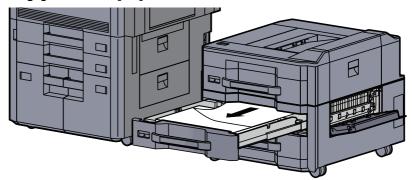


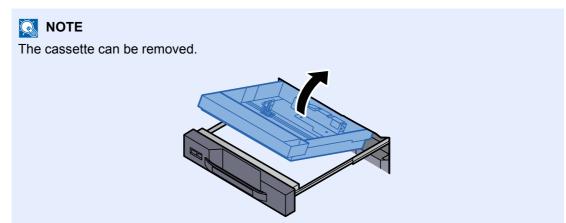


7 Return Cassette 6 and the cover to the original position.

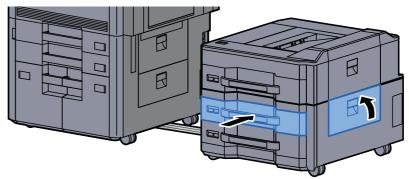

Return the side feeder to the original position.

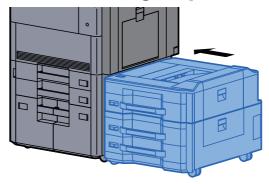



# Remove any jammed paper in Cassette 6 (Large Capacity Side Feeder (500, 1,500-sheet×2))

 


- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.

#### Detach the side feeder.

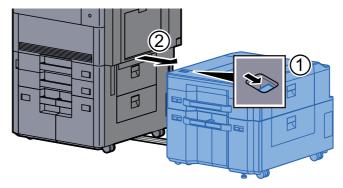


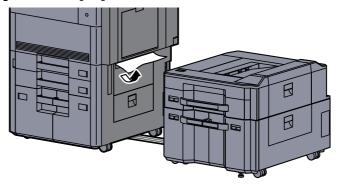


Open the side feeder right cover 2.

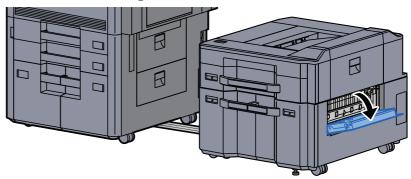


Remove any jammed paper.

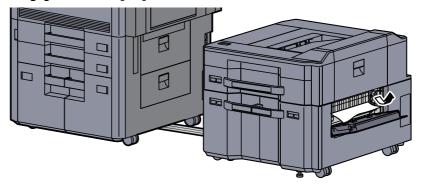


5 Pull Cassette 6 out toward you until it stops.

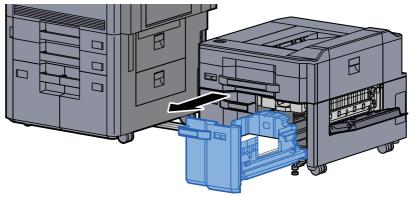


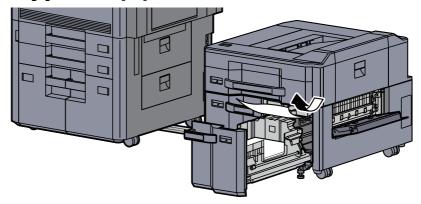

7 Return Cassette 6 and the cover to the original position.

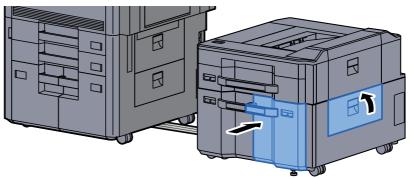

**8** Return the side feeder to the original position.

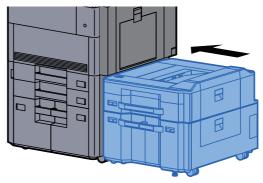


# Remove any jammed paper in Cassette 7 (Large Capacity Side Feeder (500, 1,500-sheet×2))

# **A**CAUTION

- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


#### Detach the side feeder.

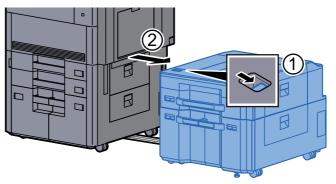


Remove any jammed paper.




Open the side feeder right cover 2.

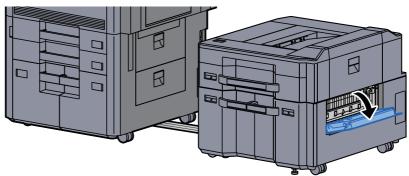


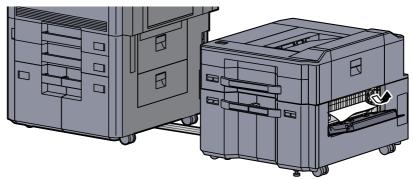


Pull Cassette 6 out toward you until it stops.

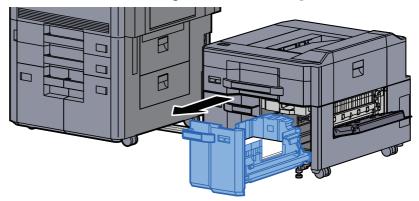


6 Pull Cassette 7 out toward you until it stops.

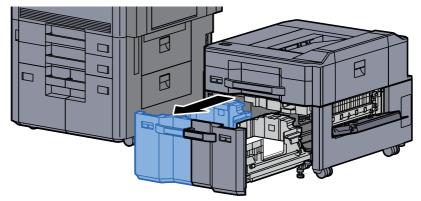


Pull out side feeder paper feed unit (B1).

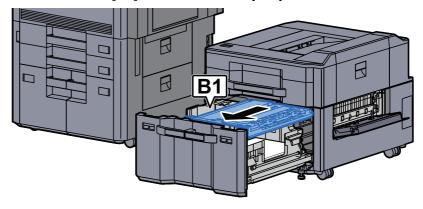


Open cover (B2).

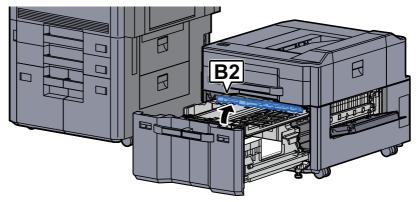


Remove any jammed paper.

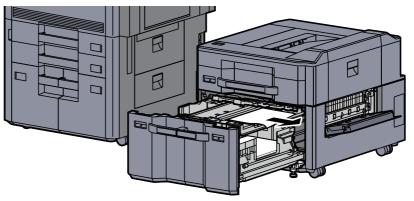


1 0 Push the paper feed unit, Cassette 6 and Cassette 7 back in.

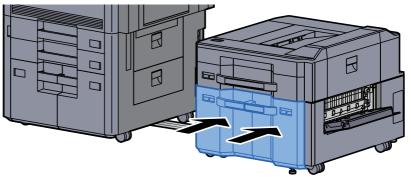


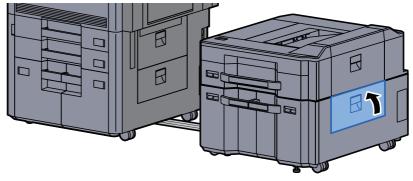

#### 12 Return the side feeder to the original position.

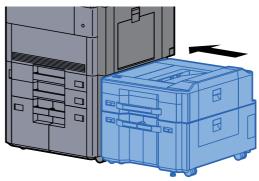


## Remove any jammed paper in the Multipurpose Tray

 


- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


#### Remove any jammed paper.

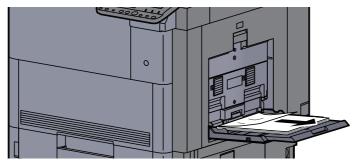


Remove all the paper.

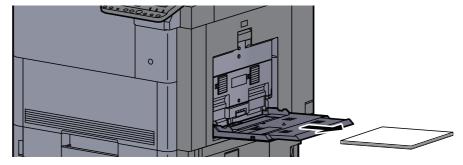

3 Reload the paper.

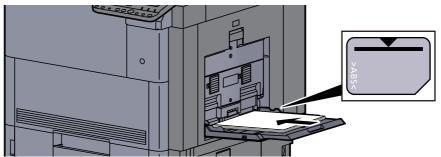


# Remove any jammed paper in Right Cover 1

 

The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.


#### Open Right Cover 1.

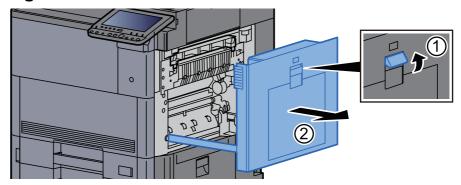


**NOTE** 


Remove the paper from the multipurpose tray.

#### Remove any jammed paper.

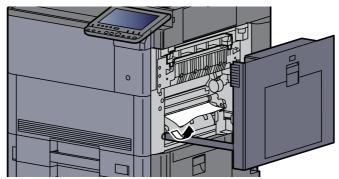


#### 3 Open the fuser cover (A1).

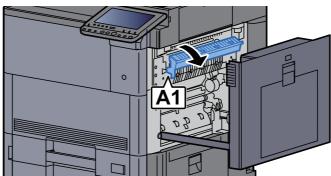


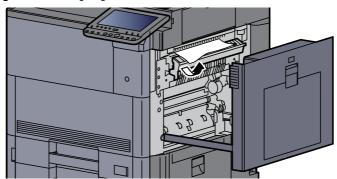


5 Return the fuser cover to the original position.

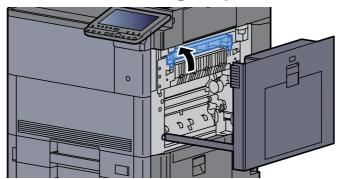


**6** Open the multipurpose tray and Right Cover 2.

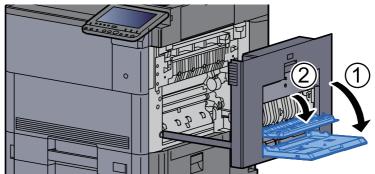


**7** Remove any jammed paper.

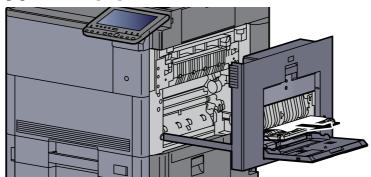


R Tilt the operation panel upwards and open the front cover.

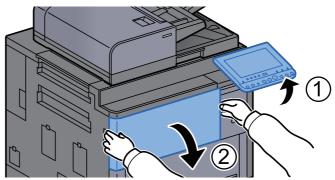

9 Pull out the bridge unit.

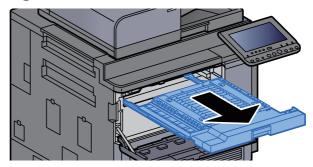

10 Open the bridge unit cover.

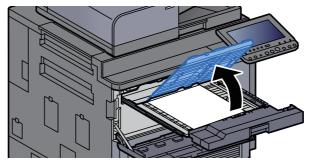



11 Remove any jammed paper.



## 12 Return the bridge unit to the original position.



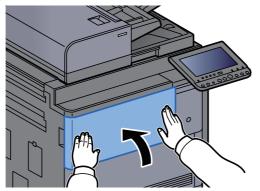


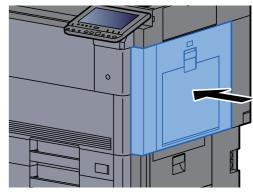


## Remove any jammed paper in Right Cover 3

# **A**CAUTION

- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - 1 If the optional side feeder is installed, detach the side feeder.

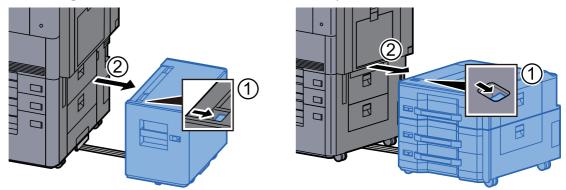


Open Right Cover 3.

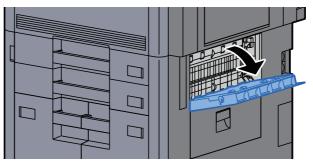


Remove any jammed paper.



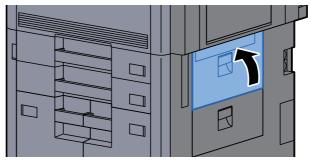


If the optional side feeder is installed, return the side feeder to the original position.

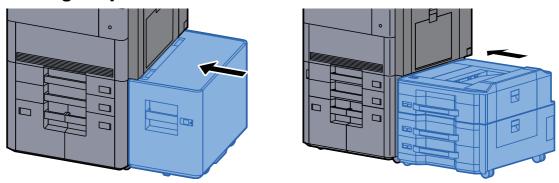


## Remove any jammed paper in Right Cover 4




- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - 1 If the optional side feeder is installed, detach the side feeder.

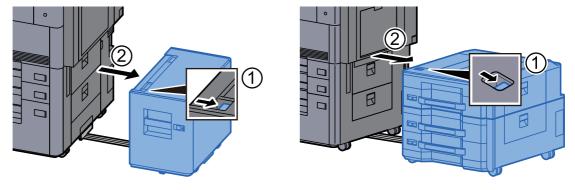


Open Right Cover 4.

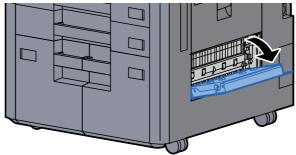


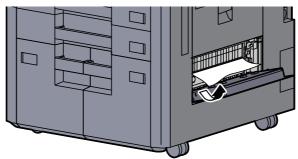


Return the cover to the original position.

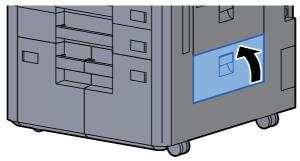

If the optional side feeder is installed, return the side feeder to the original position.

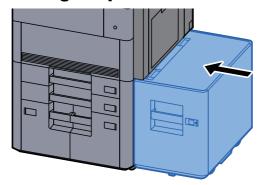


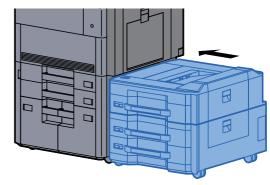


# Remove any jammed paper in the Upper Left Tray / 4,000-sheet Finisher (Tray C)


# **A**CAUTION

- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - Open the upper left cover.

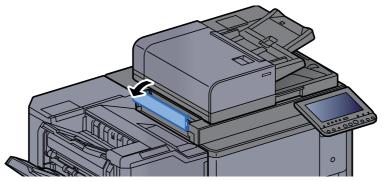

Remove any jammed paper.

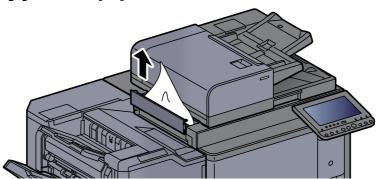


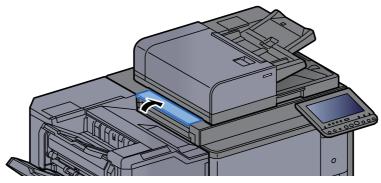


# Remove any jammed paper in the Lower Left Tray


# **A**CAUTION

- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - Remove any jammed paper.

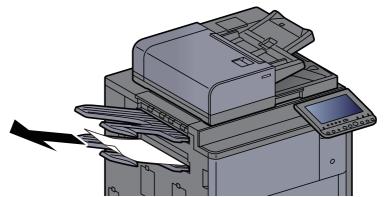

Open Right Cover 1.

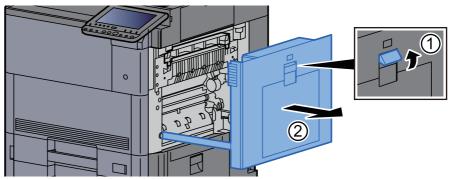


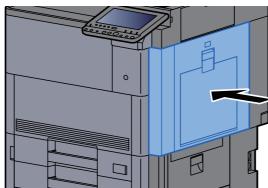


# Remove any jammed paper in the Right Tray


# **A**CAUTION

- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - Remove any jammed paper.

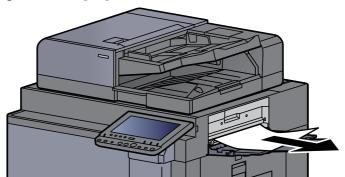


Open Right Cover 1.

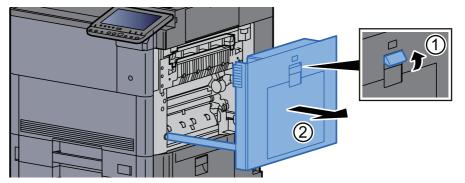

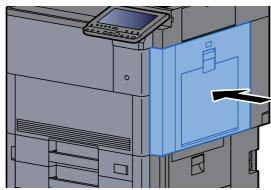


# Remove any jammed paper in the Top Cover, Right Cover 1 (Side Feeder (500-sheet×3) / Large Capacity Side Feeder (500, 1,500-sheet×2))

 
See the explanation for Side Feeder (500-sheet×3) below.




- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - Detach the side feeder.

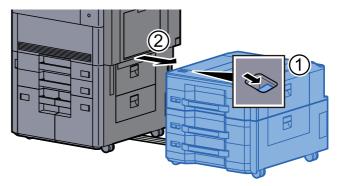


Remove any jammed paper.

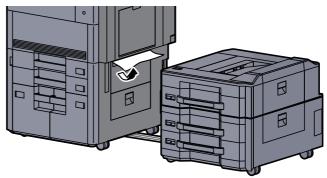


Open the side feeder top cover and the side feeder right cover 1.

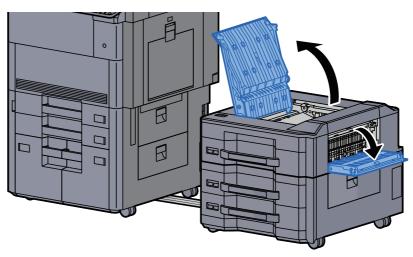


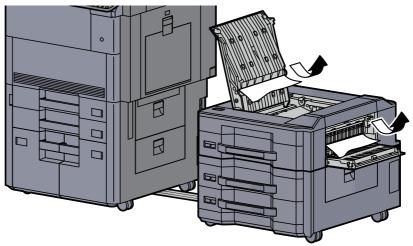

5 Return the covers to the original position.

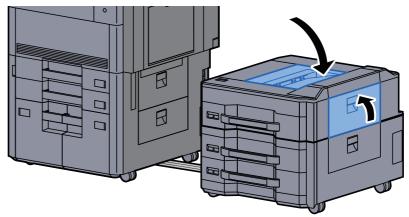


6 Return the side feeder to the original position.

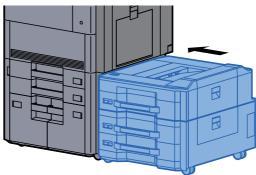


# Remove any jammed paper in Right Cover 2 (Side Feeder (500-sheet×3) / Large Capacity Side Feeder (500, 1,500-sheet×2))

 See the explanation for Side Feeder (500-sheet×3) below.




- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


#### Detach the side feeder.

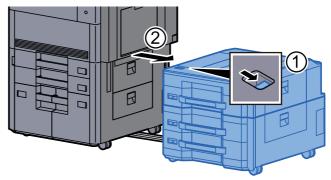


Remove any jammed paper.

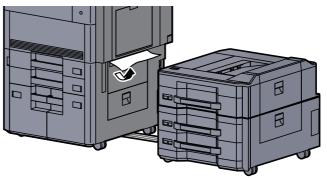


3 Open the side feeder right cover 2.

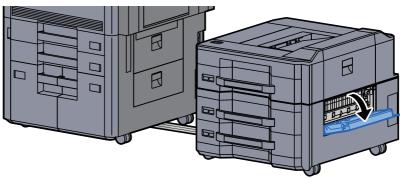


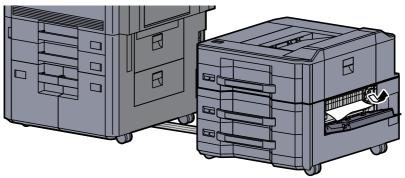

5 Return the cover to the original position.

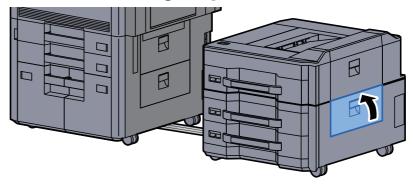


6 Return the side feeder to the original position.

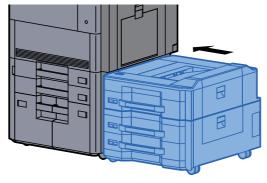


# Remove any jammed paper in the Mailbox

# **A**CAUTION


- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - Open the mailbox cover.

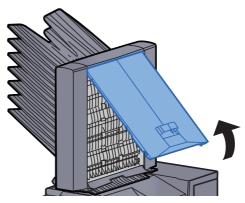


Remove any jammed paper.

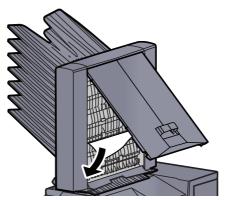

3 Close the cover.

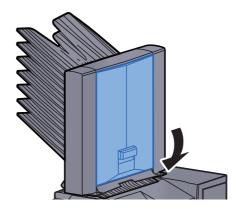


# Remove any jammed paper in the Document Processor

 


If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


Remove the originals from the Original Table.

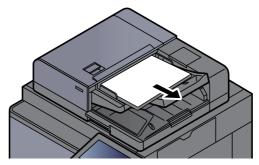


Open the document processor cover.

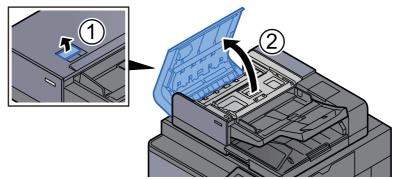


Turn dial (C) to remove any jammed paper.

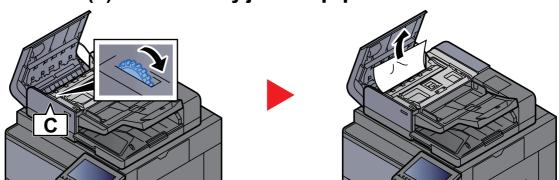

Turn dial (C) to remove any jammed paper.

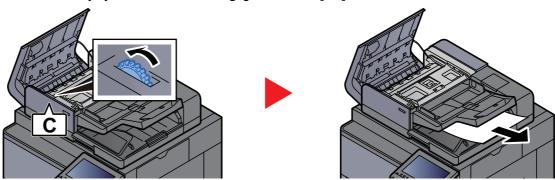

Return the cover to the original position.

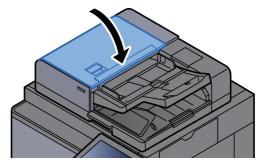


# Remove any jammed paper in the 4,000-sheet Finisher (Inner)




- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.


### Open the finisher front cover 1.

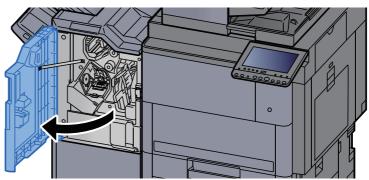


Open the conveyor guide (D1).

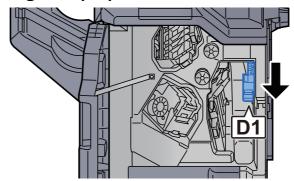

**3** Remove any jammed paper.

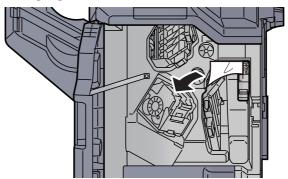

4 Return the conveyor guide (D1) to the original position.

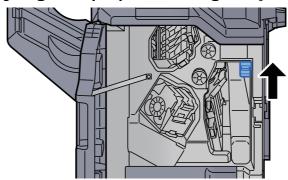


Return the cover to the original position.



# Remove any jammed paper in the 4,000-sheet Finisher (Tray A)

## **A**CAUTION


- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.
  - Remove any jammed paper.

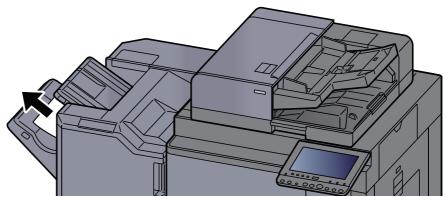


Open the finisher front cover 1.




Open the conveyor guide (D6).

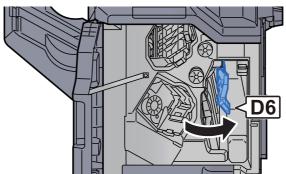


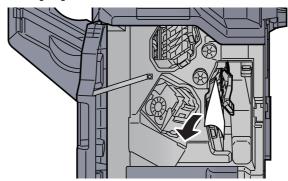


5 Return the conveyor guide (D6) to the original position.

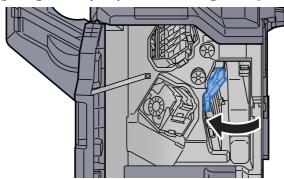


6 Open the conveyor guide (D4).

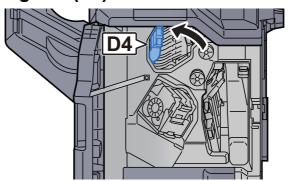


7 Turn knob (D5).

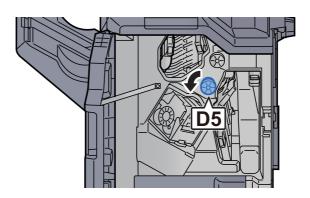


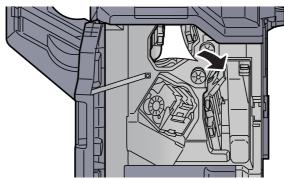


Q Return the conveyor guide (D4) to the original position.

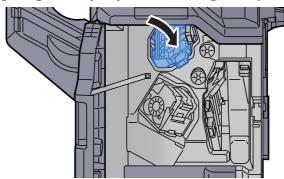


10 Open the conveyor guide (D1).

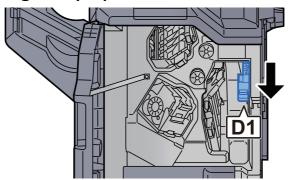


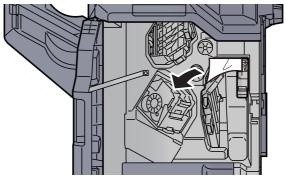


12 Return the conveyor guide (D1) to the original position.

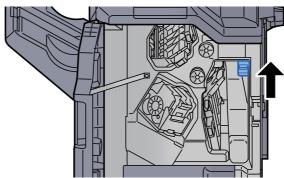


13 Return the cover to the original position.

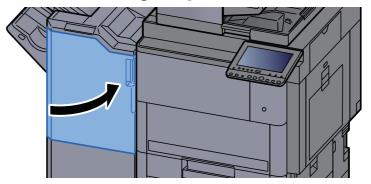

# Remove any jammed paper in the 4,000-sheet Finisher (Tray B)

 


- · Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.

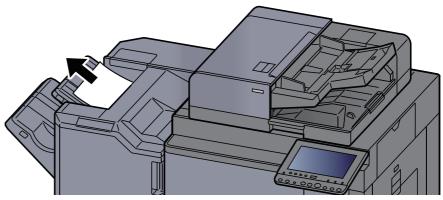


Open the finisher front cover 1.




3 Open the conveyor guide (D2).

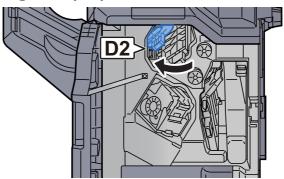


4 Turn knob (D3).

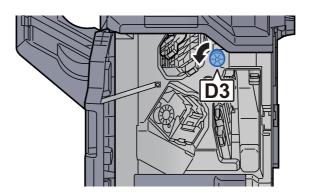


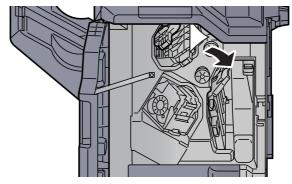


6 Return the conveyor guide (D2) to the original position.

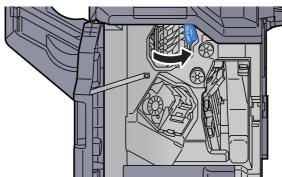


**7** Open the conveyor guide (D1).

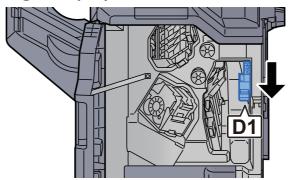


**8** Remove any jammed paper.

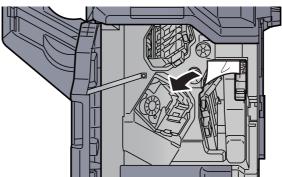


Q Return the conveyor guide (D1) to the original position.

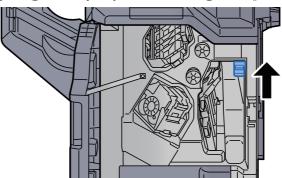

### 1 Return the cover to the original position.

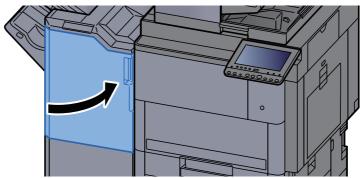


## Remove any jammed paper in the Folding Unit

 



- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.

#### Open the finisher front cover 1 and 2.

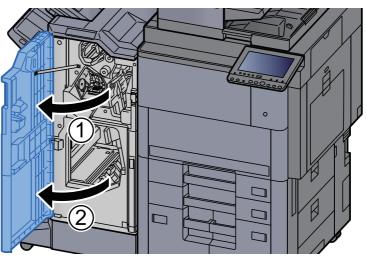


Open the conveyor guide (D7).

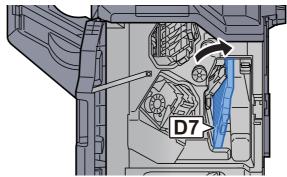


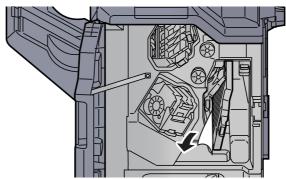


Return the conveyor guide (D7) to the original position.

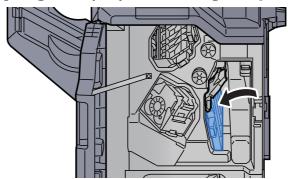


Open the conveyor guide (D8).

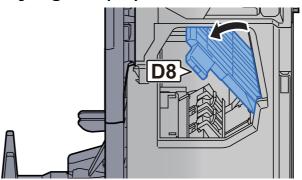


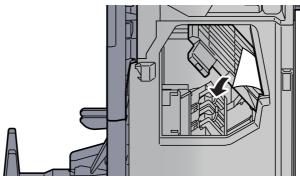


Return the conveyor guide (D8) to the original position.

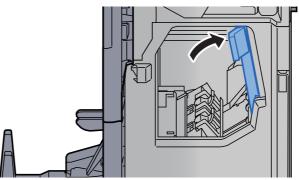


**Remove paper from inside the finisher.** 

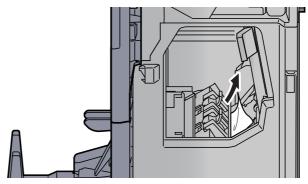


Q Return the covers to the original position.

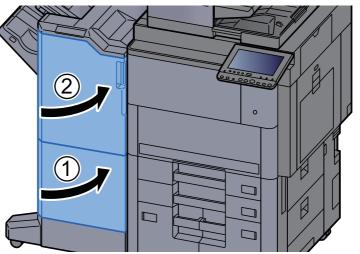


10 Lift the folding tray.

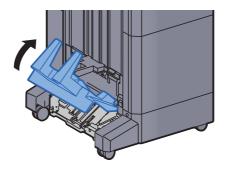


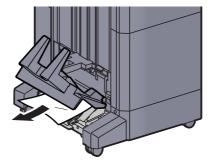


## 12 Press the release lever to pull the folding unit out.

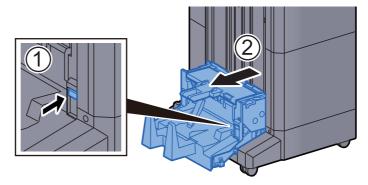


## 13 Open the folding unit left cover.

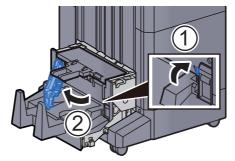


## 14 Turn dial (D9).

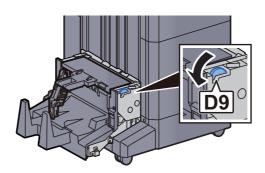


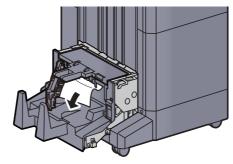


## 16 Return the folding unit left cover to the original position.

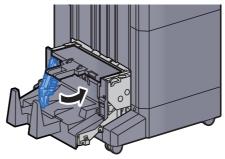


## 17 Open the folding unit top cover.

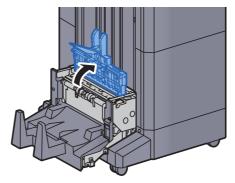


## **18** Turn dial (D9).

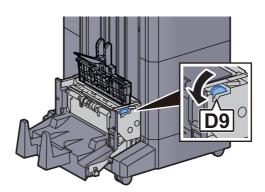


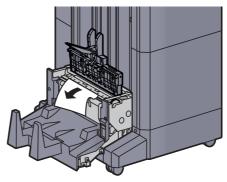


20 Return the folding unit top cover to the original position.

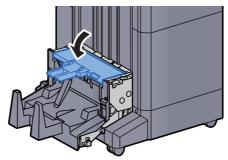

**21** Return the folding unit to the original position.

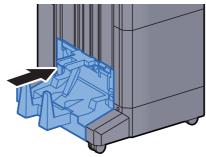



## Remove any jammed paper in the Folding Tray

 


- Do not reuse jammed papers.
- If the paper tears during removal, be sure to remove any loose scraps of paper from inside the machine. Scraps of paper left in the machine could cause subsequent jamming.

### Lift the folding tray.

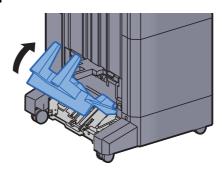


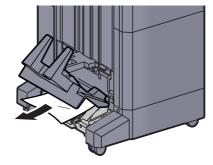


Press the release lever to pull the folding unit out.

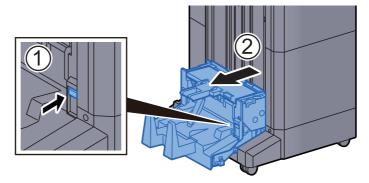


Open the folding unit left cover.

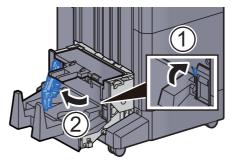


5 Turn dial (D9).

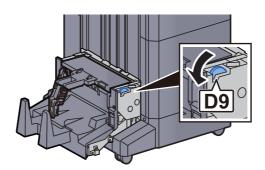


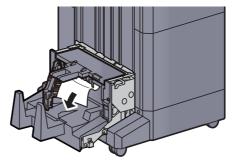


7 Return the folding unit left cover to the original position.

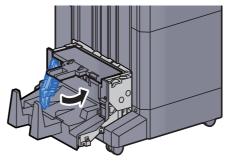


**Q** Open the folding unit top cover.

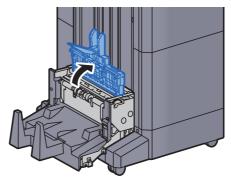


9 Turn dial (D9).

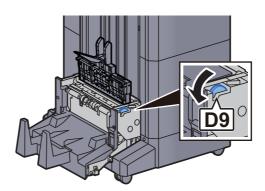


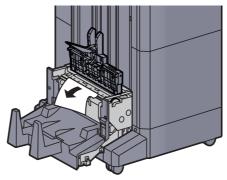


## 11 Return the folding unit top cover to the original position.

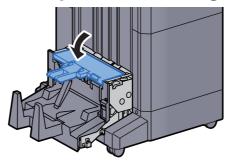


## 12 Return the folding unit to the original position.

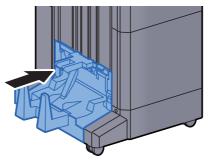


## 13 Open the finisher front cover 1 and 2.

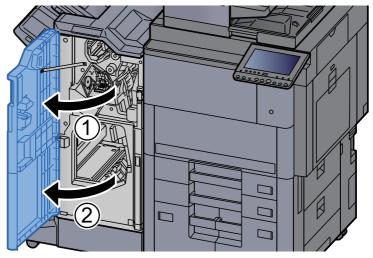

## 14 Remove paper from inside the finisher.

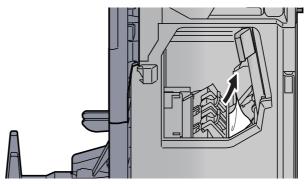

## 15 Return the covers to the original position.

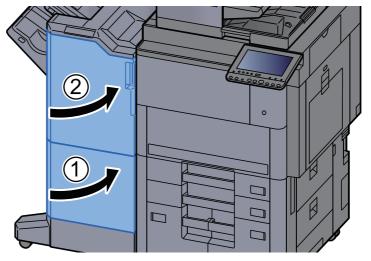


## **Clearing a Staple Jam**

## Clearing a Staple Jam of the 4,000-Sheet Finisher


**1** Open the finisher front cover 1.




Open the conveyor guide (D4).

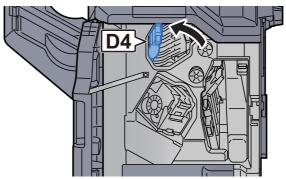


3 Turn knob (D5).

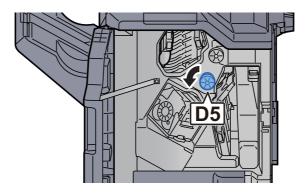


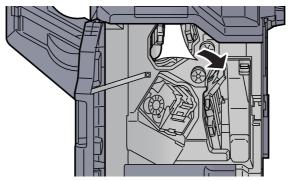


5 Return the conveyor guide (D4) to the original position.

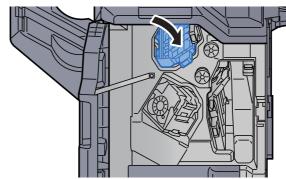


6 Remove the Staple Cartridge Holder (A).

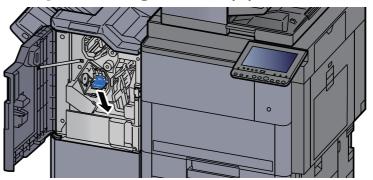


7 Remove the jammed staple.

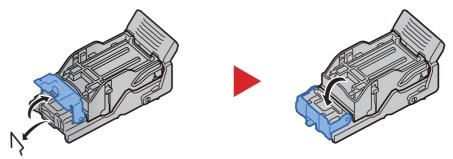

8 Install the Staple Cartridge Holder (A).

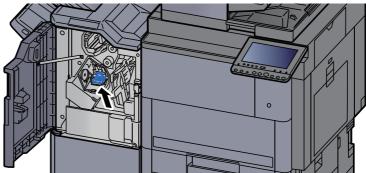


Return the cover to the original position.

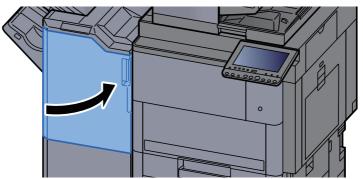


## **Clearing a Staple Jam of the Folding Unit**


Open the finisher front cover 1 and 2.

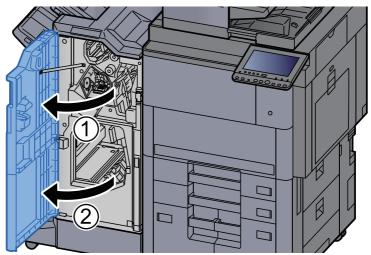


Remove paper from inside the finisher.

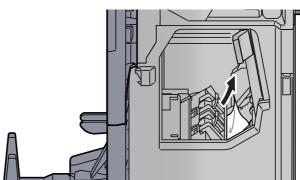


Remove the Staple Cartridge Holder (B) or (C).

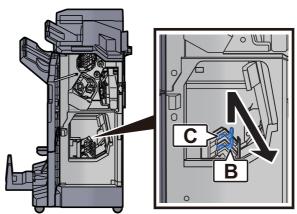


Remove the jammed staple.

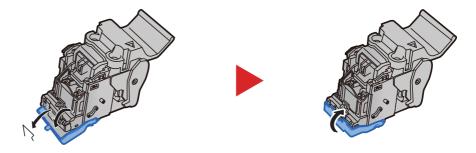


5 Install the Staple Cartridge Holder (B) or (C).

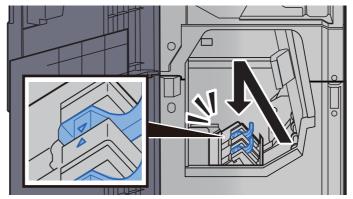


6 Return the covers to the original position.

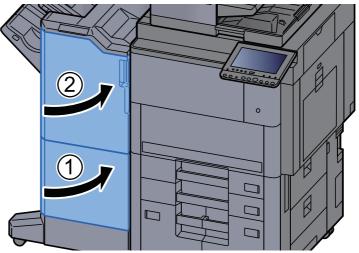


7 Lift the folding tray.

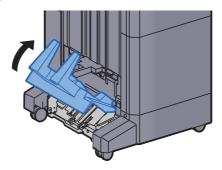


**8** Remove any jammed paper.

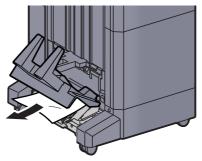


9 Press the release lever to pull the folding unit out.

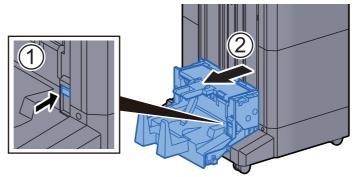


10 Open the folding unit left cover.

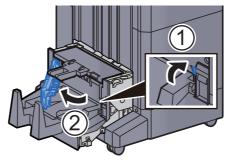


## **11** Turn dial (D9).

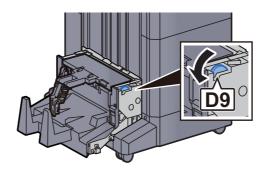


## **12** Remove any jammed paper.

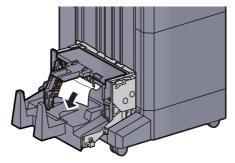


## 13 Return the folding unit left cover to the original position.

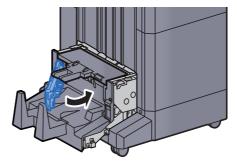


## 14 Open the folding unit top cover.

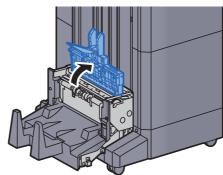


## **15** Turn dial (D9).

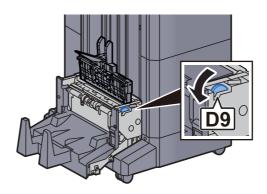


### **16** Remove any jammed paper.

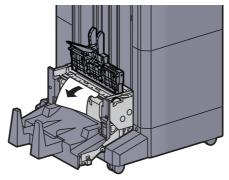

## 17 Return the folding unit top cover to the original position.

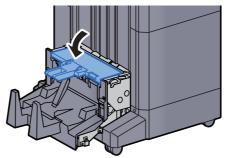

## 18 Return the folding unit to the original position.

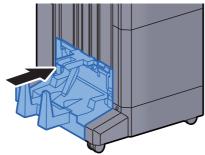

# 11 Appendix


#### This chapter explains the following topics:


Optional Equipment	11-2
Overview of Optional Equipment	11-2
Optional Applications	11-7
Starting Application Use	11-7
Checking Details of Application	11-8
Character Entry Method	11-9
Entry Screens	11-9
Entering Characters	11-11
Paper	11-12
Basic Paper Specifications	11-12
Choosing the Appropriate Paper	11-13
Special Paper	11-15
Specifications	11-19
Machine	11-19
Copy Functions	11-21
Printer Functions	
Scanner Functions	11-23
Document Processor	11-23
Side Feeder (500-sheet×3)	11-24
Large Capacity Side Feeder (500, 1,500-sheet×2)	11-24
Side Feeder (3,000-sheet)	
4,000-Sheet Finisher	11-25
Punch Unit (For 4,000-Sheet Finisher)	11-25
Mailbox (For 4,000-Sheet Finisher)	11-26
Folding Unit (For 4,000-Sheet Finisher)	
Banner Tray	11-27
Glossary	

## **Optional Equipment**

## **Overview of Optional Equipment**

The following optional equipment is available for the machine.

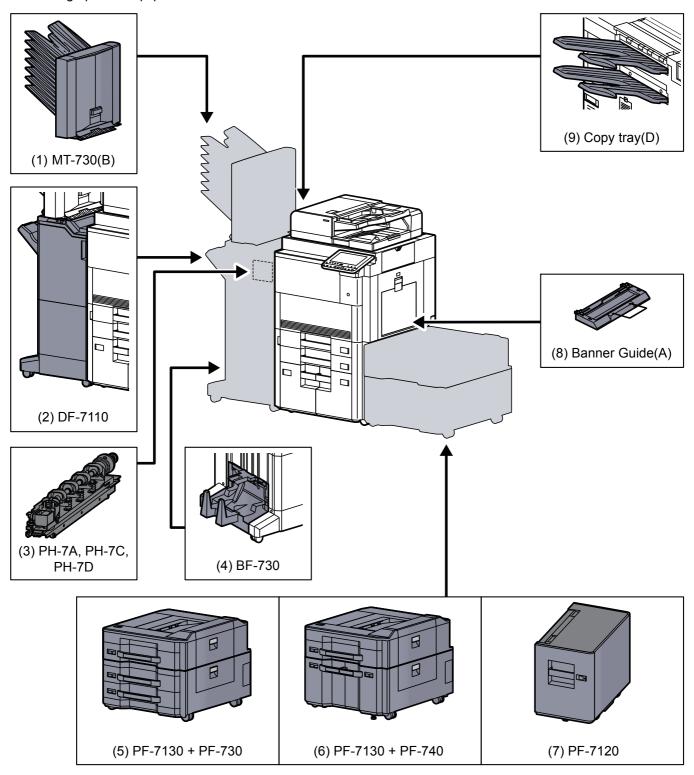

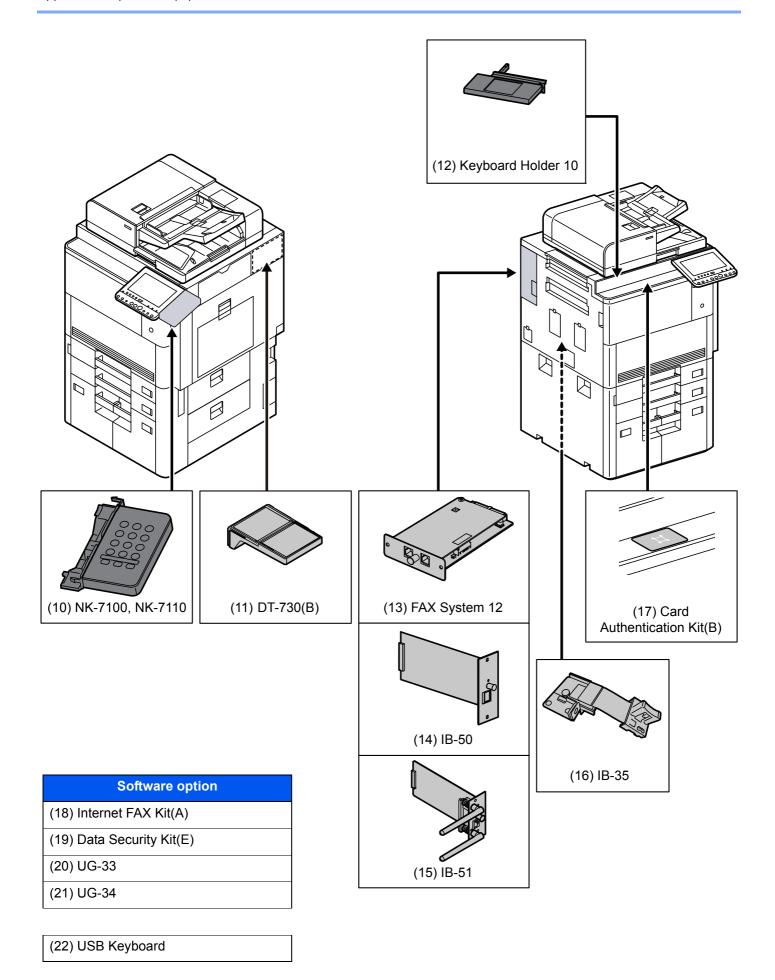

#### (1) MT-730 (B) "Mailbox"

Makes it easy to sort output into separate trays. Installing this option adds 7 output trays. When multiple computer users share the printer, each user can print to a specified tray. Installs on the 4,000-Sheet Finisher.

#### NOTE

To deliver output to the mail box, change the Paper Output selection on the operation panel or in the printer driver, or change in the default settings.

→ Paper Output (page 6-30)

#### (2) DF-7110 "4,000-Sheet Finisher"

This is a large-capacity 4,000-Sheet Finisher capable of holding large print runs and of separating and offsetting multiple copies of a printout into individual copies. It can also staple or hole-punch (optional) the offset printouts.

#### (3) PH-7A, PH-7C, PH-7D "Punch Unit"

Attaches to the Document Finisher and is used to punch holes.

#### (4) BF-730 "Folding Unit"

Folds printed output at the center or in tri-fold to enable the creation of simple booklets. Installs on the 4,000-Sheet Finisher.

#### (5) PF-7130 + PF-730 "Side Feeder (500-sheet×3)"

#### PF-7130 "Multimedia Side Tray (500-sheet)"

Same type of cassette as Cassette 1 on the machine, and is attached to the Paper Feeder (500-sheet×2) or Large Capacity Feeder (1,500-sheet×2).

#### PF-730 "Paper Feeder (500-sheet×2)"

Two additional cassettes identical to the machine's cassette can be installed in the machine. Paper capacity and loading method are the same as the standard cassettes.

Loading in the Cassettes (page 3-4)

#### (6) PF-7130 + PF-740 "Large Capacity Side Feeder (500, 1,500-sheet×2)"

#### PF-7130 "Multimedia Side Tray (500-sheet)"

Same type of cassette as Cassette 1 on the machine, and is attached to the Paper Feeder (500-sheet×2) or Large Capacity Feeder (1,500-sheet×2).

#### PF-740 "Large Capacity Feeder (1,500-sheet×2)"

In addition to the machine's cassettes, you can also install an optional large capacity feeder (1,500-sheet×2) capable of holding up to 3,000 sheets of A4, B5 or Letter paper

Loading in the Large Capacity Feeder (page 3-8)

#### (7) PF-7120 "Side Feeder (3,000-sheet)"

In addition to the machine's cassettes, you can also install an optional side feeder (3,000-sheet) capable of holding up to 3,000 sheets of A4, B5 or Letter paper.

▶ Loading in the Side Feeder (3,000-sheet) (page 3-12)

#### (8) Banner Guide(A) "Banner Tray"

This tray enables continuous feeding of banner paper. Up to 10 sheets of banner paper can be loaded. To attach the tray and load paper, refer to the following:

→ Using the Banner Tray (Option) (page 4-12)

#### (9) Copy tray(D) "Copy tray"

These are attached to the left side of the machine when the optional 4,000-Sheet Finisher is not used. There are two trays: the Upper Left Tray and the Lower Left Tray.

#### (10) NK-7100, NK-7110 "Optional Numeric Keypad"

The numeric keypad is added to the operation panel. If the optional numeric keypad is installed, numeric keys do not appear on the touch panel.

#### (11) DT-730 (B) "Document Table"

Place original or other documents when using the machine.

#### (12) Keyboard Holder 10 "Keyboard Holder"

A USB keyboard connected to the machine can be placed here.

#### (13) FAX System 12 "FAX Kit"

By installing the FAX kit, fax send/receive is enabled. Also, it is possible to use it as a network fax, by using it with a computer. When two FAX kits are installed, the units can be connected to two different telephone lines which will enable quicker message transmission to a number of recipients. If one of the lines is dedicated to receiving, the busy line time can be reduced.

#### FAX Operation Guide

#### (14) IB-50 "Network Interface Kit"

The Network Interface Kit provides a high-speed connection for the Gigabit-per-second interface. This kit supports traditional protocols such as AppleTalk, Netware and so on.

It also supports only the least functions in the standard utilities.

#### → IB-50 User's Manual

#### (15) IB-51 "Wireless Network Interface Kit"

This is a wireless LAN interface card which supports the wireless LAN specifications IEEE802.11n (Max 300 Mbps) and 11 g/b. This supports traditional protocols such as AppleTalk, Netware and so on.

It also supports only the least functions in the standard utilities.

The IB-51 Setup utility supports Windows OS and Mac OS X.

#### → IB-51 User's Manual

#### (16) IB-35 "Wireless Network Interface Kit"

This is a wireless LAN interface card which supports the wireless LAN specifications IEEE802.11n (max. 65 Mbps) and IEEE802.11 g/b. In addition, network printing is possible without using the wireless LAN router because Wi-Fi Direct is supported. IB-35 is standard in South America and North America.

#### (17) Card Authentication Kit(B) "Card Authentication Kit"

User login administration can be performed using ID cards. To do so, it is necessary to register ID card information on the previously registered local user list. For more information about how to register this information, refer to the following:

#### Card Authentication Kit(B) Operation Guide

#### (18) Internet FAX Kit(A) "Internet FAX Kit"

Activating the Internet FAX Kit sends and receives faxes via the Internet without using a phone line. It can only be added when the FAX Kit is installed.

#### (19) Data Security Kit(E) "Data Security Kit"

The Data Security Kit overwrites all unnecessary data in the storage area of the hard disk so that it cannot be retrieved. The Data Security Kit encrypts data before storing it in the hard disk. It guarantees higher security because no data cannot be decoded by ordinary output or operations.

#### (20) UG-33 "ThinPrint Option"

This application allows print data to be printed directly without a print driver.

#### (21) UG-34 "Emulation Upgrade Kit"

Enables emulation whereby the machine operates using commands for other printers. Installing this option enables IBM Proprinter, Line Printer, and EPSON LQ-850 emulation.

#### (22) USB Keyboard "USB Keyboard"

A USB keyboard can be used to enter information into the text fields on the operation panel. A special mount is also available to install the keyboard on the machine. Please contact your dealer or service representative for information on keyboards that are compatible with your machine before you purchase one.

## **Optional Applications**

#### **Overview of the Applications**

The applications listed below are installed on this machine.

Application	
Data Security Kit	
Internet FAX Kit	
Card Authentication Kit	
ThinPrint Option*1	
Emulation Upgrade Kit	

<sup>\*1</sup> This can be used on a trial basis for a limited time.

### NOTE

- Restrictions such as the number of times the application can be used during the trial period differ depending on the application.
- · If you change the date/time while using the trial version of an application, you will no longer be able to use the application.

### **Starting Application Use**

[System Menu/Counter] key > [System/Network] > "Optional Function" [Next]



#### **◯** NOTE

If the user authentication screen appears, enter your login user name and login password and select [Login]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

Select the desired application > [Activate]

You can view detailed information on the selected application by selecting [Detail].

3 Select [Official] in the license key entry screen.

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to Step 5.

To use the application as a trial, select [Trial] without entering the license key.

4 Select [Yes] in the confirmation screen.



#### **NOTE**

Icons of activated application are displayed in the Home screen.

## **Checking Details of Application**

1 [System Menu/Counter] key > [System/Network] > "Optional Function" [Next]

#### **NOTE**

If the user authentication screen appears, enter your login user name and login password and select [Login]. For this, you need to login with administrator privileges. The factory default login user name and login password are set as shown below.

Model Name	Login User Name	Login Password
TASKalfa 7002i	7000	7000
TASKalfa 8002i	8000	8000

Select the desired application and select [Detail].

You can view detailed information on the selected application.

The table below lists the item you can view.

Item
Function Name
License
Remaining Counts
Expiration Date
Status

#### Extend the trial period.

[Extend] > [Yes]

The trial period is extended.

## **Character Entry Method**

To enter characters for a name, use the on-display keyboard in the touch panel following the steps as explained below.




#### **Keyboard Layout**

"QWERTY", "QWERTZ" and "AZERTY" are available as keyboard layouts the same as a PC keyboard. Select the [System Menu/Counter] key, [Common Settings] and then [Keyboard Layout] to choose the desired layout. "QWERTY" layout is used here as an example. You may use another layout following the same steps.


## **Entry Screens**

#### **Lower-case Letter Entry Screen**

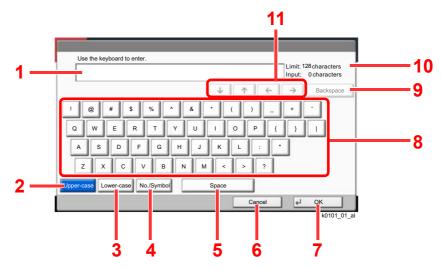


No.	Display/Key	Description
1	Display	Displays entered characters.
2	[Upper-case]	Select to use upper-case letters.
3	[Lower-case]	Select to use lower-case letters.
4	[No./Symbol]	Select to enter numbers and symbols.
5	[Space]	Select to insert a space.
6	[Cancel]	Select to cancel entered characters and return to the screen before the entry.
7	[OK]	Select to finalize entry and return to the screen before the entry.
8	Keyboard	Select a character to enter.
9	[Backspace]	Select to delete a character to the left of the cursor.
10	Limit Display	Displays maximum number of characters.
11	Cursor Key	Select to move the cursor on the display.

#### **Upper-case Letter Entry Screen**

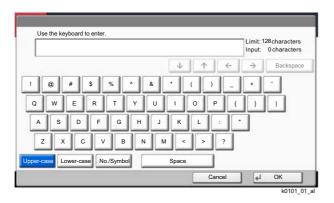

### **Number/Symbol Entry Screen**

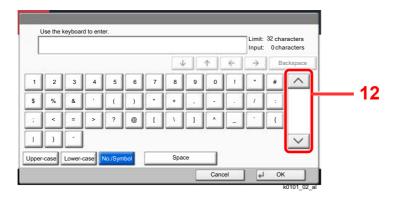

No.	Display/Key	Description
12	[^]/[~]	To enter a number or symbol not shown in the keyboard, select the cursor key and scroll the screen to view other numbers or symbols to enter.

## **Entering Characters**

Follow the steps below to enter 'List A-1' for an example.


- 1 Select [Upper-case].
- Select [L]. The letter "L" is shown on the display.



- 3 Select [Lower-case].
- 4 Select [i], [s], [t] and [Space].



- 5 Select [Upper-case].
- 6 Select [A].
- 7 Select [No./Symbol].
- 8 Select [∧] or [√] repeatedly to view the keyboard containing [-] and [1].
- 9 Select [-] and [1].

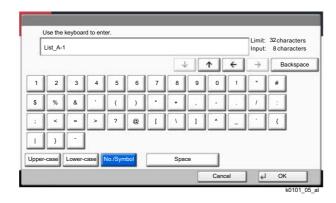

**10** Check that the entry is correct. Press [**OK**].

### **Paper**

This section explains the paper sizes and types that can be used in the paper source.

For details on the sizes, types, and number of sheets of paper that can be loaded in each paper tray, refer to the following:

→ Specifications (page 11-19)

### **Basic Paper Specifications**

This machine is designed to print on standard copy paper as used in regular ('dry') copiers and page printers such as laser printers. It also supports a variety of other types of paper that conform to the specifications given in this appendix.

Be careful when choosing paper. Paper unsuitable for the machine may cause jams or may be wrinkled.

#### Supported Paper

Use standard copy paper for regular copiers or laser printers. The printing quality will be affected by the quality of paper. Poor quality paper may result in unsatisfactory output.

#### Basic Paper Specifications that can be Used with This Machine

The following table lists the specifications of paper that is supported with this machine. Refer to the subsequent sections for further details.

Criteria	Specifications	
Weight	Cassettes: 60 to 256 g/m <sup>2</sup>	
	Multipurpose tray: 60 to 300 g/m <sup>2</sup>	
Dimensional accuracy	±0.7 mm	
Squareness of corners	90° ±0.2°	
Moisture content	4 to 6%	
Pulp content	80% or more	



#### NOTE

Some recycled paper does not meet requirements for use with this machine as listed in the Basic Paper Specifications shown below, such as moisture or pulp content. For this reason, we recommend purchasing a small amount of recycled paper as a sample for testing prior to use. Choose recycled paper that gives the best printing results and contains low levels of paper dust.

We are not responsible for the problems occurred from the use of paper that does not conform to our specifications.

### **Choosing the Appropriate Paper**

This section describes guidelines for choosing paper.

#### Condition

Avoid using paper with bent corners or that is curled, dirty, or torn. Do not use paper that has a rough surface or paper fiber lint, or that is especially delicate. Use of paper in any of these conditions will not only deliver poor copies but may also cause jams and shorten the useful life of the machine. Choose paper with a smooth and even surface; however, avoid coated paper or paper with a treated surface as it may damage the drum or fusing unit.

#### Ingredients

Do not use paper such as paper that has been coated or surface-treated or paper that contains plastic or carbon. Those types of paper may produce harmful fumes from the heat of printing and may damage the drum.

Be sure to use the standard paper that contains at least 80% pulp, i.e., not more than 20% of the total paper content consists of cotton or other fibers.

#### **Smoothness**

The paper surface should be smooth, but it must be uncoated. With paper that is too smooth and slippery, several sheets may accidentally be supplied at once, causing jams.

#### **Basis Weight**

In countries that use the metric system, basis weight is the weight in grams of one sheet of paper one square meter in area. In the United States, basis weight is the weight in pounds of one ream (500 sheets) of paper cut to the standard size (or trade size) for a specific grade of paper. Paper that is too heavy or too light may be supplied incorrectly or cause paper jams, which may cause excessive wear of the machine. Mixed paper weight (i.e., thickness) may cause several sheets to be supplied at once accidentally and may also cause blurring or other printing problems if the toner fails to adhere correctly.

#### **Moisture Content**

Paper moisture content is the ratio of moisture to dryness expressed as a percentage. Moisture affects how the paper is supplied, the electrostatic chargeability of the paper, and how the toner adheres.

Paper moisture content varies depending on the relative humidity in the room. High relative humidity causes paper to become damp, making the edges expand so it appears wavy. Low relative humidity causes paper to lose moisture, making the edges tighten and weakening print contrast.

Wavy or tight edges may cause the paper to slip when it is supplied. Try to keep the moisture content between 4 to 6%.

To maintain the right level of moisture content, bear in mind the following considerations.

- · Store paper in a cool, well-ventilated place.
- Store paper flat and unopened in the package. Once the package is opened, reseal it if the paper is not to be used for a while.
- Store paper sealed in the original package and box. Put a pallet under the carton to keep it raised above the floor. Especially during rainy seasons keep the paper a sufficient distance away from wooden or concrete floors.
- Before using paper that has been stored, keep it at the proper moisture level for at least 48 hours.
- Do not store paper where it is exposed to heat, sunlight, or dampness.

#### Other Paper Specifications

Porosity: The density of the paper fibers.

Stiffness: Paper must be stiff enough or it may buckle in the machine, causing jams.

**Curl**: Most paper naturally tends to curl after the package is opened. When paper passes through the fixing unit, it curls upward slightly. To deliver flat printouts, load the paper so that the curl faces towards the bottom of the paper tray.

**Static electricity**: During printing, paper is electrostatically charged so that the toner adheres. Choose paper that can be discharged quickly so that copies do not cling together.

Whiteness: Paper whiteness affects print contrast. Use whiter paper for sharper, brighter copies.

**Quality**: Machine problems may occur if sheet sizes are not uniform or if corners are not square, edges are rough, sheets are uncut, or edges or corners are crushed. In order to prevent these problems, be especially careful when you cut the paper yourself.

**Packaging**: Choose paper that is properly packaged and stacked in boxes. Ideally, the packaging itself should have been treated with a coating to inhibit moisture.

**Specially treated paper**: We do not recommend printing onto the following types of paper, even if it conforms to the basic specifications. When you use these kinds of paper, purchase a small amount first as a sample to test.

- · Glossy paper
- · Watermarked paper
- · Paper with an uneven surface
- Perforated paper

#### Paper Sizes that can be Used with This Machine

Paper of the following sizes is supported by the machine.

Measurements in the table take into account a  $\pm 0.7$  mm dimensional accuracy for length and width. Corner angles must be  $90^{\circ} \pm 0.2^{\circ}$ .

- A3 (297 × 420 mm)
- A4 (297 × 210 mm)
- A5 (210 × 148 mm)
- A6 (148 × 105 mm)
- B4 (257 × 364 mm)
- B5 (257 × 182 mm)
- B6 (182 × 128 mm)
- 216×340 mm
- Ledger
- Letter
- Legal
- Statement
- Executive (7-1/4 × 10-1/2")
- 12×18" (304.8 × 457 mm)
- Oficio II
- Folio (210 × 330 mm)
- 8K (273 × 394 mm)
- 16K (273 × 197 mm)

- ISO B5 (176 × 250 mm)
- Envelope #10 (4-1/8 × 9-1/2")
- Envelope #9 (3-7/8 × 8-7/8")
- Envelope #6 3/4 (3-5/8 × 6-1/2")
- Envelope Monarch (3-7/8 × 7-1/2")
- Envelope DL (110 × 220 mm)
- Envelope C5 (162 × 229 mm)
- Envelope C4 (229 × 324 mm)
- Hagaki (Cardstock) (100 × 148 mm)
- Oufuku hagaki (Return postcard) (148 × 200 mm)
- Youkei 4 (105 × 235 mm)
- Youkei 2 (114 × 162 mm)
- Custom
   Cassette 1, 2: 140 × 182 to 304 × 457 mm
   Multipurpose Tray: 98 × 148 to 304 × 457 mm

### **Special Paper**

This section describes printing onto special paper and print media.

#### Special Paper that can be Used with This Machine

- Transparencies
- · Preprinted paper
- Bond paper
- · Recycled paper
- · Thin paper
- · Letterhead
- · Colored paper
- · Prepunched paper
- Envelopes
- · Hagaki (Cardstock)
- · Thick paper
- Labels
- Coated
- · High-quality paper
- Index tab dividers (136 to 256 g/m²)

When using these paper and media, choose those that are designed specifically for copiers or page printers (such as laser printers). Use the multipurpose tray for transparencies, label paper and index tab dividers.

#### **Choosing Special Paper**

Although special paper that meets the following requirements can be used with the machine, print quality will vary considerably due to differences in the construction and quality of special paper. Thus, special paper is more likely than regular paper to cause printing problems. Before purchasing special paper in volume, try testing a sample to ensure the print quality is satisfactory. General precautions when printing onto special paper are given below. Note that we are not responsible for any harm to the user or damage to the machine caused by moisture or specifications of special paper.

Select a cassette or multipurpose tray for special paper.

#### **Transparencies**

Transparencies must be able to withstand the heat of printing. Transparencies must meet the following conditions.

Heat resistance	Must withstand at least 190°C
Thickness	0.100 to 0.110 mm
Material	Polyester
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°

To avoid problems, use the multipurpose tray for transparencies and load transparencies with the long side facing the machine.

 
If transparencies jam frequently at output, try pulling the leading edge of sheets gently as they are ejected.

#### Label

Be sure to feed labels from the multipurpose tray.

For selecting labels, use extreme care so that the adhesive may not come in direct contact with any part of the machine and that the labels are not easily peeled from the carrier sheet. Adhesives that stick to the drum or rollers and peeled labels remaining in the machine may cause a failure.


When printing onto labels, you must be liable for the print quality and possible trouble.



Labels consist of three layers as shown in the illustration. The adhesive layer contains materials that are easily affected by the force applied in the machine. The carrier sheet bears the top sheet until the label is used. This composition of labels may cause more problems.

The label surface must be covered completely with the top sheet. Gaps between labels may cause peeling of labels, resulting in a serious failure.


Some label paper has large margins on the top sheet. When using such paper, do not peel these margins from the carrier sheet before completing output.

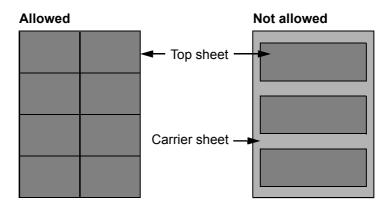

Use label paper that conforms to the following specifications.

Top sheet weight	44 to 74 g/m²
Basis weight (overall paper weight)	104 to 151 g/m²
Top sheet thickness	0.086 to 0.107 mm
Overall paper thickness	0.115 to 0.145 mm
Moisture content	4 to 6 % (composite)

#### Hagaki (Cardstock)

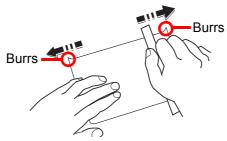

Before loading Hagaki (Cardstock) into the multipurpose tray, fan them and align the edges. If the Hagaki (Cardstock) paper is curled, straighten it before loading. Printing onto curled Hagaki (Cardstock) may cause jams.

Use unfolded Oufuku hagaki (Return postcard) (available at post offices). Some Hagaki (Cardstock) may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges by placing the Hagaki (Cardstock) on a flat surface and rubbing the edges gently a few times with a ruler.

#### **Envelopes**

Use the multipurpose tray for envelopes.

Due to the structure of envelopes, printing evenly over the entire surface may not be possible in some cases. Thin envelopes in particular may be wrinkled by the machine in some cases as they pass through. Before purchasing envelopes in volume, try testing a sample to ensure the print quality.

Storing envelopes for a long period may cause them to become wrinkled. Thus, keep the package sealed until you are ready to use them.

Keep the following points in mind.

- Do not use envelopes with exposed adhesive. In addition, do not use the type of envelope in which the adhesive is
  exposed after the top layer is peeled off. Serious damage may be caused if the paper covering the adhesive comes
  off in the machine.
- Do not use envelopes with certain special features. For example, do not use envelopes with a grommet for winding a string to close the flap or envelopes with an open or film-covered window.
- · If paper jams occur, load fewer envelopes at once.

#### **Thick Paper**

Before loading thick paper in the multipurpose tray, fan it and align the edges. Some thick paper may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges just as with Hagaki (Cardstock) by placing the paper on a flat surface and rubbing the edges gently a few times with a ruler. Printing onto paper with rough edges may cause jams.



#### NOTE

If the paper is not supplied correctly even after it is smoothed, load the paper with the leading edge raised a few millimeters.

#### **Colored Paper**

Colored paper must conform to the specifications.

→ Basic Paper Specifications (page 11-12)

In addition, the pigments in the paper must be able to withstand the heat of printing (up to 200°C or 392°F).

#### **Preprinted Paper**

Preprinted paper must conform to the specifications.

→ Basic Paper Specifications (page 11-12)

The colored ink must be able to withstand the heat of printing. It must be resistant to silicone oil as well. Do not use paper with a treated surface such as glossy paper used for calendars.

#### Recycled Paper

Recycled paper must conform to the specifications; however, its whiteness may be considered separately.

→ Basic Paper Specifications (page 11-12)



#### NOTE

Before purchasing recycled paper in volume, try testing a sample to ensure satisfactory print quality.

#### **Coated Paper**

Coated paper is created by treating the surface of the base paper with a coating that provides higher printing quality than plain paper. Coated paper is used for particularly high quality printing.

The surface of high-quality or medium-quality paper is coated with special agents that improve ink adhesion by making the paper surface smoother. These agents are used either to coat both sides of the paper or just one side. The coated side appears slightly glossy.



#### **IMPORTANT**

When printing on coated paper in very humid environments, ensure that the paper is kept dry as moisture may cause sheets to stick together when they are fed into the machine. If printing in very humid environments, set coated paper for one sheet each.

# **Specifications**



**IMPORTANT** 

Specifications are subject to change without notice.



For more information on using the FAX, refer to the following:

**→** FAX Operation Guide

### **Machine**

Item		Description
Туре		Console
Printing Method		Electrophotography by semiconductor laser
Paper Weight Cassette		60 to 256 g/m <sup>2</sup>
	Multipurpose Tray	60 to 300 g/m <sup>2</sup>
Paper Type	Cassette	Plain, Rough, Vellum, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Thick, High Quality, Custom (Duplex: Same as Simplex)
	Multipurpose Tray	Plain, Transparency (OHP film), Rough, Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color, Prepunched, Letterhead, Envelope, Thick, High Quality, Coated, Index Tab Dividers, Custom 1 to 8
Paper Size	Cassette 1, 2	A3, A4, A5, B4, B5, 216×340 mm, Ledger, Letter, Legal, Statement, 12×18", Oficio II, Folio, 8K, 16K, Custom (140 × 182 mm to 304 × 457 mm)
	Cassette 3, 4	A4, B5, Letter
	Multipurpose Tray	A3, A4, A5, A6, B4, B5, B6, 216×340 mm, Ledger, Letter, Legal, Statement, Executive, 12×18", Oficio II, Folio, 8K, 16K, ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Envelope C4, Hagaki (Cardstock), Oufuku Hagaki (Return postcard), Youkei 4, Youkei 2, Custom (98 × 148 mm to 304 × 457 mm)  Banner sheet (210 × 470.1 to 304.8 × 1,220 mm/8.26" × 18.5" to 12" × 48")
Printable Area	1	Print margin for top, bottom and both sides is 4.2 mm
Warm-up Time	Power on	30 seconds or less
(22°C/71.6°F, 60%)	Low Power	10 seconds or less
	Sleep	30 seconds or less
Paper Capacity	Cassette 1, 2	500 sheets (80 g/m <sup>2</sup> )*1
	Cassette 3, 4	1,500 sheets (80 g/m <sup>2</sup> )*1
	Multipurpose Tray	150 sheets (A4/Letter or smaller) (80 g/m²), 50 sheets (larger than A4/Letter) (80 g/m²) 1 sheet (Banner sheet (210 × 470.1 to 304.8 × 1,220 mm/8.26" × 18.5" to 12" × 48")) (136 to 163 g/m²)

Item		Description
Output Tray Capacity	Lower Left Tray	275 sheets (64 g/m²) 250 sheets (80 g/m²)
	Upper Left Tray	110 sheets (64 g/m²) 100 sheets (80 g/m²)
	Right Tray	70 sheets (64 g/m <sup>2</sup> , 80 g/m <sup>2</sup> )
Image Write Syst	em	Semiconductor laser and electrophotography
Memory		4.0 GB
Large Capacity Sto	orage	SSD 8 GB/Hard Disk 320 GB
Interface	Standard	USB Interface Connector: 1 (Hi-Speed USB)  Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T (IPv6, IPv4, IPSec), 802.3az supported)  USB Port: 4 (Hi-Speed USB)
	Option	eKUIO: 2*2 Fax: 2*3 Wireless LAN: 1*4
Operating	Temperature	10 to 32.5°C/50 to 90.5°F
Environment	Humidity	10 to 80 %
	Altitude	3,500 m/11,482 ft maximum
	Brightness	1,500 lux maximum
Dimension (W × I	D × H)	26.97 " × 31.54" × 48.59" 685 × 801 × 1,234 mm
Weight		Approx. 341.8 lb/Approx. 155 kg (with toner container)
Space Required (W × D) (Using multipurpose tray)		39.97" × 31.54" 1,015 × 801 mm
Power Source		120 V Specification Model: 120 V $\sim$ 60 Hz 16 A 230 V Specification Model: 220 to 240 V $\sim$ 50/60 Hz 10 A
The power consumption of the product in networked standby (If all network ports are connected.)		The information is available at the website below.  http://www.kyoceradocumentsolutions.eu/index/environment/green_products/ low_power_consumption.html
Options		→ Optional Equipment (page 11-2)

<sup>\*1</sup> Up to upper limit height line in the cassette.

<sup>\*2</sup> When two optional interface are installed, a fax line can not be installed.

<sup>\*3</sup> When IB-50 or IB-51 is installed, only one fax line can be installed.

<sup>\*4</sup> This is standard in South and North America.

# **Copy Functions**

Item		Description		
Copy Speed	TASKalfa 7002i	A4/Letter	70 sheets/min	
		A4-R/Letter-R	49 sheets/min	
		A3/Ledger	35 sheets/min	
		B4/Legal	42 sheets/min	
		B5	70 sheets/min	
		B5-R	49 sheets/min	
		A5-R	35 sheets/min	
	TASKalfa 8002i	A4/Letter	80 sheets/min	
		A4-R/Letter-R	56 sheets/min	
		A3/Ledger	40 sheets/min	
		B4/Legal	48 sheets/min	
		B5	80 sheets/min	
		B5-R	56 sheets/min	
		A5-R	40 sheets/min	
First Copy	First Copy Black and White		TASKalfa 7002i 5.2 seconds or less	
Time (A4,		TASKalfa 8002i 4.7 seconds or less		
place on the platen, feed				
from				
Cassette)				
Zoom Level	Zoom Level		Manual mode: 25 to 400%, 1% increments	
		Auto mode: Preset Zoom		
Continuous Copying		1 to 9,999 sheets		
Resolution		1200 × 1200 dpi (multi-bit)		
Supported Original Types		Sheet, Book, 3-dimensional objects (maximum original size: A3/Ledger)		
Original Feed System		Fixed		

### **Printer Functions**

Item		Description	
Printing Speed			
	TASKalfa 7002i	12×18" 35 sheets/min	
	TASKalfa 8002i	12×18" 40 sheets/min	
		Other than the above size, specifications are the same as those of Copy Speed.	
First Print	Black and White	TASKalfa 7002i 5.8 seconds or less	
Time (A4, feed from Cassette)		TASKalfa 8002i 5.4 seconds or less	
Resolution		1200 × 1200 dpi (multi-bit)	
Operating System		Windows XP, Windows Server 2003, Windows Vista, Windows 7, Windows 8, Windows 8.1, Windows 10, Windows Server 2008/R2, Windows Server 2012/R2, Mac OS 10.5 or later	
Interface		USB Interface Connector: 1 (Hi-Speed USB)	
		Network interface: 1 (10 BASE-T/100 BASE-TX/1000 BASE-T (IPv6, IPv4, IPSec), 802.3a supported)	
		Optional Interface (Option): 2 (For IB-50/IB-51 mounting)	
		Wireless LAN (Option): 1 (For IB-35 mounting)*1	
Page Descript	ion Language	PRESCRIBE	
Emulations		PCL6 (PCL-XL, PCL-5c), KPDL3 (PostScript3 compatible), PDF, XPS, OpenXPS	

<sup>\*1</sup> This is standard in South and North America.

### **Scanner Functions**

Item		Description	
Resolution		600 dpi, 400 dpi, 300 dpi, 200×400 dpi, 200 dpi, 200×100 dpi	
File Format		TIFF, JPEG, XPS, Open XPS, PDF (MMR/JPEG compression/High compressive PDF/OCR Text Recognition PDF)	
Scanning Speed*1		(A4 landscape, 300 dpi, Image quality: Text/Photo original)	
	TASKalfa 7002i	1-sided B/W 120 Images/min	Color 120 Images/min
		2-sided B/W 220 Images/min	Color 220 Images/min
	TASKalfa 8002i	1-sided B/W 120 Images/min	Color 120 Images/min
		2-sided B/W 220 Images/min	Color 220 Images/min
Interface		Ethernet (10 BASE-T/100 BASE-TX/1000 BASE-T)	
Transmission System		SMB, SMTP, FTP, FTP over SSL, TWAIN*2, WIA*3, WSD	

<sup>\*1</sup> When using the document processor (Dual Scan DP) (except TWAIN and WIA scanning)

### **Document Processor**

Item	Description
Original Feed Method	Automatic feed
Supported Original Types	Sheet originals
Paper Size Maximum: A3/Ledger 11.69" × 17"/297 × 432 mm (Long-sized 11.69" × 86.62"/297 ×	
	Minimum: A6-R/Statement-R 4.13" × 5.82"/105 × 148 mm
Paper Weight	1-sided: 35 to 220 g/m <sup>2</sup> 2-sided: 50 to 220 g/m <sup>2</sup> Sizes smaller than B6-R are 50 to 105 g/m <sup>2</sup> (1-side/duplex)
Loading Capacity	270 sheets (50 to 80 g/m <sup>2</sup> )*1 maximum
Dimensions (W × D × H)	23.63" × 20.20" × 6.70" 600 × 513 × 170 mm
Weight	Approx. 32.0 lbs./Approx. 14.5 kg

<sup>\*1</sup> Up to upper limit height line in the document processor.

<sup>\*2</sup> Available Operating System: Windows XP/Windows Vista/Windows Server 2003/Windows Server 2008/Windows Server 2008 R2/Windows 7/Windows 8/Windows 8.1/Windows 10/Windows Server 2012/Windows Server 2012 R2

<sup>\*3</sup> Available Operating System: Windows Vista/Windows Server 2008/Windows Server 2008 R2/Windows 7/Windows 8/Windows 8.1/Windows 10/Windows Server 2012/Windows Server 2012 R2

### Side Feeder (500-sheet×3)

Item	Description	
Paper Supply Method	Feed & reverse roller method (No. Sheets: 500, 80 g/m², 3 cassettes/No. Sheets: 550, 64 g/m², 3 cassettes)	
Paper Size	A3, A4-R, A4, A5-R, B4, B5-R, B5, 216×340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, 12×18", Oficio II, Folio, 8K, 16K-R, 16K	
Supported Paper	Paper weight: 60 to 256 g/m <sup>2</sup> Media types: Plain, Recycled, Thick, Coated*1	
Dimensions (W × D × H)	23.55" × 28.35" × 21.11" 598 × 720 × 536 mm	
Weight	Approx. 114.7 lbs. / Approx. 52 kg	

<sup>\*1</sup> Only Cassette 5 can be used.

### Large Capacity Side Feeder (500, 1,500-sheet×2)

Item		Description	
Paper Supply Method	(No. Sheets: 500 2 cassettes/No.	Feed & reverse roller method (No. Sheets: $500$ sheets ( $80 \text{ g/m}^2$ ) × 1 cassette, 1,500 sheets ( $80 \text{ g/m}^2$ ) × 2 cassettes/No. Sheets: $550$ sheets ( $64 \text{ g/m}^2$ ) × 1 cassette, 1,750 sheets ( $64 \text{ g/m}^2$ ) × 2 cassettes)	
Paper Size	Cassette 5  Cassette 6, 7	A3, A4-R, A4, A5-R, B4, B5-R, B5, 216×340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, 12×18", Oficio II, Folio, 8K, 16K-R, 16K  A4.B5, Letter	
Supported Paper	Paper weight: 60	Paper weight: 60 to 250 g/m <sup>2</sup> Media types: Plain, Recycled, Thick, Coated*1	
Dimensions (W × D × H)		23.55" × 28.35" × 21.11" 598 × 720 × 536 mm	
Weight	Approx. 112.5 lb	Approx. 112.5 lbs. / Approx. 51 kg	

<sup>\*1</sup> Only Cassette 5 can be used.

### Side Feeder (3,000-sheet)

Item	Description
Paper Supply Method	Feed & reverse roller method (No. Sheets: 3,000, 80 g/m²/No. Sheets: 3,500, 64 g/m²)
Paper Size	A4, B5, Letter
Supported Paper	Paper weight: 52 to 300 g/m <sup>2</sup> Media types: Plain, Recycled, Special paper
Dimensions (W × D × H)	13.82" × 23.04" × 18.47" 351 × 585 × 469 mm
Weight	Approx. 58.5 lbs. / Approx. 26.5 kg

# 4,000-Sheet Finisher

Item			Description
Number of Trays		3 trays	
Paper Size (80 g/m²)		A3, B4, B5-R, 216×340 r Folio, 8K, 16K-R: 1,500 s A4-R, A4, B5, Letter-R, I A5-R, B6-R, Statement-F	Letter, 16K: 4,000 sheets
	Tray B	A3, A4-R, A4, A5-R, A6-R, B4, B5-R, B5, B6-R, 216×340 mm, Ledger, Letter-R, Letter, Legal, Statement-R, Executive, 12×18", Oficio II, Folio, 8K, 16K-R, 16K, ISO B5, Envelope C4, Cardstock, Oufuku hagaki (Return postcard): 200 sheets	
Supported Paper Weight		Stapling: 90 g/m <sup>2</sup> or less	
Stapling	Maximum Number	A3, B4, 216×340 mm, Ledger, Legal, 12×18", Oficio II, 8K	30 sheets (52 to 105 g/m²) 2 cover sheet only (106 to 300 g/m²)
		A4-R, A4, B5-R, B5, Letter-R, Letter, 16K-R, 16K	65 sheets (52 to 90 g/m²) 55 sheets (91 to 105 g/m²) 2 cover sheet only (106 to 300 g/m²)
	Media types	Plain, Preprinted, Bond, Recycled, Letterhead, Color, Prepunched, Thick, Coated, High Quality, Custom 1 to 8	
Dimensions (W × D × H)		23.91" × 26.32" × 41.79" 607.2 × 668.5 × 1,061.3 mm	
Weight		Approx. 88.2 lbs. or less / Approx. 40 kg or less	
Space Required (W × D)		28.55" × 26.32"	
(When pulling the tray)		725 × 668.5 mm	

# **Punch Unit (For 4,000-Sheet Finisher)**

Item			Description
Paper Size			A3, A4-R, A4, A5-R, B4, B5-R, B5, Ledger, Letter-R, Letter, Legal, Statement-R, 12×18", Folio, 8K, 16K, 16K-R
		3 Hole	A3, A4, Letter, Ledger, 12×18", 8K, 16K
cm 2 Hole 4 Hole		2 Hole	A3, A4-R, A4, A5-R, B4, B5-R, B5, Ledger, Letter-R, Letter, Legal, Statement-R, 12×18", Folio, 8K, 16K, 16K-R
		4 Hole	A3, A4, Letter, Ledger, 12×18", 8K, 16K
Paper Weight			45 - 300 g/m <sup>2</sup>
Media types			Plain, Rough, Preprinted, Bond, Recycled, Letterhead, Color, Thick, Coated, High Quality, Custom 1 to 8

## **Mailbox (For 4,000-Sheet Finisher)**

Item	Description
Number of Trays	7 trays
Paper Size (80 g/m <sup>2</sup> )	A3, B4, Ledger, Legal, 8K: 50 sheets A4-R, A4, A5-R, B5-R, B5, 216×340 mm, Letter-R, Letter, Statement-R, Executive, Oficio II, Folio, 16K-R, 16K: 100 sheets
Dimensions (W × D × H)	20.08" × 15.75" × 18.51" 510 × 400 × 470 mm
Weight	Approx. 22.1 lbs. / Approx. 10 kg

## Folding Unit (For 4,000-Sheet Finisher)

Item	Description	
Sizes	Bi-Fold	A3, A4-R, B4, Ledger, Letter-R, Legal, Oficio II, 8K
	Saddle Stitch	A3, A4-R, B4, Ledger, Letter-R, Legal, Oficio II, 8K
	Tri-Fold	A4-R, Letter-R
Number of Sheets	Bi-Fold	5 sheets (60 to 90 g/m²) 3 sheets (91 to 120 g/m²) 1 sheet (121 to 256 g/m²)
	Saddle Stitch	20 sheets (60 to 90 g/m <sup>2</sup> ) 13 sheets (91 to 105 g/m <sup>2</sup> ) 1 cover sheet only (106 g/m <sup>2</sup> or heavier)
	Tri-Fold	5 sheets (60 to 90 g/m²) 3 sheets (91 to 120 g/m²)
Maximum Number for Storage (80 g/m <sup>2</sup> )	Bi-Fold	5 sheets or less per set: 30 sets or more 6 to 10 sheets per set: 20 sets or more 11 to 20 sheets per set: 10 sets or more
	Saddle Stitch	5 sheets or less per set: 30 sets or more 6 to 10 sheets per set: 20 sets or more 11 to 20 sheets per set: 10 sets or more
	Tri-Fold	1 sheet per set: 30 sets or more 2 to 5 sheets per set: 5 sets or more
Media types	Bi-Fold	Plain, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Thick, Coated, High Quality, Custom 1 to 8
	Saddle Stitch	Plain, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Thick, Coated, High Quality, Custom 1 to 8
	Tri-Fold	Plain, Recycled, Preprinted, Bond, Color, Prepunched, Letterhead, Coated, High Quality, Custom 1 to 8

# **Banner Tray**

Item	Description
Max. number of sheets	10 sheets (Multipurpose Tray)
Paper length	210 to 304.8 mm (8.26" to 12")
Paper width	Max. 1220.0 mm (48")
Paper Type	Paper weight: 136 to 163 g/m <sup>2</sup> Paper type: Heavy 2
Dimensions (W × D × H)	9.85" × 14.73" × 5.99" 250 × 374 × 152 mm
Weight	Approx. 0.8 lbs. / Approx. 0.352 kg



Consult your dealer or service representative for recommended paper types.

### **Glossary**

#### Accessibility

The machine is designed featuring good accessibility even for the elderly and those who are physically challenged or visually impaired. The angle of the touch panel is adjustable.

#### **Apple Talk**

AppleTalk offers file sharing and printer sharing and it also enables you to utilize application software that is on another computer on the same AppleTalk network.

#### **Auto Form Feed Timeout**

During data transmission, the machine may sometimes have to wait until receiving the next data. This is the auto form feed timeout. When the preset timeout passes, the machine automatically prints output. However, no output is performed if the last page has no data to be printed.

#### Auto-IP

Auto-IP is a module that enables dynamic IPv4 addresses to be assigned to a device on startup. However, DHCP requires a DHCP server. Auto-IP is a server-less method of choosing an IP address. IP addresses between 169.254.0.0 to 169.254.255.255 are reserved for Auto-IP and assigned automatically.

#### **Auto Paper Selection**

A function to automatically select paper in the same size as originals when printing.

#### Auto Sleep

A mode designed for electrical power saving, activated when the machine is left unused or there is no data transfer for a specific period. In Sleep mode, power consumption is kept to a minimum.

#### **Bonjour**

Bonjour, also known as zero-configuration networking, is a service that automatically detects computers, devices and services on an IP network. Bonjour, because an industry-standard IP protocol is used, allows devices to automatically recognize each other without an IP address being specified or DNS server being set. Bonjour also sends and receives network packets by UDP port 5353. If a firewall is enabled, the user must check that UDP port 5353 is left open so that Bonjour will run correctly. Some firewalls are set up so as to reject only certain Bonjour packets. If Bonjour does not run stably, check the firewall settings and ensure that Bonjour is registered on the exceptions list and that Bonjour packets are accepted. If you install Bonjour on Windows XP Service Pack 2 or later, the Windows firewall will be set up correctly for Bonjour.

#### **Custom Box**

The Custom Box function stores print data for each individual user on the printer and allows the user to print single or multiple copies of the stored data later using the printer's operation panel.

#### **Default Gateway**

This indicates the device, such as a computer or router, that serves as the entrance/exit (gateway) for accessing computers outside the network that you are on. When no specific gateway is designated for a destination IP address, data is sent to the host designated as the Default Gateway.

#### **DHCP (Dynamic Host Configuration Protocol)**

Dynamic Host Configuration Protocol (DHCP) that automatically resolves IP addresses, subnet masks, and gateway addresses on a TCP/IP network. DHCP minimizes the load of network management employing a large number of client computers because it relieves individual clients including printers from the IP address being assigned.

#### DHCP (IPv6)

DHCP (IPv6) is the next-generation of the Internet's Dynamic Host Configuration Protocol and supports IPv6. It extends the BOOTP startup protocol that defines the protocols used for transferring configuration information to hosts on the network. DHCP (IPv6) permits the DHCP server to use its expanded functionality to send configuration parameters to an IPv6 node. Because the network addresses that can be used are allocated automatically, the IPv6 node management workload is reduced in systems where the administrator has to exercise close control over IP address allocation.

#### dpi (dots per inch)

A unit for resolution, representing the number of dots printed per inch (25.4 mm).

#### **EcoPrint Mode**

A printing mode that helps save toner. Copies made in this mode are thus lighter than normal.

#### **Emulation**

The function to interpret and execute other printers' page description languages. The machine emulates operation of PCL6, KPDL3 (PostScript 3 compatible).

#### **Enhanced WSD**

Kyocera's proprietary web services.

#### **FTP (File Transfer Protocol)**

A protocol to transfer files on the TCP/IP network, whether the Internet or an intranet. Along with HTTP and SMTP/POP, FTP is now frequently used on the Internet.

#### Grayscale

A computer color expression. Displayed images of this sort are typically composed of shades of gray, varying from black at the weakest intensity to white at the strongest, without any other colors. Gray levels are displayed in numerical levels: that is, white and black only for 1 bit; 256 gray levels (including white and black) for 8 bits; and 65,536 gray levels for 16 bits.

#### Help

A ? (Help) key is provided on this machine's operation panel. If you are unsure of how to operate the machine, would like more information on its functions or are having problems getting the machine to work properly, press the ? (Help) key to view a detailed explanation on the touch panel.

#### **IP Address**

An Internet protocol address is a unique number that represents a specific computer or related device on the network. The format of an IP address is four sets of numbers separated by dots, e.g. 192.168.110.171. Each number should be between 0 and 255.

#### **IPP**

IPP (Internet Printing Protocol) is a standard that uses TCP/IP networks such as the Internet to enable print jobs to be sent between remote computers and printers. IPP is an extension of the HTTP protocol used to view websites and enables printing to be carried out via routers on printers in remote locations. It also supports the HTTP authentication mechanisms along with SSL server and client authentication as well as encryption.

#### Job Box

The Job Box function stores print data on the printer and allows users to print single or multiple copies of the stored data later using the printer's operation panel.

#### **KPDL** (Kyocera Page Description Language)

Kyocera's PostScript page description language compatible with Adobe PostScript Level 3.

#### Multipurpose (MP) Tray

The paper supply tray on the front side of the machine. Use this tray instead of the cassettes when printing onto envelopes, Hagaki (Cardstock), transparencies, or labels.

### **NetBEUI (NetBIOS Extended User Interface)**

An interface, developed by IBM in 1985, as an update from NetBIOS. It enables more advanced functions on smaller networks than other protocols such as TCP/IP, etc. It is not suitable for larger networks due to lack of routing capabilities to choose the most appropriate routes. NetBEUI has been adopted by IBM for its OS/2 and Microsoft for its Windows as a standard protocol for file sharing and printing services.

#### **Outline font**

With outline fonts, character outlines are represented with numerical expressions and fonts can be enlarged or reduced in different ways by changing the numeric values of those expressions. Printing remains clear even if you enlarge fonts, since the characters are defined with outlines represented with numerical expressions. You can specify the font size in steps of 0.25 points up to 999.75 points.

#### PDF/A

This is "ISO 19005-1. Document management - Electronic document file format for long-term preservation - Part 1: Use of PDF (PDF/A)", and is a file format based on PDF 1.4. It has been standardized as ISO 19005-1, and is a specialization of PDF, which has been mainly used for printing, for long-term storage. A new part, ISO 19005-2 (PDF/A-2), is currently being prepared.

#### **POP3 (Post Office Protocol 3)**

A standard protocol to receive E-mail from the server in which the mail is stored on the Internet or an intranet.

#### **PostScript**

A page description language developed by Adobe Systems. It enables flexible font functions and highly-functional graphics, allowing higher quality printing. The first version called Level 1 was launched in 1985, followed by Level 2 that enabled color printing and two-byte languages (e.g. Japanese) in 1990. In 1996, Level 3 was released as an update for the Internet access and PDF format as well as gradual improvements in implementation technologies.

#### PPM (prints per minute)

This indicates the number of A4 size printouts made in one minute.

#### **Printer Driver**

The software to enable you to print data created on any application software. The printer driver for the machine is contained in the DVD enclosed in the package. Install the printer driver on the computer connected to the machine.

#### RA (Stateless)

The IPv6 router communicates (transmits) information such as the global address prefix using ICMPv6. This information is the Router Advertisement (RA).

ICMPv6 stands for Internet Control Message Protocol, and is a IPv6 standard defined in the RFC 2463 "Internet Control Message Protocol (ICMPv6) for the Internet Protocol Version 6 (IPv6) Specification".

#### **RAM Disk**

Using part of the printer's memory as a virtual disk, you can set any amount of memory from overall printer memory as a RAM disk in order to use features such as electronic sorting (shortening print time).

#### Send as E-mail

A function to send the image data stored in the machine as an E-mail attachment. E-mail addresses can be selected from the list or entered at each time.

#### SMTP (Simple Mail Transfer Protocol)

A protocol for E-mail transmission over the Internet or an intranet. It is used for transferring mail between mail servers as well as for sending mail from clients to their servers.

#### **Status Page**

The page lists machine conditions, such as the memory capacity, total number of prints and scans, and paper source settings.

#### **Subnet Mask**

The subnet mask is a way of augmenting the network address section of an IP address.

A subnet mask represents all network address sections as 1 and all host address sections as 0. The number of bits in the prefix indicates the length of the network address. The term "prefix" refers to something added to the beginning and, in this context, indicates the first section of the IP address. When an IP address is written, the length of the network address is indicated by the prefix length after a forward slash (/). For example, "24" in the address "133.210.2.0/24". In this way, "133.210.2.0/24" denotes the IP address "133.210.2.0" with a 24-bit prefix (network section). This new network address section (originally part of the host address) made possible by the subnet mask is referred to as the subnet address. When you enter the subnet mask, be sure to set the "DHCP" setting to "Off".

#### TCP/IP (Transmission Control Protocol/Internet Protocol)

TCP/IP is a suite of protocols designed to define the way computers and other devices communicate with each other over a network.

#### TCP/IP (IPv6)

TCP/IP (IPv6) is based on the current Internet protocol, TCP/IP (IPv4). IPv6 is the next-generation Internet protocol and expands the available address space, which resolves the problem of the lack of addresses under IPv4, while also introducing other improvements such as additional security functionality and the capacity to prioritize data transmission.

#### TWAIN (Technology Without An Interesting Name)

A technical specification for connecting scanners, digital cameras, and other image equipment to computers. The TWAIN compatible devices enable you to process image data on any relevant application software. TWAIN is adopted on a large amount of graphic software (e.g. Adobe Photoshop) and OCR software.

#### **USB (Universal Serial Bus) 2.0**

A USB interface standard for Hi-Speed USB 2.0. The maximum transfer rate is 480 Mbps. This machine is equipped with USB 2.0 for high-speed data transfer.

#### WIA (Windows Imaging Acquisition)

A function to import images supported after Windows Me/XP from digital cameras and other peripheral devices. This function replaces what TWAIN used to do. The feature is provided as a part of Windows functions and improves ease of operation, so that you import images directly to My Computer without using any application.

#### WPS (Wi-Fi Protected Setup)

WPS is a network security standard created by Wi-Fi Alliance, to make it easy to connect with the wireless devices and set up the Wi-Fi Protected Access. The WPS-supported services can connect to the wireless access points by pushing a button or entering passphrases.

# Index

Numerics 2-sided/Book Original 6-68 4,000-Sheet Finisher 11-4
A Accessibility 11-28 Accessibility Functions 2-28 Address Book 3-25 Adding 3-25 Contact 3-25 Deleting 3-31 Editing 3-30
Group 3-29 Adjusting the Operation Panel Angle 2-13 Adjustment/Maintenance 8-72, 10-39 Auto Color Correction 8-73 Auto Drum Refresh 8-74 Background Density Adjustment 8-72
Calibration 8-74, 10-42 Calibration Cycle 8-73 Contrast 8-74 Correct Paper Curl 8-74 Correcting Black Lines 8-72
Density Adjustment 8-72 Developer Refresh 8-73, 10-42 Display Brightness 8-73 Drum Refresh 1 8-73, 10-41 Drum Refresh 2 8-73, 10-41
Memory Diagnostics 8-74 Sharpness Adjustment 8-72 Silent Mode 8-73 System Initialization 8-72 Tone Curve Adjustment 8-73, 10-39
AirPrint 4-16 Apache License (Version 2.0) 1-14
AppleTalk 11-28 Application 5-12, 8-75 Auto Error Clear 8-68
Auto Form Feed Timeout 11-28 Auto Image Rotation 6-63 Default 8-19 Auto Panel Reset 8-68
Auto Paper Selection 11-28 Auto Sleep 2-42, 11-28 Auto-IP 11-28 Settings 8-47, 8-52
Automatic 2-Sided Print Function 1-17
B Background Density Adjustment 6-34, 8-72 Default 8-18 Banner Printing 4-9 Banner Tray 11-5
Using 4-12 Bates Stamp 6-60 Bluetooth Settings 8-66

В	onjour 11-28 Settings 8-54
В	cooklet 6-43
В	order Erase 6-41
	order Erase 6-41

Common Settings 8-10 Customize Status Display 8-29 Default Screen 8-10 Display Status/Log 8-28 Error Handling 8-16 Function Defaults 8-18 Function Key Assignment 8-31 Keyboard Layout 8-11 Language 8-10 Low Toner Alert 8-28 Manual Staple 8-27 Measurement 8-15 Message Banner Print 8-28 Message Board Settings 8-30 Numeric Keypad Settings 8-31 Offset Documents by Job 8-27	Custom Box 5-47, 11-28 Copying Documents 5-59 Creating a New Custom Box 5-52 Deleting Custom Box 5-54 Deleting Documents 5-61 Editing Custom Box 5-53 Joining Documents 5-60 Moving Documents 5-58 Printing Documents 5-55 Saving Scanned Documents 5-56 Send to Me from BOX (E-mail) 5-58 Sending Documents 5-57 Storing Documents 5-54 Customize Status Display 8-29
Offset One Page Documents 8-28	Data Sanitization 8-65
Orientation Confirmation 8-18	Data Security 8-64
Original/Paper Settings 8-11	Data Security Kit 11-6
Paper Output 8-17 Prevent Light Reflection 8-31	Date Format 8-68
Remote Printing 8-30	Date/Time 8-68
Show Power Off Message 8-31	Date/Timer/Energy Saver 8-68 Auto Error Clear 8-68
Sound 8-10	Auto Panel Reset 8-68
System Stamp 8-21	Date Format 8-68
USB Keyboard Type 8-21	Date/Time 8-68
Confirmation Screen of Destinations 5-44	EnergySaver RecoveryLevel 8-70
Connecting	Error Clear Timer 8-69
LAN Cable 2-7 Power Cable 2-10	Error Job Skip 8-69
USB cable 2-10	Interrupt Clear Timer 8-69
Connection Method 2-6	Low Power Timer 8-69
Continuous Scan 6-63	Panel Reset Timer 8-69 Ping Timeout 8-71
Default 8-20	Sleep Level 8-70
Contrast 6-33, 8-74	Sleep Rules 8-70
Control Section of the Finisher 2-5	Sleep Timer 8-69
Conventions Used in This Guide XXII	Time Zone 8-68
Copy 5-17	Unusable Time 8-69
Copy Settings 8-32	Weekly Timer Settings 8-71
Auto % Priority 8-32 Auto Image Rotation Action 8-32	
Auto Paper Selection 8-32	
Paper Selection 8-32	
Paper Size for Small Original 8-32	
Preset Limit 8-32	
Quick Setup Registration 8-32	
Reserve Next Priority 8-32	
Copy Speed 11-21	
Copy tray 11-5	
Count by Paper Size 0.45	
Count by Paper Size 9-45 Counter 2-60	
Each Job Account 9-47	
Print Accounting Report 9-48	
Total Accounting 9-47	
Unknown ID Job 9-52	
Cover 6-49	

Default	Destination
Auto Image Rotation (Copy) 8-19	Adding a Destination 3-25
Backgrnd Density (Copy) 8-18	Address Book 3-25
BackgrndDens.(Send/Store) 8-18	Address Book Type 8-67
Border Erase Default 8-19	Check before Send 5-44, 8-33
Border Erase to Back Page 8-19	Checking and Editing 5-43
Collate/Offset 8-19	Choosing from the Address Book 5-40
Color Selection 8-18	Choosing from the One Touch Key 5-42
Color TIFF Compression 8-19	Choosing from the Speed Dial 5-42
Cont. Scan (Copy) 8-20	Confirmation Screen of Destinations 5-44
Continuous Scan (Copy) 8-20	Entry Check for New Dest. 8-33
Continuous Scan (FAX) 8-21	Multi Sending 5-37
Continuous Scan (Send/Store) 8-21	Narrow Down 8-67
DP Read Action 8-20	One Touch Key 3-32
EcoPrint 8-19	Recall 5-45
E-mail Subject/Body 8-20	Search 5-41
FAX TX Resolution 8-18	Sort 8-67
File Format 8-18	Developer Refresh 8-73, 10-42
File Name Entry 8-20	Device 7-13
File Separation 8-20	Device Information 2-20
High Comp. PDF Image 8-19	DHCP 11-29
i-FAX Subject/Body 8-20	Settings 8-47, 8-52
Image Quality (File Format) 8-19	DHCP (IPv6) 11-29
JPEG/TIFF Print 8-19	Settings 8-48, 8-53
Margin 8-19	Display Setting Screen 2-20
OCR Text Recognition 8-20	Display Status/Log 8-28
Org. Image (Send/Store) 8-18	Disposing of the Punch Waste
Orig. Orient.(Send/Store) 8-18	4,000-Sheet Finisher 10-13
Orig. Orientation (Copy) 8-18	Document Box
Original Image (Copy) 8-18	Basic Operation 5-48
PDF/A 8-20	Custom Box 5-47
Prevent Bleed(Send/Store) 8-18	Job Box 4-18, 5-47
Prevent Bleed-thru (Copy) 8-18	Removable Memory Box 5-47
Primary OCR Language 8-20	Document Box/Removable Memory
Repeat Copy 8-20	Custom Box 8-38
Scan Resolution 8-18	FAX Box 8-38
Skip Blank Page (Copy) 8-20	Job Box 8-38
Skip Blank Page (Send/Store) 8-20	Polling Box 8-38
Toner Save Level (EcoPrint) 8-19	Quick Setup Registration 8-39
XPS Fit to Page 8-19	Document Processor 2-2
Zoom 8-19 Default Cataway 11 38	Loading Originals 5-3
Default Gateway 11-28	Originals Supported by the Document Processor 5
Settings 8-47, 8-52 Default Screen 8-10	3 Part Names 2-2
Delete after Printed 6-76	
Delete after Transmitted 6-76	Document Table 11-5
Density 6-31	DP Read Action 6-67, 8-20
Density Adjustment 8-72	dpi 11-29 Drum Refresh 1 8-73, 10-41
Density Adjustment 6-72	Drum Refresh 2 8-73, 10-41
	DSM Scan 5-34
	Protocol Settings 8-55
	Duplex 6-46
	Duplex 0-40
	E
	EcoPrint 6-32, 11-29
	Default 8-19
	Printer 8-40

Edit Destination	First Copy Time 11-21
Address Book 3-25	First Print Time 11-22
Address Book Defaults 8-67	FMU Connection 5-36
Contact 3-25	Fold 6-24
Group 3-29	Folding Tray 2-5
One Touch Key 3-32	Folding Unit 11-4
E-mail Settings 2-67	Form Överlay 6-50
E-mail Subject/Body 6-75	Storing a Form 5-62
Default 8-20	Front Cover 2-2
Emulation 11-29	FTP 11-29
Selection 8-39	FTP Client (Transmission)
Emulation Upgrade Kit 11-6	Protocol Settings 8-54
, -	FTP Encrypted TX 6-76
Encrypted PDF Password 6-78	• • • • • • • • • • • • • • • • • • • •
Energy Saver Recovery Level 2-42, 8-70	FTP Server (Reception)
Energy Saving Control Function 1-17	Protocol Settings 8-54
Energy Star (ENERGY STAR®) Program 1-17	Function Key Assignment 2-14, 8-31
Enhanced WSD 11-29	Functions Key 2-21
Protocol Settings 8-57	
Enhanced WSD over SSL	G
Protocol Settings 8-57	Glossary 11-28
Enter key 2-26	Google Cloud Print 4-16
Entering Numbers 2-25	GPL/LGPL 1-12
Entry	Grayscale 11-29
File Name 6-65	Group Authorization Settings 9-19
Subject 6-75	Group Authorization 9-19
Envelopes 11-17	Group List 9-20
Environment 1-3	Guest Authorization Set. 9-22
Erase Shadowed Areas 6-51	Guest Authorization 9-22
Error Clear Timer 8-69	
Error Handling 8-16	Guest Property 9-23
Duplexing Error 8-16	Guides Provided with the Machine XIX
Finished Pages Exceeded 8-16	
Finishing Error 8-16	Н
Inserted Paper Mismatch 8-16	Handles 2-2
No Staple Error 8-16	Hard Disk/SSD Initialization 8-64
Paper Jam before Staple 8-17	Help 11-29
	Help Screen 2-27
Paper Mismatch Error 8-16	Highlighter 6-31
Punch Waste Full Error 8-16	Home 8-31
Skewed or multi originals 8-17	Customize Desktop 2-17
eSCL	Customize Taskbar 2-17
Protocol Settings 8-57	Wallpaper 2-17
eSCL over SSL	Home Screen 2-16
Protocol Settings 8-57	Host Name 8-47
	HTTP
F	
FAX 8-39	Protocol Settings 8-56
FAX Kit 11-5	HTTPS
FAX RX Result Report 8-43	Protocol Settings 8-56
File	
Format 6-70	
PDF 6-72	i-FAX
Separation 6-74	Protocol Settings 8-55
·	Image Repeat 6-56
File Format 6-70	Insert Sheets/Chapters 6-53
Default 8-18	Install
File Management Utility 5-36	Macintosh 2-55
File Name Entry 6-65	Software 2-47
Default 8-20	Uninstalling 2-53
File Separation 6-74	Windows 2-48
Default 8-20	
File Size Confirmation 6-76	Interface Block Setting 8-63

Proxy 8-58 Internet FAX Kit 11-6 Internet Browser 5-68 Internet FAX Kit 11-6 Interrupt Copy 5-20 IP Address 11-29 Settings 8-47,8-52 IPP 11-30 Protocol Settings 8-56 IPP over SSL Protocol Settings 8-56 IPP over	Internet 8-75	JPEG/TIFF Print 6-78
Internet EAX kit 1-1-6 Interrupt Copy 5-20 IP Address 11-29 Settings 8-47, 8-52 PP 11-30 Protocol Settings 8-56 IPP over SSL Protocol Settings 8-56 IPSee 8-54  Available Status 7-2 Canceling 7-11 Checking Status 7-2 Checking Status 7-2 Detailed Information 7-8 Detailed Information of Histories 7-10 Displaying Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-38 Editing an Account 9-38 Editing an Account 9-39 Editing an Accounting 9-34 FAX Driver 9-43 Job Accounting 4-9 Overview of Job Accounting 9-34 FAX Driver 9-43 Job Accounting Account 9-39 Editing an Account 9-39 Editing an Account 9-39 Editing an Accounting 4-9 Overview of Job Accounting 9-34 FAX Driver 9-43 Job Accounting Accounting 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-52, 11-30 Detellon of Job Retention 8-38 Form for Form Overlay 5-52 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention	Proxy 8-58	Default 8-19
Internet FAX Kit 1-6 Interrupt Copy 5-20 IF Address 11-29 Settings 8-47, 8-52 IPP 11-30 Protocol Settings 8-56 IPP over SSL Protocol Settings 8-56 IPSec 8-54  Job Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information 7-8 Detailed Information 7-10 Displaying Status Screens 7-3 Displaying Istory Screen 7-10 Displaying Istory Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Proorty Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-38 Enabling Job Accounting 9-34 Apply Limit 9-50 Copy-Printer Count 9-31 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deteiting an Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Verview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Verview of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Ouick Copy Job Retention 8-38 Repeat Copy Job Reten	•	
Interrupt Copy 5-20 IPR Address 11-29 Settings 8-47, 8-52 IPP 11-30 Protocol Settings 8-56 IPP over SSL Protocol Settings 8-56 IPP over SSL J Job Available Status 7-2 Canceling 7-11 Checking Status 7-2 Detailed Information 7-8 Detailed Information 7-8 Detailed Information of Histories 7-10 Details of the Status Screens 7-2 Pause and Resumption 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-38 Editing an Account 9-38 Editing an Account 9-38 Editing an Accounting 9-34 FAX Driver 9-43 Job Accounting 4-20 Setting 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deteltion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Prot and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Box 4-20  Revisional Hold Edit 1-15 Revidence 4-14 RPDL 11-30 Revptoard Layout 8-11 Reported Layout 8-11 Report SSL Revptoard Layout 8-11 Report SSL Report S		<b>K</b>
IP Address 11-29   Settings 8-47, 8-52   IPP 11-30   Protocol Settings 8-56   IPP over SSL   IPS over SS		
Settings 8-47,8-52 IPP 11-30 Protocol Settings 8-56 IPP over SSL Protocol Settings 8-56 IPSee 8-54  Job Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information 7-8 Detailed Information of Histories 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Overrider 7-11 Priority Overrider 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Enabling Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 Job Box 4-12, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat		•
IPP 11-30   Protocol Settings 8-56   IPP over SSL   IPS over SSL		
Protocol Settings 8-56 IPSec 8-54  Job Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information 7-8 Detailed Information of Histories 7-10 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-33 Print Accounting Report 9-48 Logint 9-49 Logout 9-49 Coverview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Cuick Copy Job Retention 8-38 Repeat Copy Job Retention		
IPP over SSL Protocol Settings 8-56 IPSec 8-54  J J J J Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screens 7-10 Displaying History Screens 7-10 Displaying History Screens 7-2 Pause and Resumption 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-36 Apply Limit 9-50 Copy/Printer Count 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-34 FAX Driver 9-43 Job Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Prof and Hold Box 4-22 Quick Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Brox from a Computer and Storing the Job Box 4-20 Mixed Size Originals 6-20		KPDL 11-30
Protocol Settings 8-56 IPSec 8-54  J J J Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information 7-8 Detailed Information 7-8 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Recordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-31 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Overview of Job Accounting 9-34 FAX Driver 9-43 Dob Rote Area Sceepes Printed 9-46 Restricting the Use of the Machine 9-37 TWANIN 9-42 Win 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20 Mixed Size Originals 6-20	<u> </u>	
J Job Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screens 7-3 Displaying History Screens 7-10 Displaying History Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Poleting an Accounting 9-34 FAX Driver 9-43 Job Accounting Accounting 9-34 FAX Driver 9-43 Job Accounting Accounting 9-34 FAX Driver 9-43 Job Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TVANIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Profor and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20 Miscel Size Originals 6-20 All Residency 2-7 All Interface 8-49 Language 8-10 Large Capacity Feeder Loading Paper 3-8 Large Capacity Side Feeder (500, 1,500-sheet*2) 11-4 Lage Restriction on Copying 1-9 Legal Res		L
Job Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information 7-8 Detailed Information of Histories 7-10 Displaying History Screen 7-3 Displaying History Screen 7-3 Displaying History Screen 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Accounting 9-34 FAX Driver 9-43 Job Accounting 9-34 FAX Driver 9-43 Job Accounting 9-34 FAX Driver 9-43 Print Accounting 9-34 Print Accounting Report 9-48 Printing 9-40 Restricting 9-8-8 Amilbox 11-4 Min Power Switch 2-2 Management 9-1 Manual Setting (Pv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Banner Print 8-28 Mincol Size Originals 6-20 Mirror Image 6-64 Mixed Size Originals 6-20 Mirror Image 8-64 Mixed Size Originals 6-20	<u> </u>	Label 11-16
Job Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleiting an Account 9-38 Enabling Job Accounting 9-34 FAX Diver 9-43 Job Accounting Access 9-35 Login 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TIVAIN 9-41 Walh 9-42 Job Box 4-18, 5-62, 11-30 Deleitin of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Message Banner Print 8-2 Message Banner Print 8-2 Message Banner Print 8-2 Mixed Size Originals 6-20 All All All Status Reader (500, 1,500-sheet×2) 11-4 Langing Repert 3-8 Large Capacity Side Feeder (500, 1,500-sheet×2) 11-4 Langing Paper 3-8 Large Capacity Side Feeder (500, 1,500-sheet×2) 11-4 Lapia Restriction on Copying 1-9 Large Capacity Side Feeder (500, 1,500-sheet×2) 11-4 Lapia Restriction on Copying 1-9 Large Capacity Side Feeder (500, 1,500-sheet×2) 11-4 Lapia Restriction on Copying 1-9 Large Capacity Side Feeder (500, 1,500-sheet×2) 11-4 Lapia Restriction on Copying 1-9 Large Restriction on Copying 1-9 Lagal Restriction on Copy	1P3eC 6-34	
Job Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information 7-8 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Enabling Job Accounting 9-33 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Rocess 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-38 Print Accounting Access 9-35 TWAIN 9-41 WIA 9-42 Job Box 4-16, 5-62, 11-30 Deletion of Job Retention 8-38 Porm for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Language 8-10 Large Capacity Feeder Loading Paper 1-8 Large Capacity Feeder Loading Paper 3-8 Large Capacity Feeder Loading Paper 1-8 Large Capacity Feeder Loading Paper 1-9 Legal Information 1-11 Legal Restriction on Copyring 1-9 Legal Information 1-10 Loading Originals in the Document Processor 5-3 Placing Originals on the Platen 5-2 Loading Originals on the		
Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Enabling Job Accounting 9-34 FAX Diver 9-43 Job Accounting Access 9-35 Login 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 Win 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20 Stored Job Box 4-20 Mixed Size Originals 6-20 Alarge Capacity Feeder Loading Paper 3-8 Large Capacity Feeder Loading Paper 3-8 Large Capacity Feeder Loading Paper 3-8 Large Capacity Side Feeder (500, 1,500-sheet*2) 11-4 Large Capacity Side Feeder (500, 1,500-sheet*2) 11-4 Large Capacity Side Feeder (500, 1,500-sheet*2) 11-4 Large Capacity Side Feeder Loading Paper 3-8 Large Capacity Side Feeder (500, 1,500-sheet*2) 11-4 Large Capacity Side Feeder (500, 1,500-sheet*2) 11-4 Large Capacity Side Feeder Loading Paper 3-8 Large Capacity Side Feeder (500, 1,500-sheet*2) 11-4 Large Capacity Side Feeder Loading Paper 3-8 Large Capacity Side Feeder Loading Paper 3-8 Large Capacity Side Feeder (500, 1,500-sheet*2) 11-4 Legal Restriction on Copying 1-9 Loading Originals 5-2 Loading Paper 10-9 Protocol Settings 8-16 Legal Information 1-11 Legal Restriction on Copying 1-9	J	<del>_</del>
Available Status 7-2 Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Coverview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Overview of Job Accounting 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8	Job	
Canceling 7-11 Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-39 Editing an Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Coveriew of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Repeat Opy Job Retention 8-38 Repeat Copy Job Retenti	Available Status 7-2	
Checking History 7-9 Checking Status 7-2 Detailed Information 7-8 Detailed Information of Histories 7-10 Detailes of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box 4-20  Logal Restriction on Copying 1-9 Legal Restriction on Caphing in the Document Processor 5-3 Placing Originals in the Document Processor 5-3 Placing Originals on the Platen 5-2 Loading Originals on the Platen 5-2 Loading Originals on the Platen 5-2	Canceling 7-11	• •
Checking Status 7-2 Detailed Information 7-8 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Accounting 9-33 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Repeat Ozopy Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Ozop Box 4-20  Maniformation 1-11 Legal Restriction on Copying 1-9 Legal Restriction on Copy		<b>.</b>
Detailed Information 7-8 Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Coverview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Protocol Settings 8-56 Legal Information 1-11 Legal Restriction on Copying 1-9 Legal Restriction on Scanning 1-9 Limited Use of This Product 1-10 Loading Originals 5-2 Loading Originals on the Platen 5-2 Loading Paper 10-9 Load Authorization 9-18 Loging Originals on the Platen 5-2 Loading Paper 10-9 Load Authorization 9-18 Loging Originals on the Platen 5-2 Loading Paper 10-9 Load Authorization 9-18 Login 2-29 Logout 2-30 Long Original S-2 Loading Paper 10-9 Load Authorization 9-18 Loging Paper 10-9 Load Authorization 9-18 Loging Tripials 5-2 Loading Paper 10-9 Load Authorization 9-18 Login 1-10 Legal Restriction on Copying 1-9 Load Authorization 9-18 Loging Originals 5-2 Loading Paper 10-9 Load Authorization 9-18 Login 2-29 Load Authorization 9-18 Login Yellow 1-10 Legal Restriction on Copying 1-9 Legal		• • • • • • • • • • • • • • • • • • • •
Detailed Information of Histories 7-10 Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 CopylPrinter Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Einabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of This Product 1-10 Loading Originals in the Document Processor 5-3 Placing Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Login 19-29 Loging Intero Use of This Product 1-10 Loading Originals in the Document Processor 5-3 Placing Originals on the Platen 5-2 Loading Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login Paper 10-9 Logoult 2-30 Login 19-29 Logout 2-30 Login 19-20 Loading Originals on the Platen 5-2 Loading Origi	•	
Details of the Status Screens 7-3 Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Overview of Job Accounting 9-34 Print Accounting Report 9-48 Printing 9-40 Restriction on Scanning 1-9 Limited Use of This Product 1-10 Loading Originals in the Document Processor 5-3 Placing Originals on the Platen 5-2 Loading Paper 10-9 Load Authorization 9-18 Looy Power Mode 2-41 Low Power Wode 2-41 Low Power Wod		
Displaying History Screen 7-10 Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44  Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-39 Editing an Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Coverview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20		
Displaying Status Screens 7-2 Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Editing an Account 9-38 Editing an Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Loading Originals in the Document Processor 5-3 Placing Originals in the Document Processor 5-3 Placing Originals 5-2 Loading Originals in the Document Processor 5-3 Placing Originals in the Document Processor 1-9 Loading Paper 10-9 Load Authorization 9-18 Login 2-29 Logout 2-30 Log Originals in the D		
Pause and Resumption 7-11 Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Coyorive of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box 4-20  Loading Originals in the Document Processor 5-3 Placing Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-30 Long Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-30 Long Originals of 2-7 Loading Paper 10-9 Local Authorization 9-18 Login 2-30 L		
Priority Override 7-11 Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44  Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Coverview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Loading Originals on the Platen 5-2 Loading Pager 10-9 Load Authorization 9-18 Login 2-29 Logal Authorization 9-18 Login 2-29 Logout 2-30 Long Originals 6-77 Low Power Mode 2-41 Low Power Time 8-69 Logout 9-49 N Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Measurement 8-15 Media Type Setting 8-15 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Banner Print 8-28 Message Baner Print 8-28 Message Baner Print 8-20 Compilerations 6-21  Compilerations 6-20 Compilerations 6-8		Limited Use of This Product 1-10
Reordering Print Jobs 7-12 Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-38 Enabling Job Accounting 9-33 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Default 8-19 Loging Originals on the Platen 5-2 Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Long Original 6-77 Low Power Mode 2-41 Low Power Timer 8-69 Low Toner Alert 8-28 Lower Left Tray 2-2 LPD Protocol Settings 8-55  Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Memor Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Banner Print 8-20 Originals 6-20 Originals 6-20	·	Loading Originals 5-2
Sending the Log History 7-10, 8-44 Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Loading Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Log Original 6-77 Low Power Mode 2-41 Low Power Timer 8-69 Low Toner Alert 8-28 Lower Left Tray 2-2 LPD Protocol Settings 8-55  Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Memor Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Banner Print 8-20 Combinations of the Machine 9-18 Logdin Paper 10-9 Local Authorization 9-18 Login 2-29 Logout 2-30 Log Original 6-77 Low Power Mode 2-41 Low Power Timer 8-69 Low Toner Alert 8-28 Login 2-29 Logout 2-30 Log Original 6-77 Low Power Mode 2-41 Man Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Message Banner Print 8-28 Message Banner Print 8-28 Message Banner Print 8-20 Mirror Image 6-64 Mixed Size Originals 6-20 Occentionations of the feature and storing from the default and point and po	· · · · · · · · · · · · · · · · · · ·	Loading Originals in the Document Processor 5-3
Job Accounting 9-33 Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 8-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Local Authorization 9-18 Login 2-29 Logout 2-30 Long Original 6-77 Low Power Mode 2-41 Low Power Timer 8-69 Low Toner Alert 8-28 Lower Left Tray 2-2 LPD Protocol Settings 8-55  M Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Boanner Print 8-28 Message Boanner Print 8-29 Mirror Image 6-64 Mixed Size Originals 6-77 Low Power Mode 2-41 Low Power Timer 8-69 Low Power Timer 8-69 Low Power Mode 2-41 Low Power Mode 2-40 Logidation Print 8-69 Low Toner Metable Prover Beauting Prover Bea	<del>_</del>	Placing Originals on the Platen 5-2
Adding an Account 9-36 Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Login 2-29 Logout 2-30 Long Original 6-77 Low Power Mode 2-41 Low Power Fimer 8-69 Low Toner Alert 8-28 Lower Left Tray 2-2 LPD Protocol Settings 8-55  Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Stating (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memor Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 3-10 Cognitions 6-21		Loading Paper 10-9
Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Logout 2-30 Logout 2-41 Low Power Mode 2-41 Low Power Mode 2-41 Low Power Timer 8-69 Low Forer Alert 8-28 Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memor Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Baner Print 8-28 Message Baner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		Local Authorization 9-18
Apply Limit 9-50 Copy/Printer Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 Win 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Logout 2-30 Log Original 6-77 Low Power Mode 2-41 Low Power Timer 8-69 Low Toner Alert 8-28 Lower Left Tray 2-2 LPD Protocol Settings 8-55  M Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Banare Print 8-28	<del>-</del>	Login 2-29
CopylPrinter Count 9-51 Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Lomg Original 6-77 Low Power Mode 2-41 Low Power Timer 8-69 Low Toner Alert 8-28 Lower Left Tray 2-2 LPD Protocol Settings 8-55  M Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21	• • •	<del>-</del>
Counting the Number of Pages Printed 9-46 Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Coverview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Combinations of Power Mode 2-41 Low Power Mines 6-8 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Marillon 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Marillon 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Marillon 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Marillon 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Marillon 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Marillon 11-4 Main Power Switch 2-2 Man	Copy/Printer Count 9-51	
Default Setting 9-44 Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Low Power Timer 8-69 Low Toner Alert 8-28 Lower Left Tray 2-2 LPD Protocol Settings 8-55  M Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Banner Print 8-29 Mailbox 11-4 Main Power Switch 2-2 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin Power Switch 2-2 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin Power Switch 2-2 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin Power Switch 2-2 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin Power Switch 2-2 Manual Setting (IPv6	Counting the Number of Pages Printed 9-46	-
Deleting an Account 9-39 Editing an Account 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Low Toner Alert 8-28 Lower Left Tray 2-2 LPD Protocol Settings 8-55  M Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memor Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Compilations 6-21	Default Setting 9-44	
Editing an Accounting 9-38 Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Lower Left Tray 2-2 LPD Protocol Settings 8-55  Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21	Deleting an Account 9-39	
Enabling Job Accounting 9-34 FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job box 4-20  LPD Protocol Settings 8-55  M Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Memo Page 6-54 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21	Editing an Account 9-38	
FAX Driver 9-43 Job Accounting Access 9-35 Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memor Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21	Enabling Job Accounting 9-34	
Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Magnifying the View 2-28 Mailbox 11-4 Man Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin (Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memor Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20	FAX Driver 9-43	<u> </u>
Login 9-49 Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job Box 4-20  Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20	Job Accounting Access 9-35	Protocol Settings 6-33
Logout 9-49 Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		
Overview of Job Accounting 9-33 Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Magnifying the View 2-28 Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		M
Print Accounting Report 9-48 Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Mailbox 11-4 Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21	· · · · · · · · · · · · · · · · · · ·	Magnifying the View 2-28
Printing 9-40 Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Main Power Switch 2-2 Management 9-1 Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21	<del>-</del>	Mailbox 11-4
Restricting the Use of the Machine 9-37 TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		Main Power Switch 2-2
TWAIN 9-41 WIA 9-42 Job Box 4-18, 5-62, 11-30 Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Manual Setting (IPv6) 8-48, 8-53 Manual Staple 5-70, 8-27 Margin 6-40 Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		Management 9-1
WIA 9-42  Job Box 4-18, 5-62, 11-30  Deletion of Job Retention 8-38  Form for Form Overlay 5-62  Private Print Box 4-19  Proof and Hold Box 4-22  Quick Copy Box 4-21  Quick Copy Job Retention 8-38  Repeat Copy Job Retention 8-38  Specifying the Job Box from a Computer and Storing the Job 4-18  Stored Job Box 4-20  Manual Staple 5-70, 8-27  Margin 6-40  Default 8-19  Margin/Centering 6-40  Measurement 8-15  Media Type Setting 8-15  Memory Diagnostics 8-74  Message Banner Print 8-28  Message Board Settings 8-30  Mirror Image 6-64  Mixed Size Originals 6-20  Combinations 6-21	<u> </u>	
Job Box 4-18, 5-62, 11-30  Deletion of Job Retention 8-38  Form for Form Overlay 5-62  Private Print Box 4-19  Proof and Hold Box 4-22  Quick Copy Box 4-21  Quick Copy Job Retention 8-38  Repeat Copy Job Retention 8-38  Specifying the Job Box from a Computer and Storing the Job 4-18  Stored Job Box 4-20  Margin 6-40  Default 8-19  Margin/Centering 6-40  Measurement 8-15  Media Type Setting 8-15  Memo Page 6-54  Memory Diagnostics 8-74  Message Banner Print 8-28  Message Board Settings 8-30  Mirror Image 6-64  Mixed Size Originals 6-20  Combinations 6-21		<u> </u>
Deletion of Job Retention 8-38 Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Default 8-19 Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		·
Form for Form Overlay 5-62 Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Margin/Centering 6-40 Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		•
Private Print Box 4-19 Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Measurement 8-15 Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		
Proof and Hold Box 4-22 Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Media Type Setting 8-15 Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21	·	•
Quick Copy Box 4-21 Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Memo Page 6-54 Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		
Quick Copy Job Retention 8-38 Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Memory Diagnostics 8-74 Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21		••
Repeat Copy Job Retention 8-38 Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Message Banner Print 8-28 Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-31	• •	<u> </u>
Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21	Quick Copy Job Retention 8-38	
Specifying the Job Box from a Computer and Storing the Job 4-18 Stored Job Box 4-20  Message Board Settings 8-30 Mirror Image 6-64 Mixed Size Originals 6-20  Combinations 6-21	Repeat Copy Job Retention 8-38	
the Job 4-18 Stored Job Box 4-20 Mirror Image 6-64 Mixed Size Originals 6-20 Combinations 6-21	· · · · · · · · · · · · · · · · · · ·	
Stored Job Box 4-20 Mixed Size Originals 6-20		
Combinations 6 21		<del>_</del>
JUD FINISH NUMBER 0-04		Combinations 6-21
Job Finish Notice Setting 8-43  Copy Size 6-22		Copy Size 6-22

Mixed Size Stapling 6-27	Optional Applications 11-7
Monotype Imaging License Agreement 1-13	Optional Function 8-66
Mopria 4-16	Optional Network
MP Tray Setting	Basic 8-59
Paper Size and Media Type 8-8	Wireless Network 8-60
Multi Sending 5-37	Optional Numeric Keypad 11-5
Multipurpose Tray 2-2, 2-3, 11-30	Orientation Confirmation 8-18
Loading Envelopes or Cardstock 5-7	Original
Loading Index Paper 5-8	Auto Detect 8-13
Loading Paper 5-5	Custom Original Size 8-11
Paper Size and Media Type 8-8	Loading Originals 5-2
	Settings 8-11
N	Size XXIV, 6-18
Negative Image 6-64	Original Eject Table 2-2
NetBEUI 11-30	Original Image 6-31
Protocol Settings 8-54	Default 8-18
NetWare	Original Loaded Indicator 2-2
Settings 8-59	Original Orientation 6-23
Network Interface 2-6	Default 8-18
Network Interface Connector 2-4	Original Preview 2-22
Network Interface Conflector 2-4 Network Interface Kit 11-5	Original Size 6-18
NFC	Original Size Indicator Plates 2-2
Printing 4-17	Original SSLeay License 1-12
Settings 2-40, 8-66	Original Stopper 2-2, 5-4
	Original Table 2-2
Notice 1-2	Original Width Guides 2-2
Numeric Keypad Settings 8-31	Original/Paper Settings 8-11
	Outline font 11-30
0	
Offset Documents by Job 8-27	P
Offset One Page Documents 8-28	
One Touch Key	Page # 6-51
Adding 3-32	Panel Reset Timer 8-69
Deleting 3-33	Paper
Editing 3-33	Checking the Remaining Amount of Paper 7-14
OpenSSL License 1-12	Appropriate Paper 11-13
Operation Panel 2-2	Custom Paper Size 8-12
Option	Default Paper Source 8-12
4,000-Sheet Finisher 11-4	Loading Cardstock 5-7
Banner Tray 11-5	Loading Envelopes 5-7
Card Authentication Kit 11-6	Loading in the Large Capacity Feeder 3-8
Copy tray 11-5	Loading in the Side Feeder 3-12
Data Security Kit 11-6	Loading Index Paper 5-8
Document Table 11-5	Loading Paper 3-2, 5-5
Emulation Upgrade Kit 11-6	Loading Paper in the Cassettes 3-4
FAX Kit 11-5	Loading Paper in the Multipurpose Tray 5-5
Folding Unit 11-4	Media for Auto 8-13
Internet FAX Kit 11-6	Media Type Setting 8-12
Keyboard Holder 11-5	Paper Source for Cover 8-13
Large Capacity Side Feeder (500,	Precaution for Loading Paper 3-2
1,500-sheet×2) 11-4	Selecting the Paper Feeder Units 3-3
Mailbox 11-4	Separator Paper Source 8-14
Network Interface Kit 11-5	Settings 8-11
Optional Numeric Keypad 11-5	Show Paper Setup Message 8-14
Overview 11-2	Size and Media Type 8-7, 11-12
Punch Unit 11-4	Special Paper 11-15
Side Feeder (3,000-sheet) 11-4	Special Paper Action 8-14
Side Feeder (500-sheet×3) 11-4	Specifications 11-12
ThinPrint Option 11-6	Weight 8-15
Wireless Network Interface Kit 11-5	Paper Feed Mode 8-40

Option Interface Slot 2-4

Paper Jams 10-43	Precaution for Loading Paper 3-2
4,000-sheet Finisher (Inner) 10-82	Precautions for Use 1-4
4,000-sheet Finisher (Tray A) 10-84	Preprinted Paper 11-18
4,000-sheet Finisher (Tray B) 10-87	Prevent Bleed-thru 6-34
4,000-sheet Finisher (Tray C) 10-73	Default 8-18
Cassette 1 10-45	Prevent Light Reflection 8-31
Cassette 2 10-46	Primary Network (Client) 8-62
Cassette 3 10-48	Print Report
Cassette 4 10-49	Font List 8-42
Cassette 5 (3,000-sheet) 10-52	Network Status 8-42
Cassette 5 (Large Capacity Side Feeder (500,	Optional Network Status 8-43
1,500-sheet×2)) 10-54	Service Status 8-43
Cassette 5 (Side Feeder (500-sheet×3)) 10-54	Status Page 8-42
Cassette 6 (Large Capacity Side Feeder (500,	Print Settings 4-2
1,500-sheet×2)) 10-59	Printer 8-39
Cassette 6 (Side Feeder (500-sheet×3)) 10-57	Auto Cassette Change 8-41
Cassette 7 (Large Capacity Side Feeder (500,	Copies 8-40
1,500-sheet×2)) 10-62	CR Action 8-40
Cassette 7 (Side Feeder (500-sheet×3)) 10-57	Duplex 8-40
Document Processor 10-81	EcoPrint 8-40
Folding Tray 10-95	Emulation 8-39
Folding Unit 10-90	Form Feed TimeOut 8-40
Jam Location Indicators 10-43	Job Name 8-40
Lower Left Tray 10-74	KIR 8-41
Mailbox 10-80	LF Action 8-40
Multipurpose Tray 10-65	MP Tray Priority 8-41
Right Cover 1 10-66	Orientation 8-40
Right Cover 2 (Large Capacity Side Feeder (500,	Override A4/Letter 8-40
1,500-sheet×2)) 10-78	Paper Feed Mode 8-40
Right Cover 2 (Side Feeder (500-sheet×3) 10-78	Properties 4-2
Right Cover 3 10-70	Resolution 8-41
Right Cover 4 10-71	Toner Save Level (EcoPrint) 8-40
Right Tray 10-75	User Name 8-40
Top Cover, Right Cover 1 (Large Capacity Side	Wide A4 8-41
Feeder (500, 1,500-sheet×2)) 10-76	Printer Driver 11-31
Top Cover, Right Cover 1 (Side Feeder (500-	Changing the Default Printer Driver Settings 4-3
sheet×3) 10-76	Help 4-3
Upper Left Tray 10-73	Properties 4-2
Paper Length Guide 2-3, 3-4	Printing Documents Stored in Removable USB
Paper Output 6-30, 8-17	Memory 5-64
Paper Selection 6-19	Printing from PC 4-4
Paper Width Adjusting Tab 2-3	Banner Printing 4-9
Paper Width Guide 2-3, 3-5	Non-standard Sized Paper 4-6
Paper Width Guide Lock 2-3	Standard Sized Paper 4-4
Part Names 2-2	Printing Speed 11-22
PDF/A 11-30	Priority Override 6-65, 7-11
PIN Code Authorization 9-31	Product Library XX
Ping 8-58	Program 5-9
Platen 2-2	Deleting 5-11
POP3 11-30	Editing 5-11
POP3 (E-mail RX)	Recalling 5-10
Protocol Settings 8-54	Registering 5-10
PostScript 11-30	Proof Copy 5-19
Power Cable	Punch 6-28
Connecting 2-10	Punch Unit 11-4
Power Management 1-17	. Gilon Olik III
Power Off 2-11	0
Power On 2-11	Q Ovide No. Coords have 2.00
Power Switch 2-2	Quick No. Search key 2-26
PPM 11-30	Quick Setup Registration 8-32, 8-33, 8-39
	Quick Setup Wizard 2-44

R	Send Settings 8-33
RA (Stateless) 11-31	Broadcast 8-34
Settings 8-48, 8-53	Color Type 8-33
RAM Disk 11-31	Default Screen 8-33
Raw	Dest. Check before Send 8-33
Protocol Settings 8-56	Entry Check for New Dest. 8-33
Recycled Paper 11-18	HighCompressionPDF Mode 8-34
Regarding Trade Names 1-11	New Destination Entry 8-34
	OCR Text Recognition Act. 8-34
Regular Maintenance 10-2	Quick Setup Registration 8-33
Remote Printing 8-30	Recall Destination 8-34
Repeat Copy 6-66	Send and Forward 8-34
Default 8-20	
Printing 5-62	Send to Me (E-mail) 5-38
Repeat Copy Job Retention 8-38	Sending 5-21
Replace the Waste Toner Box 10-7	Preparation for Sending a Document to a PC 3-15
Replacing Staples	Sending Document to Desired Shared Folder on a
4,000-Sheet Finisher 10-10	Computer 5-23
Folding Unit 10-11	Sending Size 6-69
Report 8-42	Setting Date and Time 2-31
Admin Report Settings 8-43	Sharpness 6-33
Device Log History Settings 8-45	Shortcuts 5-15
Login History Settings 8-44	Adding 5-15
Print Report 8-42	Deleting Shortcuts 5-16
Result Report Settings 8-43	Editing Shortcuts 5-16
Secure Comm. Error Log 8-46	Show Power Off Message 8-31
<del>_</del>	Side Feeder (3,000-sheet) 11-4
Sending Log History 8-44	Loading Paper 3-12
Resolution 6-74, 8-41, 11-21, 11-22	Side Feeder (500-sheet×3) 11-4
Resource Saving - Paper 1-17	,
Responding to Messages 10-23	Side Feeder Top Tray 2-5, 3-14
Restart Entire Device 8-66	Silent Mode 8-73
Restart Network 8-53, 8-58	Simple Login 2-30
Right Cover 1 2-2	Simple Login Settings
Right Cover 1 Lever 2-2	Simple Login 9-27
Right Cover 2 2-3	Simple Login Setup 9-28
Right Cover 2 Handle 2-3	Skip Blank Page 6-67
Right Cover 3 2-3	Default 8-20
Right Cover 3 Lever 2-3	Sleep 2-41
Right Cover 4 2-3	Sleep Level 2-42, 8-70
Right Cover 4 Lever 2-3	Energy Saver 8-70
Right Tray 2-3, 3-14	Quick Recovery 8-70
RX Result Report Type 8-43	Sleep Rules 2-42, 8-70
, , , , , , , , , , , , , , , , , , ,	Sleep Timer 8-69
e	Slit Glass 2-2
<b>S</b>	SMB Client (Transmission)
Safety Conventions in This Guide 1-2	Protocol Settings 8-54
Saving Documents to USB Memory 5-66	SMTP 11-31
Scan Resolution 6-74	SMTP (E-mail TX)
Default 8-18	Protocol Settings 8-54
Scan to Folder (FTP) 5-26	SNMPv1/v2c
Scan to Folder (SMB) 5-23	
Security Level 8-62	Protocol Settings 8-57
Security Precautions when Using Wireless LAN 1-9	SNMPv3
Send and Forward	Protocol Settings 8-57
File format 8-35	Software Verification 8-65
PDF Encryption Functions 8-36	Solving Malfunctions 10-15
Send and Print 6-75	Sound 8-10
Send and Store 6-75	
Send as E-mail 5-22, 11-31	
Send Result Report 8-43	
Cond Result Report 0-70	

Specifications 11-19	System/Network 8-47
4,000-Sheet Finisher 11-25	Bluetooth Settings 8-66
Banner Tray 11-27	Data Security 8-64
Copy Functions 11-21	Interface Block Setting 8-63
Document Processor 11-23	Network 8-47
Folding Unit (For 4,000-Sheet Finisher) 11-26	NFC 8-66
Large Capacity Side Feeder (500,	Optional Function 8-66
1,500-sheet×2) 11-24	Optional Network 8-59
Machine 11-19	Primary Network (Client) 8-62
Mailbox (For 4,000-Sheet Finisher) 11-26	Restart Entire Device 8-66
Printer Functions 11-22	Security Level 8-62
Punch Unit (For 4,000-Sheet Finisher) 11-25	·
Scanner Functions 11-23	Т
Side Feeder (3,000-sheet) 11-24	TCP/IP 11-31
Side Feeder (500-sheet×3) 11-24	Settings 8-47, 8-52
SSL	TCP/IP (IPv4)
Security Settings 8-58	· · ·
Staple Jam	Settings 2-32, 8-47, 8-52
4,000-Sheet Finisher 10-100	TCP/IP (IPv6) 11-29
Folding Unit 10-102	Settings 8-48, 8-53
Staple/Punch 6-26	Text Stamp 6-57
Status Monitor 4-23	Thick Paper 11-17
Accessing 4-23	Thin Print over SSL
Exiting 4-23	Protocol Settings 8-55
Notification Settings 4-26	ThinPrint
Status Page 11-31	Protocol Settings 8-55
Status/Job Cancel 7-1	ThinPrint Option 11-6
Storing Size 6-77	Time Zone 8-68
Subnet Mask 11-31	Tone Curve Adjustment 8-73, 10-39
Settings 8-47, 8-52	Toner Container (Black) 2-4
Supplies	Toner Container Replacement 10-4
Checking the Remaining Amount 7-14	Touch Panel 2-16
Support Tray Section of the Multipurpose Tray 2-3	Transparencies 11-15
	Tray 1 to 7 2-5
Symbols 1-2 System Initialization 8-72	Tray A 2-5
System Menu 8-2	Tray B 2-5
· ·	Tray C 2-5
Adjustment/Maintenance 8-72	Troubleshooting 10-15
Application 8-75 Cassette/MP Tray Settings 8-7	Machine Operation Trouble 10-15
Common Settings 8-10	Printed Image Trouble 10-20
<u> </u>	Solving Malfunctions 10-15
Copy 8-32 Counter 2-60	TWAIN 11-32
	Scanning 5-28
Date/Timer/Energy Saver 8-68	Setting TWAIN Driver 2-57
Document Box/Removable Memory 8-38	
Edit Destination 8-67	U
FAX 8-39	Upper Left Cover 2-2
Home 2-16	Upper Left Tray 2-2
Internet 8-75	USB 11-32
Operation Method 8-2	USB Cable 2-6
Printer 8-39	Connecting 2-9
Quick Setup Wizard 2-44	USB Interface 2-6
Report 8-42	USB Interface Connector 2-4
Send 8-33	USB Keyboard Type 8-21
System/Network 8-47	USB Memory
User Login/Job Accounting 8-68	Check the Information 5-67
User Property 8-68, 9-12	Printing 5-64
System Stamp 8-21	Remove 5-67
	Save 5-66
	USB Memory Slot 2-2
	USB Port 2-4
	305 i 0it = i

```
User Login Administration 9-2
    Adding a User 9-8
    Changing User Properties 9-11
    Enabling User Login Administration 9-3
    FAX Driver 9-17
    Group Authorization Settings 9-19
    Guest Authorization Set. 9-22
    ID Card Settings 9-30
    Local Authentication 9-18
    Login 2-29
    Logout 2-30
    Obtain NW User Property 9-25
    Overview of User Login Administration 9-2
    Password Policy Settings 9-7
    PIN Code Authentication 9-31
    Printing 9-14
    Simple Login Settings 9-27
    TWAIN 9-15
    User Account Lockout Setting 9-5
   WIA 9-16
User Login/Job Accounting 8-68
    Job Accounting 9-33
    Unknown User Settings 9-52
    User Login 9-2
User Property 8-68
W
Waste Toner Box 2-4
Waste Toner Box Cover 2-4
Weekly Timer Settings 2-42, 8-71
White space 6-54
WIA 11-32
    Scanning 5-28
    Setting WIA Driver 2-59
Wide A4 8-41
Wi-Fi
   Settings 2-34, 8-50
Wi-Fi Direct
   Printing 4-16
    Settings 2-38, 8-49
Wireless Connection 1-9
Wireless Network
    Settings 2-34, 8-60
Wireless Network Interface Kit 11-5
WPS (Wi-Fi Protected Setup) 11-32
WSD Print
   Protocol Settings 8-55
WSD Scan 5-31
   Protocol Settings 8-55
XPS Fit to Page 6-78
    Default 8-19
Zoom 6-35
    Default 8-19
```

# QUALITY CERTIFICATE

This machine has passed all quality controls and final respection

#### **KYOCERA Document Solutions America, Inc.**

#### **Headquarters**

225 Sand Road,

Fairfield, New Jersey 07004-0008, USA

Phone: +1-973-808-8444 Fax: +1-973-882-6000

#### **Latin America**

8240 NW 52nd Terrace Dawson Building, Suite 100

Miami, Florida 33166, USA Phone: +1-305-421-6640 Fax: +1-305-421-6666

#### KYOCERA Document Solutions Canada, Ltd.

6120 Kestrel Rd., Mississauga, ON L5T 1S8,

Canada

Phone: +1-905-670-4425 Fax: +1-905-670-8116

#### **KYOCERA Document Solutions**

#### Mexico, S.A. de C.V.

Calle Arquimedes No. 130, 4 Piso, Colonia Polanco Chapultepec, Delegacion Miguel Hidalgo, Distrito Federal, C.P. 11560, México

Phone: +52-555-383-2741 Fax: +52-555-383-7804

#### **KYOCERA Document Solutions Brazil, Ltda.**

Alameda África, 545, Pólo Empresarial Consbrás, Tamboré, Santana de Parnaíba, State of São Paulo, CEP 06543-306, Brazil

Phone: +55-11-2424-5353 Fax: +55-11-2424-5304

#### **KYOCERA Document Solutions Chile SpA**

Jose Ananias 505, Macul. Santiago, Chile

Phone: +562-2350-7000 Fax: +562-2350-7150

### **KYOCERA Document Solutions**

#### Australia Pty. Ltd.

Level 3, 6-10 Talavera Road North Ryde N.S.W, 2113,

Australia

Phone: +61-2-9888-9999 Fax: +61-2-9888-9588

#### **KYOCERA Document Solutions**

#### New Zealand Ltd.

Ground Floor, 19 Byron Avenue, Takapuna, Auckland,

New Zealand

Phone: +64-9-415-4517 Fax: +64-9-415-4597

#### KYOCERA Document Solutions Asia Limited

Unit 3 & 5, 16/F., Mita Centre, 552-566, Castle Peak Road

Tsuen Wan, New Territories, Hong Kong

Phone: +852-2496-5678 Fax: +852-2610-2063

#### **KYOCERA Document Solutions**

#### (China) Corporation

8F, No. 288 Nanjing Road West, Huangpu District,

Shanghai,200003, China Phone: +86-21-5301-1777 Fax: +86-21-5302-8300

#### **KYOCERA Document Solutions**

#### (Thailand) Corp., Ltd.

335 Ratchadapisek Road, Wongsawang, Bangsue,

Bangkok 10800,

Thailand

Phone: +66-2-586-0333 Fax: +66-2-586-0278

#### **KYOCERA Document Solutions**

#### Singapore Pte. Ltd.

12 Tai Seng Street #04-01A, Luxasia Building, Singapore 534118

Phone: +65-6741-8733 Fax: +65-6748-3788

#### **KYOCERA Document Solutions**

#### **Hong Kong Limited**

Unit 1,2,4,6,8 & 10, 16/F.,Mita Centre, 552-566, Castle Peak Road Tsuen Wan, New Territories, Hong Kong

Phone: +852-3582-4000 Fax: +852-3185-1399

#### **KYOCERA Document Solutions**

#### **Taiwan Corporation**

6F., No.37, Sec. 3, Minquan E. Rd.,

Zhongshan Dist., Taipei 104, Taiwan R.O.C.

Phone: +886-2-2507-6709 Fax: +886-2-2507-8432

#### KYOCERA Document Solutions Korea Co., Ltd.

#3F Daewoo Foundation Bldg 18, Toegye-ro, Jung-gu,

Seoul, Korea

Phone: +822-6933-4050 Fax: +822-747-0084

#### **KYOCERA Document Solutions**

#### **India Private Limited**

Second Floor, Centrum Plaza, Golf Course Road, Sector-53, Gurgaon, Haryana 122002, India

Phone: +91-0124-4671000 Fax: +91-0124-4671001

#### **KYOCERA Document Solutions Europe B.V.**

Bloemlaan 4, 2132 NP Hoofddorp,

The Netherlands

Phone: +31-20-654-0000 Fax: +31-20-653-1256

#### KYOCERA Document Solutions Nederland B.V.

Beechavenue 25, 1119 RA Schiphol-Rijk,

The Netherlands

Phone: +31-20-5877200 Fax: +31-20-5877260

#### **KYOCERA Document Solutions (U.K.) Limited**

Eldon Court. 75-77 London Road. Reading, Berkshire RG1 5BS,

**United Kinadom** 

Phone: +44-118-931-1500 Fax: +44-118-931-1108

#### KYOCERA Document Solutions Italia S.p.A.

Via Monfalcone 15, 20132, Milano, Italy,

Phone: +39-02-921791 Fax: +39-02-92179-600

#### **KYOCERA Document Solutions Belgium N.V.**

Sint-Martinusweg 199-201 1930 Zaventem,

Belgium

Phone: +32-2-7209270 Fax: +32-2-7208748

#### KYOCERA Document Solutions France S.A.S.

Espace Technologique de St Aubin

Route de l'Orme 91195 Gif-sur-Yvette CEDEX,

France

Phone: +33-1-69852600 Fax: +33-1-69853409

#### KYOCERA Document Solutions Espana, S.A.

Edificio Kvocera. Avda. de Manacor No.2.

28290 Las Matas (Madrid), Spain

Phone: +34-91-6318392 Fax: +34-91-6318219

#### **KYOCERA Document Solutions Finland Oy**

Atomitie 5C, 00370 Helsinki,

Finland

Phone: +358-9-47805200 Fax: +358-9-47805390

#### **KYOCERA Document Solutions**

#### Europe B.V., Amsterdam (NL) Zürich Branch

Hohlstrasse 614, 8048 Zürich,

Switzerland

Phone: +41-44-9084949 Fax: +41-44-9084950

#### **KYOCERA Bilgitas Document Solutions** Turkey A.S.

Gülbahar Mahallesi Otello Kamil Sk. No:6 Mecidiyeköy

34394 Şişli İstanbul, Turkey Phone: +90-212-356-7000 Fax: +90-212-356-6725

#### © 2016 KYOCERA Document Solutions Inc.

# **KYOCERA** is a trademark of KYOCERA Corporation

#### **KYOCERA Document Solutions**

#### **Deutschland GmbH**

Otto-Hahn-Strasse 12, 40670 Meerbusch,

Germany

Phone: +49-2159-9180 Fax: +49-2159-918100

#### **KYOCERA Document Solutions Austria GmbH**

Altmannsdorferstraße 91, Stiege 1, 2, OG, Top 1, 1120,

Wien. Austria

Phone: +43-1-863380 Fax: +43-1-86338-400

#### **KYOCERA Document Solutions Nordic AB**

Esbogatan 16B 164 75 Kista, Sweden

Phone: +46-8-546-550-00 Fax: +46-8-546-550-10

#### **KYOCERA Document Solutions Norge Nuf**

Olaf Helsetsv. 6, 0619 Oslo, Norway

Phone: +47-22-62-73-00 Fax: +47-22-62-72-00

#### KYOCERA Document Solutions Danmark A/S

Ejby Industrivej 60, DK-2600 Glostrup,

Denmark

Phone: +45-70223880 Fax: +45-45765850

#### KYOCERA Document Solutions Portugal Lda.

Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisboa,

Portugal

Phone: +351-21-843-6780 Fax: +351-21-849-3312

#### **KYOCERA Document Solutions**

#### South Africa (Pty) Ltd.

KYOCERA House, Hertford Office Park,

90 Bekker Road (Cnr. Allandale), Midrand, South Africa

Phone: +27-11-540-2600 Fax: +27-11-466-3050

#### **KYOCERA Document Solutions Russia LLC.**

Building 2, 51/4, Schepkina St., 129110, Moscow,

Russia

Phone: +7(495)741-0004 Fax: +7(495)741-0018

#### **KYOCERA Document Solutions Middle East**

Dubai Internet City, Bldg. 17,

Office 157 P.O. Box 500817, Dubai,

**United Arab Emirates** Phone: +971-04-433-0412

#### **KYOCERA Document Solutions Inc.**

2-28, 1-chome, Tamatsukuri, Chuo-ku

Osaka 540-8585, Japan Phone: +81-6-6764-3555

http://www.kyoceradocumentsolutions.com

